

Vocera IP Phone Deployment in Cisco Unified Wireless Network Infrastructure

Document ID: 71642

Introduction

Prerequisites

- Requirements

- Components Used

- Conventions

Executive Summary

Vocera Badge Overview

Vocera Call Capacity Considerations

Vocera Communications Server Capacity

The Vocera Solution

Vocera's Infrastructure Planning

Architecture Overview

Multicast in an LWAPP Deployment

- Unicast–Multicast Delivery Method

- Multicast–Multicast Delivery Method

- Router and Switch Multicast Configuration

- Enable IP Multicast Routing

- Enable PIM on an Interface

- Disable Switch VLAN IGMP Snooping

- Multicast Enhancements in Version 4.0.206.0 and Later

Deployment Scenarios

- Single Controller Deployment

- Multiple Controller Layer 2 Deployment

- Multiple Controller Layer 3 Deployment

VoWLAN Deployments: Cisco's Recommendations

- Recommendations for Multi–Floor Buildings, Hospitals, and Warehouses

Security Mechanisms Supported

- LEAP Considerations

Wireless Network Infrastructure

- Voice, Data and Vocera VLANs

- Network Sizing

Switch Recommendations

Deployments and Configuration

- Badge Configuration

Tune AutoRF for Your Environment

Wireless Network Infrastructure Configuration

- Create Interfaces

- Create the Vocera Voice Interface

- Wireless–Specific Configuration

- WLAN Configuration

- Configure Access Point Detail

- Configure the 802.11b/g Radio

Wireless IP Telephony Verification

Association, Authentication, and Registration

Common Roaming Issues

- The Badge Loses Connection to the Network or Voice Service is Lost when Roaming

- Badge Loses Voice Quality while Roaming

Audio Problems

- One-sided Audio
- Choppy or Robotic Audio
- Registration and Authentication Problems

Appendix A

- AP and Antenna Placement
- Interference and Multipath Distortion
- Signal Attenuation

Related Information

Introduction

This document provides design considerations and deployment guidelines for the implementation of the Vocera® Badge Voice over WLAN (VoWLAN) technology on the Cisco Unified Wireless Network infrastructure.

Note: Support for Vocera products should be obtained directly from Vocera support channels. Cisco Technical Support is not trained to support Vocera-related issues.

This guide is a supplement to the Cisco Wireless LAN Controller Deployment Guide and only addresses the configuration parameters that are particular to Vocera VoWLAN devices in a lightweight architecture. Refer to Deploying Cisco 440X Series Wireless LAN Controllers for more information.

Prerequisites

Requirements

It is assumed that readers are familiar with the terms and concepts presented in the Cisco IP Telephony SRND and the Cisco Wireless LAN SRND. .

Wireless UC Design guide

http://www.cisco.com/en/US/solutions/ns340/ns414/ns742/ns818/landing_wireless_uc.html

Cisco Unified Communications SRND Based on Cisco Unified Communications Manager 7.x http://www.cisco.com/en/US/solutions/ns340/ns414/ns742/ns818/landing_uc_mgr.html

Components Used

This document is not restricted to specific software and hardware versions.

Conventions

Refer to Cisco Technical Tips Conventions for more information on document conventions.

Executive Summary

This table summarizes the four key functions and how they behave within a Cisco Unified Wireless network.

	Single Controller	Controller-to-Controller Layer 2 Roaming	Controller-to-Controller Layer 3 Roaming
--	----------------------	---	---

Badge-to-Badge	No special configuration	No special configuration	No special configuration
Badge-to-Phone	No special configuration	No special configuration	No special configuration
Badge-to-Broadcast	Enable Controller Multicast	Enable Controller Multicast Disable Vocera VLAN IGMP-Snooping or run 4.0.206.0 or later	4.0.206.0 or later
Badge Location	No special configuration	No special configuration	No special configuration

Vocera Badge Overview

The communication badges allow a wearer instant communication with any other badge wearer as well as Private Branch Exchange (PBX) integration and badge location tracking. The utilization of an 802.11b/g wireless network requires the use of multicast and UDP unicast packet delivery with limited requirements for Quality of Service (QoS) as of Vocera Server Software release 3.1 (Build 1081). The encryption capabilities are 64/128 bit Wired Equivalent Privacy (WEP), Temporal Key Integrity Protocol (TKIP), Message Integrity Check (MIC), and Cisco Temporal Key Integrity Protocol (CKIP) combined with the authentication capabilities of Open, Wi-Fi Protected Access-Pre-shared Key (WPA-PSK), WPA-Protected Extensible Authentication Protocol (PEAP) and Lightweight Extensible Authentication Protocol (LEAP).

With the push of a button, the Vocera server responds with *Vocera*, which is a prompt to issue commands such as **record**, **where (am I) /is...**, **call**, **play**, **broadcast**, **messages**, and so forth. The Vocera server provides the necessary services and/or call setup to complete the request.

Vocera's 802.11b capable Communication System makes use of proprietary voice compression and the use of a UDP port range. The Vocera System software runs on a Windows server that manages call set up, call connection and user profiles. They have partnered with Nuance 8.5 Speech Recognition and Voiceprint software in order to enable badge voice communications. Vocera recommends a separate Windows server to run the Vocera Telephony Solutions Software to enable Plain Old Telephone Service (POTS) connectivity with the badges.

Vocera Call Capacity Considerations

See the Network Sizing section of this document for further details.

Vocera Communications Server Capacity

Refer to the Vocera Communications System Specifications for more information on Vocera Server sizing matrix.

The Vocera Solution

The Vocera Badge utilizes both unicast and multicast packet delivery to provide several key features that make up this complete solution. Here are four of the essential features that rely on proper packet delivery. Also provided is a basic understanding of how each feature uses the underlying network for delivery and functionality.

- **Badge to Badge Communications** When one Vocera user calls another user, the badge first contacts the Vocera server, which looks up the IP address of the badge of the callee and contacts the badge user to ask the user if they can take a call. If the callee accepts the call, the Vocera server notifies the calling badge of the IP address of the callee badge to setup direct communication between the badges with no further server intervention. All communication with the Vocera server uses the G.711 codec and all badge-to-badge communication uses a Vocera proprietary codec.
- **Badge Telephony Communication** When a Vocera Telephony server is installed and setup with a connection to a PBX, a user is able to call internal extensions off of the PBX or outside telephone lines. Vocera allows users to make calls by either saying the numbers (five, six, three, two) or by creating an address book entry in the Vocera database for the person or function at that number (for example, pharmacy, home, pizza) the Vocera server determines the number that is being called, either by intercepting the numbers in the extension or by looking the name up in the database and selecting the number. The Vocera server then passes that information to the Vocera Telephony server which connects to the PBX and generates the appropriate telephony signaling (for example, DTMF). All communication between the badge and Vocera server and Vocera server and Vocera Telephony server use the G.711 codec over unicast UDP.
- **Vocera Broadcast** A Vocera Badge user can call and communicate to a group of Vocera badge wearers at the same time by using the Broadcast command. When a user broadcasts to a group, the user's badge sends the command to the Vocera server who then looks up the members of a group, determines which members of the group are active, assigns a multicast address to use for this broadcast session, and sends a message to each active user's badge instructing it to join the multicast group with the assigned multicast address.
- **Badge Location Function** The Vocera server keeps track of the access point to which each active badge is associated as each badge sends a 30 second keep alive to the server with the associated BSSID. This allows the Vocera system to roughly estimate the location of a badge user. This function has a relatively low degree of accuracy because a Badge might not be associated to the access point to which it is closest.


Vocera's Infrastructure Planning

The Vocera whitepaper Vocera Infrastructure Planning Guide , describes the site survey minimum requirements that show that the badge should have a receive signal strength minimum of -65 dBm, a signal-to-noise ratio greater than 25 db and proper access point overlap and channel separation. Although the badges use a similar omni directional antenna as a notebook that is used for a site survey, it does not mimic the behavior of the badge very well, given the wearers' affects on signal strength. Given this unique requirement and this behavior of the transmitting device, the use of the Cisco Architecture and Radio Resource Management is ideal in order to make sure there is a lack of unusual radio frequency (RF) site characteristics.

The Vocera badge is a low powered device, worn next to the body with limited signal error correction capabilities. The Vocera requirements in this document can be easily achieved. However, it can become overwhelmed if there are too many SSIDs for it to process and allow the badge to work effectively.

Architecture Overview

Figure 1 General Multicast Forward and Prune with Lightweight Access Point Protocol (LWAPP) Wireless

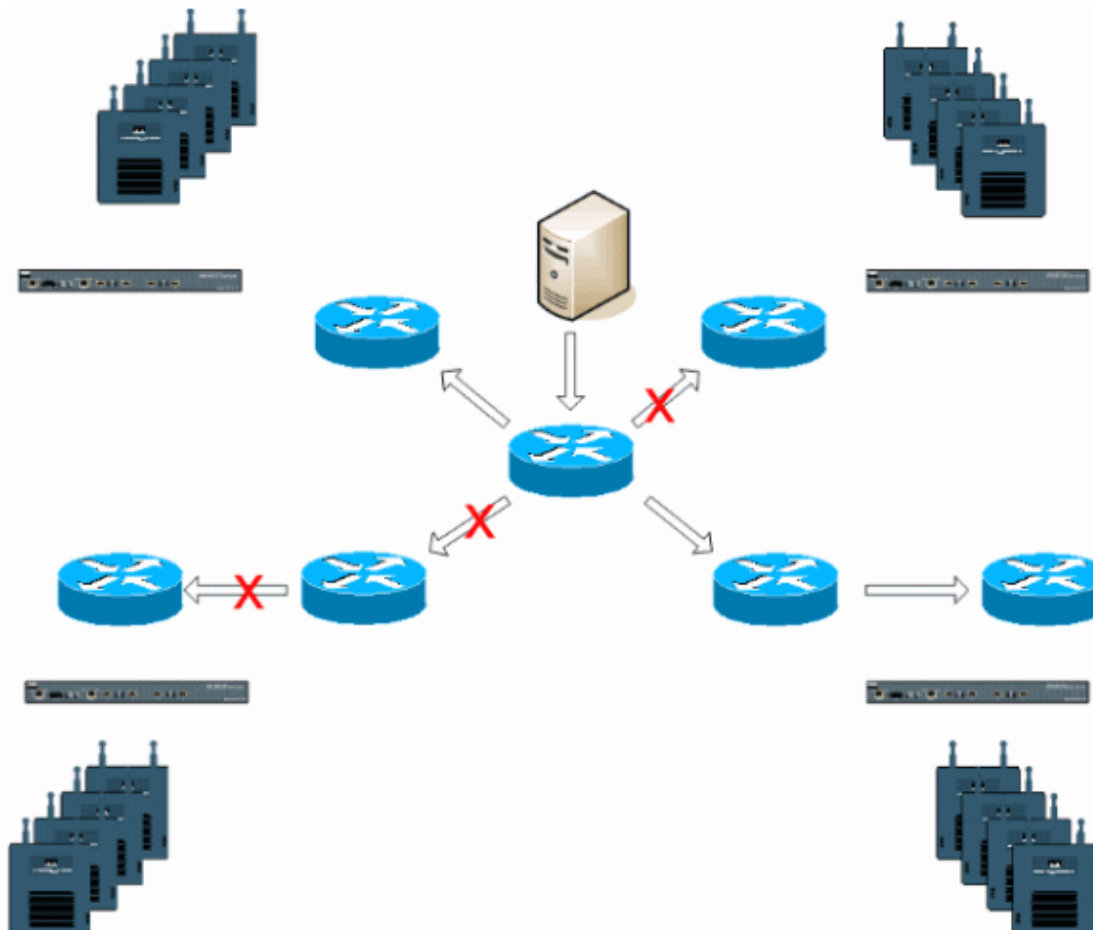

Multicast in an LWAPP Deployment


Understanding multicast within an LWAPP deployment is necessary to deploy the Vocera broadcast function. This document later covers the essential steps to enable multicast within the controller-based solution. There are currently two delivery methods that the LWAPP controller uses to deliver multicast to the clients:

- Unicast–Multicast
- Multicast–Multicast

Unicast–Multicast Delivery Method

The unicast–multicast delivery method creates a copy of every multicast packet and forwards it to every access–point. When a client sends a multicast join to the wireless LAN, the access point forwards this join through the LWAPP tunnel to the controller. The controller bridges this multicast join onto its directly connected local area network connection that is the default VLAN for the associated WLAN of the client. When an IP multicast packet arrives from the network to the controller, the controller replicates this packet with an LWAPP header for each access point that has a client within the wireless domain who has joined this specific group. When the source of the multicast is also a receiver within the wireless domain, this packet is also duplicated and forwarded back to the same client who sent this packet. For Vocera badges, this is not the preferred method of multicast delivery within the LWAPP controller solution. The unicast delivery method works with small deployments. However, due to the considerable overhead on the Wireless LAN Controller (WLC), this is never the recommended multicast delivery method.

Figure 2 LWAPP Multicast–Unicast

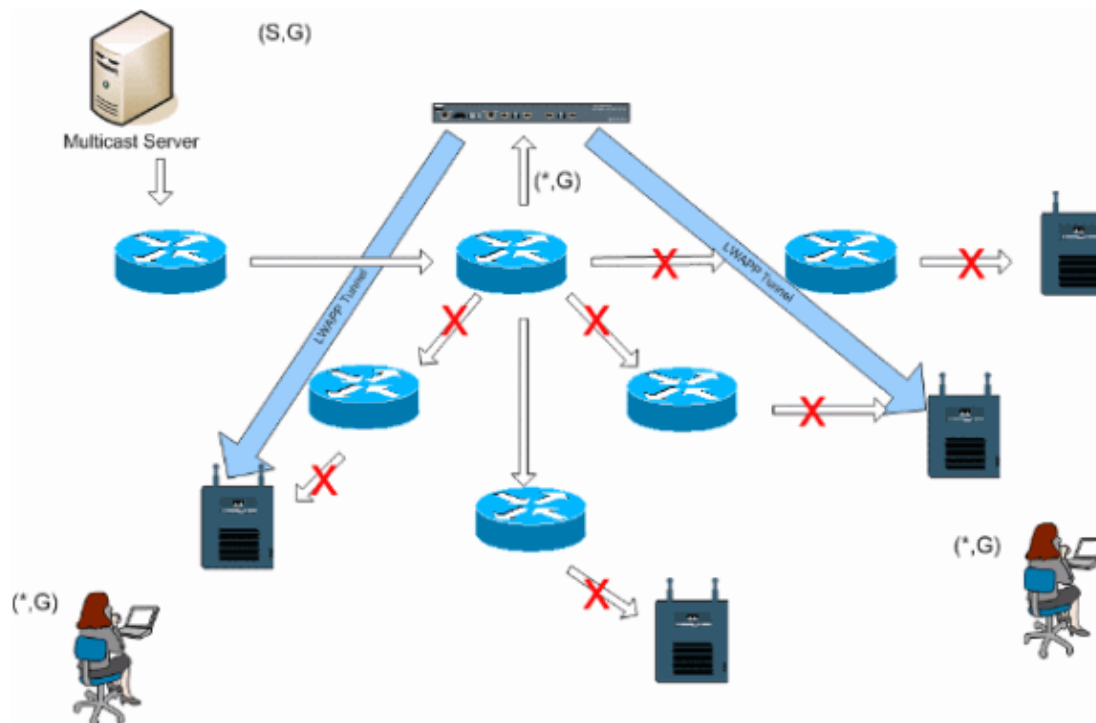


Note: If AP Group VLANs are configured, and an IGMP join is sent from a client through the controller, it is placed on the default VLAN of the WLAN that the client is on. Therefore, the client might not receive this multicast traffic unless the client is a member of this default broadcast domain.

Multicast–Multicast Delivery Method

The multicast–multicast delivery method does not require the controller to replicate each multicast packet received. The controller is configured for an un–used multicast group address that each access point becomes a member of. With Figure 3, the multicast group defined from the WLC to the access point is 239.0.0.65. When a client sends a multicast join to the WLAN, the access point forwards this join through the LWAPP tunnel to the controller. The controller forwards this link–layer protocol onto it's directly connected local area network connection that is the default VLAN for the associated WLAN of the client. The router that is local to the controller then adds this multicast group address to that interface for forwarding ((*,G)) entry. With Figure 3, the example multicast join was sent to the multicast group 239.0.0.30. When the network now forwards multicast traffic, the multicast address of 239.0.0.30 is forwarded to the controller. The controller then encapsulates the multicast packet into an LWAPP multicast packet addressed to the multicast group address (example here is 239.0.0.65) that is configured on the controller and forwarded to the network. Each access point on the controller receives this packet as a member of the controllers multicast group. The access point then forwards the clients/servers multicast packet (example here is 239.0.0.30) as a broadcast to the WLAN/SSID identified within the LWAPP multicast packet.

Note: If you improperly configure your multicast network, you could end up receiving another controller's access point multicast packets. If the first controller has to fragment this multicast packet, the fragment is forwarded to the network and each access point must spend time to drop this fragment. If you allow all traffic such as anything from the 224.0.0.x multicast range, this is also encapsulated and subsequently forwarded by each access point.

Figure 3 LWAPP Multicast–Multicast

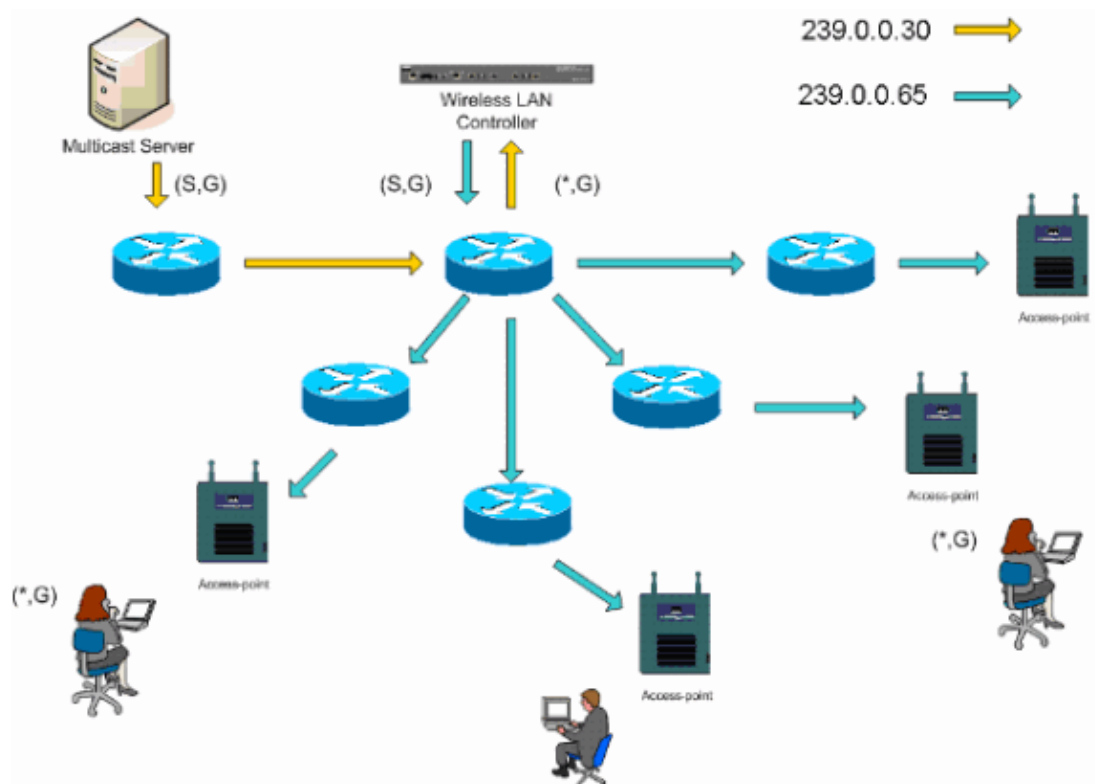

Router and Switch Multicast Configuration

This document is not a network multicast configuration guide. Refer to [Configuring IP Multicast Routing](#) for a complete implementation story. This document covers the basics to enable multicast within your network environment.

Enable IP Multicast Routing

IP multicast routing allows the Cisco IOS® software to forward multicast packets. The **ip multicast-routing** global configuration command is required to allow multicast to function in any multicast enabled network. The **ip multicast-routing** command should be enabled on all routers within your network between the WLC(s) and their respective access points.

```
Router(config)#ip multicast-routing
```

Enable PIM on an Interface

This enables the routing interface for Internet Group Management Protocol (IGMP) operation. The Protocol Independent Multicast (PIM) mode determines how the router populates its multicast routing table. The example provided here does not require the rendezvous point (RP) to be known for the multicast group and therefore sparse-dense-mode is the most desirable given the unknown nature of your multicast environment. This is not a multicast recommendation to be configured to work although the Layer 3 interface directly connected to your controller should be PIM enabled for multicast to function. All interfaces between your WLC(s) and their respective access points should be enabled.

```
Router(config-if)#ip pim sparse-dense-mode
```

Disable Switch VLAN IGMP Snooping

IGMP snooping allows a switched network with multicast enabled to limit traffic to those switchports that have users who want multicast to be seen while pruning the multicast packets from switchports that do not wish to see the multicast stream. In a Vocera deployment, it can be undesirable to enable CGMP or IGMP snooping on the upstream switchport to the controller with software releases earlier than 4.0.206.0.

Roaming and multicast are not defined with a set of requirements to verify that multicast traffic can follow a subscribed user. Although the client badge is aware that it has roamed, it does not forward another IGMP join to make sure that the network infrastructure continues to deliver the multicast (Vocera broadcast) traffic to the badge. At the same time, the LWAPP access point does not send a general multicast query to the roamed client to prompt for this IGMP join. With a Layer 2 Vocera network design, disabling IGMP snooping allows traffic to be forwarded to all members of the Vocera network no matter where they roam. This ensures that the Vocera broadcast feature works irrespective of where the client roams. Disabling IGMP snooping globally is a very undesirable task. It is recommended that IGMP snooping only be disabled on the Vocera VLAN that is directly connected to each WLC.

Refer to Configuring IGMP Snooping for more information.

```
Router(config)#interface vlan 150
Router(config-if)#no ip igmp snooping
```

Multicast Enhancements in Version 4.0.206.0 and Later

With the release of 4.0.206.0, Cisco introduces an IGMP query to allow users to roam at Layer 2 by sending a general IGMP query when this occurs. The client then responds with the IGMP group that they are a member of and this is bridged to the wired network as described earlier in this document. When a client roams to a controller that does not have Layer 2 connectivity, or a Layer 3 roam, synchronous routing is added for multicast source packets. When a client, who has completed a Layer 3 roam sources a multicast packet from the wireless network, the foreign controller encapsulates this packet in the Ethernet over IP (EoIP) in IP tunnel to the anchor controller. The anchor controller then forwards that to the wireless clients locally associated as well as bridge this back to the wired network where it is routed using normal multicast routing methods.


Deployment Scenarios

These three deployment scenarios cover best practices and design parameters to help with a successful Vocera Badge deployment:

- Single Controller Deployment
- Multiple Controller Layer 2 Deployment
- Multiple Controller Layer 3 Deployment

Understanding how the Vocera Badge features interact within an LWAPP split MAC environment is essential. With all deployment scenarios, multicast should be enabled and aggressive load balancing should be disabled. All badge WLANs should be contained within the same broadcast domain across your entire network.

Figure 4

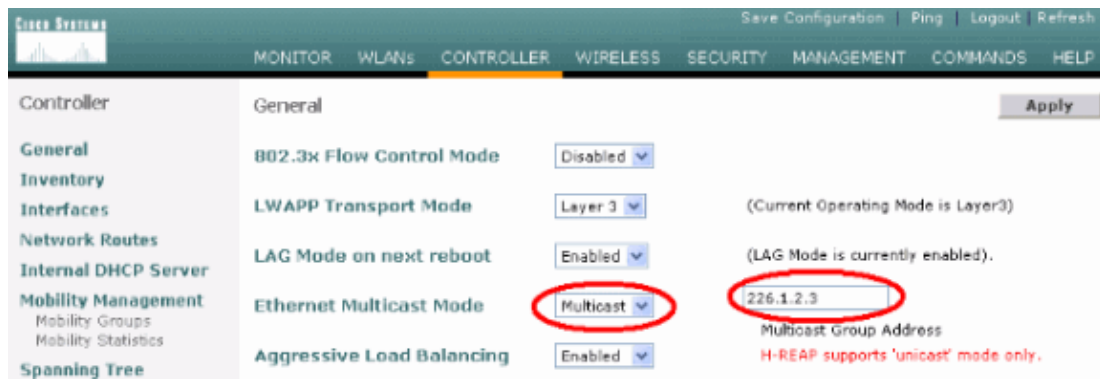


Single Controller Deployment

This is the most straight forward deployment scenario. It allows you to deploy the Vocera Badge solution with little deployment concerns. Your network must be enabled for IP multicast routing only to allow the access points to receive the LWAPP multicast packets. If required, you can limit network multicast complexity by configuring all routers and switches with the controllers multicast group.

With multicast configured globally on the controller, the proper SSID, security settings, and all the access points registered the Vocera Badge solution and all its functions operates as expected. With the Vocera Broadcast function, a user roams and the multicast traffic follows as expected. There are no extra settings required to be configured to allow this solution to function properly.

When a Vocera Badge sends a multicast message, as it does with the Vocera Broadcast, it is forwarded to the controller. The controller then encapsulates this multicast packet within an LWAPP multicast packet. The network infrastructure forwards this packet to every access point that is connected to this controller. When the access point receives this packet, it then looks at the LWAPP multicast header to determine which WLAN/SSID it then broadcasts this packet to.

Figure 5 Single Controller in Multicast–Multicast Mode

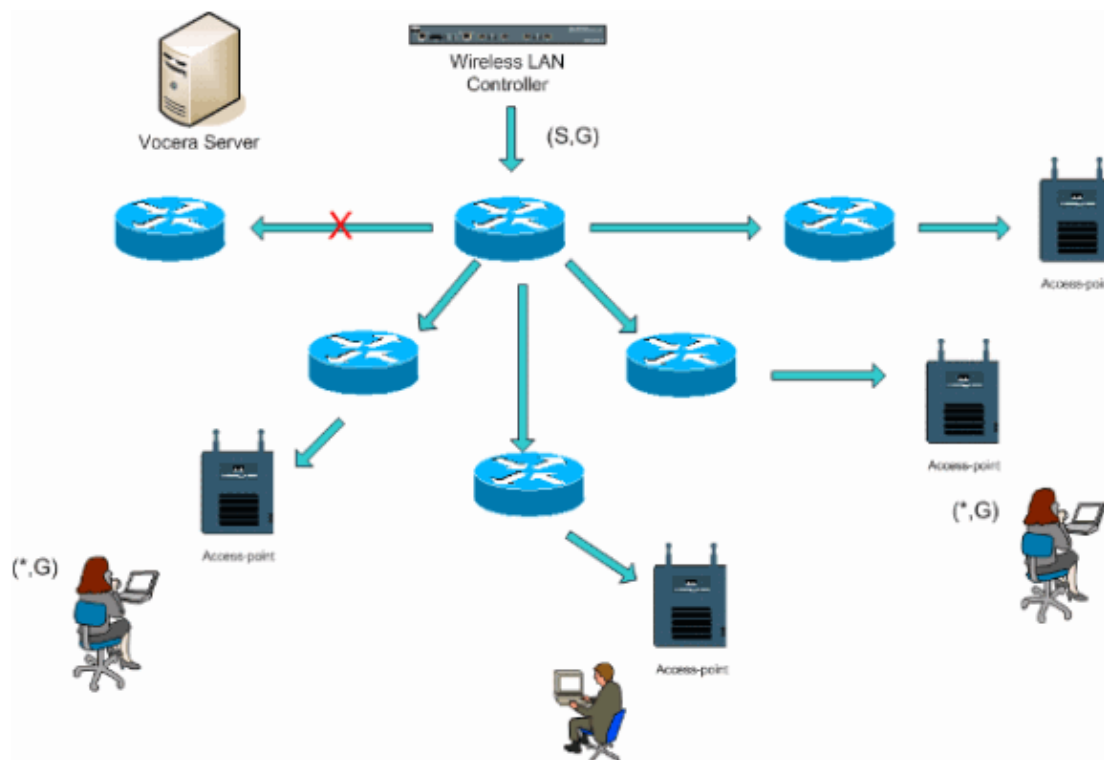


Multiple Controller Layer 2 Deployment

Multiple controllers must all have connectivity to each other via the same Layer 2 broadcast domain. Both controllers are configured for multicast as shown, using the identical access point multicast groups on each controller to limit fragmentation. With the assumption that this Layer 2 broadcast domain is connected via a common switch or a common set of switches, CGMP/IGMP snooping on these switches must be disabled for this single VLAN or run 4.0.206.0 or later WLC software. With the Vocera Broadcast function and a user roam from an access point on one controller to an access point on a different controller, there is no mechanism for IGMP joins to be forwarded to the new Layer 2 port for IGMP snooping to work. Without an IGMP packet reaching the upstream CGMP or IGMP capable switch, the specified multicast group is not forwarded to the controller and therefore is not received by the client. In some cases this might work, if a client that is part of the same Vocera Broadcast group has already sent this IGMP packet before the roaming client roams onto the new controller. With the advantages of version 4.0.206.0, a client who roams to another controller as a Layer 2 roam receives a general IGMP query immediately after authentication. The client should then respond with the interested groups and the new controller is then bridged this to the locally connected switch. This allows the advantages of IGMP and CGMP on your upstream switches.

You can create additional badge SSIDs and Layer 2 domains for separate badge networks as long as your network is configured to pass multicast traffic appropriately. Also, each Vocera Layer 2 broadcast domain created must exist everywhere a controller is connected to the network so as not to break multicast.

Figure 6 Multiple Controller Layer 2 Deployment

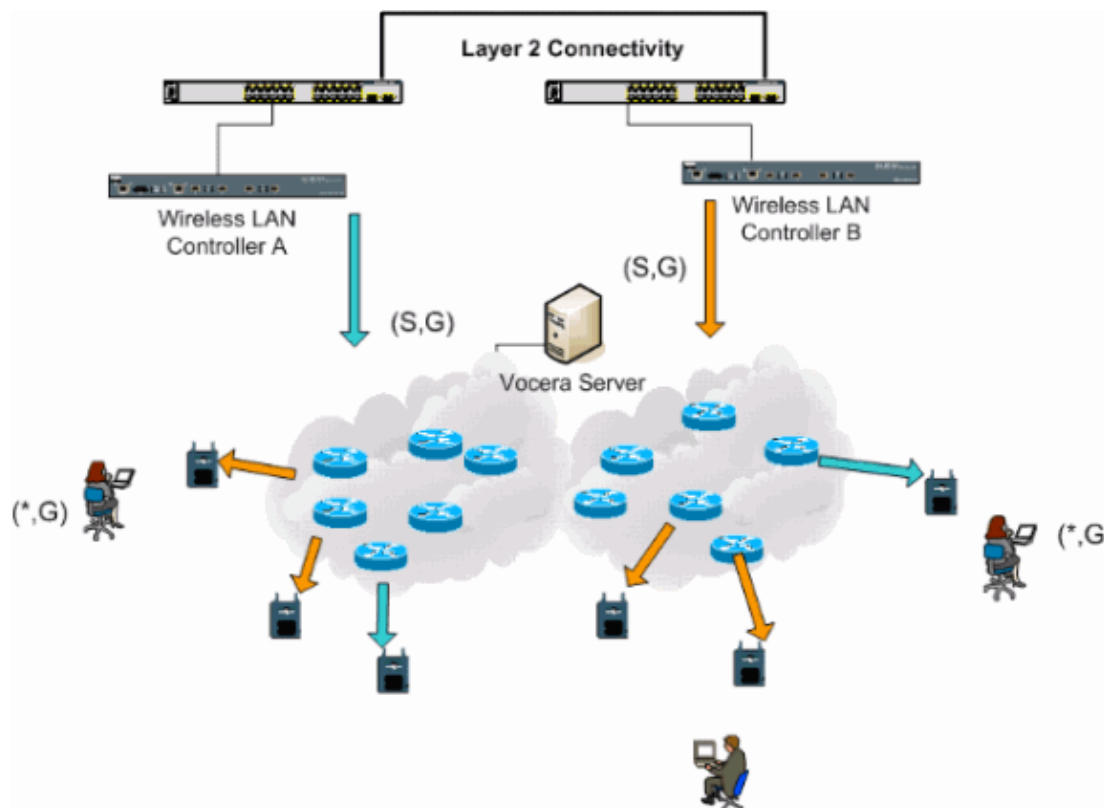


Multiple Controller Layer 3 Deployment

The Layer 3 roaming deployment strategy should only be used with controller-to-controller roaming with WLC software release 4.0.206.0 or later. If a client that has been connected to the Vocera broadcast group and receives the appropriate multicast stream and roams to another controller as a Layer 3 roam with the LWAPP Layer 3 roaming configured, it is queried for interested multicast groups. The client, when sourcing to the same Vocera broadcast group, has these packets delivered to the anchor controller through the EoIP tunnel

and has these packets routed through normal multicast routing methods.

Figure 7 Multiple Controller Layer 3 Deployment

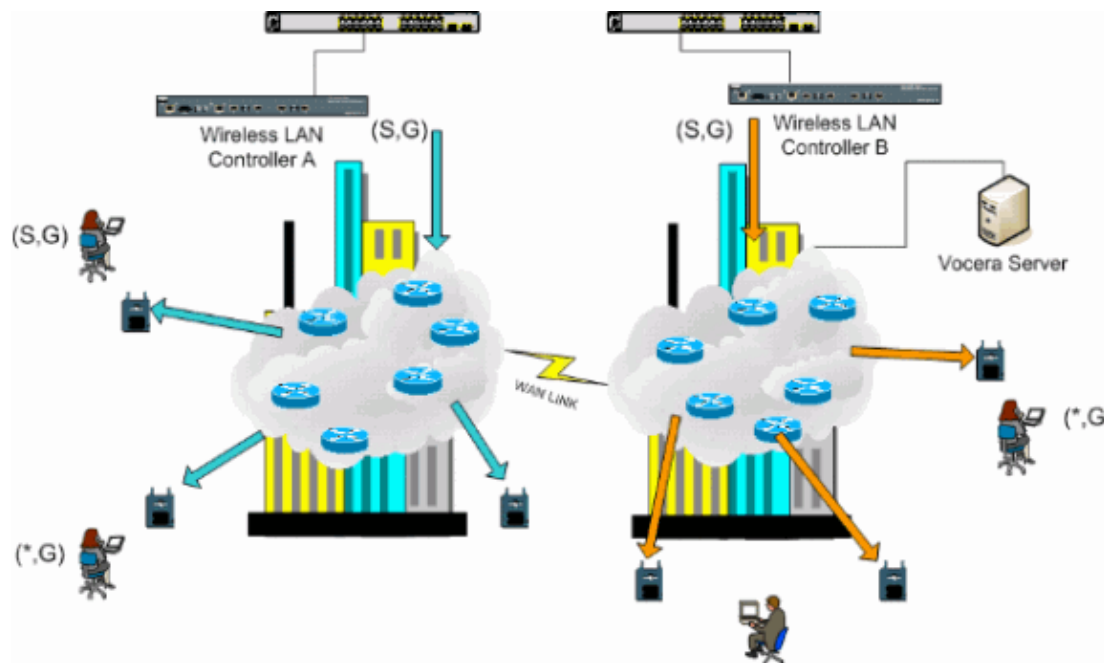

VoWLAN Deployments: Cisco's Recommendations

Wireless IP Telephony networks require careful RF planning. A thorough voice site survey is often required to determine the proper levels of wireless coverage and to identify sources of interference. Access point placement and antenna selection choices can be greatly eased with the help of the results of a valid voice site survey. The most important consideration is the transmit power of the wireless phone. Ideally the phone learns the transmit power of the access point and adjust its transmit power to that of the access point.

Although the majority of the wireless networks today are deployed after an extensive RF site survey, they are done with keeping data service in mind as well. VoWLAN phones are likely to have different roaming characteristics and different coverage requirements than those of a typical WLAN adapter for a mobile client such as a laptop. Therefore, an additional site survey for voice is often recommended to prepare for the performance requirements of multiple VoWLAN clients. This additional survey gives the opportunity to tune the access points to ensure that the VoWLAN phones have enough RF coverage and bandwidth to provide proper voice quality.

For additional information on RF design considerations, refer to the chapter on WLAN Radio Frequency (RF) Design Considerations in the Cisco Wireless LAN Design Guide, available at <http://cisco.com/go/srnd>.

Recommendations for Multi-Floor Buildings, Hospitals, and Warehouses

Consider the factors listed in this section when you survey multi-floor buildings, hospitals, and warehouses.

Construction Methods and Materials

Many aspects of the building construction are unknown or hidden from the site survey, so you might have to acquire that information from other sources (such as architectural drawings). Some examples of typical construction methods and materials that affect the range and coverage area of access points include metallic film on window glass, leaded glass, steel-studded walls, cement floors and walls with steel reinforcement, foil-backed insulation, stairwells and elevator shafts, plumbing pipes and fixtures, and many others.

Inventory

Various types of inventory can affect RF range, particularly those with high steel or water content. Some items to watch for include cardboard boxes, pet food, paint, petroleum products, engine parts, and so forth.

Levels of Inventory

Make sure you perform a site survey at peak inventory levels or at times of highest activity. A warehouse at a 50% stocking level has a very different RF footprint than the same warehouse at an inventory level of 100%.

Activity Levels

Similarly, an office area after hours (without people) has a different RF footprint than the same area full of people during the day. Although many parts of the site survey can be conducted without full occupation, it is essential to conduct the site survey verification and tweak key values during a time when the location is occupied. The higher the utilization requirements and the density of users, the more important it is to have a well designed diversity solution. When more users are present, more signals are received on each user's device. Additional signals cause more contention, more null points, and more multipath distortion. Diversity on the access point (antennas) helps minimize these conditions.

Multi-Floor Buildings

Keep in mind these guidelines when you conduct a site survey for a typical office building:

- Elevator shafts block and reflect RF signals.
- Supply rooms with inventory absorb signals.
- Interior offices with hard walls absorb RF signals.
- Break rooms (kitchens) can produce 2.4 GHz interference through the use of microwave ovens.
- Test labs can produce 2.4 GHz or 5 GHz interference, creating multipath distortion and RF shadows.
- Cubicles tend to absorb and block signals.
- Conference rooms require high access point coverage because they are areas of high utilization.

Extra precaution must be administered when you survey multi-floor facilities. Access points on different floors can interfere with each other as easily as access points located on the same floor. It is possible to use this behavior to your advantage during a survey. Using higher-gain antennas, it might be possible to penetrate floors and ceilings and provide coverage to floors above as well as below the floor where the access point is mounted. Be careful not to overlap channels between access points on different floors or access points on the same floor. In multi-tenant buildings, there might be security concerns that require the use of lower transmission powers and lower gain antennas to keep signals out of neighboring offices.

Hospitals

The survey process for a hospital is much the same as that for an enterprise, but the layout of a hospital facility tends to differ in these ways:

- Hospital buildings tend to go through many reconstruction projects and additions. Each additional construction is likely to have different construction materials with different levels of attenuation.
- Signal penetration through walls and floors in the patient areas is typically minimal, which helps create micro-cells and multipath variations.
- The need for bandwidth increases with the increasing use of WLAN ultrasound equipment and other portable imaging applications. The need for bandwidth increases with the addition of wireless voice as well.
- Healthcare cells are small, and seamless roaming is essential, especially with voice applications.
- Cell overlap can be high, and so can channel reuse.

- Hospitals can have several types of wireless networks installed. This includes 2.4 GHz non-802.11 equipment. This equipment can cause contention with other 2.4 GHz networks.
- Wall-mounted diversity patch antennas and ceiling-mounted diversity omni-directional antennas are popular, but keep in mind that diversity is required.

Warehouses

Warehouses have large open areas that often contain high storage racks. Many times, these racks reach almost to the ceiling, where access points are typically placed. Such storage racks can limit the area that the access point can cover. In these cases, consider placing access points on other locations besides the ceiling, such as side walls and cement pillars. Also consider these factors when you survey a warehouse:

- Inventory levels affect the number of access points needed. Test coverage with two or three access points in estimated placement locations.
- Unexpected cell overlaps are likely because of multipath variations. The quality of the signal varies more than the strength of that signal. Clients might associate and operate better with access points farther away than with nearby access points.
- During a survey, access points and antennas usually do not have an antenna cable connecting them. But in a production environment, the access point and antenna might require antenna cables. All antenna cables introduce signal loss. The most accurate survey includes the type of antenna to be installed and the length of cable to be installed. A good tool to use to simulate the cable and its loss is an attenuator in a survey kit.

Surveying a manufacturing facility is similar to surveying a warehouse, except that there might be many more sources of RF interference in a manufacturing facility. In addition, the applications in a manufacturing facility usually require more bandwidth than those of a warehouse. These applications can include video imaging and wireless voice. Multipath distortion is likely to be the greatest performance problem in a manufacturing facility.

Security Mechanisms Supported

In addition to static WEP and Cisco LEAP for authentication and data encryption, the Vocera Badges also support WPA-PEAP (MS-CHAP v2)/WPA2-PSK.

LEAP Considerations

LEAP allows devices to be authenticated mutually (badge-to-access point and access point-to-badge) based on a user name and password. Upon authentication, a dynamic key is used between the phone and the access point to encrypt traffic. However, the ASLEAP dictionary attack should be considered when you decide to use LEAP as your security solution:

Refer to Dictionary Attack on Cisco LEAP Vulnerability for more information.

If LEAP is used, a LEAP-compliant RADIUS server, such as the Cisco Access Control Server (ACS), is required to provide access to the user database. The Cisco ACS can either store the user name and password database locally, or it can access that information from an external Microsoft Windows NT directory. When using LEAP, ensure that strong passwords are used on all wireless devices. Strong passwords are defined as being between 10 and 12 characters long and can include both uppercase and lowercase characters as well as the special characters.

Because all the badges use the same password and it is stored within the badge, Cisco recommends that you use different user names and passwords on data clients and wireless voice clients. This practice helps with tracking and troubleshooting as well as security. Although it is a valid configuration option to use an external

(off-ACS) database to store the user names and passwords for the badges, Cisco does not recommend this practice. Because the ACS must be queried whenever the badge roams between access points, the unpredictable delay to access an off-ACS database could cause excessive delay and poor voice quality.

Wireless Network Infrastructure

The wireless IP Telephony network, just like a wired IP Telephony network, requires careful planning for VLAN configuration, network sizing, multicast transport, and equipment choices. For both wired and wireless IP Telephony networks, separate voice and data VLANs is often the most effective way of suggested deployment to ensure sufficient network bandwidth and ease of troubleshooting.

Voice, Data and Vocera VLANs

VLANs provide a mechanism for segmenting networks into one or more broadcast domains. VLANs are especially important for IP Telephony networks, where the typical recommendation is to separate voice and data traffic into different Layer 2 domains. Cisco recommends that you configure separate VLANs for the Vocera Badges from other voice and data traffic: a native VLAN for access point management traffic, data VLAN for data traffic, a voice or auxiliary VLAN for voice traffic, and a VLAN for the Vocera Badges. A separate voice VLAN enables the network to take advantage of Layer 2 marking and provides priority queuing at the Layer 2 access switch port. This ensures that appropriate QoS is provided for various classes of traffic and helps to resolve addressing issues such as IP addressing, security, and network dimensioning. The Vocera Badges use a broadcast feature that utilizes multicast to deliver. This common VLAN ensures that when a badge roams between controllers, it remains part of the multicast group. This last process is discussed in detail when multicast is addressed later in this document.

Network Sizing

IP Telephony network sizing is essential to ensure that adequate bandwidth and resources are available to meet the demands presented by the presence of voice traffic. In addition to the usual IP Telephony design guidelines for sizing components such as PSTN gateway ports, transcoders, WAN bandwidth, and so forth, also consider these 802.11b issues when you size your wireless IP Telephony network. The Vocera Badges are a specialized application that stretch the number of wired clients beyond our typical deployment recommendations.

Number of 802.11b Devices per Access Point

Cisco recommends that you have no more than 15 to 25 802.11b devices per access point.

Number of Active Calls per Access Point

Vocera uses two different codecs based on if it is a badge-to-badge (proprietary low-bit rate codec) call or a badge-to-phone (G.711 codec) call. This table shows a percentage of available bandwidth by data rates and gives you a clearer picture of the expected throughput:

Call Process	1 Mbps	2 Mbps	5.5 Mbps	11 Mbps
Badge-to-Phone (G.711)	20.7%	11.8%	6.3%	4.7%
Badge-to-Badge (Proprietary Low-bit rate codec)	9.4%	6.1%	4.2%	3.6%

Switch Recommendations

Note: If you use a Cisco Catalyst 4000 Series Switch as the main router in the network, ensure that it contains, at a minimum, either a Supervisor Engine 2+ (SUP2+) or Supervisor Engine 3 (SUP3) module. The SUP1 or SUP2 module can cause roaming delays, as can the Cisco Catalyst 2948G, 2980G, 2980G–A, 4912, and 2948G–GE–TX switches.

You can create a switch port template for use when you configure any switch port for connection to an access point. This template should add all the baseline security and resiliency features of the standard desktop template. In addition, when you attach the access point to a Cisco Catalyst 3750 Switch, you can optimize the performance of the access point by using Multilayer Switching (MLS) QoS commands to limit the port rate and to map Class of Service (CoS) to Differentiated Services Code Point (DSCP) settings.

Any traffic that is not required by WLAN clients should not be sent to an access point. A template should be designed in such a way that helps create a secure and resilient network connection with these features:

- **Return Port Configurations to default** Prevents configuration conflicts by clearing any pre-existing port configurations.
- **Disable Dynamic Trunking Protocol (DTP)** Disables dynamic trunking, which is not needed for connection to an access point.
- **Disable Port Aggregation Protocol (PagP)** PagP is enabled by default but is not needed for user-facing ports.
- **Enable Port Fast** Allows a switch to quickly resume forwarding traffic if a spanning tree link goes down.
- **Configure Wireless VLAN** Creates a unique wireless VLAN that isolates wireless traffic from other data, voice, and management VLANs. This isolates traffic and ensures greater control of traffic.
- **Enable Quality of Service (QoS); do not trust port (mark down to 0)** Ensures appropriate treatment of high-priority traffic, including softphones, and prevents users from consuming excessive bandwidth by reconfiguring their PCs.

WS–C3750–48PS–S Inline Power Switches can be used to provide power to access points that are capable of receiving inline power.

The Catalyst 6500 allows you to forward packets at line rate with all the features described here as well as integrating numerous service modules. The Wireless Service Module (WiSM) allows you to have two controllers each with the capability to control 150 access points each. With up to five WiSMs per chassis, this allows you to control over 1500 access points that support 50,000 clients within a single high performance switching architecture.


Deployments and Configuration

Badge Configuration

The Vocera Badge Configuration Utility (BCU) and the configuration of the badge can introduce roaming and latency into your environment if done incorrectly. Using the BCU and the Badge Properties Editor (BPE), verify these settings (see Figure 8):

- **Subnet Roaming** is disabled.
- **Scan Default Channels (1,6,11)** is checked.
- **Broadcast Uses IGMP** is enabled.
- **Roaming Policy** is set to **2** or higher.

Figure 8 Vocera BCU Advanced Tab

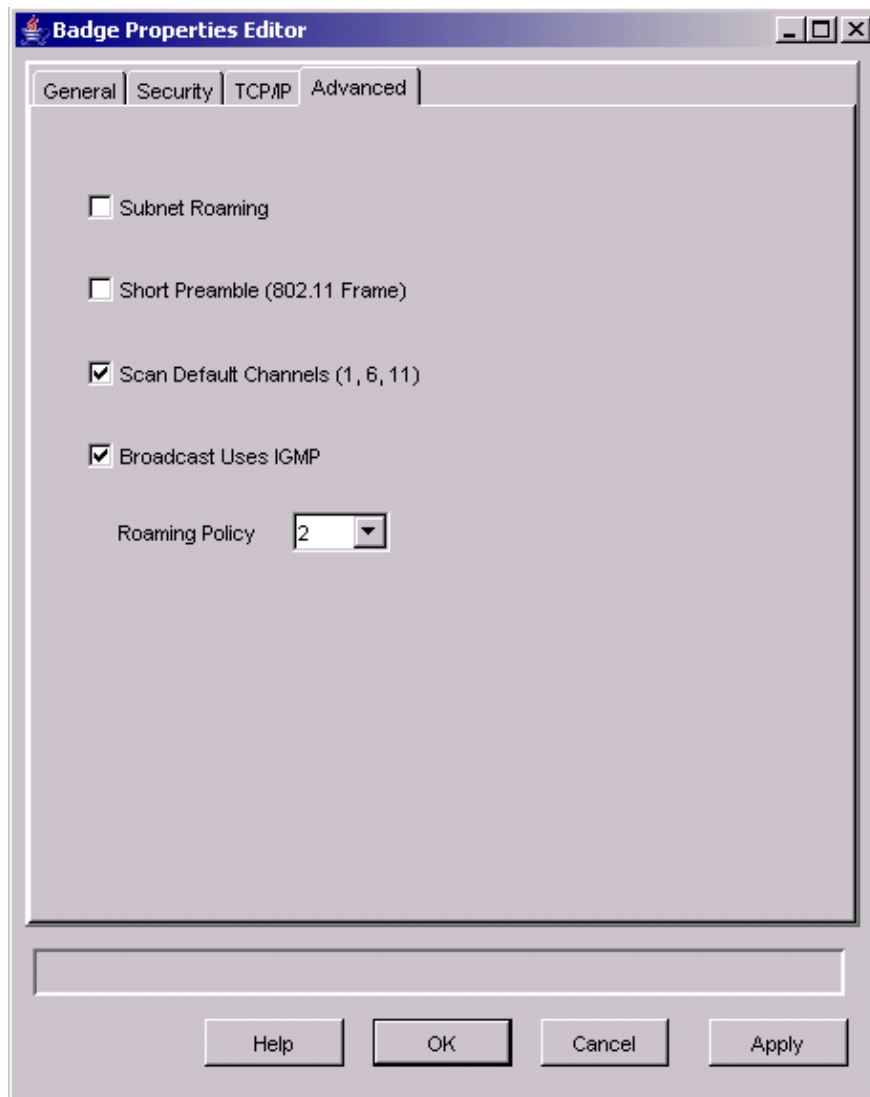

When **Subnet Roaming** is checked, it instructs the badge to request a new IP address after each roam. In the LWAPP environment, the infrastructure helps maintain client connectivity at Layer 3. When a voice client must wait for the DHCP server to respond before it is able to send or receive packets, delay and jitter are introduced. If **Scan Default Channels (1,6,11)** is not checked, the badge scans all 802.11b channels when the badge looks to roam. This prevents the forwarding of packets and seamless roaming.

Tune AutoRF for Your Environment

As described in the Recommendations section of this document, it is important to understand that each site has its own RF characteristics. AutoRF or Radio Resource Management (RRM) might need to be tuned, with the understanding that each site is different and AutoRF/RRM should be tuned for your environment.

Before you adjust AutoRF, refer to Radio Resource Management under Unified Wireless Networks for more information.

RRM allows you to adjust the transmit power of each access point, by adjusting how strong each access point hears its third strongest neighbor. This value can only be adjusted from the CLI using the **config advanced 802.11b tx-power-thresh** command as described in Tx Power Level Assignment Settings.

Before you adjust AutoRF, walk the deployment site using the Vocera badge as worn by the end user and use a site survey tool in order to gain a strong understanding of how the badge roams and at what power each

access point is seen. Once this is complete and it is determined that adjusting this value is required, begin with a value of -71 dBm for the Transmit Power Control algorithm. Use this CLI parameter:

```
config advanced 802.11b tx-power-thresh -71
```

Allow the network to work through this adjustment with a minimum of 30 minutes to an hour before you observe any changes. Once the network is given a sufficient amount of time, walk the site using the same survey tool and badges again. Observe the same roaming characteristics and access point power. The goal here is to attempt to have the badges roam at or before the next access point to get the best possible signal to noise ratio.

- **How do I know if the transmit power is too hot or too cold?**

Determining whether you have your transmit power threshold too high or too low requires a good understanding of your environment. If you have walked your entire deployment area (where you expect your Vocera badges to function), you should know where your access points are located as well as experience the roaming behavior of the badge.

- **What do I do if my transmit power is too hot?**

The Vocera Badge roams based solely on the signal strength rather than signal quality. If the Vocera Badge does not roam after it passes several access points while engaged in the welcome tutorial or the test tone, the badge is considered to be sticky. If this behavior is indicative of the entire campus deployment area, then your transmit power threshold is too hot and should be backed down. If only one or two isolated areas show this behavior and the rest of the deployment area shows more idealistic roaming characteristics this is not an indication that your network is running too hot.

- **What do I do if my transmit power is too cold?**

The default transmit threshold should almost never provide you a deployment area where your network runs too cold. If the transmit power threshold is adjusted down, and walking the halls with the Vocera Badge provides you with an environment where the badge roams well, but loses connectivity and/or dead/spotty coverage, then your network might have been tuned too low. If this is not characteristic of your entire network but isolated to one or two areas, then it is more indicative of a coverage hole rather than a network-wide problem.

- **Isolated Behavior**

If you find that in one or two areas, the badge sticks to an access point rather than roaming in an idealistic manner, examine this area.

- ◆ How is this area different from the rest of the campus?
- ◆ If this/these areas are near building exits or areas under construction, could coverage hole detection be forcing these access points to raise the power?
- ◆ Look at the WLC log file and access point neighbor lists to help determine why such an anomaly could occur.

If you find that in one or more isolated areas, the badge experiences dead or spotty coverage, then you need to examine these areas separately.

- ◆ Is this area near an elevator shaft, radiology, or a break room?
- ◆ These areas might be better suited by the installation or better placement of an access point to allow for better voice coverage.

In both cases, it is always advisable to understand that you are working in an unlicensed radio spectrum and idealistic behavior might not ever be achievable. This could happen when you are situated next to a radio transmission tower or device, a television transmitter or possibly a non-802.11 2.4 GHz repair facility (wireless phones, and so forth).

Wireless Network Infrastructure Configuration

The Cisco Unified Wireless Network design and deployment guide should be followed for the overall configuration of your WLC(s). This section provides additional recommendations specific to Vocera® Communication Badges.

Note: Changes are left unsaved if you do not press the **Apply** button before you move to the next step.

Complete these steps under the **Controller** top-level menu:

1. Change Ethernet Multicast Mode to **Multicast**.
2. Set the Multicast Group Address to **239.0.0.255** (or some other unused multicast group address).
3. Set the Default Mobility Domain Name and RF-Network Name to your network design.
4. Disable **Aggressive Load Balancing**.

Figure 9 General WLC Configuration

The screenshot shows the Cisco WLC configuration interface. The top navigation bar includes 'MONITOR', 'WLANs', 'CONTROLLER' (selected), 'WIRELESS', 'SECURITY', 'MANAGEMENT', 'COMMANDS', and 'HELP'. The left sidebar lists various configuration categories: 'Controller', 'General', 'Inventory', 'Interfaces', 'Network Routes', 'Internal DHCP Server', 'Mobility Management' (with sub-items 'Mobility Groups' and 'Mobility Statistics'), 'Spanning Tree', 'Ports', 'Master Controller Mode', 'Network Time Protocol', and 'QoS Profiles'. The main content area is titled 'General' and contains various settings. A table of settings is shown below:

Setting	Value	Notes
802.3x Flow Control Mode	Disabled	
LWAPP Transport Mode	Layer 3	(Current Operating Mode is Layer3)
LAG Mode on next reboot	Enabled	(LAG Mode is currently enabled).
Ethernet Multicast Mode	Multicast	239.0.0.255 Multicast Group Address H-REAP supports 'unicast' mode only.
Aggressive Load Balancing	Enabled	
Peer to Peer Blocking Mode	Disabled	
Over The Air Provisioning of AP	Enabled	
AP Fallback	Enabled	
Apple Talk Bridging	Disabled	
Fast SSID change	Disabled	
Default Mobility Domain Name	VOCERA	
RF-Network Name	VOCERA	
User Idle Timeout (seconds)	300	
ARP Timeout (seconds)	300	
Web Radius Authentication	PAP	
Operating Environment	Commercial (0 to 40 C)	
Internal Temp Alarm Limits	0 to 65 C	


An 'Apply' button is located at the top right of the configuration area.

Create Interfaces

Click **Controller > Interfaces**.

Note: Your VLAN and IP address varies. The screen shots here provide sample addressing which should not be directly followed.

Figure 10 List of WLC Interfaces

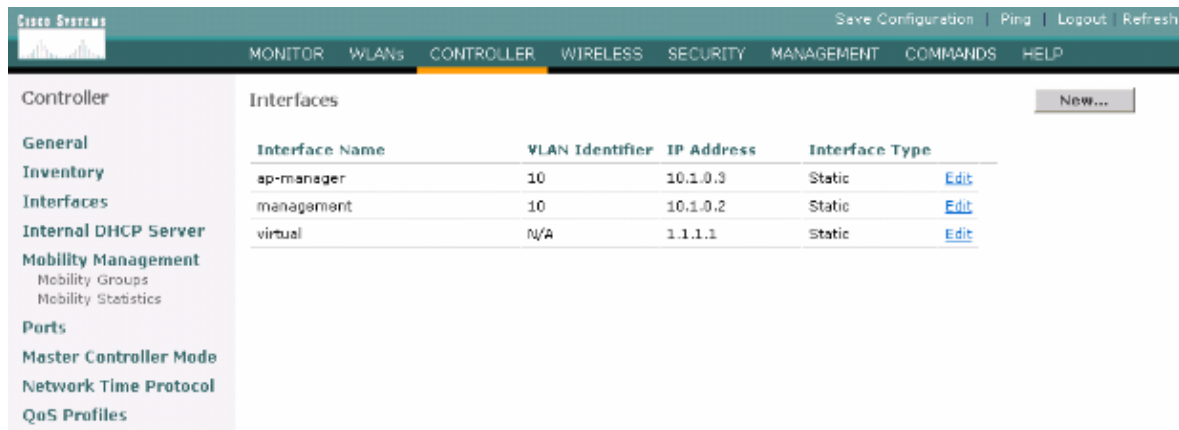

The screenshot shows the Cisco Systems WLC configuration interface. The top navigation bar includes 'MONITOR', 'WLANs', 'CONTROLLER' (selected), 'WIRELESS', 'SECURITY', 'MANAGEMENT', 'COMMANDS', and 'HELP'. The left sidebar lists various configuration options under the 'Controller' heading, including 'General', 'Inventory', 'Interfaces', 'Internal DHCP Server', 'Mobility Management', 'Ports', 'Master Controller Mode', 'Network Time Protocol', and 'QoS Profiles'. The main content area is titled 'Interfaces' and contains a table with the following data:

Interface Name	VLAN Identifier	IP Address	Interface Type
ap-manager	10	10.1.0.3	Static
management	10	10.1.0.2	Static
virtual	N/A	1.1.1.1	Static

Each row in the table has an 'Edit' link to its right. A 'New...' button is located in the top right corner of the table area.

Create the Vocera Voice Interface

Complete these steps:

1. Click **New**.
2. Enter a tag name representative of your Vocera VoWLAN network in the Interface Name field.
3. Enter the VLAN number of that VoWLAN network in the VLAN ID field.
4. Click **Apply** and then click **Edit** in order to edit the interface that you just created.
5. Enter the IP addressing for this interface that is in the range of the VLAN and other related information.
6. Click **Apply**.

Wireless-Specific Configuration

For a WLAN that has only Vocera Badges, this configuration provides sample settings that best support the Vocera Broadcast application.

- The DTIM Period is **1**.
- Support for 802.11g is disabled. Only the 802.11b data rate of **11 Mbps** is **Mandatory**.
- Short preamble is disabled.
- DTPC is disabled.

Figure 11 802.11b/g Configuration

The screenshot shows the Cisco Wireless LAN Controller configuration interface. The top navigation bar includes links for Save Configuration, Ping, Logout, and Refresh. The main menu has tabs for MONITOR, WLANs, CONTROLLER, WIRELESS (selected), SECURITY, MANAGEMENT, COMMANDS, and HELP. The left sidebar lists various configuration categories: Wireless, Access Points, Bridging, Routers, Clients, Global RF, Country, and Timers. The main content area is titled '802.11b/g Global Parameters' and contains the following settings:

- 802.11b/g Network Status:** ☒ Enabled
- 802.11g Support:** ☐ Enabled
- Data Rates^{**}:**
 - 1 Mbps:
 - 2 Mbps:
 - 5.5 Mbps:
 - 11 Mbps:
- Beacon Period (milliseconds):** **DTIM Period (beacon intervals):**
- Fragmentation Threshold (bytes):**
- Short Preamble:** ☐ Enabled
- Pico Cell Mode:** ☐ Enabled
- OTPC Support:** ☐ Enabled

**** Data Rate 'Mandatory'** implies that clients who do not support that specific rate will not be able to associate. Data Rate 'Supported' implies that any associated client that also supports that same rate may communicate with the AP using that rate. But it is not required that a client be able to use the rates marked supported in order to associate.

WLAN Configuration

Complete these steps:

1. Update the Radio Policy field to a value that best fits you needs.
2. Change Admin Status to **Enabled**.
3. Set Session Timeout to **1800**.
4. Set Quality of Service to **Platinum**.
5. Set Broadcast SSID to **Enabled**.
6. Set the Interface Name to the interface created for the Vocera Communication Badges.
7. Set the security options to match your corporate policies.


Figure 12 WLAN Configuration

Configure Access Point Detail

Complete these steps:

1. Click **Detail**.
2. Configure the AP Name.
3. Ensure that the access point is configured for DHCP.
4. Ensure that Admin Status is **Enabled**.
5. AP Mod should be set to **local**.
6. Enter the location of the access point.
7. Enter the controller name that the access point belongs to. The controller name can be found on the Monitor page.
8. Click **Apply**.

Figure 13 AP Detail

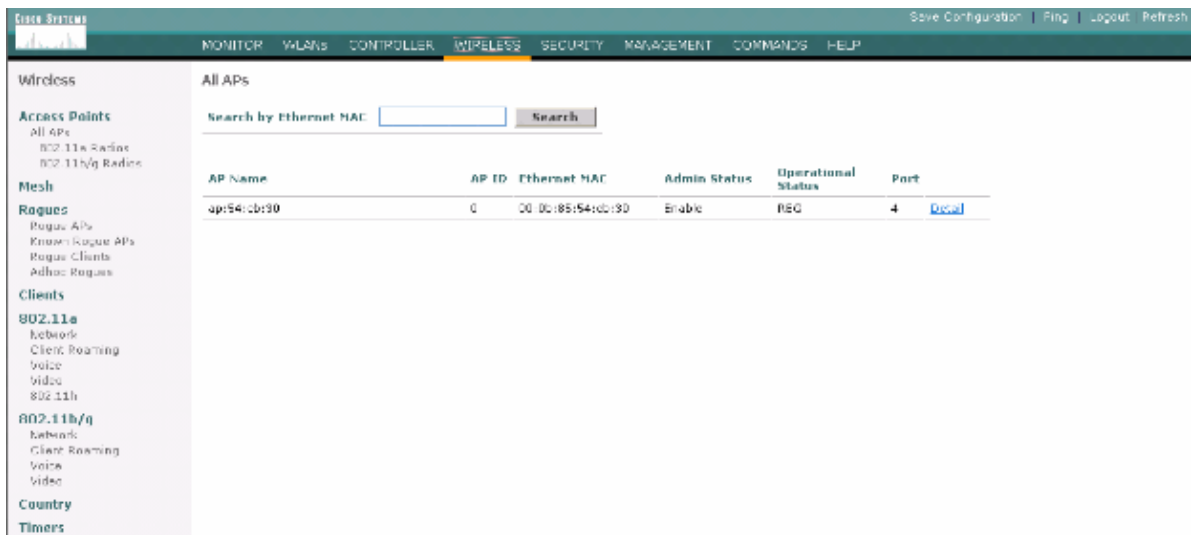


Configure the 802.11b/g Radio

Complete these steps:

1. Click **Wireless** located at the top of the WLC and verify that all access points under Admin Status are set to **Enable**.

Figure 14

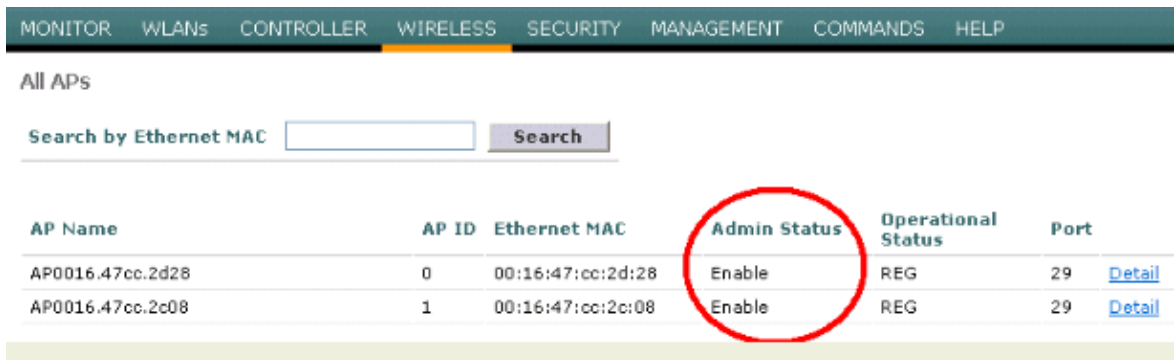

2. Click **Network** (located near 802.11b/g).
3. Click **AutoRF**.
4. Use AutoRF to create a complete coverage with non-overlapping RF channel and a transmit power. In order to do this, select **Automatic** for both RF Channel Assignment and Tx Power Level Assignment.

Figure 15

MONITOR WLANs CONTROLLER WIRELESS SECURITY MANAGEMENT COMMANDS HELP

802.11b/g Global Parameters > Auto RF

RF Group

Group Mode	<input checked="" type="checkbox"/> Enabled
Group Update Interval	600 secs
Group Leader	00:14:a9:be:50:40
Is this Controller a Group Leader	Yes
Last Group Update	557 secs ago

RF Channel Assignment

Channel Assignment Method	<input checked="" type="radio"/> Automatic Every 600 sec <input type="radio"/> On Demand Invoke Channel Update now <input type="radio"/> OFF
Avoid Foreign AP interference	<input checked="" type="checkbox"/> Enabled
Avoid Cisco AP load	<input type="checkbox"/> Enabled
Avoid non-802.11b noise	<input checked="" type="checkbox"/> Enabled
Signal Strength Contribution	Enabled
Channel Assignment Leader	00:14:a9:be:50:40
Last Channel Assignment	557 secs ago

Tx Power Level Assignment

Power Level Assignment Method	<input checked="" type="radio"/> Automatic Every 600 sec <input type="radio"/> On Demand Invoke Power Update now <input type="radio"/> Fixed 1
Power Threshold	-65 dBm
Power Neighbor Count	3
Power Update Contribution	SNR
Power Assignment Leader	00:14:a9:be:50:40
Last Power Level Assignment	557 secs ago

5. Click **Apply**.
6. Click **Save Configuration** and see the Tune AutoRF for Your Environment section of this document.
7. Choose **Wireless > Access Points > 802.11b/g Radios**.

Figure 16

MONITOR WLANs CONTROLLER WIRELESS SECURITY MANAGEMENT COMMANDS HELP

802.11b/g Radios

AP Name	Base Radio MAC	Admin Status	Operational Status	Channel	Power Level	Antenna	
AP1	00:0b:85:54:cb:30	Enable	UP	11 *	1 *	Internal	Configure Detail 802.11b/gTSM

* global assignment

Wireless IP Telephony Verification

After you conduct an RF site survey and configure the access points and the phones, it is crucial to conduct verification tests to ensure that everything works as desired. These tests should be performed at all of these locations:

- The primary area of each access point cell (where the badges are most likely to connect to that particular access point).
- Any location where there might be high call volume.
- Locations where usage might be infrequent but coverage still has to be certified (for example, stairwells, restrooms, and so forth).
- At the fringes of the access point's coverage area.
- " These tests can be performed in parallel or series. If performed in parallel, ensure that phones are powered off between testing points to test full association, authentication, and registration at each location. Roaming and load tests must be the final tests.

Association, Authentication, and Registration

This section explains how to verify that the badge associates, authenticates, and registers properly.

- At multiple points throughout the environment, power-up the badges and verify association with the access point. If the badge does not associate with the access point, perform these checks:
 - ◆ Check the badge configuration to ensure proper SSID, authentication type, and so forth.
 - ◆ Check the WLC configuration to ensure proper SSID, authentication type, radio channels, and so forth.
 - ◆ Check your site survey to ensure the location has adequate RF coverage.
- At multiple points throughout the environment, ensure that the phone authenticates through the access point successfully. If the client does not authenticate, check either the WEP key or the LEAP username and password on the badges. Also, check the username and password on the AAA server by using a wireless laptop with identical credentials.
- At multiple points throughout the environment, ensure that the badges register with the Vocera Communication Server. If the client does not register, perform these checks:
 - ◆ Verify that the badge has the correct IP address, subnet mask, primary gateway, primary TFTP, primary/secondary and DNS.
- Stationary voice calls:
 - ◆ At multiple points throughout the environment, while you stand still, make a call to another badge and conduct 60 to 120-second voice tests to check voice quality. If the voice quality is unacceptable, move one badge to a better location and test again. Is the voice quality acceptable? If not, check your wireless coverage.
 - ◆ If the telephony server is configured, at multiple points throughout the environment, stand still and make a call to a wired phone and conduct 60 to 120-second voice tests to check voice quality. If the voice quality is unacceptable, ask if you make a call using the wired phone. Is the voice quality acceptable? If not, verify the wired network design against the guidelines.
- Use the site survey tools to verify that there is no more than one access point per RF channel from that location with a signal strength (received signal strength indicator [RSSI]) greater than 35. If there are two access points present on the same channel, ensure that the signal-to-noise ratio (SNR) is as high as possible to minimize interference. For instance, if the stronger access point has an RSSI of 35, ideally the weaker access point should have an RSSI of less than 20. In order to achieve this goal, you might have to reduce one access point's transmit power or move the access point.
- Check the QoS settings on the access point to confirm proper recommended settings.
- Roaming badge calls:
 - ◆ If the telephony server is not available, initiate the Vocera Tutorial with the command **Begin Tutorial**.

OR

- ◆ If the telephony server is available, initiate a call with a stationary device to the badge.
- ◆ Continually check voice quality while you traverse the total wireless coverage area. If the voice quality is insufficient, perform these tasks:
 - ◆ Listen for all unacceptable changes in voice quality and take note of the location and radio values on your laptop and CQ values from the badge.
 - ◆ Watch and listen for the badge to roam to the next access point.
 - ◆ Note the other available access points in the site survey to check coverage and interference.
- Make adjustments to access point placement and settings to fine-tune the WLAN, and perform these checks to ensure voice quality:
 - ◆ Use the site survey tools and verify that there is no more than one access point per channel with an RSSI value greater than 35 in any given location. Ideally, all other access points on the same channel should have RSSI values as low as possible (preferably less than 20). At the border of the coverage area where the RSSI is 35, the RSSI for all other access points on the same channel should ideally be less than 20.
 - ◆ Use the site survey tools to verify that there are at least two access points (total, on separate channels) visible in all location with sufficient signal strength.
 - ◆ Check that the access points in a given roaming area are all on a Layer 2 network.

Common Roaming Issues

These roaming issues can occur:

- The badge does not roam when placed directly under the access point.
- The badge is most likely not reaching the roaming differential thresholds for the received signal strength indicator (RSSI) and channel utilization (CU). Adjust the Transmit Power Threshold from the WLC.
- The badge does not receive beacons or probe responses from the access point.
- The badge roams too slowly.

The Badge Loses Connection to the Network or Voice Service is Lost when Roaming

- Check authentication for a possible WEP mismatch.
- The badge does not send out IGMP joins or the network sends IGMP queries during a roam. Therefore, the Vocera broadcast function fails during a Layer 2/Layer 3 roam.
- The badge is capable of seamless Layer 2 roaming only (unless a Layer 3 mobility mechanism is configured). Ensure that the new WLC is not serving a different IP subnet.
- Verify that the associated access point/controller has IP connectivity to the Vocera Communication Server.
- Check the RF signal strength and badge CQ values.

Badge Loses Voice Quality while Roaming

- Check for low RSSI on the destination access point.
- Channel overlap might be insufficient. The badge must have time to hand off the call smoothly before it loses its signal with the original access point.
- The signal from the original access point might be lost.

Audio Problems

There are a few common configuration errors that can cause some easily resolved audio issues. If possible, check audio problems against a stationary (reference) badge to help narrow the problem to a wireless issue. Common audio problems include:

- One-sided Audio
- Choppy or Robotic Audio
- Registration and Authentication Problems

One-sided Audio

- This problem can occur in the fringe areas of an access point, where a signal might be too weak on either the badge side or the access point side. Matching the power settings on the access point to the badge (20 mW), when possible, can fix this problem. This problem is most common when the variation between the access point setting and the badge setting is large (for example, 100 mW on the access point and 28 mW on the badge).
- Check the gateway and IP routing for voice quality.
- Check to see if a firewall or NAT is in the path of the proprietary UDP packets. By default, firewalls and NATs cause one-way audio or no audio. Cisco IOS® and PIX NATs and firewalls have the ability to modify those connections so that two-way audio can flow.
 - ◆ If you use Layer 3 mobility, your network could be blocking upstream traffic with Unicast Reverse Path Forwarding (uRPF) checks.
- One-way audio can occur if ARP caching is not configured on the WLC.

Choppy or Robotic Audio

- A common reason for choppy or robotic audio is when a microwave operates nearby. Microwaves start at channel 9 and can extend from channels 6 to 14.
- Check for 2.4 Ghz wireless phones and other nurse call wireless devices using tools like Cognio.

Registration and Authentication Problems

When you encounter problems with authentication, perform these checks:

- Check SSIDs to make sure they match on the badge and the access point (or network). Also be sure the network has a route to the Vocera server.
- Check the WEP keys to make sure they match. It is a good idea to re-enter them on the Badge Configuration Utility (BCU) and reprogram the badge, because it is easy to make a typing error when you enter a WEP key or password.

These messages or symptoms can occur:

- Cannot Support All Requested Capabilities This is most likely an encryption mismatch between the access point and the client.
- Authentication Failed / No AP Found Ensure authentication types match on the access point and the client.
- No Service IP Config Failed If you use static WEP, ensure the keys are configured correctly. Ensure other clients can receive DHCP using the same SSID.
- De-authenticate all TKIP clients from AP This problem happens when the access point detects two MIC errors within 60 seconds. This countermeasure keeps all TKIP clients from re-authenticating for 60 seconds.

- Re-authentication / Session Timeout If configured, a session timeout triggers a re-authentication which causes gaps in the voice stream (300 ms + WAN delay for 802.1x authentication).

Appendix A

AP and Antenna Placement

This section gives examples of both proper and improper placement of access points (APs) and antennas.

Figure 17 shows improper placement of an access point and antennas close to an I-beam, which creates distorted signal patterns. An RF null point is created by the crossing of signal waves, and multipath distortion is created when signal waves are reflected. This placement results in very little coverage behind the access point and reduced signal quality in front of the access point.

Figure 17 Improper Placement of Antennas Near an I-Beam


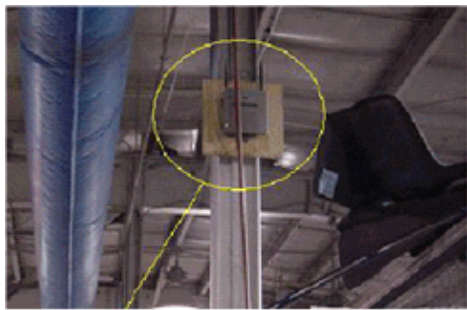


Figure 18 shows the signal propagation changes or distortions caused by an I-beam. The I-beam creates many reflections from both received packets and transmitted packets. The reflected signals result in very poor signal quality because of null points and multipath interference. However, the signal strength is high because the access point antennas are so close to the I-beam.

Figure 18 Signal Distortions Caused by Placing the Antennas Too Close to an I-Beam

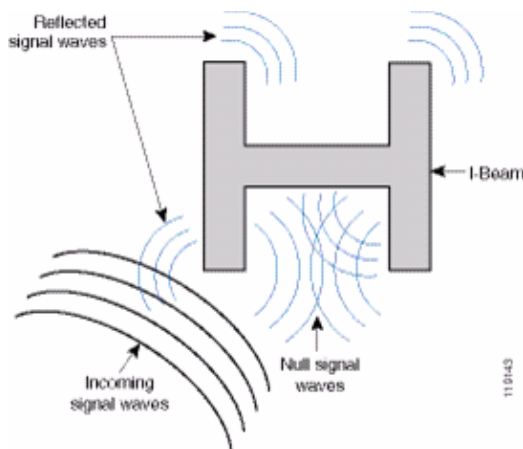

The access point and antenna placement in Figure 19 is better because it is away from the I-beams and there are fewer reflected signals, fewer null points, and less multipath interference. This placement is still not perfect because the Ethernet cable should not be coiled up so close to the antenna. Also, the access point could be turned with the 2.4GHz antennas pointed to the floor. This provides better coverage directly below the access point. There are no users above the access point.

Figure 19 Access Point and Antennas Mounted on a Wall, Away from I-Beams


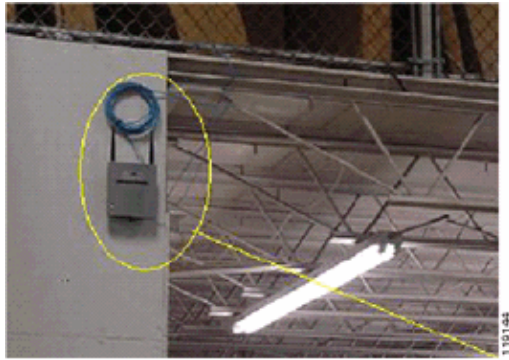


Figure 20 shows the signal propagation caused by the wall on which the access point is mounted.

Figure 20 Signal Reflection Caused by a Wall

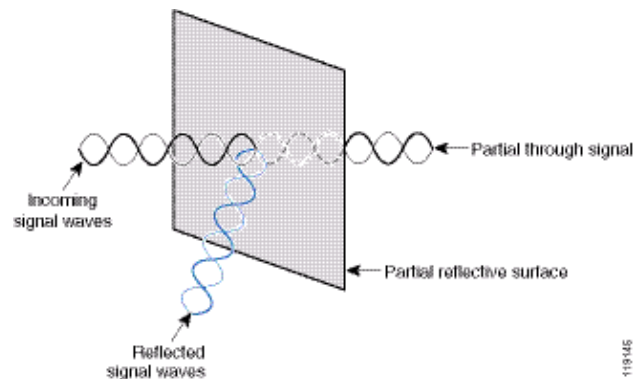

The preceding examples also apply when you place access points and antennas in or near the ceiling in a standard Enterprise environment. If there are metal air ducts, elevator shafts, or other physical barriers that can cause signal reflection or multipath interference, Cisco highly recommends that you move the antennas away from those barriers. In the case of the elevator, move the antenna a few feet away in order to help eliminate the signal reflection and distortion. The same is true with air ducts in the ceiling.

A survey conducted without sending and receiving packets is not sufficient. The I-beam example shows the creation of null points that can result from packets that have CRC errors. Voice packets with CRC errors are missed packets that adversely affect voice quality. In this example, those packets could be above the noise floor measured by a survey tool. Therefore, it is very important that the site survey not only measures signal levels but also generates packets and then reports packet errors.

Figure 21 shows a Cisco AP1200 properly mounted to a ceiling T-bar, with the antennas in an omni-directional position.

Figure 21 Cisco AP1200 Mounted to a Ceiling

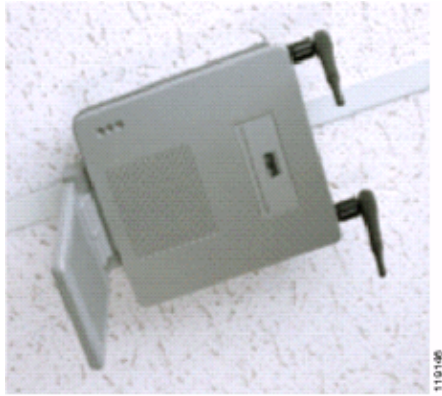


Figure 22 shows a Cisco Aironet 5959 omni-directional diversity antenna properly mounted to a ceiling T-bar. In this case, the Cisco AP1200 is mounted above the ceiling tile.

Figure 22 Cisco Aironet 5959 Antenna Mounted to a Ceiling




Figure 23 shows a Cisco AP1200 properly mounted to a wall.

Figure 23 Cisco AP1200 Mounted to a Wall



Figure 24 shows the Cisco Aironet 2012 diversity patch antenna mounted to a wall. In this case, the Cisco AP1200 is mounted above the ceiling tile.

Figure 24 Cisco Aironet 2012 Antenna Mounted to a Wall

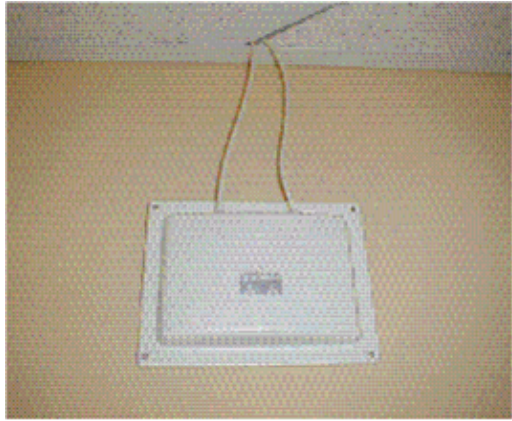


For areas where user traffic is high (such as office spaces, schools, retail stores, and hospitals), Cisco recommends that you place the access point out of sight and place unobtrusive antennas below the ceiling. Separation for non-diversity antennas should not exceed 18 inches.

Interference and Multipath Distortion

The throughput performance of the WLAN network is affected by unusable signals. WLAN interference can be generated by microwave ovens, 2.4 GHz cordless phones, Bluetooth devices, or other electronic equipment operating in the 2.4 GHz band. Interference also typically comes from other access points and client devices that belong in the WLAN but that are far enough away so that their signal is weakened or has become corrupted. Access points that are not part of the network infrastructure can also cause WLAN interference and are identified as rogue access points.

Interference and multipath distortion cause the transmitted signal to fluctuate. Interference decreases the signal-to-noise ratio (SNR) for a particular data rate. Packet retry counts go up in an area where interference and/or multipath distortion are high. Interference is also referred to as noise level or noise floor. The strength of the received signal from its associated access point must be high enough above the receiver's noise level to be decoded correctly. This level of strength is referred to as the signal-to-noise ratio, or SNR. The ideal SNR for the Vocera Badge is 25 dB. For example, if the noise floor is 95 decibels per milliwatt (dBm) and the received signal at the phone is 70 dBm, then the signal-to-noise ratio is 25 dB. (See Figure 25.)

Figure 25 Signal-to-Noise Ratio (SNR)

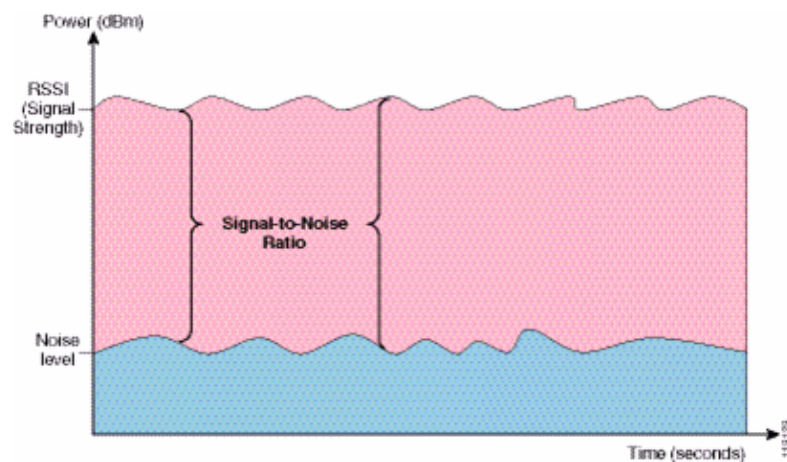

When you change the type and location of the antenna, it can reduce multipath distortion and interference. Antenna gain adds to the system gain and can reduce interference if the interfering transmitter is not directly in front of the directional antenna.

While directional antennas can be of great value for certain indoor applications, the vast majority of indoor installations use omni-directional antennas. Directionality should be strictly determined by a correct and proper site survey. Whether you use an omni-directional or patch antenna, indoor environments require diversity antennas to mitigate multipath distortion. The Cisco Aironet Series Access Point radios allow for diversity support.

Signal Attenuation

Signal attenuation or signal loss occurs even as the signal passes through air. The loss of signal strength is more pronounced as the signal passes through different objects. A transmit power of 20 mW is equivalent to 13 dBm. Therefore, if the transmitted power at the entry point of a plasterboard wall is at 13 dBm, the signal strength is reduced to 10 dBm when exiting that wall. This table shows the likely loss in signal strength caused by various types of objects.

Signal Attenuation Caused By Various Types of Objects

Object in Signal Path	Signal Attenuation through Object
Plasterboard wall	3 dB
Glass wall with metal frame	6 dB
Cinder block wall	4 dB
Office window	3 dB
Metal door	6 dB
Metal door in brick wall	12 dB
Human body	3 dB

Each site surveyed has different levels of multipath distortion, signal losses, and signal noise. Hospitals are typically the most challenging environment to survey due to high multipath distortion, signal losses and signal noise. Hospitals take longer to survey, require a denser population of access points, and require higher performance standards. Manufacturing and shop floors are the next hardest to survey. These sites generally have metal siding and many metal objects on the floor, which result in reflected signals that recreate multipath distortion. Office buildings and hospitality sites generally have high signal attenuation but a lesser degree of multipath distortion.

Related Information

- [Deploying Cisco 440X Series Wireless LAN Controllers](#)
- [Solution Reference Network Design](#)
- [Vocera Communications System Specifications](#)
- [Technical Support & Documentation – Cisco Systems](#)

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2009 – 2010 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)

Updated: Sep 18, 2007

Document ID: 71642
