



Send document comments to nexus7k-docfeedback@cisco.com.



Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 4.1

December 7, 2009

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-18396-02

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLynx, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

Send document comments to nexus7k-docfeedback@cisco.com.



CONTENTS

New and Changed Information **i**

Preface **iii**

Audience **iii**

Organization **iii**

Document Conventions **iv**

Related Documentation **v**

Obtaining Documentation and Submitting a Service Request **vi**

CHAPTER 1

Overview **1-1**

Information About Layer 3 Unicast Routing **1-1**

Routing Fundamentals **1-2**

Packet Switching **1-2**

Routing Metrics **1-3**

Path Length **1-4**

Reliability **1-4**

Routing Delay **1-4**

Bandwidth **1-4**

Load **1-4**

Communication Cost **1-4**

Router IDs **1-5**

Autonomous Systems **1-5**

Convergence **1-6**

Load Balancing and Equal Cost Multipath **1-6**

Route Redistribution **1-6**

Administrative Distance **1-6**

Stub Routing **1-7**

Routing Algorithms **1-8**

Static Routes and Dynamic Routing Protocols **1-8**

Interior and Exterior Gateway Protocols **1-8**

Distance Vector Protocols **1-8**

Link-State Protocols **1-9**

Layer 3 Virtualization **1-9**

Cisco NX-OS Forwarding Architecture **1-10**

Send document comments to nexus7k-docfeedback@cisco.com.

Unicast RIB	1-10
Adjacency Manager	1-11
Unicast Forwarding Distribution Module	1-11
FIB	1-12
Hardware Forwarding	1-12
Software Forwarding	1-13
Summary of Layer 3 Unicast Routing Features	1-13
IPv4 and IPv6	1-13
IP Services	1-13
OSPF	1-14
EIGRP	1-14
IS-IS	1-14
BGP	1-14
RIP	1-14
Static Routing	1-15
Layer 3 Virtualization	1-15
Route Policy Manager	1-15
Policy-Based Routing	1-15
First-Hop Redundancy Protocols	1-15
Object Tracking	1-16
Related Topics	1-16

IP

CHAPTER 2

Configuring IPv4 2-1

Information About IPv4	2-1
Multiple IPv4 Addresses	2-2
Address Resolution Protocol	2-2
ARP Caching	2-3
Static and Dynamic Entries in the ARP Cache	2-3
Devices that do not use ARP	2-4
Reverse ARP	2-4
Proxy ARP	2-5
Local Proxy ARP	2-5
Gratuitous ARP	2-5
ICMP	2-5
Virtualization Support	2-6
Licensing Requirements for IPv4	2-6
Prerequisites for IPv4	2-6

Send document comments to nexus7k-docfeedback@cisco.com.

Guidelines and Limitations	2-6
Configuring IPv4	2-6
Configuring IPv4 Addressing	2-7
Configuring Multiple IP Addresses	2-8
Configuring a Static ARP Entry	2-9
Configuring Proxy ARP	2-10
Configuring Local Proxy ARP	2-11
Configuring Gratuitous ARP	2-11
Configuring IP Packet Verification	2-12
Configuring IP Directed Broadcasts	2-13
Verifying the IPv4 Configuration	2-14
IPv4 Example Configuration	2-14
Default Settings	2-14
Additional References	2-15
Related Documents	2-15
Standards	2-15
Feature History for IP	2-15

CHAPTER 3

Configuring IPv6 3-1

Information About IPv6	3-1
IPv6 Address Formats	3-2
IPv6 Unicast Addresses	3-3
Aggregatable Global Addresses	3-3
Link-Local Addresses	3-5
IPv4-Compatible IPv6 Addresses	3-5
Unique Local Addresses	3-6
Site-Local Address	3-7
IPv6 Anycast Addresses	3-7
IPv6 Multicast Addresses	3-7
IPv4 Packet Header	3-9
Simplified IPv6 Packet Header	3-9
DNS for IPv6	3-12
Path MTU Discovery for IPv6	3-12
CDP IPv6 Address Support	3-12
ICMP for IPv6	3-12
IPv6 Neighbor Discovery	3-13
IPv6 Neighbor Solicitation Message	3-13
IPv6 Router Advertisement Message	3-15
IPv6 Neighbor Redirect Message	3-16

Send document comments to nexus7k-docfeedback@cisco.com.

Virtualization Support	3-17
Licensing Requirements for IPv6	3-18
Prerequisites for IPv6	3-18
Guidelines and Limitations for IPv6	3-18
Configuring IPv6	3-18
Configuring IPv6 Addressing	3-19
Configuring IPv6 Neighbor Discovery	3-20
Optional IPv6 Neighbor Discovery	3-22
Configuring IPv6 Packet Verification	3-23
Verifying the IPv6 Configuration	3-24
IPv6 Example Configuration	3-24
Default Settings	3-24
Additional References	3-24
Related Documents	3-25
Standards	3-25
Feature History for IPv6	3-25

CHAPTER 4

Configuring DNS	4-1
Information About DNS Clients	4-1
DNS Client Overview	4-1
Name Servers	4-2
DNS Operation	4-2
High Availability	4-2
Virtualization Support	4-2
Licensing Requirements for DNS Clients	4-2
Prerequisites for DNS Clients	4-3
Configuration Guidelines and Limitations	4-3
Configuring DNS Clients	4-3
Configuring the DNS Client	4-3
Configuring Virtualization	4-5
Verifying the DNS Client Configuration	4-7
DNS Client Example Configuration	4-7
Default Settings	4-7
Additional References	4-8
Related Documents	4-8
Standards	4-8
Feature History for DNS	4-8

Send document comments to nexus7k-docfeedback@cisco.com.

Routing

CHAPTER 5

Configuring OSPFv2 5-1

Information About OSPFv2 5-1

Hello Packet 5-2

Neighbors 5-2

Adjacency 5-3

Designated Routers 5-3

Areas 5-4

Link-State Advertisements 5-5

LSA Types 5-5

Link Cost 5-6

Flooding and LSA Group Pacing 5-6

Link-State Database 5-7

Opaque LSAs 5-7

OSPFv2 and the Unicast RIB 5-7

Authentication 5-7

Simple Password Authentication 5-8

MD5 Authentication 5-8

Advanced Features 5-8

Stub Area 5-8

Not-So-Stubby Area 5-9

Virtual Links 5-9

Route Redistribution 5-10

Route Summarization 5-10

High Availability and Graceful Restart 5-11

OSPFv2 Stub Router Advertisements 5-12

Multiple OSPFv2 Instances 5-12

SPF Optimization 5-12

Virtualization Support 5-12

Licensing Requirements for OSPFv2 5-12

Prerequisites for OSPFv2 5-13

Configuration Guidelines and Limitations 5-13

Configuring Basic OSPFv2 5-13

Enabling the OSPFv2 Feature 5-13

Creating an OSPFv2 Instance 5-14

Configuring Optional Parameters on an OSPFv2 Instance 5-16

Configuring Networks in OSPFv2 5-17

Configuring Authentication for an Area 5-19

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Authentication for an Interface	5-20
Configuring Advanced OSPFv2	5-22
Configuring Filter Lists for Border Routers	5-23
Configuring Stub Areas	5-24
Configuring a Totally Stubby Area	5-26
Configuring NSSA	5-26
Configuring Virtual Links	5-28
Configuring Redistribution	5-30
Configuring Route Summarization	5-32
Configuring Stub Route Advertisements	5-33
Modifying the Default Timers	5-34
Configuring Graceful Restart	5-37
Restarting an OSPFv2 Instance	5-38
Configuring OSPFv2 with Virtualization	5-39
Verifying the OSPFv2 Configuration	5-41
Displaying OSPFv2 Statistics	5-42
OSPFv2 Example Configuration	5-42
Default Settings	5-42
Additional References	5-43
Related Documents	5-44
MIBs	5-44
Feature History for OSPFv2	5-44

CHAPTER 6

Configuring OSPFv3 6-1

Information About OSPFv3	6-1
Comparison of OSPFv3 and OSPFv2	6-2
Hello Packet	6-2
Neighbors	6-3
Adjacency	6-3
Designated Routers	6-4
Areas	6-5
Link-State Advertisement	6-5
LSA Types	6-6
Link Cost	6-6
Flooding and LSA Group Pacing	6-6
Link-State Database	6-7
OSPFv3 and the IPv6 Unicast RIB	6-7
Address Family Support	6-8
Advanced Features	6-8

Send document comments to nexus7k-docfeedback@cisco.com.

Stub Area	6-8
Not-So-Stubby Area	6-9
Virtual Links	6-9
Route Redistribution	6-10
Route Summarization	6-10
High Availability and Graceful Restart	6-11
Multiple OSPFv3 Instances	6-11
SPF Optimization	6-12
Virtualization Support	6-12
Licensing Requirements for OSPFv3	6-12
Prerequisites for OSPFv3	6-12
Configuration Guidelines and Limitations	6-13
Configuring Basic OSPFv3	6-13
Enabling the OSPFv3 Feature	6-13
Creating an OSPFv3 Instance	6-14
Configuring Networks in OSPFv3	6-16
Configuring Advanced OSPFv3	6-19
Configuring Filter Lists for Border Routers	6-19
Configuring Stub Areas	6-21
Configuring a Totally Stubby Area	6-22
Configuring NSSA	6-23
Configuring Virtual Links	6-25
Configuring Redistribution	6-27
Configuring Route Summarization	6-29
Modifying the Default Timers	6-30
Configuring Graceful Restart	6-32
Restarting an OSPFv3 Instance	6-34
Configuring OSPFv3 with Virtualization	6-34
Verifying OSPFv3 Configuration	6-36
Displaying OSPFv3 Statistics	6-37
OSPFv3 Example Configuration	6-37
Related Topics	6-37
Default Settings	6-38
Additional References	6-38
Related Documents	6-39
MIBs	6-39
Feature History for OSPFv3	6-39

Send document comments to nexus7k-docfeedback@cisco.com.

CHAPTER 7**Configuring EIGRP 7-1**

Information About EIGRP	7-1
EIGRP Components	7-2
Reliable Transport Protocol	7-2
Neighbor Discovery and Recovery	7-2
Diffusing Update Algorithm	7-2
EIGRP Route Updates	7-3
Internal Route Metrics	7-3
External Route Metrics	7-4
EIGRP and the Unicast RIB	7-4
Advanced EIGRP	7-4
Address Families	7-5
Authentication	7-5
Stub Routers	7-5
Route Summarization	7-6
Route Redistribution	7-6
Load Balancing	7-6
Split Horizon	7-6
Virtualization Support	7-7
Graceful Restart and High Availability	7-7
Licensing Requirements for EIGRP	7-8
Prerequisites for EIGRP	7-8
Configuration Guidelines and Limitations	7-8
Configuring Basic EIGRP	7-9
Enabling the EIGRP Feature	7-9
Creating an EIGRP Instance	7-10
Restarting an EIGRP Instance	7-12
Disabling an EIGRP Instance	7-13
Configuring a Passive Interface for EIGRP	7-13
Disabling EIGRP on an Interface	7-13
Configuring Advanced EIGRP	7-14
Configuring Authentication in EIGRP	7-14
Configuring EIGRP Stub Routing	7-16
Configuring a Summary Address for EIGRP	7-17
Redistributing Routes into EIGRP	7-17
Configuring Load Balancing in EIGRP	7-19
Configuring Graceful Restart for EIGRP	7-20
Adjusting the Interval Between Hello Packets and the Hold Time	7-22
Disabling Split Horizon	7-23

Send document comments to nexus7k-docfeedback@cisco.com.

Tuning EIGRP	7-23
Configuring Virtualization for EIGRP	7-25
Verifying EIGRP Configuration	7-27
Displaying EIGRP Statistics	7-27
EIGRP Example Configuration	7-27
Related Topics	7-28
Default Settings	7-28
Additional References	7-28
Related Documents	7-29
MIBs	7-29
Feature History for EIGRP	7-29

CHAPTER 8

Configuring IS-IS	8-1
Information about IS-IS	8-1
IS-IS Overview	8-2
IS-IS Areas	8-2
NET and System ID	8-3
Designated Intermediate System	8-3
IS-IS Authentication	8-3
Mesh Groups	8-4
Overload Bit	8-4
Route Summarization	8-4
Route Redistribution	8-5
Load Balancing	8-5
Virtualization Support	8-5
High Availability and Graceful Restart	8-5
Multiple IS-IS Instances	8-5
Licensing Requirements for IS-IS	8-6
Prerequisites for IS-IS	8-6
Configuration Guidelines and Limitations	8-6
Configuring IS-IS	8-6
IS-IS Configuration Modes	8-7
Enabling the IS-IS Feature	8-7
Creating an IS-IS Instance	8-8
Restarting an IS-IS Instance	8-10
Shutting Down IS-IS	8-11
Configuring IS-IS on an Interface	8-11
Configuring IS-IS Authentication in an Area	8-13

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring IS-IS Authentication on an Interface	8-14
Configuring a Mesh Group	8-15
Configuring a Designated Intermediate System	8-16
Configuring Dynamic Host Exchange	8-16
Setting the Overload Bit	8-16
Configuring the Attached Bit	8-17
Configuring the Transient Mode for Hello Padding	8-17
Configuring a Summary Address	8-17
Configuring Redistribution	8-19
Configuring a Graceful Restart	8-20
Configuring Virtualization	8-22
Tuning IS-IS	8-24
Verifying IS-IS Configuration	8-26
Displaying IS-IS Statistics	8-27
IS-IS Example Configuration	8-28
Related Topics	8-28
Default Settings	8-28
Additional References	8-29
Related Documents	8-30
Standards	8-30
Feature History for IS-IS	8-30

CHAPTER 9

Configuring Basic BGP 9-1

Information About Basic BGP	9-1
BGP Autonomous Systems	9-2
Administrative Distance	9-2
BGP Peers	9-3
BGP Sessions	9-3
Dynamic AS Numbers for Prefix Peers	9-3
BGP Router Identifier	9-4
BGP Path Selection	9-4
Step 1—Comparing Pairs of Paths	9-4
Step 2—Determining the Order of Comparisons	9-6
Step 3—Determining the Best-Path Change Suppression	9-6
BGP and the Unicast RIB	9-7
BGP Virtualization	9-7
Licensing Requirements for Basic BGP	9-7
Prerequisites for BGP	9-7

Send document comments to nexus7k-docfeedback@cisco.com.

Guidelines and Limitations for BGP	9-8
CLI Configuration Modes	9-8
Global Configuration Mode	9-8
Address Family Configuration Mode	9-9
Neighbor Configuration Mode	9-9
Neighbor Address Family Configuration Mode	9-9
Configuring Basic BGP	9-10
Enabling the BGP Feature	9-10
Creating a BGP Instance	9-11
Restarting a BGP Instance	9-13
Shutting Down BGP	9-13
Configuring BGP Peers	9-13
Configuring Dynamic AS Numbers for Prefix Peers	9-15
Clearing BGP Information	9-17
Verifying Basic BGP Configuration	9-20
Displaying BGP Statistics	9-21
Basic BGP Example Configuration	9-22
Related Topics	9-22
Where to Go Next	9-22
Default Settings	9-22
Additional References	9-22
Related Documents	9-23
MIBs	9-23
Feature History for BGP	9-23

CHAPTER 10

Configuring Advanced BGP 10-1

Information About Advanced BGP	10-1
Peer Templates	10-2
Authentication	10-2
Route Policies and Resetting BGP Sessions	10-3
eBGP	10-3
iBGP	10-3
AS Confederations	10-4
Router Reflector	10-5
Capabilities Negotiation	10-6
Route Dampening	10-6
Load Sharing and Multipath	10-7
Route Aggregation	10-7

Send document comments to nexus7k-docfeedback@cisco.com.

Route Redistribution	10-8
Tuning BGP	10-8
BGP Timers	10-8
Tuning the Best-Path Algorithm	10-8
Multiprotocol BGP	10-8
Graceful Restart and High Availability	10-9
ISSU	10-9
Virtualization Support	10-10
Licensing Requirements for Advanced BGP	10-10
Prerequisites for BGP	10-10
Guidelines and Limitations for BGP	10-10
Configuring Advanced BGP	10-11
Configuring BGP Session Templates	10-12
Configuring BGP Peer-Policy Templates	10-14
Configuring BGP Peer Templates	10-16
Configuring Prefix Peering	10-19
Configuring BGP Authentication	10-20
Resetting a BGP Session	10-20
Modifying the Next-Hop Address	10-21
Disabling Capabilities Negotiation	10-21
Configuring eBGP	10-21
Disabling eBGP Single-Hop Checking	10-22
Configuring eBGP Multihop	10-22
Disabling a Fast External Failover	10-22
Limiting the AS-path Attribute	10-23
Configuring AS Confederations	10-23
Configuring Router Reflector	10-24
Configuring Route Dampening	10-26
Configuring Load Sharing and ECMP	10-26
Configuring Maximum Prefixes	10-26
Configuring Dynamic Capability	10-27
Configuring Aggregate Addresses	10-28
Configuring Route Redistribution	10-28
Configuring Multiprotocol BGP	10-30
Tuning BGP	10-31
Configuring a Graceful Restart	10-34
Configuring Virtualization	10-35
Verifying Advanced BGP Configuration	10-37
Displaying BGP Statistics	10-38

Send document comments to nexus7k-docfeedback@cisco.com.

Related Topics	10-38
Default Settings	10-38
Additional References	10-39
Related Documents	10-39
MIBs	10-39
Feature History for BGP	10-39

CHAPTER 11

Configuring RIP 11-1

Information About RIP	11-1
RIP Overview	11-2
RIPv2 Authentication	11-2
Split Horizon	11-2
Route Filtering	11-3
Route Summarization	11-3
Route Redistribution	11-3
Load Balancing	11-3
High Availability	11-4
Virtualization Support	11-4
Licensing Requirements for RIP	11-4
Prerequisites for RIP	11-4
Configuration Guidelines and Limitations	11-4
Configuring RIP	11-5
Enabling the RIP Feature	11-5
Creating a RIP Instance	11-6
Restarting a RIP Instance	11-8
Configuring RIP on an Interface	11-8
Configuring RIP Authentication	11-9
Configuring a Passive Interface	11-10
Configuring Split Horizon with Poison Reverse	11-11
Configuring Route Summarization	11-11
Configuring Route Redistribution	11-11
Configuring Virtualization	11-13
Tuning RIP	11-15
Verifying RIP Configuration	11-17
Displaying RIP Statistics	11-17
RIP Example Configuration	11-18
Related Topics	11-18
Default Settings	11-18

Send document comments to nexus7k-docfeedback@cisco.com.

Additional References	11-18
Related Documents	11-19
Standards	11-19
Feature History for RIP	11-19

CHAPTER 12

Configuring Static Routing 12-1

Information About Static Routing	12-1
Administrative Distance	12-2
Directly Connected Static Routes	12-2
Fully Specified Static Routes	12-2
Floating Static Routes	12-2
Remote Next Hops for Static Routes	12-3
Virtualization Support	12-3
Licensing Requirements for Static Routing	12-3
Prerequisites for Static Routing	12-3
Guidelines and Limitations	12-3
Configuring Static Routing	12-3
Configuring a Static Route	12-4
Configuring Virtualization	12-5
Verifying Static Routing Configuration	12-6
Static Routing Example Configuration	12-6
Default Settings	12-7
Additional References	12-7
Related Documents	12-7
Feature History for Static Routing	12-7

CHAPTER 13

Configuring Layer 3 Virtualization 13-1

Layer 3 Virtualization	13-1
Overview of Layer 3 Virtualization	13-1
VRF and Routing	13-2
VRF-Aware Services	13-3
Reachability	13-4
Filtering	13-4
Combining Reachability and Filtering	13-5
Licensing Requirements for VRFs	13-5
Prerequisites for VRF	13-6
Guidelines and Limitations	13-6
Configuring VRFs	13-6

Send document comments to nexus7k-docfeedback@cisco.com.

Creating a VRF	13-6
Assigning VRF Membership to an Interface	13-8
Configuring VRF Parameters for a Routing Protocol	13-9
Configuring a VRF-Aware Service	13-10
Setting the VRF Scope	13-12
Verifying VRF Configuration	13-12
VRF Example Configuration	13-12
Related Topics	13-13
Default Settings	13-13
Additional References	13-13
Related Documents	13-14
Standards	13-14
Feature History for VRF	13-14

CHAPTER 14

Managing the Unicast RIB and FIB	14-1
Information About the Unicast RIB and FIB	14-1
Layer 3 Consistency Checker	14-2
Virtualization Support	14-2
Licensing Requirements for the Unicast RIB and FIB	14-2
Guidelines and Limitations	14-3
Managing the Unicast RIB and FIB	14-3
Displaying Module FIB Information	14-4
Configuring Load Sharing in the Unicast FIB	14-4
Configuring Per-Packet Load Sharing	14-6
Displaying Routing and Adjacency Information	14-7
Triggering the Layer 3 Consistency Checker	14-8
Clearing Forwarding Information in the FIB	14-9
Clearing Routes in the Unicast RIB	14-10
Verifying the Unicast RIB and FIB	14-10
Additional References	14-11
Related Documents	14-11
Feature History for Unicast RIB and FIB	14-11
	14-11

CHAPTER 15

Configuring Route Policy Manager	15-1
Information About Route Policy Manager	15-1
Prefix Lists	15-2
Route Maps	15-2

Send document comments to nexus7k-docfeedback@cisco.com.

Match Criteria	15-2
Set Changes	15-3
Access Lists	15-3
AS Numbers for BGP	15-3
AS-path Lists for BGP	15-3
Community Lists for BGP	15-4
Route Redistribution and Route Maps	15-4
Policy-Based Routing	15-4
Licensing Requirements for Route Policy Manager	15-4
Prerequisites for Route Policy Manager	15-5
Guidelines and Limitations	15-5
Configuring Route Policy Manager	15-5
Configuring IP Prefix Lists	15-5
Configuring AS-path Lists	15-7
Configuring Community Lists	15-8
Configuring Route Maps	15-9
Verifying Route Policy Manager Configuration	15-14
Route Policy Manager Example Configuration	15-14
Related Topics	15-15
Default Settings	15-15
Additional References	15-15
Related Documents	15-16
Standards	15-16
Feature History for Route Policy Manager	15-16

CHAPTER 16

Configuring Policy-Based Routing 16-1

Information About Policy Based Routing	16-1
Policy Route Maps	16-2
Set Criteria for Policy-Based Routing	16-2
Licensing Requirements for Policy-Based Routing	16-3
Prerequisites for Policy-Based Routing	16-3
Guidelines and Limitations	16-3
Configuring Policy-Based Routing	16-4
Enabling the Policy-based Routing Feature	16-4
Configuring a Route Policy	16-5
Verifying Policy-Based Routing Configuration	16-7
Policy Based-Routing Example Configuration	16-7

Send document comments to nexus7k-docfeedback@cisco.com.

Related Topics	16-7
Default Settings	16-7
Additional References	16-7
Related Documents	16-8
Standards	16-8
Feature History for Policy-Based Routing	16-8

First-Hop Redundancy Protocols

CHAPTER 17

Configuring GLBP	17-1
Information About GLBP	17-1
GLBP Overview	17-2
GLBP Active Virtual Gateway	17-2
GLBP Virtual MAC Address Assignment	17-2
GLBP Virtual Gateway Redundancy	17-3
GLBP Virtual Forwarder Redundancy	17-3
GLBP Authentication	17-4
GLBP Load Balancing and Tracking	17-5
High Availability	17-6
Virtualization Support	17-6
Licensing Requirements for GLBP	17-6
Prerequisites for GLBP	17-6
Guidelines and Limitations	17-7
Configuring GLBP	17-7
Enabling the GLBP Feature	17-7
Configuring GLBP Authentication	17-8
Configuring GLBP Load Balancing	17-10
Configuring GLBP Weighting and Tracking	17-10
Customizing GLBP	17-13
Enabling a GLBP Group	17-14
Verifying GLBP Configuration	17-15
GLBP Example Configuration	17-15
Default Settings	17-16
Additional References	17-16
Related Documents	17-17
Standards	17-17
Feature History for GLBP	17-17

Send document comments to nexus7k-docfeedback@cisco.com.

CHAPTER 18
Configuring HSRP 18-1

Information About HSRP	18-1
HSRP Overview	18-2
HSRP Versions	18-3
HSRP Authentication	18-4
HSRP Addressing	18-4
HSRP Messages	18-4
HSRP Load Sharing	18-4
Object Tracking and HSRP	18-5
vPC and HSRP	18-5
High Availability	18-6
Virtualization Support	18-6
Licensing Requirements for HSRP	18-6
Prerequisites for HSRP	18-6
Guidelines and Limitations	18-6
Configuring HSRP	18-7
Enabling the HSRP Feature	18-7
Configuring an HSRP Group	18-8
Configuring the HSRP Version	18-10
Configuring the HSRP Virtual MAC Address	18-10
Authenticating HSRP	18-11
Configuring HSRP Object Tracking	18-12
Configuring the HSRP Priority	18-14
Customizing HSRP	18-15
Verifying HSRP Configuration	18-16
HSRP Example Configuration	18-17
Default Settings	18-17
Additional References	18-18
Related Documents	18-18
Standards	18-18
Feature History for HSRP	18-18

CHAPTER 19
Configuring VRRP 19-1

Information About VRRP	19-1
VRRP Operation	19-2
VRRP Benefits	19-3
Multiple VRRP Groups	19-3
VRRP Router Priority and Preemption	19-4

Send document comments to nexus7k-docfeedback@cisco.com.

VRRP Advertisements	19-5
VRRP Authentication	19-5
VRRP Tracking	19-5
High Availability	19-5
Virtualization Support	19-5
Licensing Requirements for VRRP	19-6
Guidelines and Limitations	19-6
Configuring VRRP	19-6
Enabling the VRRP Feature	19-7
Configuring VRRP Groups	19-7
Configuring VRRP Priority	19-8
Configuring VRRP Authentication	19-10
Configuring Time Intervals for Advertisement Packets	19-12
Disabling Preemption	19-14
Configuring VRRP Interface State Tracking	19-16
Verifying the VRRP Configuration	19-18
Displaying VRRP Statistics	19-19
VRRP Example Configuration	19-19
Default Settings	19-20
Additional References	19-21
Related Documents	19-21
Feature History for VRRP	19-21

CHAPTER 20

Configuring Object Tracking	20-1
Information About Object Tracking	20-1
Object Tracking Overview	20-1
High Availability	20-2
Virtualization Support	20-2
Licensing Requirements for Object Tracking	20-3
Prerequisites for Object Tracking	20-3
Guidelines and Limitations	20-3
Configuring Object Tracking	20-3
Configuring Object Tracking for an Interface	20-3
Configuring Object Tracking for Route Reachability	20-5
Configuring Object Tracking for a Nondefault VRF	20-6
Verifying Object Tracking Configuration	20-7
Object Tracking Example Configuration	20-7
Related Topics	20-7

Send document comments to nexus7k-docfeedback@cisco.com.

Default Settings	20-8
Additional References	20-8
Related Documents	20-8
Standards	20-8
Feature History for Object Tracking	20-8

APPENDIX A

IETF RFCs supported by Cisco NX-OS Unicast Features, Release 4.x A-1

BGP RFCs	A-1
First-Hop Redundancy Protocols RFCs	A-1
IP Services RFCs	A-2
IPv6 RFCs	A-2
IS-IS RFCs	A-2
OSPF RFCs	A-3
RIP RFCs	A-3

GLOSSARY

APPENDIX 2

Configuration Limits for Cisco NX-OS Layer 3 Unicast Features, Release 4.x 2-1

INDEX



New and Changed Information

This chapter provides release-specific information for each new and changed feature in the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 4.1*. The latest version of this document is available at the following Cisco website:

http://www.cisco.com/en/US/docs/switches/datacenter/sw/4_1/nx-os/unicast/configuration/guide/l3_nx-os-book.html

To check for additional information about Cisco NX-OS Release 4.1, see the *Cisco NX-OS Release Notes* available at the following Cisco website:

http://www.cisco.com/en/US/docs/switches/datacenter/sw/4_1/nx-os/release/notes/41_nx-os_release_note.html

Table 1 summarizes the new and changed features for the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 4.1*, and tells you where they are documented.

Table 1 **New and Changed Features for Release 4.1**

Feature	Description	Changed in Release	Where Documented
HSRP	Added support for vPC threshold values on HSRP priority.	4.1(3)	Chapter 18, “Configuring HSRP”
BGP	Added support dynamic AS numbers for prefix peers.	4.1(2)	Chapter 9, “Configuring Basic BGP”
EIGRP	Added support for IPv6.	4.1(2)	Chapter 7, “Configuring EIGRP”
IS-IS	Added support to set or unset the attached bit.	4.1(2)	Chapter 8, “Configuring IS-IS”
Route Policy Manager	Added support dynamic AS numbers in route maps.	4.1(2)	Chapter 15, “Configuring Route Policy Manager”
Object Tracking	Added support for IPv6.	4.1(2)	Chapter 20, “Configuring Object Tracking”

Send document comments to nexus7k-docfeedback@cisco.com.



Preface

This document describes the configuration details for Cisco NX-OS unicast routing.

Audience

To use this guide, you must be familiar with IP and routing technology.

Organization

This document is organized into the following chapters:

Title	Description
Chapter 1, “Overview”	Presents an overview of unicast routing and brief descriptions of each feature.
Chapter 2, “Configuring IPv4”	Describes how to configure and manage IPv4, including ARP and ICMP.
Chapter 3, “Configuring IPv6”	Describes how to configure and manage IPv6, including Neighbor Discovery Protocol and ICMPv6.
Chapter 4, “Configuring DNS”	Describes how to configure DHCP and DNS clients.
Chapter 5, “Configuring OSPFv2”	Describes how to configure the OSPFv2 routing protocol for IPv4 networks.
Chapter 6, “Configuring OSPFv3”	Describes how to configure the OSPFv3 routing protocol for IPv6 networks.
Chapter 7, “Configuring EIGRP”	Describes how to configure the Cisco EIGRP routing protocol for IPv4 networks.
Chapter 8, “Configuring IS-IS”	Describes how to configure the IS-IS routing protocol for IPv4 and IPv6 networks.
Chapter 9, “Configuring Basic BGP”	Describes how to configure basic features for the BGP routing protocol for IPv4 and IPv6 networks.
Chapter 10, “Configuring Advanced BGP”	Describes how to configure advanced features for the BGP routing protocol for IPv4 and IPv6 networks, including route redistribution and route aggregation.

Send document comments to nexus7k-docfeedback@cisco.com.

Title	Description
Chapter 11, “Configuring RIP”	Describes how to configure the RIP and RIPng routing protocols for IPv4 and IPv6 networks.
Chapter 12, “Configuring Static Routing”	Describes how to configure static routing for IPv4 and IPv6 networks.
Chapter 13, “Configuring Layer 3 Virtualization”	Describes how to configure layer 3 virtualization.
Chapter 14, “Managing the Unicast RIB and FIB”	Describes how to view and modify the unicast RIB and FIB.
Chapter 15, “Configuring Route Policy Manager”	Describes how to configure the Route Policy Manager, including IP prefix lists and route-maps for filtering and redistribution.
Chapter 16, “Configuring Policy-Based Routing”	Describes how to configure route maps for policy based routing.
Chapter 18, “Configuring HSRP”	Describes how to configure the Hot Standby Routing Protocol.
Chapter 17, “Configuring GLBP”	Describes how to configure GLBP.
Chapter 18, “Configuring HSRP”	Describes how to configure HSRP.
Chapter 20, “Configuring Object Tracking”	Describes how to configure object tracking.
Chapter 19, “Configuring VRRP”	Describes how to configure the Virtual Router Redundancy Protocol.
Appendix A, “IETF RFCs supported by Cisco NX-OS Unicast Features, Release 4.x”	Lists IETF RFCs supported by Cisco NX-OS.

Document Conventions

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
<i>italic font</i>	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

<code>screen font</code>	Terminal sessions and information that the switch displays are in screen font.
<code>boldface screen font</code>	Information that you must enter is in boldface screen font.

Send document comments to nexus7k-docfeedback@cisco.com.

<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation

[Cisco NX-OS](#) includes the following documents:

Release Notes

Cisco Nexus 7000 Series NX-OS Release Notes, Release 4.1

NX-OS Configuration Guides

Cisco Nexus 7000 Series NX-OS Getting Started with Virtual Device Contexts, Release 4.1

Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Quality of Service Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Multicast Routing Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Software Upgrade and Downgrade Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 4.1

Cisco Nexus 7000 Series NX-OS XML Management Interface User Guide, Release 4.1

Cisco MDS 9000 Family and Nexus 7000 Series NX-OS System Messages Reference, Release 4.1

Send document comments to nexus7k-docfeedback@cisco.com.

Cisco Nexus 7000 Series NX-OS MIB Quick Reference

NX-OS Command References

Cisco Nexus 7000 Series NX-OS Command Reference Master Index, Release 4.1

Cisco Nexus 7000 Series NX-OS Fundamentals Command Reference, Release 4.1

Cisco Nexus 7000 Series NX-OS Interfaces Command Reference, Release 4.1

Cisco Nexus 7000 Series NX-OS Layer 2 Switching Command Reference, Release 4.1

Cisco Nexus 7000 Series NX-OS Quality of Service Command Reference, Release 4.1

Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1

Cisco Nexus 7000 Series NX-OS Multicast Routing Command Reference, Release 4.1

Cisco Nexus 7000 Series NX-OS Security Command Reference, Release 4.1

Cisco Nexus 7000 Series NX-OS Virtual Device Context Command Reference, Release 4.1

Cisco Nexus 7000 Series NX-OS System Management Command Reference, Release 4.1

Other Software Document

Cisco Nexus 7000 Series NX-OS Troubleshooting Guide, Release 4.x

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.



CHAPTER 1

Overview

This chapter introduces the underlying concepts for Layer 3 unicast routing protocols in Cisco NX-OS.

This chapter includes the following sections:

- [Information About Layer 3 Unicast Routing, page 1-1](#)
- [Routing Algorithms, page 1-8](#)
- [Layer 3 Virtualization, page 1-9](#)
- [Cisco NX-OS Forwarding Architecture, page 1-10](#)
- [Summary of Layer 3 Unicast Routing Features, page 1-13](#)
- [Related Topics, page 1-16](#)

Information About Layer 3 Unicast Routing

Layer 3 unicast routing involves two basic activities: determining optimal routing paths and packet switching. You can use routing algorithms to calculate the optimal path from the router to a destination. This calculation depends on the algorithm selected, route metrics, and other considerations such as load balancing and alternate path discovery.

This section includes the following topics:

- [Routing Fundamentals, page 1-2](#)
- [Packet Switching, page 1-2](#)
- [Routing Metrics, page 1-3](#)
- [Router IDs, page 1-5](#)
- [Autonomous Systems, page 1-5](#)
- [Convergence, page 1-6](#)
- [Load Balancing and Equal Cost Multipath, page 1-6](#)
- [Route Redistribution, page 1-6](#)
- [Administrative Distance, page 1-6](#)
- [Stub Routing, page 1-7](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Routing Fundamentals

Routing protocols use a *metric* to evaluate the best path to the destination. A metric is a standard of measurement, such as a path bandwidth, that routing algorithms use to determine the optimal path to a destination. To aid path determination, routing algorithms initialize and maintain routing tables, that contain route information such as the IP destination address and the address of the next router or *next hop*. Destination and next-hop associations tell a router that an IP destination can be reached optimally by sending the packet to a particular router that represents the next hop on the way to the final destination. When a router receives an incoming packet, it checks the destination address and attempts to associate this address with the next hop. See the “[Unicast RIB](#)” section on page 1-10 for more information about the route table.

Routing tables can contain other information, such as the data about the desirability of a path. Routers compare metrics to determine optimal routes, and these metrics differ depending on the design of the routing algorithm used. See the “[Routing Metrics](#)” section on page 1-3.

Routers communicate with one another and maintain their routing tables by transmitting a variety of messages. The routing update message is one such message that consists of all or a portion of a routing table. By analyzing routing updates from all other routers, a router can build a detailed picture of the network topology. A link-state advertisement, another example of a message sent between routers, informs other routers of the link state of the sending router. You can also use link information to enable routers to determine optimal routes to network destinations. For more information, see the “[Routing Algorithms](#)” section on page 1-8.

Packet Switching


In packet switching, a host determines that it must send a packet to another host. Having acquired a router address by some means, the source host sends a packet addressed specifically to the router physical (Media Access Control [MAC]-layer) address but with the IP (network layer) address of the destination host.

The router examines the destination IP address and tries to find the IP address in the routing table. If the router does not know how to forward the packet, it typically drops the packet. If the router knows how to forward the packet, it changes the destination MAC address to the MAC address of the next hop router and transmits the packet.

The next hop might be the ultimate destination host or another router that executes the same switching decision process. As the packet moves through the internetwork, its physical address changes, but its protocol address remains constant (see [Figure 1-1](#)).

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 1-1 Packet Header Updates Through a Network

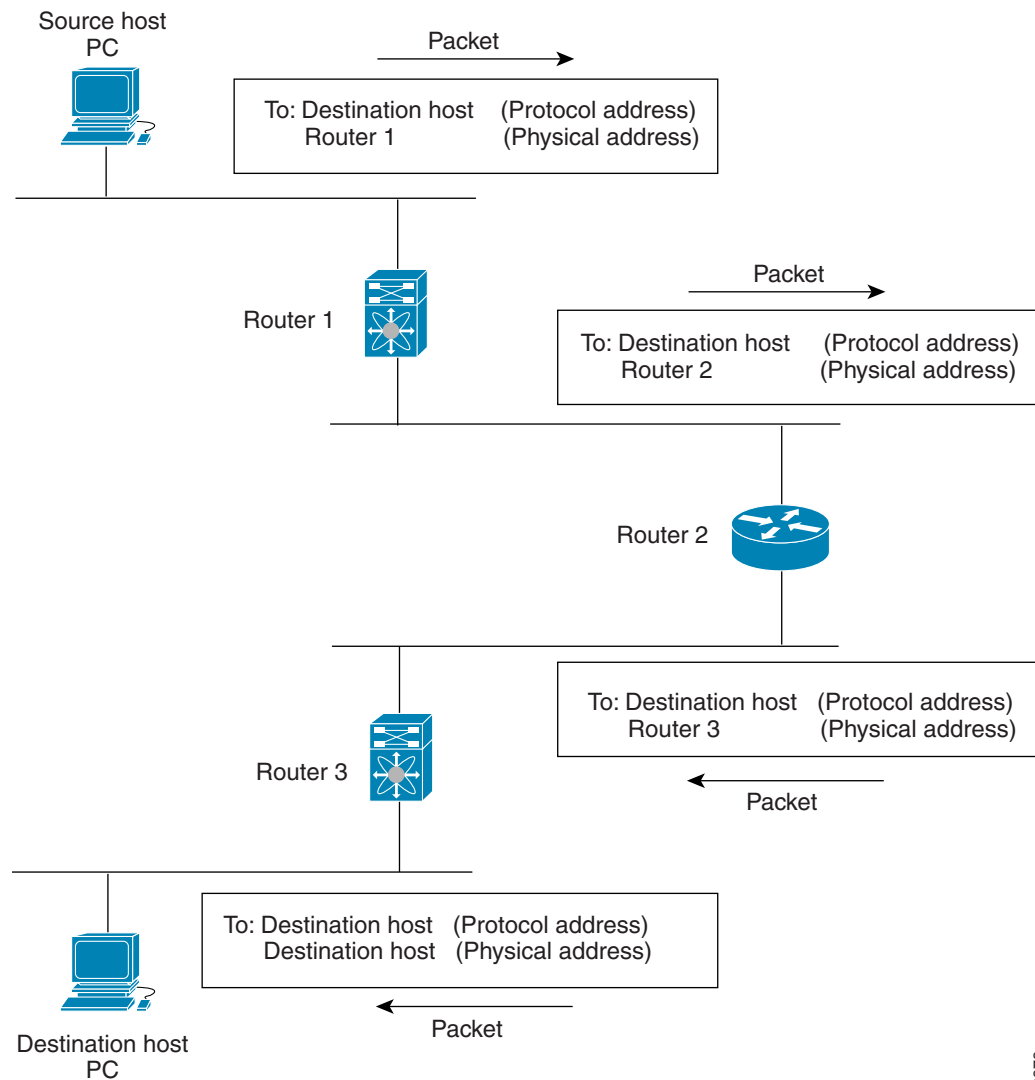

182978

Routing Metrics

Routing algorithms use many different metrics to determine the best route. Sophisticated routing algorithms can base route selection on multiple metrics.

This section includes the following metrics:

- [Path Length, page 1-4](#)
- [Reliability, page 1-4](#)
- [Routing Delay, page 1-4](#)
- [Bandwidth, page 1-4](#)
- [Load, page 1-4](#)
- [Communication Cost, page 1-4](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Path Length

The *path length* is the most common routing metric. Some routing protocols allow you to assign arbitrary costs to each network link. In this case, the path length is the sum of the costs associated with each link traversed. Other routing protocols define hop count, a metric that specifies the number of passes through internetworking products, such as routers, that a packet must take from a source to a destination.

Reliability

The *reliability*, in the context of routing algorithms, is the dependability (in terms of the bit-error rate) of each network link. Some network links might go down more often than others. After a network fails, certain network links might be repaired more easily or more quickly than other links. The reliability factors that you can take into account when assigning the reliability rating are arbitrary numeric values that you usually assign to network links.

Routing Delay

The routing *delay* is the length of time required to move a packet from a source to a destination through the internetwork. The delay depends on many factors, including the bandwidth of intermediate network links, the port queues at each router along the way, the network congestion on all intermediate network links, and the physical distance that the packet needs to travel. Because the routing delay is a combination of several important variables, it is a common and useful metric.

Bandwidth

The *bandwidth* is the available traffic capacity of a link. For example, a 10-Gigabit Ethernet link would be preferable to a 1-Gigabit Ethernet link. Although the bandwidth is the maximum attainable throughput on a link, routes through links with greater bandwidth do not necessarily provide better routes than routes through slower links. For example, if a faster link is busier, the actual time required to send a packet to the destination could be greater.

Load

The *load* is the degree to which a network resource, such as a router, is busy. You can calculate the load in a variety of ways, including CPU utilization and packets processed per second. Monitoring these parameters on a continual basis can be resource intensive.

Communication Cost

The *communication cost* is a measure of the operating cost to route over a link. The communication cost is another important metric, especially if you do not care about performance as much as operating expenditures. For example, the line delay for a private line might be longer than a public line, but you can send packets over your private line rather than through the public lines that cost money for usage time.

Send document comments to nexus7k-docfeedback@cisco.com.

Router IDs

Each routing process has an associated *router ID*. You can configure the router ID to any interface in the system. If you do not configure the router ID, Cisco NX-OS selects the router ID based on the following criteria:

- Cisco NX-OS prefers loopback0 over any other interface. If loopback0 does not exist, then Cisco NX-OS prefers the first loopback interface over any other interface type.
- If you have not configured no loopback interfaces, Cisco NX-OS uses the first interface in the configuration file as the router ID. If you configure any loopback interface after Cisco NX-OS selects the router ID, the loopback interface becomes the router ID. If the loopback interface is not loopback0 and you configure loopback0 later with an IP address, the router ID changes to the IP address of loopback0.
- If the interface that the router ID is based on changes, that new IP address becomes the router ID. If any other interface changes its IP address, there is no router ID change.

Autonomous Systems

An *autonomous system* (AS) is a network controlled by a single technical administration entity. Autonomous systems divide global external networks into individual routing domains, where local routing policies are applied. This organization simplifies routing domain administration and simplifies consistent policy configuration.

Each autonomous system can support multiple interior routing protocols that dynamically exchange routing information through route *redistribution*. The Regional Internet Registries assign a unique number to each public autonomous system that directly connects to the Internet. This unique number identifies both the routing process and the autonomous system. [Table 1-1](#) lists the autonomous system number (AS number) ranges.

Table 1-1 Autonomous System Numbers

16-bit Numbers	32-bit Numbers	Purpose
1 to 64511	0.1 to 0.64511	Public AS (assigned by RIR) ¹
64512 to 65534	0.64512 to 0.65534	Private AS (assigned by local administrator)
65535	0.65535	Reserved
N/A	1.0 to 65535.65535	Public AS (assigned by RIR)

1. RIR=Regional Internet Registries

Private autonomous system numbers are used for internal routing domains but must be translated by the router for traffic that is routed out to the Internet. You should not configure routing protocols to advertise private autonomous system numbers to external networks. By default, Cisco NX-OS does not remove private autonomous system numbers from routing updates.



Note

The autonomous system number assignment for public and private networks is governed by the Internet Assigned Number Authority (IANA). For information about autonomous system numbers, including the reserved number assignment, or to apply to register an autonomous system number, refer to the following URL:

<http://www.iana.org/>

Send document comments to nexus7k-docfeedback@cisco.com.

Convergence

A key aspect to measure for any routing algorithm is how much time a router takes to react to network topology changes. When a part of the network changes for any reason, such as a link failure, the routing information in different routers might not match. Some routers will have updated information about the changed topology, other routers will still have the old information. The *convergence* is the amount of time before all routers in the network have updated, matching routing information. The convergence time varies depending on the routing algorithm. Fast convergence minimizes the chance of lost packets caused by inaccurate routing information.

Load Balancing and Equal Cost Multipath

Routing protocols can use *load balancing* or equal cost multipath (ECMP) to share traffic across multiple paths. When a router learns multiple routes to a specific network, it installs the route with the lowest administrative distance in the routing table. If the router receives and installs multiple paths with the same administrative distance and cost to a destination, load balancing can occur. Load balancing distributes the traffic across all the paths, sharing the load. The number of paths used is limited by the number of entries that the routing protocol puts in the routing table. Cisco NX-OS supports up to 16 paths to a destination.

The Enhanced Interior Gateway Routing Protocol (EIGRP) also supports unequal cost load-balancing. For more information, see [Chapter 7, “Configuring EIGRP.”](#)

Route Redistribution

If you have multiple routing protocols configured in your network, you can configure these protocols to share routing information by configuring route redistribution in each protocol. For example, you can configure Open Shortest Path First (OSPF) to advertise routes learned from the Border Gateway Protocol (BGP). You can also redistribute static routes into any dynamic routing protocol. The router that is redistributing routes from another protocol sets a fixed route metric for those redistributed routes. This avoids the problem of incompatible route metrics between the different routing protocols. For example, routes redistributed from EIGRP into OSPF are assigned a fixed link cost metric that OSPF understands.

Route redistribution also uses an administrative distance (see the [“Administrative Distance” section on page 1-6](#)) to distinguish between routes learned from two different routing protocols. The preferred routing protocol is given a lower administrative distance so that its routes are picked over routes from another protocol with a higher administrative distance assigned.

Administrative Distance

An *administrative distance* is a rating of the trustworthiness of a routing information source. The higher the value, the lower the trust rating. Typically, a route can be learned through more than one protocol. Administrative distance is used to discriminate between routes learned from more than one protocol. The route with the lowest administrative distance is installed in the IP routing table.

Send document comments to nexus7k-docfeedback@cisco.com.

Stub Routing


You can use stub routing in a hub-and-spoke network topology, where one or more end (stub) networks are connected to a remote router (the spoke) that is connected to one or more distribution routers (the hub). The remote router is adjacent only to one or more distribution routers. The only route for IP traffic to follow into the remote router is through a distribution router. This type of configuration is commonly used in WAN topologies in which the distribution router is directly connected to a WAN. The distribution router can be connected to many more remote routers. Often, the distribution router is connected to 100 or more remote routers. In a hub-and-spoke topology, the remote router must forward all nonlocal traffic to a distribution router, so it becomes unnecessary for the remote router to hold a complete routing table. Generally, the distribution router sends only a default route to the remote router.

Only specified routes are propagated from the remote (stub) router. The stub router responds to all queries for summaries, connected routes, redistributed static routes, external routes, and internal routes with the message “inaccessible.” A router that is configured as a stub sends a special peer information packet to all neighboring routers to report its status as a stub router.

Any neighbor that receives a packet informing it of the stub status does not query the stub router for any routes, and a router that has a stub peer does not query that peer. The stub router depends on the distribution router to send the proper updates to all peers.

Figure 1-2 shows a simple hub-and-spoke configuration.

Figure 1-2 Simple Hub-and-Spoke Network

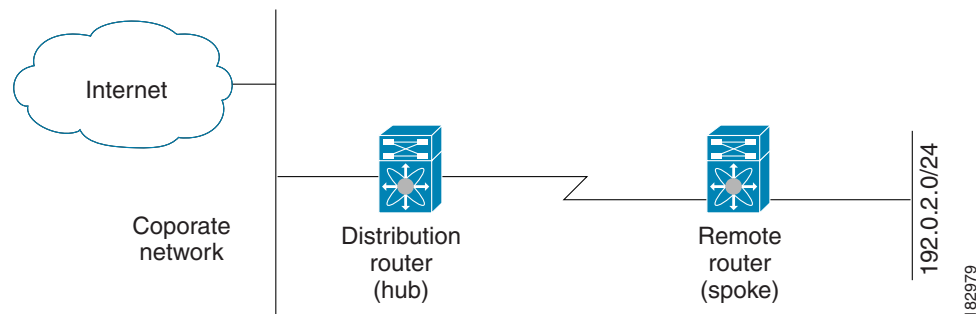

Stub routing does not prevent routes from being advertised to the remote router. Figure 1-2 shows that the remote router can access the corporate network and the Internet through the distribution router only. A full route table on the remote router, in this example, serves no functional purpose because the path to the corporate network and the Internet would always be through the distribution router. A larger route table would reduce only the amount of memory required by the remote router. The bandwidth and memory used can be lessened by summarizing and filtering routes in the distribution router. In this network topology, the remote router does not need to receive routes that have been learned from other networks because the remote router must send all nonlocal traffic, regardless of its destination, to the distribution router. To configure a true stub network, you should configure the distribution router to send only a default route to the remote router.

OSPF supports stub areas and EIGRP supports stub routers.

Send document comments to nexus7k-docfeedback@cisco.com.

Routing Algorithms

Routing algorithms determine how a router gathers and reports reachability information, how it deals with topology changes, and how it determines the optimal route to a destination. Various types of routing algorithms exist, and each algorithm has a different impact on network and router resources. Routing algorithms use a variety of metrics that affect calculation of optimal routes. You can classify routing algorithms by type, such as static or dynamic, and interior or exterior.

This section includes the following topics:

- [Static Routes and Dynamic Routing Protocols, page 1-8](#)
- [Interior and Exterior Gateway Protocols, page 1-8](#)
- [Distance Vector Protocols, page 1-8](#)
- [Link-State Protocols, page 1-9](#)

Static Routes and Dynamic Routing Protocols

Static routes are route table entries that you manually configure. These static routes do not change unless you reconfigure them. Static routes are simple to design and work well in environments where network traffic is relatively predictable and where network design is relatively simple.

Because static routing systems cannot react to network changes, you should not use them for today's large, constantly changing networks. Most routing protocols today use dynamic routing algorithms, which adjust to changing network circumstances by analyzing incoming routing update messages. If the message indicates that a network change has occurred, the routing software recalculates routes and sends out new routing update messages. These messages permeate the network, triggering routers to rerun their algorithms and change their routing tables accordingly.

You can supplement dynamic routing algorithms with static routes where appropriate. For example, you should configure each subnetwork with a static route to the IP *default gateway* or router of last resort (a router to which all unroutable packets are sent).

Interior and Exterior Gateway Protocols

You can separate networks into unique routing domains or autonomous systems. An autonomous system is a portion of an internetwork under common administrative authority that is regulated by a particular set of administrative guidelines. Routing protocols that route between autonomous systems are called exterior gateway protocols or interdomain protocols. BGP is an example of an exterior gateway protocol. Routing protocols used within an autonomous system are called interior gateway protocols or intradomain protocols. EIGRP and OSPF are examples of interior gateway protocols.

Distance Vector Protocols

Distance vector protocols use *distance vector* algorithms (also known as Bellman-Ford algorithms) that call for each router to send all or some portion of its routing table to its neighbors. Distance vector algorithms define routes by distance (for example, the number of hops to the destination) and direction (for example, the next-hop router). These routes are then broadcast to the directly connected neighbor routers. Each router uses these updates to verify and update the routing tables.

Send document comments to nexus7k-docfeedback@cisco.com.

To prevent routing loops, most distance vector algorithms use *split horizon with poison reverse* which means that the routes learned from an interface are set as unreachable and advertised back along the interface that they were learned on during the next periodic update. This prevents the router from seeing its own route updates coming back.

Distance vector algorithms send updates at fixed intervals but can also send updates in response to changes in route metric values. These triggered updates can speed up the route convergence time. The Routing Information Protocol (RIP) is a distance vector protocol.

Link-State Protocols

The *link-state* protocols, also known as shortest path first (SPF), share information with neighboring routers. Each router builds a link-state advertisement (LSA), which contains information about each link and directly connected neighbor router.

Each LSA has a sequence number. When a router receives an LSA and updates its link-state database, the LSA is flooded to all adjacent neighbors. If a router receives two LSAs with the same sequence number (from the same router), the router does not flood the last LSA received to its neighbors to prevent an LSA update loop. Because the router floods the LSAs immediately after they receive them, convergence time for link-state protocols is minimized.

Discovering neighbors and establishing adjacency is an important part of a link state protocol. Neighbors are discovered using special Hello packets that also serve as keepalive notifications to each neighbor router. Adjacency is the establishment of a common set of operating parameters for the link-state protocol between neighbor routers.

The LSAs received by a router are added to its link-state database. Each entry consists of the following parameters:

- Router ID (for the router that originated the LSA)
- Neighbor ID
- Link cost
- Sequence number of the LSA
- Age of the LSA entry

The router runs the SPF algorithm on the link-state database, building the shortest path tree for that router. This SPF tree is used to populate the routing table.

In link-state algorithms, each router builds a picture of the entire network in its routing tables. The link-state algorithms send small updates everywhere, while distance vector algorithms send larger updates only to neighboring routers.

Because they converge more quickly, link-state algorithms are somewhat less prone to routing loops than distance vector algorithms. However, link-state algorithms require more CPU power and memory than distance vector algorithms. Link-state algorithms can be more expensive to implement and support. Link-state protocols are generally more scalable than distance vector protocols.

OSPF is an example of a link-state protocol.


Layer 3 Virtualization

Cisco NX-OS introduces the virtual device context (VDC), which provides separate management domains per VDC and software fault isolation. Each VDC supports multiple Virtual Routing and Forwarding Instances (VRFs) and multiple routing information bases (*RIBs*) to support multiple address

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

domains. Each VRF is associated with a routing information base (RIB) and this information is collected by the Forwarding Information Base (FIB). [Figure 1-3](#) shows the relationship between VDC, VRF, and the Cisco NX-OS system.

Figure 1-3 Layer 3 Virtualization Example

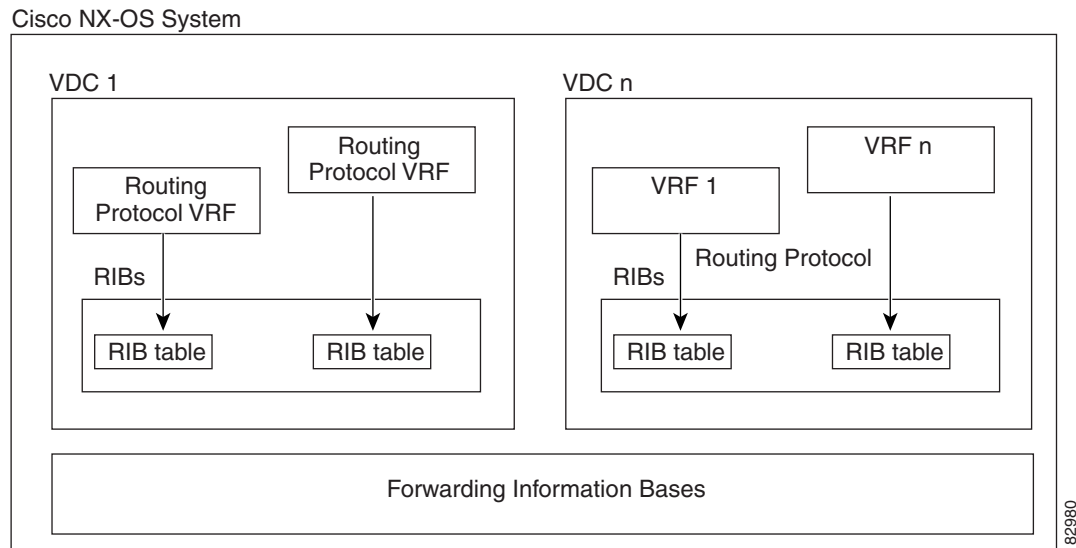

A VRF represents a layer 3 addressing domain. Each layer 3 interface (logical or physical) belongs to one VRF. A VRF belongs to one VDC. Each VDC can support multiple VRFs. For more information, see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

See to the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* for details on VDCs.

Cisco NX-OS Forwarding Architecture

The Cisco NX-OS forwarding architecture is responsible for processing all routing updates and populating the forwarding information to all modules in the chassis.

This section includes the following topics:

- [Unicast RIB, page 1-10](#)
- [Adjacency Manager, page 1-11](#)
- [Unicast Forwarding Distribution Module, page 1-11](#)
- [FIB, page 1-12](#)
- [Hardware Forwarding, page 1-12](#)
- [Software Forwarding, page 1-13](#)

Unicast RIB

The Cisco NX-OS forwarding architecture consists of multiple components, as shown in [Figure 1-4](#).

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 1-4 Cisco NX-OS Forwarding Architecture

The unicast RIB exists on the active supervisor. It maintains the routing table with directly connected routes, static routes, and routes learned from dynamic unicast routing protocols. The unicast RIB also collects adjacency information from sources such as the Address Resolution Protocol (ARP). The unicast RIB determines the best next-hop for a given route and populates the unicast forwarding information bases (FIB) on the supervisors and modules by using the services of unicast FIB distribution module (FDM).

Each dynamic routing protocol must update the unicast RIB for any route that has timed out. The unicast RIB then deletes that route and recalculates the best next-hop for that route (if an alternate path is available).

Adjacency Manager

The adjacency manager exists on the active supervisor and maintains adjacency information for different protocols including ARP, Neighbor Discovery Protocol (NDP), and static configuration. The most basic adjacency information is the layer 3 to layer 2 address mapping discovered by these protocols. Outgoing layer 2 packets use the adjacency information to complete the layer 2 header.

The adjacency manager can trigger ARP requests to find a particular layer 3 to layer 2 mapping. The new mapping becomes available when the corresponding ARP reply is received and processed. For IPv6, the adjacency manager finds the layer 3 to layer 2 mapping information from NDP. See [Chapter 3, “Configuring IPv6.”](#)

Unicast Forwarding Distribution Module

The unicast forwarding distribution module exists on the active supervisor and distributes the forwarding path information from the unicast RIB and other sources. The unicast RIB generates forwarding information which the unicast FIB programs into the hardware forwarding tables on the standby supervisor and the modules. The unicast forwarding distribution module also downloads the FIB information to newly inserted modules.

Send document comments to nexus7k-docfeedback@cisco.com.

The unicast forwarding distribution module gathers adjacency information, rewrite information, and other platform-dependent information when updating routes in the unicast FIB. The adjacency and rewrite information consists of interface, next-hop, and Layer 3 to Layer 2 mapping information. The interface and next-hop information is received in route updates from the unicast RIB. The Layer 3 to Layer 2 mapping is received from the adjacency manager.

FIB

The Cisco NX-OS divides the FIB to support multiple address families. The FIB TCAM is 128K physical entries, which is divided into the following sections by default:

- 56K IPv4 unicast routes (56K physical entries)
- 32K IPv4 multicast routes or IPv6 unicast routes (64K physical entries)
- 2K IPv6 multicast routes (8K physical entries)

**Note**

You cannot change the FIB default sections.

**Note**

Full IPv4 Internet route tables have more than 256K routes, which is more than the maximum number Cisco NX-OS FIB entries.

The unicast FIB exists on supervisors and switching modules and builds the information used for the hardware forwarding engine. The unicast FIB receives route updates from the unicast forwarding distribution module and sends the information along to be programmed in the hardware forwarding engine. The unicast FIB controls the addition, deletion, and modification of routes, paths, and adjacencies.

The unicast FIBs are maintained on a per-VRF and per-address-family basis, that is, one for IPv4 and one for IPv6 for each configured VRF. Based on route update messages, the unicast FIB maintains a per-VRF prefix and next-hop adjacency information database. The next-hop adjacency data structure contains the next-hop IP address and the Layer 2 rewrite information. Multiple prefixes could share a next-hop adjacency information structure.

Hardware Forwarding

Cisco NX-OS supports distributed packet forwarding. The ingress port takes relevant information from the packet header and passes the information to the local switching engine. The local switching engine does the Layer 3 lookup and uses this information to rewrite the packet header. The ingress module forwards the packet to the egress port. If the egress port is on a different module, the packet is forwarded using the switch fabric to the egress module. The egress module does not participate in the Layer 3 forwarding decision.

The forwarding tables are identical on the supervisor and all the modules.

You also use the **show platform fib** or **show platform forwarding** commands to display details on hardware forwarding.

Send document comments to nexus7k-docfeedback@cisco.com.

Software Forwarding

The software forwarding path in Cisco NX-OS is used mainly to handle features that are not supported in hardware or to handle errors encountered during hardware processing. Typically, packets with IP options or packets that need fragmentation are passed to the CPU on the active supervisor. All packets that should be switched in software or terminated go to the supervisor. The supervisor uses the information provided by the unicast RIB and the adjacency manager to make the forwarding decisions. The module is not involved in the software forwarding path.

Software forwarding is controlled by control plane policies and rate limiters. (see the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1*).

Summary of Layer 3 Unicast Routing Features

This section provides a brief introduction to the Layer 3 unicast features and protocols supported in Cisco NX-OS.

This section includes the following topics:

- [IPv4 and IPv6, page 1-13](#)
- [IP Services, page 1-13](#)
- [OSPF, page 1-14](#)
- [EIGRP, page 1-14](#)
- [IS-IS, page 1-14](#)
- [BGP, page 1-14](#)
- [RIP, page 1-14](#)
- [Static Routing, page 1-15](#)
- [Layer 3 Virtualization, page 1-15](#)
- [Route Policy Manager, page 1-15](#)
- [Policy-Based Routing, page 1-15](#)
- [First-Hop Redundancy Protocols, page 1-15](#)
- [Object Tracking, page 1-16](#)

IPv4 and IPv6

Layer 3 uses either the IPv4 or IPv6 protocol. IPv6 is a new IP protocol designed to replace IPv4, the Internet protocol that is predominantly deployed and used throughout the world. IPv6 increases the number of network address bits from 32 bits (in IPv4) to 128 bits. For more information, see [Chapter 2, “Configuring IPv4”](#) or [Chapter 3, “Configuring IPv6.”](#)

IP Services

IP Services includes Dynamic Host Configuration Protocol (DHCP) and Domain Name System (DNS Client) clients. For more information, see [Chapter 4, “Configuring DNS.”](#)

Send document comments to nexus7k-docfeedback@cisco.com.

OSPF

The OSPF protocol is a link-state routing protocol used to exchange network reachability information within an autonomous system. Each OSPF router advertises information about its active links to its neighbor routers. Link information consists of the link type, the link metric, and the neighbor router connected to the link. The advertisements that contain this link information are called link-state advertisements. For more information, see [Chapter 5, “Configuring OSPFv2.”](#)

EIGRP

The EIGRP protocol is a unicast routing protocol that has the characteristics of both distance vector and link-state routing protocols. It is an improved version of IGRP, which is a Cisco proprietary routing protocol. EIGRP relies on its neighbors to provide the routes, typical to a distance vector routing protocol. It constructs the network topology from the routes advertised by its neighbors, similar to a link-state protocol, and uses this information to select loop-free paths to destinations. For more information, see [Chapter 7, “Configuring EIGRP.”](#)

IS-IS

The Intermediate System-to-Intermediate System (IS-IS) protocol is an intradomain Open System Interconnection (OSI) dynamic routing protocol specified in International Organization for Standardization (ISO) 10589. The IS-IS routing protocol is a link-state protocol. Features of IS-IS are as follows:

- Hierarchical routing
- Classless behavior
- Rapid flooding of new information
- Fast Convergence
- Very scalable

For more information, see the [Chapter 8, “Configuring IS-IS.”](#)

BGP

The Border Gateway Protocol (BGP) is an inter-autonomous system routing protocol. A BGP router advertises network reachability information to other BGP routers using Transmission Control Protocol (TCP) as its reliable transport mechanism. The network reachability information includes the destination network prefix, a list of autonomous systems that needs to be traversed to reach the destination, and the next-hop router. Reachability information contains additional path attributes such as preference to a route, origin of the route, community and others. For more information, see [Chapter 9, “Configuring Basic BGP”](#) and [Chapter 10, “Configuring Advanced BGP.”](#)

RIP

The Routing Information Protocol (RIP) is a distance-vector protocol that uses a hop count as its metric. RIP is widely used for routing traffic in the global Internet and is an Interior Gateway Protocol (IGP), which means that it performs routing within a single autonomous system. For more information, see [Chapter 11, “Configuring RIP.”](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Static Routing

Static routing allows you to enter a fixed route to a destination. This feature is useful for small networks where the topology is simple. Static routing is also used with other routing protocols to control default routes and route distribution. For more information, see [Chapter 12, “Configuring Static Routing.”](#)

Layer 3 Virtualization

Virtualization allows you to share physical resources across separate management domains. Cisco NX-OS supports Virtual Device Contexts (VDCs) which allow you to create separate virtual systems within a Cisco NX-OS system. Each VDC is isolated from the others, which means that a problem in one VDC does not affect any other VDCs. VDCs are also secure from the other. You can assign separate network operators to each VDC and these network operators cannot control or view the configuration of a different VDC.

Cisco NX-OS also supports Layer 3 virtualization with VPN Routing and Forwarding (VRF). A VRF provides a separate address domain for configuring layer 3 routing protocols. For more information, see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Route Policy Manager

The Route Policy Manager provides a route filtering capability in Cisco NX-OS. It uses route maps to filter routes distributed across various routing protocols and between different entities within a given routing protocol. Filtering is based on specific match criteria, which is similar to packet filtering by access control lists. For more information, see [Chapter 15, “Configuring Route Policy Manager.”](#)

Policy-Based Routing

Policy-based routing uses the Route Policy Manager to create policy route filters. These policy route filters can forward a packet to a specified next hop based on the source of the packet or other fields in the packet header. Policy routes can be linked to extended IP access lists so that routing might be based on such things as protocol types and port numbers. For more information, see [Chapter 16, “Configuring Policy-Based Routing.”](#)

First-Hop Redundancy Protocols

First-hop redundancy protocols allow you to provide redundant connections to your hosts. In the event that an active first-hop router fails, the FHRP automatically selects a standby router to take over. You do not need to update the hosts with new IP addresses since the address is virtual and shared between each router in the FHRP group. For more information on the Gateway Load Balancing Protocol (GLBP), see [Chapter 17, “Configuring GLBP.”](#) For more information on the Hot Standby Router Protocol (HSRP), see [Chapter 18, “Configuring HSRP.”](#) For more information on the Virtual Router Redundancy Protocol (VRRP), see [Chapter 19, “Configuring VRRP.”](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Object Tracking

Object tracking allows you to track specific objects on the network, such as the interface line protocol state, IP routing, and route reachability, and take action when the tracked object's state changes. This feature allows you to increase the availability of the network and shorten recovery time if an object state goes down. For more information, see [Chapter 20, “Configuring Object Tracking”](#).

Related Topics

The following Cisco documents are related to the Layer 3 features:

- *Cisco Nexus 7000 Series NX-OS Multicast Routing Configuration Guide, Release 4.1*
- *Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 4.1*
- *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1*
- Exploring Autonomous System Numbers:
http://www.cisco.com/web/about/ac123/ac147/archived_issues/ipj_9-1/autonomous_system_numbers.html



Send document comments to nexus7k-docfeedback@cisco.com.



PART 1

IP

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 2

Configuring IPv4

This chapter describes how to configure Internet Protocol version 4 (IPv4), which includes addressing, Address Resolution Protocol (ARP), and Internet Control Message Protocol (ICMP), on the device.

This chapter includes the following sections:

- [Information About IPv4, page 2-1](#)
- [Licensing Requirements for IPv4, page 2-6](#)
- [Prerequisites for IPv4, page 2-6](#)
- [Guidelines and Limitations, page 2-6](#)
- [Configuring IPv4, page 2-6](#)
- [Verifying the IPv4 Configuration, page 2-14](#)
- [IPv4 Example Configuration, page 2-14](#)
- [Default Settings, page 2-14](#)
- [Additional References, page 2-15](#)
- [Feature History for IP, page 2-15](#)

Information About IPv4

You can configure IP on the device to assign IP addresses to network interfaces. When you assign IP addresses, you enable the interfaces and allow communication with the hosts on those interfaces.

You can configure an IP address as primary or secondary on a device. An interface can have one primary IP address and multiple secondary addresses. All networking devices on an interface should share the same primary IP address because the packets that are generated by the device always use the primary IPv4 address. Each IPv4 packet is based on the information from a source or destination IP address. See the [“Multiple IPv4 Addresses” section on page 2-2](#).

You can use a subnet to mask the IP addresses. A mask is used to determine what subnet an IP address belongs to. An IP address contains the network address and the host address. A mask identifies the bits that denote the network number in an IP address. When you use the mask to subnet a network, the mask is then referred to as a subnet mask. Subnet masks are 32-bit values that allow the recipient of IP packets to distinguish the network ID portion of the IP address from the host ID portion of the IP address.

Send document comments to nexus7k-docfeedback@cisco.com.

The IP feature in the Cisco NX-OS system is responsible for handling IPv4 packets that terminate in the supervisor module, as well as forwarding of IPv4 packets, which includes IPv4 unicast/multicast route lookup, reverse path forwarding (RPF) checks, and software access control list/policy based routing (ACL/PBR) forwarding. The IP feature also manages the network interface IP address configuration, duplicate address checks, static routes, and packet send/receive interface for IP clients.

This section includes the following topics:

- [Multiple IPv4 Addresses, page 2-2](#)
- [Address Resolution Protocol, page 2-2](#)
- [ARP Caching, page 2-3](#)
- [Static and Dynamic Entries in the ARP Cache, page 2-3](#)
- [Devices that do not use ARP, page 2-4](#)
- [Reverse ARP, page 2-4](#)
- [Reverse ARP, page 2-4](#)
- [Proxy ARP, page 2-5](#)
- [Local Proxy ARP, page 2-5](#)
- [ICMP, page 2-5](#)
- [Virtualization Support, page 2-6](#)

Multiple IPv4 Addresses

The Cisco NX-OS system supports multiple IP addresses per interface. You can specify an unlimited number of secondary addresses for a variety of situations. The most common are as follows:

- When there are not enough host IP addresses for a particular network interface. For example, if your subnetting allows up to 254 hosts per logical subnet, but on one physical subnet you must have 300 host addresses, then you can use secondary IP addresses on the routers or access servers to allow you to have two logical subnets using one physical subnet.
- Two subnets of a single network might otherwise be separated by another network. You can create a single network from subnets that are physically separated by another network by using a secondary address. In these instances, the first network is extended, or layered on top of the second network. A subnet cannot appear on more than one active interface of the router at a time.



Note

If any device on a network segment uses a secondary IPv4 address, all other devices on that same network interface must also use a secondary address from the same network or subnet. The inconsistent use of secondary addresses on a network segment can quickly cause routing loops.


Address Resolution Protocol

Networking devices and Layer 3 switches use Address Resolution Protocol (ARP) to map IP (network layer) addresses to (Media Access Control [MAC]-layer) addresses to enable IP packets to be sent across networks. Before a device sends a packet to another device, it looks in its own ARP cache to see if there is a MAC address and corresponding IP address for the destination device. If there is no entry, the source device sends a broadcast message to every device on the network.

Send document comments to nexus7k-docfeedback@cisco.com.

Each device compares the IP address to its own. Only the device with the matching IP address replies to the device that sends the data with a packet that contains the MAC address for the device. The source device adds the destination device MAC address to its ARP table for future reference, creates a data-link header and trailer that encapsulates the packet, and proceeds to transfer the data. Figure 2-1 shows the ARP broadcast and response process.

Figure 2-1 ARP Process

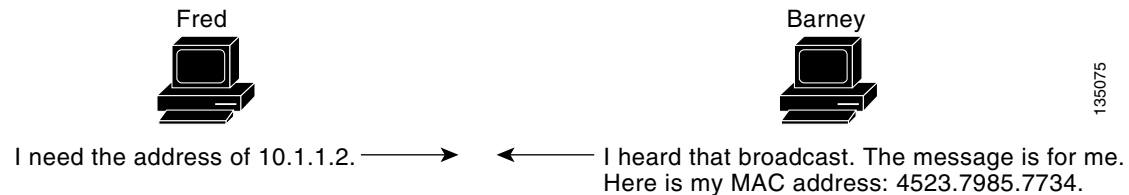

When the destination device lies on a remote network which is beyond another device, the process is the same except that the device that sends the data sends an ARP request for the MAC address of the default gateway. After the address is resolved and the default gateway receives the packet, the default gateway broadcasts the destination IP address over the networks connected to it. The device on the destination device network uses ARP to obtain the MAC address of the destination device and delivers the packet. ARP is enabled by default.

In Cisco NX-OS Release 4.1(4) and later, the default system-defined CoPP policy rate-limits ARP broadcast packets bound for the supervisor module. The default system-defined CoPP policy prevents an ARP broadcast storm from affecting the control plane traffic, but does not affect bridged packets.

ARP Caching

ARP caching minimizes broadcasts and limits wasteful use of network resources. The mapping of IP addresses to MAC addresses occurs at each hop (device) on the network for every packet sent over an internetwork, which may affect network performance.

ARP caching stores network addresses and the associated data-link addresses in memory for a period of time, which minimizes the use of valuable network resources to broadcast for the same address each time a packet is sent. You must maintain the cache entries since the cache entries are set to expire periodically because the information might become outdated. Every device on a network updates its tables as addresses are broadcast.

Static and Dynamic Entries in the ARP Cache

You must manually configure the IP addresses, subnet masks, gateways, and corresponding MAC addresses for each interface of each device when using static routes. Static routing enables more control but requires more work to maintain the route table. You must update the table each time you add or change routes.

Dynamic routing uses protocols that enable the devices in a network to exchange routing table information with each other. Dynamic routing is more efficient than static routing because the route table is automatically updated unless you add a time limit to the cache. The default time limit is 25 minutes but you can modify the time limit if the network has many routes that are added and deleted from the cache.

Send document comments to nexus7k-docfeedback@cisco.com.

Devices that do not use ARP

When a network is divided into two segments, a bridge joins the segments and filters traffic to each segment based on MAC addresses. The bridge builds its own address table, which uses MAC addresses only, as opposed to a device, which has an ARP cache that contains both IP addresses and the corresponding MAC addresses.

Passive hubs are central-connection devices that physically connect other devices in a network. They send messages out on all their ports to the devices and operate at Layer 1, but do not maintain an address table.


Layer 2 switches determine which port is connected to a device to which the message is addressed and send only to that port, unlike a hub, which sends the message out all its ports. However, Layer 3 switches are devices that build an ARP cache (table).

Reverse ARP

Reverse ARP (RARP) as defined by RFC 903 works the same way as ARP, except that the RARP request packet requests an IP address instead of a MAC address. RARP often is used by diskless workstations because this type of device has no way to store IP addresses to use when they boot. The only address that is known is the MAC address because it is burned into the hardware.

Use of RARP requires an RARP server on the same network segment as the router interface. [Figure 2-2](#) illustrates how RARP works.

Figure 2-2 **Reverse ARP**

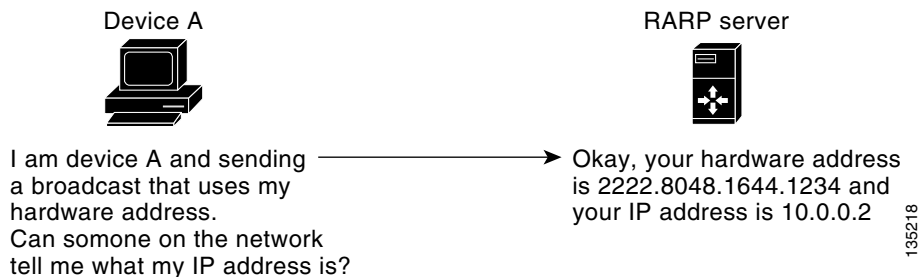

There are several limitations of RARP. Because of these limitations, most businesses use DHCP to assign IP addresses dynamically. DHCP is cost effective and requires less maintenance than RARP. The following are the most important limitations:

- Since RARP uses hardware addresses, if the internetwork is large with many physical networks, a RARP server must be on every segment with an additional server for redundancy. Maintaining two servers for every segment is costly.
- Each server must be configured with a table of static mappings between the hardware addresses and IP addresses. Maintenance of the IP addresses is difficult.
- RARP only provides IP addresses of the hosts and not subnet masks or default gateways.

Send document comments to nexus7k-docfeedback@cisco.com.

Proxy ARP

Proxy ARP enables a device that is physically located on one network appear to be logically part of a different physical network connected to the same device or firewall. Proxy ARP allows you to hide a device with a public IP address on a private network behind a router, and still have the device appear to be on the public network in front of the router. By hiding its identity, the router accepts responsibility for routing packets to the real destination. Proxy ARP can help devices on a subnet reach remote subnets without configuring routing or a default gateway.

When devices are not in the same data link layer network but in the same IP network, they try to transmit data to each other as if they are on the local network. However, the router that separates the devices does not send a broadcast message because routers do not pass hardware-layer broadcasts and the addresses cannot be resolved.

When you enable Proxy ARP on the device and it receives an ARP request, it identifies the request as a request for a system that is not on the local LAN. The device responds as if it is the remote destination for which the broadcast is addressed, with an ARP response that associates the device's MAC address with the remote destination's IP address. The local device believes that it is directly connected to the destination, while in reality its packets are being forwarded from the local subnetwork toward the destination subnetwork by their local device. By default, Proxy ARP is disabled.

Local Proxy ARP

You can use local Proxy ARP to enable a device to respond to ARP requests for IP addresses within a subnet where normally no routing is required. When you enable local Proxy ARP, ARP responds to all ARP requests for IP addresses within the subnet and forwards all traffic between hosts in the subnet. Use this feature only on subnets where hosts are intentionally prevented from communicating directly by the configuration on the device to which they are connected.

Gratuitous ARP

Gratuitous ARP sends a request with identical source IP address and destination IP address to detect duplicate IP addresses. Cisco NX-OS Release 4.0(3) and later releases support enabling or disabling gratuitous ARP requests or ARP cache updates.

ICMP

You can use ICMP to provide message packets that report errors and other information that is relevant to IP processing. ICMP generates error messages, such as ICMP destination unreachable messages, ICMP Echo Requests (which send a packet on a round trip between two hosts) and Echo Reply messages. ICMP also provides many diagnostic functions and can send and redirect error packets to the host. By default, ICMP is enabled.

Some of the ICMP message types are as follows:

- Network error messages
- Network congestion messages
- Troubleshooting information
- Timeout announcements

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)



Note

ICMP redirects are disabled on interfaces where the local proxy ARP feature is enabled.

Virtualization Support

IPv4 supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. For more information, see the *Cisco NX-OS Virtual Device Context Configuration Guide* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for IPv4

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	IP requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Prerequisites for IPv4

IPv4 has the following prerequisites:

- Can only be configured on Layer 3 interfaces.

Guidelines and Limitations

IPv4 has the following guidelines and limitations and restrictions:

- You can configure a secondary IP address only after you configure the primary IP address.

Configuring IPv4

This section includes the following topics:

- [Configuring IPv4 Addressing, page 2-7](#)
- [Configuring Multiple IP Addresses, page 2-8](#)
- [Configuring a Static ARP Entry, page 2-9](#)
- [Configuring Proxy ARP, page 2-10](#)
- [Configuring Local Proxy ARP, page 2-11](#)
- [Configuring IP Packet Verification, page 2-12](#)
- [Configuring IP Directed Broadcasts, page 2-13](#)

Send document comments to nexus7k-docfeedback@cisco.com.


Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring IPv4 Addressing

You can assign a primary IP address for a network interface.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface ethernet *number***
3. **ip address *ip-address/length***
4. **show ip interface**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface ethernet <i>number</i> Example: switch(config)# interface ethernet 2/3 switch(config-if)#	Enters interface configuration mode.
Step 3	ip address <i>ip-address/length</i> [<i>secondary</i>] Example: switch(config-if)# ip address 192.2.1.1 255.0.0.0	Specifies a primary or secondary IPv4 address for an interface. <ul style="list-style-type: none"> • The network mask can be a four-part dotted decimal address. For example, 255.0.0.0 indicates that each bit equal to 1 means the corresponding address bit belongs to the network address. • The network mask can be indicated as a slash (/) and a number - a prefix length. The prefix length is a decimal value that indicates how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). A slash must precede the decimal value and there is no space between the IP address and the slash.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	show ip interface Example: switch(config-if)# show ip interface	(Optional) Displays interfaces configured for IPv4.
Step 5	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to assign an IPv4 address:

```
switch# config t
switch(config)# interface ethernet 2/3
switch(config-if)# ip address 192.2.1.1 255.0.0.0
switch(config-if)# copy running-config startup-config
```

Configuring Multiple IP Addresses

You can only add secondary IP addresses after you configure primary IP addresses.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface ethernet** *number*
3. **ip address** *ip-address/length*
4. **show ip interface**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface ethernet <i>number</i> Example: switch(config)# interface ethernet 2/3 switch(config-if)#	Enters interface configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 3	ip address <i>ip-address/length</i> [secondary] Example: switch(config-if)# ip address 192.2.1.1 255.0.0.0 secondary	Specifies the configured address as a secondary IPv4 address.
Step 4	show ip interface Example: switch(config-if)# show ip interface	(Optional) Displays interfaces configured for IPv4.
Step 5	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

Configuring a Static ARP Entry

You can configure a static ARP entry on the device to map IP addresses to MAC hardware addresses.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface ethernet** *number*
3. **ip arp ipaddr mac_addr**
4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t	Enters configuration mode.
Step 2	interface ethernet <i>number</i> Example: switch(config)# interface ethernet 2/3 switch(config-if)#	Enters interface configuration mode.
Step 3	ip arp ipaddr mac_addr Example: switch(config-if)# ip arp 192.2.1.1 0019.076c.1a78	Associates an IP address with a MAC address as a static entry.
Step 4	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

This example shows how to configure a static ARP entry:

```
switch# config t
switch(config)# interface ethernet 2/3
switch(config-if)# ip arp 192.2.1.1 0019.076c.1a78
switch(config-if)# copy running-config startup-config
```

Configuring Proxy ARP

You can configure Proxy ARP on the device to determine the media addresses of hosts on other networks or subnets.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

- 1. **config t**
- 2. **interface ethernet *number***
- 3. **ip proxy-arp**
- 4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t	Enters configuration mode.
Step 2	interface ethernet <i>number</i> Example: switch(config)# interface ethernet 2/3 switch(config-if)#	Enters interface configuration mode.
Step 3	ip proxy-arp Example: switch(config-if)# ip proxy-arp	Enables Proxy ARP on the interface.
Step 4	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to configure Proxy ARP:

```
switch# config t
switch(config)# interface ethernet 2/3
switch(config-if)# ip proxy-arp
switch(config-if)# copy running-config startup-config
```


Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Local Proxy ARP

You can configure Local Proxy ARP on the device.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface ethernet *number***
3. **ip local-proxy-arp**
4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t	Enters configuration mode.
Step 2	interface ethernet <i>number</i> Example: switch(config)# interface ethernet 2/3 switch(config-if)#	Enters interface configuration mode.
Step 3	ip local-proxy-arp Example: switch(config-if)# ip local-proxy-arp	Enables Local Proxy ARP on the interface.
Step 4	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to configure Local Proxy ARP:

```
switch# config t
switch(config)# interface ethernet 2/3
switch(config-if)# ip local-proxy-arp
switch(config-if)# copy running-config startup-config
```

Configuring Gratuitous ARP

You can configure gratuitous ARP on an interface.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

- 1. `config t`
- 2. `interface ethernet number`
- 3. `ip arp gratuitous {request | update}`
- 4. `copy running-config startup-config`

DETAILED STEPS

	Command	Purpose
Step 1	<code>config t</code>	Enters configuration mode.
Step 2	<code>interface ethernet <i>number</i></code> Example: <code>switch(config)# interface ethernet 2/3</code> <code>switch(config-if)#</code>	Enters interface configuration mode.
Step 3	<code>ip arp gratuitous {request update}</code> Example: <code>switch(config-if)# ip arp gratuitous request</code>	Enables gratuitous ARP on the interface. Default is enabled.
Step 4	<code>copy running-config startup-config</code> Example: <code>switch(config-if)# copy running-config startup-config</code>	(Optional) Saves this configuration change.

This example shows how to disable gratuitous ARP requests:

```
switch# config t
switch(config)# interface ethernet 2/3
switch(config-if)# no ip arp gratuitous request
switch(config-if)# copy running-config startup-config
```

Configuring IP Packet Verification

Cisco NX-OS supports an Intrusion Detection System (IDS) that checks for IP packet verification. You can enable or disable these IDS checks.

Send document comments to nexus7k-docfeedback@cisco.com.

To enable IDS checks, use the following commands in global configuration mode:

Command	Purpose
hardware ip verify address { destination zero identical reserved source { broadcast multicast }}	Performs the following IDS checks on the IP address: <ul style="list-style-type: none"> • destination zero—Drops IP packets if the destination IP address is 0.0.0.0. • identical—Drops IP packets if the source IP address is identical to the destination IP address. • reserved—Drops IP packets if the IP address is in the 127.x.x.x range. • source—Drops IP packets if the IP source address is either 255.255.255.255 (broadcast) or in the 224.x.x.x range (multicast).
hardware ip verify checksum	Drops IP packets if the packet checksum is invalid.
hardware ip verify fragment	Drops IP packets if the packet fragment has a nonzero offset and the DF bit is active.
hardware ip verify length { consistent maximum { max-frag max-tcp udp } minimum }	Performs the following IDS checks on the IP address: <ul style="list-style-type: none"> • consistent—Drops IP packets where the Ethernet frame size is greater than or equal to the IP packet length plus the Ethernet header. • maximum max-frag—Drops IP packets if the maximum fragment offset is greater than 65536. • maximum max-tcp—Drops IP packets if the TCP length is greater than the IP payload length. • maximum udp—Drops IP packets if the IP payload length is less than the UDP packet length. • minimum—Drops IP packets if the Ethernet frame length is less than the IP packet length plus four octets (the CRC length).
hardware ip verify tcp tiny-frag	Drops TCP packets if the IP fragment offset is 1, or if the IP fragment offset is 0 and the IP payload length is less than 16.
hardware ip verify version	Drops IP packets if the ethertype is not set to 4 (IPv4).

Use the **show hardware forwarding ip verify** command to display the IP packet verification configuration.

Configuring IP Directed Broadcasts

An IP directed broadcast is an IP packet whose destination address is a valid broadcast address for some IP subnet, but which originates from a node that is not itself part of that destination subnet.

A device that is not directly connected to its destination subnet forwards an IP directed broadcast in the same way it would forward unicast IP packets destined to a host on that subnet. When a directed broadcast packet reaches a device that is directly connected to its destination subnet, that packet is

Send document comments to nexus7k-docfeedback@cisco.com.

"exploded" as a broadcast on the destination subnet. The destination address in the IP header of the packet is rewritten to the configured IP broadcast address for the subnet, and the packet is sent as a link-layer broadcast.

If directed broadcast is enabled for an interface, incoming IP packets whose addresses identify them as directed broadcasts intended for the subnet to which that interface is attached will be exploded as broadcasts on that subnet.

To enable IP directed broadcasts, use the following command in interface configuration mode:

Command	Purpose
ip directed-broadcast	Enables the translation of a directed broadcast to physical broadcasts

Verifying the IPv4 Configuration

To verify configuration information, use the following commands:

Command	Purpose
show hardware forwarding ip verify	Displays the IP packet verification configuration.
show ip adjacency	Displays the adjacency table.
show ip arp	Displays the ARP table.
show ip interface	Displays IP related interface information.
show ip arp statistics [vrf vrf-name]	Displays the ARP statistics.

IPv4 Example Configuration

This example shows how to configure an IPv4 address:

```
config t
interface e 1/2
no switchport
ip address 192.2.1.1/16
```

Default Settings

Table 2-1 lists the default settings for IP parameters.

Table 2-1 *Default IP Parameters*

Parameters	Default
proxy ARP	disabled

Send document comments to nexus7k-docfeedback@cisco.com.

Additional References

For additional information related to implementing IP, see the following sections:

- [Related Documents, page 2-15](#)
- [Standards, page 2-15](#)

Related Documents

Related Topic	Document Title
IP CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for IP

[Table 2-2](#) lists the release history for this feature.

Table 2-2 Feature History for IP

Feature Name	Releases	Feature Information
ARP	4.1(4)	Added support to protect against an ARP broadcast storm.
IP	4.1(3)	Changed platform ip verify command to hardware ip verify command.
ARP	4.0(3)	Added support for gratuitous ARP. The following command was added: <ul style="list-style-type: none"> • ip arp gratuitous {request update}
IP	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 3

Configuring IPv6

This chapter describes how to configure Internet Protocol version 6 (IPv6), which includes addressing, Neighbor Discovery Protocol (ND), and Internet Control Message Protocol version 6 (ICMPv6), on the device.

This chapter includes the following sections:

- [Information About IPv6, page 3-1](#)
- [Licensing Requirements for IPv6, page 3-18](#)
- [Prerequisites for IPv6, page 3-18](#)
- [Guidelines and Limitations for IPv6, page 3-18](#)
- [Configuring IPv6, page 3-18](#)
- [Verifying the IPv6 Configuration, page 3-24](#)
- [IPv6 Example Configuration, page 3-24](#)
- [Default Settings, page 3-24](#)
- [Additional References, page 3-24](#)

Information About IPv6

IPv6, which is designed to replace IPv4, increases the number of network address bits from 32 bits (in IPv4) to 128 bits. IPv6 is based on IPv4 but it includes a much larger address space and other improvements such as a simplified main header and extension headers.

The larger IPv6 address space allows networks to scale and provide global reachability. The simplified IPv6 packet header format handles packets more efficiently. The flexibility of the IPv6 address space reduces the need for private addresses and the use of Network Address Translation (NAT), which translates private (not globally unique) addresses into a limited number of public addresses. IPv6 enables new application protocols that do not require special processing by border routers at the edge of networks.

IPv6 functionality, such as prefix aggregation, simplified network renumbering, and IPv6 site multihoming capabilities, enable more efficient routing. IPv6 supports Routing Information Protocol (RIP), Integrated Intermediate System-to-Intermediate System (IS-IS), Open Shortest Path First (OSPF) for IPv6, and multiprotocol Border Gateway Protocol (BGP).

This section includes the following topics:

- [IPv6 Address Formats, page 3-2](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- [IPv6 Unicast Addresses, page 3-3](#)
- [IPv6 Anycast Addresses, page 3-7](#)
- [IPv6 Multicast Addresses, page 3-7](#)
- [IPv4 Packet Header, page 3-9](#)
- [Simplified IPv6 Packet Header, page 3-9](#)
- [DNS for IPv6, page 3-12](#)
- [Path MTU Discovery for IPv6, page 3-12](#)
- [CDP IPv6 Address Support, page 3-12](#)
- [ICMP for IPv6, page 3-12](#)
- [IPv6 Neighbor Discovery, page 3-13](#)
- [IPv6 Neighbor Solicitation Message, page 3-13](#)
- [IPv6 Router Advertisement Message, page 3-15](#)
- [IPv6 Neighbor Redirect Message, page 3-16](#)
- [Virtualization Support, page 3-17](#)

IPv6 Address Formats

An IPv6 address has 128 bits or 16 bytes. The address is divided into eight, 16-bit hexadecimal blocks separated by colons (:) in the format: x:x:x:x:x:x:x:x. Two examples of IPv6 addresses are as follows:

```
2001:0DB8:7654:3210:FEDC:BA98:7654:3210
2001:0DB8:0:0:8:800:200C:417A
```

IPv6 addresses contain consecutive zeros within the address. You can use two colons (::) at the beginning, middle, or end of an IPv6 address to replace the consecutive zeros. [Table 3-1](#) shows a list of compressed IPv6 address formats.



Note

You can use two colons (::) only once in an IPv6 address to replace the longest string of consecutive zeros within the address.

You can use a double colon as part of the IPv6 address when consecutive 16-bit values are denoted as zero. You can configure multiple IPv6 addresses per interface but only one link-local address.

The hexadecimal letters in IPv6 addresses are not case sensitive.

Table 3-1 Compressed IPv6 Address Formats

IPv6 Address Type	Preferred Format	Compressed Format
Unicast	2001:0:0:0:0DB8:800:200C:417A	2001::0DB8:800:200C:417A
Multicast	FF01:0:0:0:0:0:0:101	FF01::101
Loopback	0:0:0:0:0:0:0:1	::1
Unspecified	0:0:0:0:0:0:0:0	::

Send document comments to nexus7k-docfeedback@cisco.com.

A node may use the loopback address listed in [Table 3-1](#) to send an IPv6 packet to itself. The loopback address in IPv6 is the same as the loopback address in IPv4. For more information, see [Chapter 1](#), “Overview.”

**Note**

You cannot assign the IPv6 loopback address to a physical interface. A packet that contains the IPv6 loopback address as its source or destination address must remain within the node that created the packet. IPv6 routers do not forward packets that have the IPv6 loopback address as their source or destination address.

**Note**

You cannot assign an IPv6 unspecified address to an interface. You should not use the unspecified IPv6 addresses as destination addresses in IPv6 packets or the IPv6 routing header.

The IPv6-prefix is in the form documented in RFC 2373 where the IPv6 address is specified in hexadecimal using 16-bit values between colons. The prefix length is a decimal value that indicates how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). For example, 2001:0DB8:8086:6502::/32 is a valid IPv6 prefix.

IPv6 Unicast Addresses

An IPv6 unicast address is an identifier for a single interface, on a single node. A packet that is sent to a unicast address is delivered to the interface identified by that address. This section includes the following topics:

- [Aggregatable Global Addresses, page 3-3](#)
- [Link-Local Addresses, page 3-5](#)
- [IPv4-Compatible IPv6 Addresses, page 3-5](#)
- [Unique Local Addresses, page 3-6](#)
- [Site-Local Address, page 3-7](#)


Aggregatable Global Addresses

An aggregatable global address is an IPv6 address from the aggregatable global unicast prefix. The structure of aggregatable global unicast addresses enables strict aggregation of routing prefixes that limits the number of routing table entries in the global routing table. Aggregatable global addresses are used on links that are aggregated upward through organizations, and eventually to the Internet service providers (ISPs).

Aggregatable global IPv6 addresses are defined by a global routing prefix, a subnet ID, and an interface ID. Except for addresses that start with binary 000, all global unicast addresses have a 64-bit interface ID. The IPv6 global unicast address allocation uses the range of addresses that start with binary value 001 (2000::/3). [Figure 3-1](#) shows the structure of an aggregatable global address.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 3-1 **Aggregatable Global Address Format**

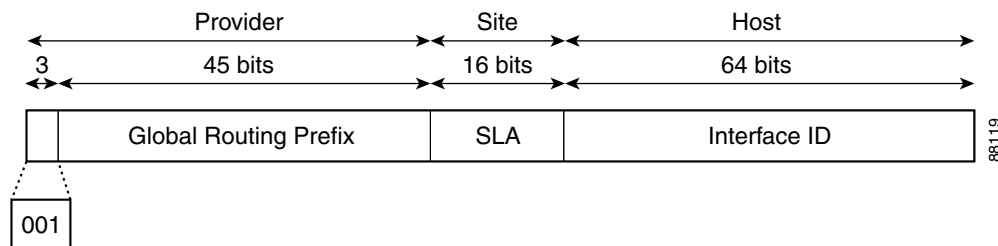

Addresses with a prefix of 2000::/3 (001) through E000::/3 (111) are required to have 64-bit interface identifiers in the extended universal identifier (EUI)-64 format. The Internet Assigned Numbers Authority (IANA) allocates the IPv6 address space in the range of 2000::/16 to regional registries.

The aggregatable global address consists of a 48-bit global routing prefix and a 16-bit subnet ID or Site-Level Aggregator (SLA). In the IPv6 aggregatable global unicast address format document (RFC 2374), the global routing prefix included two other hierarchically structured fields called Top-Level Aggregator (TLA) and Next-Level Aggregator (NLA). The IETF decided to remove the TLA and NLA fields from the RFCs because these fields are policy based. Some existing IPv6 networks deployed before the change might still use networks that are on the older architecture.

A subnet ID, which is a 16-bit subnet field, can be used by individual organizations to create a local addressing hierarchy and to identify subnets. A subnet ID is similar to a subnet in IPv4, except that an organization with an IPv6 subnet ID can support up to 65,535 individual subnets.

An interface ID identifies interfaces on a link. The interface ID is unique to the link. In many cases, an interface ID is the same as or based on the link-layer address of an interface. Interface IDs used in aggregatable global unicast and other IPv6 address types are 64 bits long and are in the modified EUI-64 format.

Interface IDs are in the modified EUI-64 format in one of the following ways:

- For all IEEE 802 interface types (for example, Ethernet, and Fiber Distributed Data interfaces), the first three octets (24 bits) are the Organizationally Unique Identifier (OUI) of the 48-bit link-layer address (MAC address) of the interface, the fourth and fifth octets (16 bits) are a fixed hexadecimal value of FFFE, and the last three octets (24 bits) are the last three octets of the MAC address. The Universal/Local (U/L) bit, which is the seventh bit of the first octet, has a value of 0 or 1. Zero indicates a locally administered identifier; 1 indicates a globally unique IPv6 interface identifier.
- For all other interface types (for example, serial, loopback, ATM, Frame Relay, and tunnel interface types—except tunnel interfaces used with IPv6 overlay tunnels), the interface ID is similar to the interface ID for IEEE 802 interface types; however, the first MAC address from the pool of MAC addresses in the router is used as the identifier (because the interface does not have a MAC address).
- For tunnel interface types that are used with IPv6 overlay tunnels, the interface ID is the IPv4 address assigned to the tunnel interface with all zeros in the high-order 32 bits of the identifier.



Note

For interfaces that use the Point-to-Point Protocol (PPP), where the interfaces at both ends of the connection might have the same MAC address, the interface identifiers at both ends of the connection are negotiated (picked randomly and, if necessary, reconstructed) until both identifiers are unique. The first MAC address in the router is used as the identifier for interfaces using PPP.

Send document comments to nexus7k-docfeedback@cisco.com.

If no IEEE 802 interface types are in the router, link-local IPv6 addresses are generated on the interfaces in the router in the following sequence:


1. The router is queried for MAC addresses (from the pool of MAC addresses in the router).
2. If no MAC addresses are available in the router, the serial number of the router is used to form the link-local addresses.
3. If the serial number of the router cannot be used to form the link-local addresses, the router uses a Message Digest 5 (MD5) hash to determine the MAC address of the router from the hostname of the router.

Link-Local Addresses

A link-local address is an IPv6 unicast address that can be automatically configured on any interface using the link-local prefix FE80::/10 (1111 1110 10) and the interface identifier in the modified EUI-64 format. Link-local addresses are used in the neighbor discovery protocol and the stateless autoconfiguration process. Nodes on a local link can use link-local addresses to communicate; the nodes do not need globally unique addresses to communicate. Figure 3-2 shows the structure of a link-local address.

IPv6 routers cannot forward packets that have link-local source or destination addresses to other links.

Figure 3-2 Link-Local Address Format

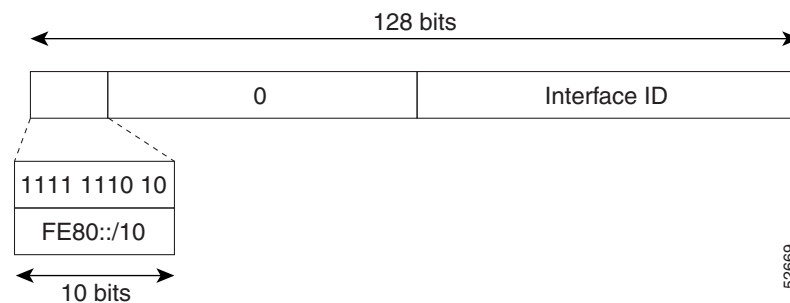


52669

IPv4-Compatible IPv6 Addresses

An IPv4-compatible IPv6 address is an IPv6 unicast address that has zeros in the high-order 96 bits of the address and an IPv4 address in the low-order 32 bits of the address. The format of an IPv4-compatible IPv6 address is 0:0:0:0:0:A.B.C.D or ::A.B.C.D. The entire 128-bit IPv4-compatible IPv6 address is used as the IPv6 address of a node and the IPv4 address embedded in the low-order 32 bits is used as the IPv4 address of the node. IPv4-compatible IPv6 addresses are assigned to nodes that support both the IPv4 and IPv6 protocol stacks and are used in automatic tunnels. Figure 3-3 shows the structure of an IPv4-compatible IPv6 address and a few acceptable formats for the address.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 3-3 *IPv4-Compatible IPv6 Address Format*

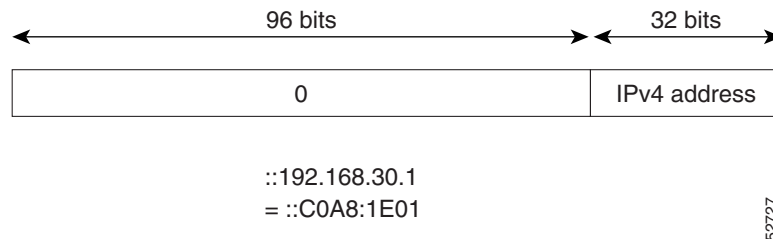

Unique Local Addresses


A unique local address is an IPv6 unicast address that is globally unique and is intended for local communications. It is not expected to be routable on the global Internet and is routable inside of a limited area, such as a site and it may be routed between a limited set of sites. Applications may treat unique local addresses like global scoped addresses.

A unique local address has the following characteristics:

- It has a globally unique prefix (it has a high probability of uniqueness).
- It has a well-known prefix to allow for easy filtering at site boundaries.
- It allows sites to be combined or privately interconnected without creating any address conflicts or requiring renumbering of interfaces that use these prefixes.
- It is ISP-independent and can be used for communications inside of a site without having any permanent or intermittent Internet connectivity.
- If it is accidentally leaked outside of a site via routing or Domain Name Server (DNS), there is no conflict with any other addresses.

Figure 3-4 shows the structure of a unique local address.

Figure 3-4 Unique Local Address Structure

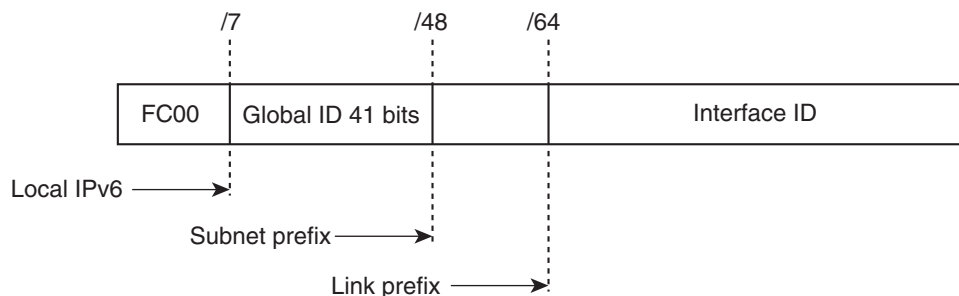

- Prefix — FC00::/7 prefix to identify local IPv6 unicast addresses.
- Global ID — 41-bit global identifier used to create a globally unique prefix.
- Subnet ID — 16-bit subnet ID is an identifier of a subnet within the site.
- Interface ID — 64-bit IID

Send document comments to nexus7k-docfeedback@cisco.com.

Site-Local Address

Because RFC 3879 deprecates the use of site-local addresses, you should follow the recommendations of unique local addressing (ULA) in RFC 4193 when you configure private IPv6 addresses.

IPv6 Anycast Addresses

An anycast address is an address that is assigned to a set of interfaces that belong to different nodes. A packet sent to an anycast address is delivered to the closest interface—as defined by the routing protocols in use—identified by the anycast address. Anycast addresses are syntactically indistinguishable from unicast addresses because anycast addresses are allocated from the unicast address space. Assigning a unicast address to more than one interface turns a unicast address into an anycast address. You must configure the nodes to which the anycast address to recognize that the address is an anycast address.




Note

Anycast addresses can be used only by a router, not a host. Anycast addresses cannot be used as the source address of an IPv6 packet.

Figure 3-5 shows the format of the subnet router anycast address; the address has a prefix concatenated by a series of zeros (the interface ID). The subnet router anycast address can be used to reach a router on the link that is identified by the prefix in the subnet router anycast address.

Figure 3-5 Subnet Router Anycast Address Format




IPv6 Multicast Addresses

An IPv6 multicast address is an IPv6 address that has a prefix of FF00::/8 (1111 1111). An IPv6 multicast address is an identifier for a set of interfaces that belong to different nodes. A packet sent to a multicast address is delivered to all interfaces identified by the multicast address. The second octet following the prefix defines the lifetime and scope of the multicast address. A permanent multicast address has a lifetime parameter equal to 0; a temporary multicast address has a lifetime parameter equal to 1. A multicast address that has the scope of a node, link, site, or organization, or a global scope, has a scope parameter of 1, 2, 5, 8, or E, respectively. For example, a multicast address with the prefix FF02::/16 is a permanent multicast address with a link scope. Figure 3-6 shows the format of the IPv6 multicast address.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 3-6 IPv6 Multicast Address Format

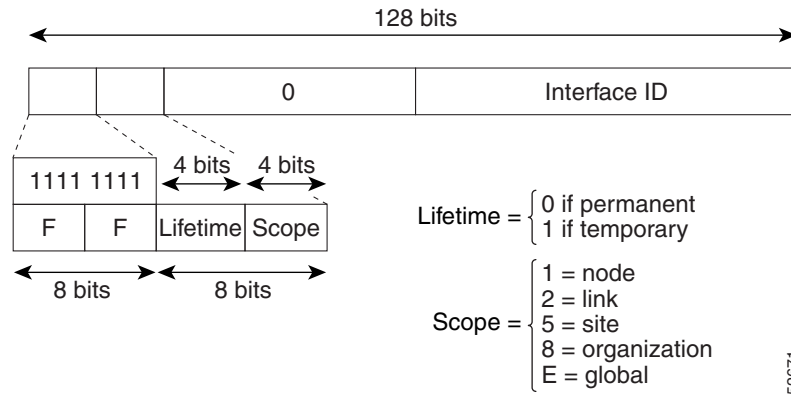


IPv6 nodes (hosts and routers) are required to join (where received packets are destined for) the following multicast groups:

- All-nodes multicast group FF02:0:0:0:0:0:0:1 (the scope is link-local)
- Solicited-node multicast group FF02:0:0:0:0:1:FF00:0000/104 for each of its assigned unicast and anycast addresses

IPv6 routers must also join the all-routers multicast group FF02:0:0:0:0:0:0:2 (the scope is link-local).

The solicited-node multicast address is a multicast group that corresponds to an IPv6 unicast or anycast address. IPv6 nodes must join the associated solicited-node multicast group for every unicast and anycast address to which it is assigned. The IPv6 solicited-node multicast address has the prefix FF02:0:0:0:0:1:FF00:0000/104 concatenated with the 24 low-order bits of a corresponding IPv6 unicast or anycast address (see Figure 3-7). For example, the solicited-node multicast address that corresponds to the IPv6 address 2037::01:800:200E:8C6C is FF02::1:FF0E:8C6C. Solicited-node addresses are used in neighbor solicitation messages.

Figure 3-7 IPv6 Solicited-Node Multicast Address Format

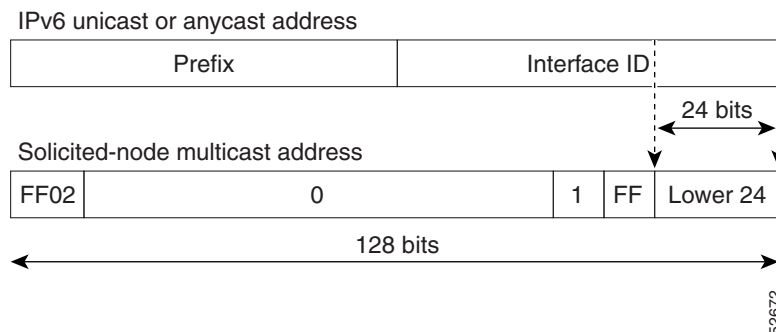

Note


IPv6 has no broadcast addresses. IPv6 multicast addresses are used instead of broadcast addresses.

Send document comments to nexus7k-docfeedback@cisco.com.

IPv4 Packet Header

The basic IPv4 packet header has 12 fields with a total size of 20 octets (160 bits) (see [Figure 3-8](#)). The 12 fields may be followed by an Options field, which is followed by a data portion that is usually the transport-layer packet. The variable length of the Options field adds to the total size of the IPv4 packet header. The shaded fields of the IPv4 packet header are not included in the IPv6 packet header.

Figure 3-8 IPv4 Packet Header Format

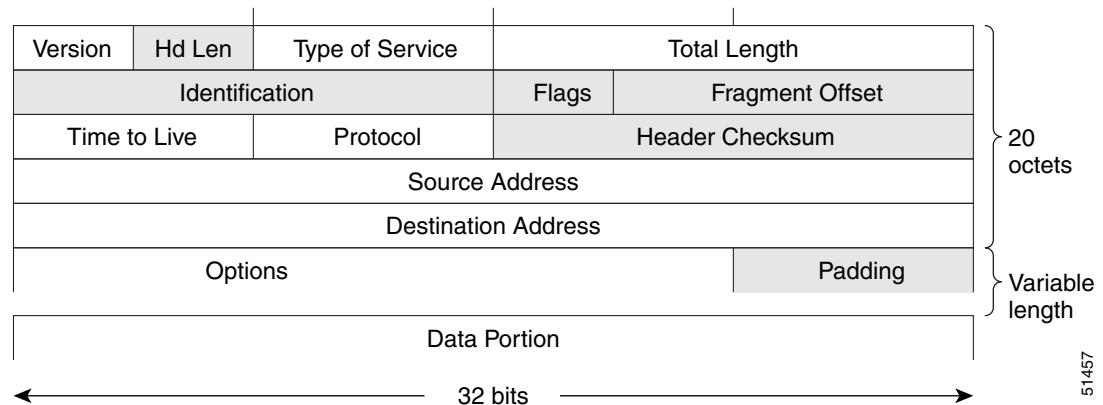

Simplified IPv6 Packet Header

The basic IPv6 packet header has 8 fields with a total size of 40 octets (320 bits) (see [Figure 3-9](#)). Fragmentation is handled by the source of a packet and checksums at the data link layer and transport layer are used. The User Datagram Protocol (UDP) checksum checks the integrity of the inner packet and the basic IPv6 packet header and Options field are aligned to 64 bits, which can facilitate the processing of IPv6 packets.

[Table 3-2](#) lists the fields in the basic IPv6 packet header.

Table 3-2 Basic IPv6 Packet Header Fields


Field	Description
Version	Similar to the Version field in the IPv4 packet header, except that the field lists number 6 for IPv6 instead of number 4 for IPv4.
Traffic Class	Similar to the Type of Service field in the IPv4 packet header. The Traffic Class field tags packets with a traffic class that is used in differentiated services.
Flow Label	New field in the IPv6 packet header. The Flow Label field tags packets with a specific flow that differentiates the packets at the network layer.
Payload Length	Similar to the Total Length field in the IPv4 packet header. The Payload Length field indicates the total length of the data portion of the packet.

Send document comments to nexus7k-docfeedback@cisco.com.

Table 3-2 Basic IPv6 Packet Header Fields (continued)

Field	Description
Next Header	Similar to the Protocol field in the IPv4 packet header. The value of the Next Header field determines the type of information following the basic IPv6 header. The type of information following the basic IPv6 header can be a transport-layer packet, for example, a TCP or UDP packet, or an Extension Header, as shown in Figure 3-9 .
Hop Limit	Similar to the Time to Live field in the IPv4 packet header. The value of the Hop Limit field specifies the maximum number of routers that an IPv6 packet can pass through before the packet is considered invalid. Each router decrements the value by one. Because no checksum is in the IPv6 header, the router can decrement the value without needing to recalculate the checksum, which saves processing resources.
Source Address	Similar to the Source Address field in the IPv4 packet header, except that the field contains a 128-bit source address for IPv6 instead of a 32-bit source address for IPv4.
Destination Address	Similar to the Destination Address field in the IPv4 packet header, except that the field contains a 128-bit destination address for IPv6 instead of a 32-bit destination address for IPv4.

Figure 3-9 IPv6 Packet Header Format

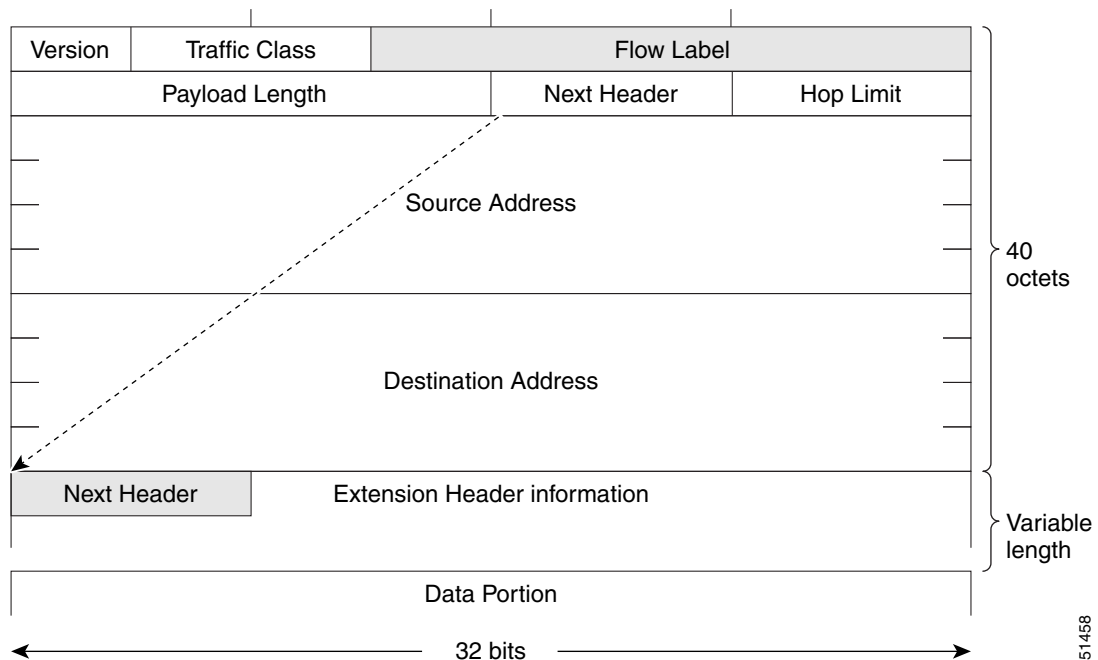

Optional extension headers and the data portion of the packet are after the eight fields of the basic IPv6 packet header. If present, each extension header is aligned to 64 bits. There is no fixed number of extension headers in an IPv6 packet. Each extension header is identified by the Next Header field of the previous header. Typically, the final extension header has a Next Header field of a transport-layer protocol, such as TCP or UDP. [Figure 3-10](#) shows the IPv6 extension header format.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 3-10 IPv6 Extension Header Format

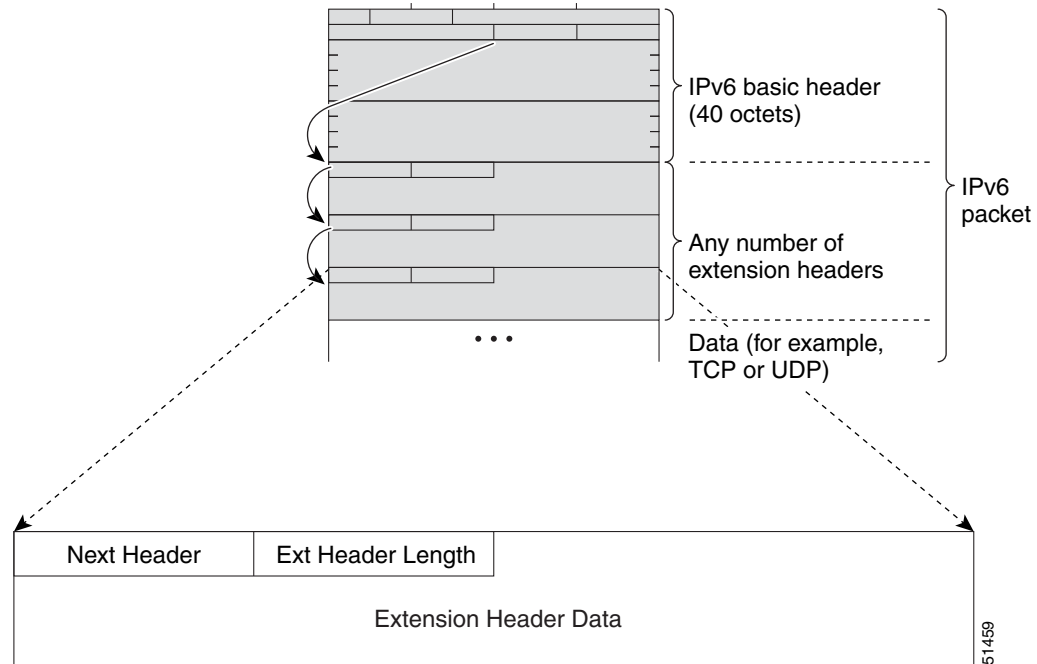


Table 3-3 lists the extension header types and their Next Header field values.

Table 3-3 IPv6 Extension Header Types

Header Type	Next Header Value	Description
Hop-by-hop options header	0	Header that is processed by all hops in the path of a packet. When present, the hop-by-hop options header always follows immediately after the basic IPv6 packet header.
Destination options header	6	Header that can follow any hop-by-hop options header. The header is processed at the final destination and at each visited address specified by a routing header. Alternatively, the destination options header can follow any Encapsulating Security Payload (ESP) header. The destination options header is processed only at the final destination.
Routing header	43	Header that is used for source routing.
Fragment header	44	Header that is used when a source fragments a packet that is larger than the Maximum Transmission Unit (MTU) for the path between itself and a destination. The Fragment header is used in each fragmented packet.
Upper-layer headers	6 (TCP) 17 (UDP)	Headers that are used inside a packet to transport the data. The two main transport protocols are TCP and UDP.

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

DNS for IPv6

IPv6 supports DNS record types that are supported in the DNS name-to-address and address-to-name lookup processes. The DNS record types support IPv6 addresses.



Note

IPv6 also supports the reverse mapping of IPv6 addresses to DNS names.

Table 3-4 IPv6 DNS Record Types

Record Type	Description	Format
AAAA	Maps a hostname to an IPv6 address. (Equivalent to an A record in IPv4.)	www.abc.test AAAA 3FFE:YYYY:C18:1::2
PTR	Maps an IPv6 address to a hostname. (Equivalent to a PTR record in IPv4.)	2.0.0.0.0.0.0.0.0.0.0.0.0.0.1.0.0.8.1.c.0.y.y.y.e.f.f.3.ip6.int PTR www.abc.test

Path MTU Discovery for IPv6

As in IPv4, you can use path MTU discovery in IPv6 to allow a host to dynamically discover and adjust to differences in the MTU size of every link along a data path. In IPv6, however, fragmentation is handled by the source of a packet when the path MTU of one link along a given data path is not large enough to accommodate the size of the packets. Having IPv6 hosts handle packet fragmentation saves IPv6 router processing resources and helps IPv6 networks run more efficiently.



Note

In IPv6, the minimum link MTU is 1280 octets. We recommend that you use an MTU value of 1500 octets for IPv6 links.

CDP IPv6 Address Support

You can use the Cisco Discovery Protocol (CDP) IPv6 address support for neighbor information feature to transfer IPv6 addressing information between two Cisco devices. Cisco Discovery Protocol support for IPv6 addresses provides IPv6 information to network management products and troubleshooting tools.

ICMP for IPv6

You can use ICMP in IPv6 to provide information about the health of the network. ICMPv6, the version that works with IPv6, reports errors if packets cannot be processed correctly and sends informational messages about the status of the network. For example, if a router cannot forward a packet because it is too large to be sent out on another network, the router sends out an ICMPv6 message to the originating host. Additionally, ICMP packets in IPv6 are used in IPv6 neighbor discovery and path MTU discovery. The path MTU discovery process ensures that a packet is sent using the largest possible size that is supported on a specific route.

Send document comments to nexus7k-docfeedback@cisco.com.

A value of 58 in the Next Header field of the basic IPv6 packet header identifies an IPv6 ICMP packet. The ICMP packet follows all the extension headers and is the last piece of information in the IPv6 packet. Within the IPv6 ICMP packets, the ICMPv6 Type and ICMPv6 Code fields identify IPv6 ICMP packet specifics, such as the ICMP message type. The value in the Checksum field is computed by the sender and checked by the receiver from the fields in the IPv6 ICMP packet and the IPv6 pseudo header.




Note

The IPv6 header does not have a checksum. But a checksum is important on the transport layer to determine mis-delivery of packets. All checksum calculations that include the IP address in the calculation must be modified for IPv6 to accommodate the new 128-bit address. A checksum is generated using a pseudo header.

The ICMPv6 Data field contains error or diagnostic information that relates to IP packet processing. [Figure 3-11](#) shows the IPv6 ICMP packet header format.

Figure 3-11 IPv6 ICMP Packet Header Format

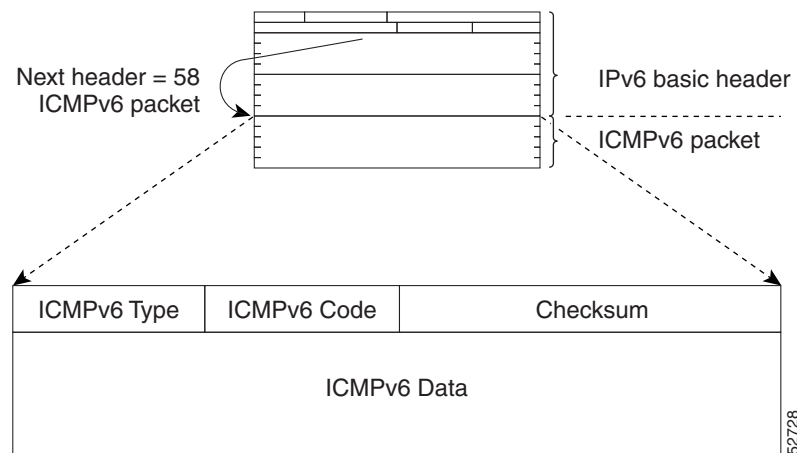

IPv6 Neighbor Discovery


You can use the IPv6 Neighbor Discovery Protocol (NDP) to determine whether a neighboring router is reachable. IPv6 nodes use neighbor discovery to determine the addresses of nodes on the same network (local link), to find neighboring routers that can forward their packets, to verify whether neighboring routers are reachable or not, and to detect changes to link-layer addresses. NDP uses ICMP messages to detect whether packets are sent to neighboring routers that are unreachable.

IPv6 Neighbor Solicitation Message

A node sends a Neighbor solicitation message, which has a value of 135 in the Type field of the ICMP packet header, on the local link when it wants to determine the link-layer address of another node on the same local link (see [Figure 3-12](#)). The source address is the IPv6 address of the node that sends the neighbor solicitation message. The destination address is the solicited-node multicast address that corresponds to the IPv6 address of the destination node. The neighbor solicitation message also includes the link-layer address of the source node.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 3-12 IPv6 Neighbor Discovery—Neighbor Solicitation Message

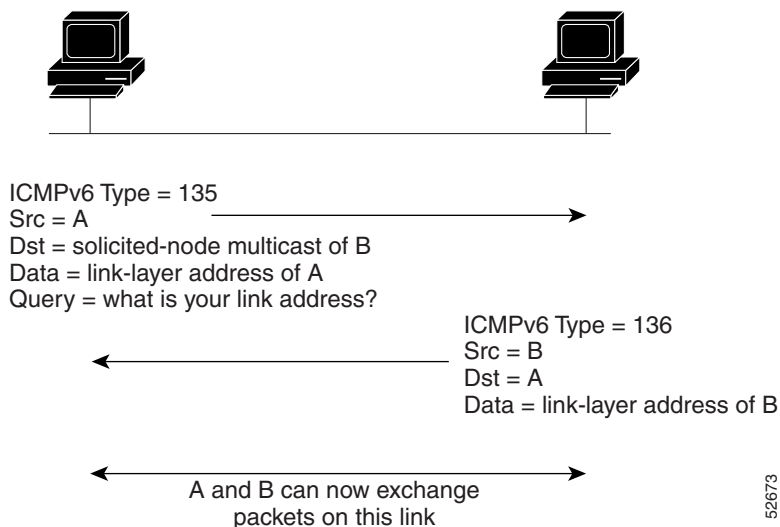

After receiving the neighbor solicitation message, the destination node replies by sending a neighbor advertisement message, which has a value of 136 in the Type field of the ICMP packet header, on the local link. The source address is the IPv6 address of the node (the IPv6 address of the node interface that sends the neighbor advertisement message). The destination address is the IPv6 address of the node that sent the neighbor solicitation message. The data portion includes the link-layer address of the node that sends the neighbor advertisement message.

After the source node receives the neighbor advertisement, the source node and destination node can communicate.

Neighbor solicitation messages can verify the reachability of a neighbor after a node identifies the link-layer address of a neighbor. When a node wants to verify the reachability of a neighbor, it uses the destination address in a neighbor solicitation message as the unicast address of the neighbor.

Neighbor advertisement messages are also sent when there is a change in the link-layer address of a node on a local link. When there is a change, the destination address for the neighbor advertisement is the all-nodes multicast address.

Neighbor unreachability detection identifies the failure of a neighbor or the failure of the forward path to the neighbor, and is used for all paths between hosts and neighboring nodes (hosts or routers). Neighbor unreachability detection is performed for neighbors to which only unicast packets are being sent and is not performed for neighbors to which multicast packets are being sent.

A neighbor is considered reachable when a positive acknowledgment is returned from the neighbor (indicating that packets previously sent to the neighbor have been received and processed). A positive acknowledgment—from an upper-layer protocol (such as TCP)—indicates that a connection is making forward progress (reaching its destination). If packets are reaching the peer, they are also reaching the next-hop neighbor of the source. Forward progress is also a confirmation that the next-hop neighbor is reachable.

For destinations that are not on the local link, forward progress implies that the first-hop router is reachable. When acknowledgments from an upper-layer protocol are not available, a node probes the neighbor using unicast neighbor solicitation messages to verify that the forward path is still working. The return of a solicited neighbor advertisement message from the neighbor is a positive acknowledgment that the forward path is still working (neighbor advertisement messages that have the solicited flag set to a value of 1 are sent only in response to a neighbor solicitation message). Unsolicited messages confirm only the one-way path from the source to the destination node; solicited neighbor advertisement messages indicate that a path is working in both directions.

Send document comments to nexus7k-docfeedback@cisco.com.



Note

A neighbor advertisement message that has the solicited flag set to a value of 0 is not considered as a positive acknowledgment that the forward path is still working.


Neighbor solicitation messages are also used in the stateless auto-configuration process to verify the uniqueness of unicast IPv6 addresses before the addresses are assigned to an interface. Duplicate address detection is performed first on a new, link-local IPv6 address before the address is assigned to an interface (the new address remains in a tentative state while duplicate address detection is performed). A node sends a neighbor solicitation message with an unspecified source address and a tentative link-local address in the body of the message. If another node is already using that address, the node returns a neighbor advertisement message that contains the tentative link-local address. If another node is simultaneously verifying the uniqueness of the same address, that node also returns a neighbor solicitation message. If no neighbor advertisement messages are received in response to the neighbor solicitation message and no neighbor solicitation messages are received from other nodes that are attempting to verify the same tentative address, the node that sent the original neighbor solicitation message considers the tentative link-local address to be unique and assigns the address to the interface.

IPv6 Router Advertisement Message

Router advertisement (RA) messages, which have a value of 134 in the Type field of the ICMP packet header, are periodically sent out to each configured interface of an IPv6 router. For stateless auto-configuration to work properly, the advertised prefix length in RA messages must always be 64 bits.

The RA messages are sent to the all-nodes multicast address (see [Figure 3-13](#)).

Figure 3-13 IPv6 Neighbor Discovery—RA Message

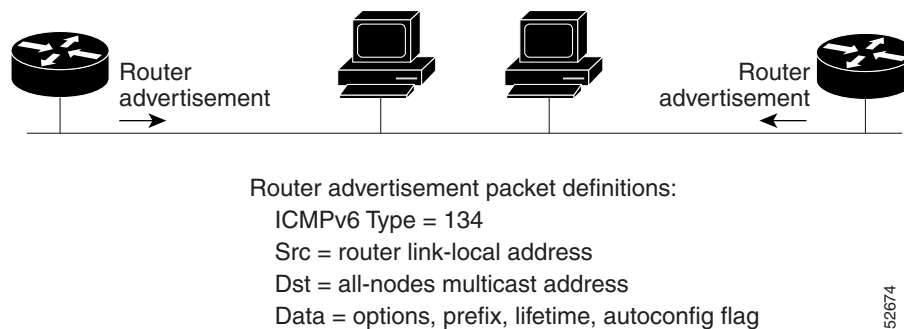

RA messages typically include the following information:

- One or more onlink IPv6 prefixes that nodes on the local link can use to automatically configure their IPv6 addresses
- Life-time information for each prefix included in the advertisement
- Sets of flags that indicate the type of auto-configuration (stateless or stateful) that can be completed
- Default router information (whether the router sending the advertisement should be used as a default router and, if so, the amount of time in seconds that the router should be used as a default router)
- Additional information for hosts, such as the hop limit and MTU that a host should use in packets that it originates

Send document comments to nexus7k-docfeedback@cisco.com.

RAs are also sent in response to router solicitation messages. Router solicitation messages, which have a value of 133 in the Type field of the ICMP packet header, are sent by hosts at system startup so that the host can immediately auto-configure without needing to wait for the next scheduled RA message. The source address is usually the unspecified IPv6 address (0:0:0:0:0:0:0:0). If the host has a configured unicast address, the unicast address of the interface that sends the router solicitation message is used as the source address in the message. The destination address is the all-routers multicast address with a scope of the link. When an RA is sent in response to a router solicitation, the destination address in the RA message is the unicast address of the source of the router solicitation message.

You can configure the following RA message parameters:

- The time interval between periodic RA messages
- The router life-time value, which indicates the usefulness of a router as the default router (for use by all nodes on a given link)
- The network prefixes in use on a given link
- The time interval between neighbor solicitation message retransmissions (on a given link)
- The amount of time that a node considers a neighbor reachable (for use by all nodes on a given link)


The configured parameters are specific to an interface. The sending of RA messages (with default values) is automatically enabled on Ethernet interfaces. For other interface types, you must enter the **no ipv6 nd suppress-ra** command to send RA messages. You can disable the RA message feature on individual interfaces by entering the **ipv6 nd suppress-ra** command.

IPv6 Neighbor Redirect Message

Routers send neighbor redirect messages to inform hosts of better first-hop nodes on the path to a destination (see [Figure 3-14](#)). A value of 137 in the Type field of the ICMP packet header identifies an IPv6 neighbor redirect message.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 3-14 IPv6 Neighbor Discovery—Neighbor Redirect Message

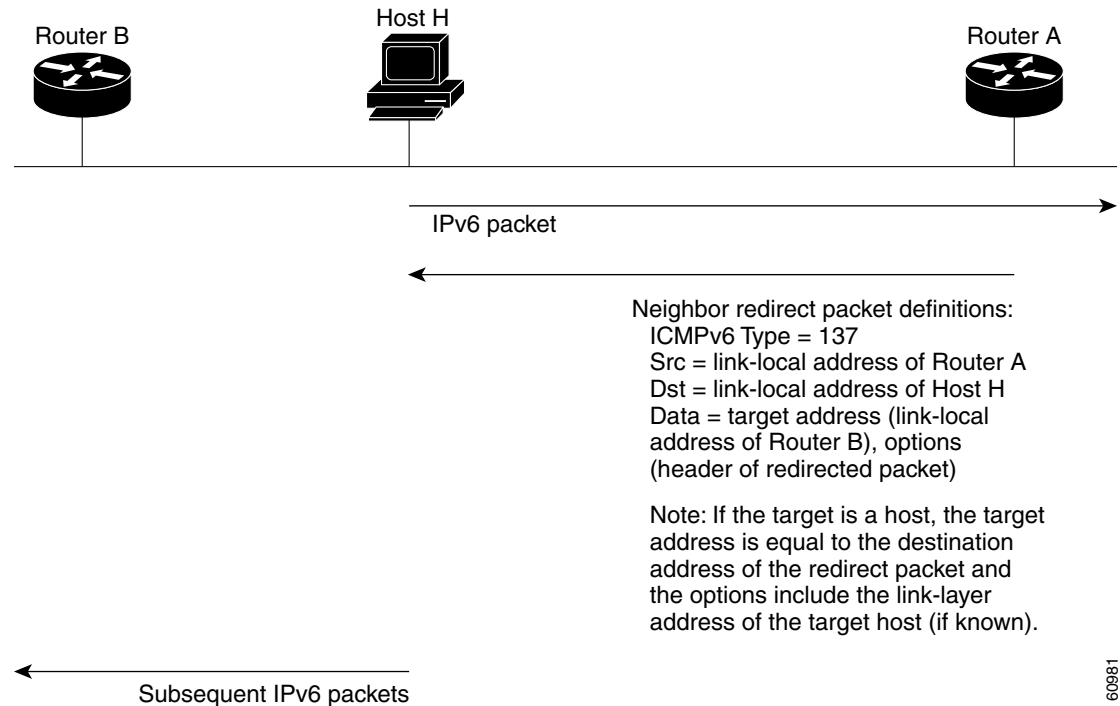

Note

A router must be able to determine the link-local address for each of its neighboring routers in order to ensure that the target address (the final destination) in a redirect message identifies the neighbor router by its link-local address. For static routing, you should specify the address of the next-hop router using the link-local address of the router. For dynamic routing, you must configure all IPv6 routing protocols to exchange the link-local addresses of neighboring routers.

After forwarding a packet, a router sends a redirect message to the source of the packet under the following circumstances:

- The destination address of the packet is not a multicast address.
- The packet was not addressed to the router.
- The packet is about to be sent out the interface on which it was received.
- The router determines that a better first-hop node for the packet resides on the same link as the source of the packet.
- The source address of the packet is a global IPv6 address of a neighbor on the same link or a link-local address.

Virtualization Support

IPv6 supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Licensing Requirements for IPv6

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	IPv6 requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Prerequisites for IPv6

IPv6 has the following prerequisites:

- You must be familiar with IPv6 basics such as IPv6 addressing, IPv6 header information, ICMPv6, and IPv6 Neighbor Discovery (ND) Protocol.
- Ensure that you follow the memory/processing guidelines when you make a device a dual-stack device (IPv4/IPv6).

Guidelines and Limitations for IPv6

IPv6 has the following guidelines and limitations and restrictions:

- IPv6 packets are transparent to Layer 2 LAN switches because the switches do not examine Layer 3 packet information before forwarding IPv6 frames. IPv6 hosts can be directly attached to Layer 2 LAN switches.
- You can configure multiple IPv6 global addresses within the same prefix on an interface. However, multiple IPv6 link-local addresses on an interface are not supported.
- Because RFC 3879 deprecates the use of site-local addresses, you should configure private IPv6 addresses according to the recommendations of unique local addressing (ULA) in RFC 4193.

Configuring IPv6

This section includes the following topics:

- [Configuring IPv6 Addressing, page 3-19](#)
- [Configuring IPv6 Neighbor Discovery, page 3-20](#)
- [Configuring IPv6 Packet Verification, page 3-23](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring IPv6 Addressing

You must configure an IPv6 address on an interface for the interface to forward IPv6 traffic. When you configure a global IPv6 address on an interface, it automatically configures a link-local address and activates IPv6 for that interface.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface ethernet *number***
3. **ipv6 address {*addr* [*eui64*] [*route-preference preference*] [*secondary*] tag *tag-id*}}**
or
ipv6 address *ipv6-address* use-link-local-only
4. **show ipv6 interface**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface ethernet <i>number</i> Example: switch(config)# interface ethernet 2/3 switch(config-if)#	Enters interface configuration mode.
Step 3	ipv6 address {<i>addr</i> [<i>eui64</i>] [<i>route-preference preference</i>] [<i>secondary</i>] tag <i>tag-id</i>}} or ipv6 address <i>ipv6-address</i> use-link-local-only Example: switch(config-if)# ipv6 address 2001:0DB8::1/10 or switch(config-if)# ipv6 address use-link-local-only	Specifies an IPv6 address assigned to the interface and enables IPv6 processing on the interface. Specifying the ipv6 address command configures global IPv6 addresses with an interface identifier (ID) in the low-order 64 bits of the IPv6 address. Only the 64-bit network prefix for the address needs to be specified; the last 64 bits are automatically computed from the interface ID. Specifying the ipv6 address use-link-local-only command configures a link-local address on the interface that is used instead of the link-local address that is automatically configured when IPv6 is enabled on the interface. Enables IPv6 processing on an interface without configuring an IPv6 address.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	show ipv6 interface Example: switch(config-if)# show ipv6 interface	(Optional) Displays interfaces configured for IPv6.
Step 5	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to configure an IPv6 address:

```
switch# config t
switch(config)# interface ethernet 3/1
switch(config-if)# ipv6 address ?
A:B::C:D/LEN IPv6 prefix format: xxxx:xxxx/ml, xxxx:xxxx::/ml,
xxxx::xx/128
use-link-local-only Enable IPv6 on interface using only a single link-local
address
switch(config-if)# ipv6 address dc3:dc3::/64 eui64
```

This example shows how to display an IPv6 interface:

```
switch(config-if)# show ipv6 interface ethernet 3/1
Ethernet3/1, Interface status: protocol-down/link-down/admin-down, iod: 36
  IPv6 address: 0dc3:0dc3:0000:0000:0218:baff:fed8:239d
  IPv6 subnet: 0dc3:0dc3:0000:0000:0000:0000:0000:0000/64
  IPv6 link-local address: fe80::0218:baff:fed8:239d (default)
  IPv6 multicast routing: disabled
  IPv6 multicast groups locally joined:
    ff02::0001:ffd8:239d ff02::0002 ff02::0001 ff02::0001:ffd8:239d
  IPv6 multicast (S,G) entries joined: none
  IPv6 MTU: 1500 (using link MTU)
  IPv6 RP inbound packet-filtering policy: none
  IPv6 RP outbound packet-filtering policy: none
  IPv6 inbound packet-filtering policy: none
  IPv6 outbound packet-filtering policy: none
  IPv6 interface statistics last reset: never
  IPv6 interface RP-traffic statistics: (forwarded/originated/consumed)
    Unicast packets: 0/0/0
    Unicast bytes: 0/0/0
    Multicast packets: 0/0/0
    Multicast bytes: 0/0/0
```

Configuring IPv6 Neighbor Discovery

You can configure IPv6 neighbor discovery on the router. The neighbor discovery protocol enables IPv6 nodes and routers to determine the link-layer address of a neighbor on the same link, find neighboring routers, and keep track of neighbors.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command). You must first enable IPv6 on the interface.

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. **config t**
2. **interface ethernet *number***
3. **ipv6 nd**
4. **show ipv6 nd interface**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface ethernet <i>number</i> Example: switch(config)# interface ethernet 2/31 switch(config-if)#	Enters interface configuration mode.
Step 3	ipv6 nd Example: switch(config-if)# ipv6 nd	Enables IPv6 neighbor discovery on the interface.
Step 4	show ipv6 nd interface Example: switch(config-if)# show ipv6 nd interface	(Optional) Displays interfaces configured for IPv6 neighbor discovery.
Step 5	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to configure IPv6 neighbor discovery reachable time:

```
switch# config t
switch(config)# interface ethernet 3/1
switch(config-if)# ipv6 nd reachable-time 10
```

This example shows how to display an IPv6 neighbor discovery interface:

```
switch(config-if)# show ipv6 nd interface ethernet 3/1
ICMPv6 ND Interfaces for VRF "default"
Ethernet3/1, Interface status: protocol-down/link-down/admin-down
IPv6 address: 0dc3:0dc3:0000:0000:0218:baff:fed8:239d
  ICMPv6 active timers:
    Last Neighbor-Solicitation sent: never
    Last Neighbor-Advertisement sent: never
    Last Router-Advertisement sent: never
    Next Router-Advertisement sent in: 0.000000
  Router-Advertisement parameters:
    Periodic interval: 200 to 600 seconds
    Send "Managed Address Configuration" flag: false
```

Send document comments to nexus7k-docfeedback@cisco.com.

```

Send "Other Stateful Configuration" flag: false
Send "Current Hop Limit" field: 64
Send "MTU" option value: 1500
Send "Router Lifetime" field: 1800 secs
Send "Reachable Time" field: 10 ms
Send "Retrans Timer" field: 0 ms
Neighbor-Solicitation parameters:
  NS retransmit interval: 1000 ms
ICMPv6 error message parameters:
  Send redirects: false
  Send unreachable: false

```

Optional IPv6 Neighbor Discovery

You can use the following optional IPv6 Neighbor Discovery commands:

Command	Purpose
ipv6 nd hop-limit	Configures the maximum number of hops used in router advertisements and all IPv6 packets that are originated by the router.
ipv6 nd managed-config-flag	Sets the managed address configuration flag in IPv6 router advertisements.
ipv6 nd mtu	Sets the maximum transmission unit (MTU) size of IPv6 packets sent on an interface.
ipv6 nd ns-interval	Configures the interval between IPv6 neighbor solicitation retransmissions on an interface.
ipv6 nd other-config-flag	Configures the other stateful configuration flag in IPv6 router advertisements.
ipv6 nd ra-interval	Configures the interval between IPv6 router advertisement (RA) transmissions on an interface.
ipv6 nd ra-lifetime	Configures the router lifetime value in IPv6 router advertisements on an interface.
ipv6 nd reachable-time	Configures the amount of time that a remote IPv6 node is considered reachable after some reachability confirmation event has occurred.
ipv6 nd redirects	Enables ICMPv6 redirect messages to be sent.
ipv6 nd retrans-timer	Configures the advertised time between neighbor solicitation messages in router advertisements.
ipv6 nd suppress-ra	Suppresses IPv6 router advertisement transmissions on a LAN interface.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring IPv6 Packet Verification

Cisco NX-OS supports an Intrusion Detection System (IDS) that checks for IPv6 packet verification. You can enable or disable these IDS checks.

To enable IDS checks, use the following commands in global configuration mode:

Command	Purpose
hardware ip verify address {destination zero identical reserved source multicast}	Performs the following IDS checks on the IPv6 address: <ul style="list-style-type: none"> destination zero—Drops IPv6 packets if the destination IP address is ::. identical—Drops IPv6 packets if the source IPv6 address is identical to the destination IPv6 address. reserved—Drops IPv6 packets if the IPv6 address is in the ::1 range. source multicast—Drops IPv6 packets if the IPv6 source address is in the FF00::/8 range (multicast).
hardware ip verify checksum	Drops IPv6 packets if the packet checksum is invalid.
hardware ip verify fragment	Drops IPv6 packets if the packet fragment has a nonzero offset and the DF bit is active.
hardware ipv6 verify length {consistent maximum {max-frag max-tcp udp}}	Performs the following IDS checks on the IPv6 address: <ul style="list-style-type: none"> consistent—Drops IPv6 packets where the Ethernet frame size is greater than or equal to the IPv6 packet length plus the Ethernet header. maximum max-frag—Drops IPv6 packets if the formula (IPv6 Payload Length – IPv6 Extension Header Bytes) + (Fragment Offset * 8) is greater than 65536. maximum max-tcp—Drops IPv6 packets if the TCP length is greater than the IP payload length. maximum udp—Drops IPv6 packets if the IPv6 payload length is less than the UDP packet length.
hardware ipv6 verify tcp tiny-frag	Drops TCP packets if the IPv6 fragment offset is 1, or if the IPv6 fragment offset is 0 and the IP payload length is less than 16.
hardware ipv6 verify version	Drops IPv6 packets if the ethertype is not set to 6 (IPv6).

Use the **show hardware forwarding ip verify** command to display the IPv6 packet verification configuration.

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Verifying the IPv6 Configuration

To verify configuration information, use the following commands:

Command	Purpose
<code>show hardware forwarding ip verify</code>	Displays the IPv4 and IPv6 packet verification configuration.
<code>show ipv6 interface</code>	Displays IPv6 related interface information.
<code>show ipv6 adjacency</code>	Displays the adjacency table.
<code>show ipv6 icmp</code>	Displays ICMPv6 information.
<code>show ipv6 nd</code>	Displays IPv6 neighbor discovery interface information.
<code>show ipv6 neighbor</code>	Displays IPv6 neighbor entry.

IPv6 Example Configuration

This example shows how to configure IPv6:

```
config t
interface ethernet 3/1
  ipv6 address dc3:dc3::/64 eui64
  ipv6 nd reachable-time 10
```

Default Settings

[Table 3-5](#) lists the default settings for IPv6 parameters.

Table 3-5 *Default IPv6 Parameters*

Parameters	Default
ND reachable time	0 milliseconds
neighbor solicitation retransmit interval	1000 milliseconds

Additional References

For additional information related to implementing IPv6, see the following sections:

- [Related Documents, page 3-25](#)
- [Standards, page 3-25](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
IPv6 CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for IPv6

[Table 3-6](#) lists the release history for this feature.

Table 3-6 Feature History for IPv6

Feature Name	Releases	Feature Information
IPv6	4.1(3)	Changed platform { ip ipv6 } verify command to hardware { ip ipv6 } verify command.
IPv6 address	4.0(3)	Added tag keyword to ipv6 address command.
IPv6	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 4

Configuring DNS

This chapter describes how to configure the Domain Name Server (DNS) client.

This chapter includes the following sections:

- [Information About DNS Clients, page 4-1](#)
- [Licensing Requirements for DNS Clients, page 4-2](#)
- [Prerequisites for DNS Clients, page 4-3](#)
- [Configuration Guidelines and Limitations, page 4-3](#)
- [Configuring DNS Clients, page 4-3](#)
- [Verifying the DNS Client Configuration, page 4-7](#)
- [DNS Client Example Configuration, page 4-7](#)
- [DNS Client Example Configuration, page 4-7](#)
- [Default Settings, page 4-7](#)
- [Additional References, page 4-8](#)
- [Feature History for DNS, page 4-8](#)

Information About DNS Clients

This section includes the following topics:

- [DNS Client Overview, page 4-1](#)
- [High Availability, page 4-2](#)
- [Virtualization Support, page 4-2](#)

DNS Client Overview

If your network devices require connectivity with devices in networks for which you do not control name assignment, you can assign device names that uniquely identify your devices within the entire internetwork using the domain name server (DNS). DNS uses a hierarchical scheme for establishing host names for network nodes. This allows local control of the segments of the network through a client-server scheme. The DNS system can locate a network device by translating the host name of the device into its associated IP address.

Send document comments to nexus7k-docfeedback@cisco.com.

On the Internet, a domain is a portion of the naming hierarchy tree that refers to general groupings of networks based on organization type or geography. Domain names are pieced together with periods (.) as the delimiting characters. For example, Cisco is a commercial organization that the Internet identifies by a *com* domain, so its domain name is *cisco.com*. A specific host name in this domain, the File Transfer Protocol (FTP) system, for example, is identified as *ftp.cisco.com*.

Name Servers

Name servers keep track of domain names and know the parts of the domain tree for which they have complete information. A name server may also store information about other parts of the domain tree. To map domain names to IP addresses in Cisco NX-OS, you must first identify the host names, then specify a name server, and enable the DNS service.

Cisco NX-OS allows you to statically map IP addresses to domain names. You can also configure Cisco NX-OS to use one or more domain name servers to find an IP address for a host name.

DNS Operation

A name server handles client-issued queries to the DNS server for locally defined hosts within a particular zone as follows:

- An authoritative name server responds to DNS user queries for a domain name that is under its zone of authority by using the permanent and cached entries in its own host table. If the query is for a domain name that is under its zone of authority but for which it does not have any configuration information, the authoritative name server simply replies that no such information exists.
- A name server that is not configured as the authoritative name server responds to DNS user queries by using information that it has cached from previously received query responses. If no router is configured as the authoritative name server for a zone, queries to the DNS server for locally defined hosts will receive nonauthoritative responses.

Name servers answer DNS queries (forward incoming DNS queries or resolve internally generated DNS queries) according to the forwarding and lookup parameters configured for the specific domain.

High Availability

Cisco NX-OS supports stateless restarts for the DNS client. After a reboot or supervisor switchover, Cisco NX-OS applies the running configuration.

Virtualization Support

Cisco NX-OS supports multiple instances of the DNS clients that run on the same system. You can configure a DNS client in each VDC. You can optionally have a different DNS client configuration in each VRF within a VDC. By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. See the *Cisco NX-OS Virtual Device Context Configuration Guide* and [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for DNS Clients

The following table shows the licensing requirements for this feature:

Send document comments to nexus7k-docfeedback@cisco.com.

Product	License Requirement
NX-OS	DNS requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .

Prerequisites for DNS Clients

The DNS client has the following prerequisites:

- You must have a DNS name server on your network.
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see to the *Cisco NX-OS Virtual Device Context Configuration Guide*).

Configuration Guidelines and Limitations

You configure the DNS client in a specific VRF. If you do not specify a VRF, Cisco NX-OS uses the default VRF.

Configuring DNS Clients

This section describes how to configure DNS clients and includes the following topics:

- [Configuring the DNS Client, page 4-3](#)
- [Configuring Virtualization, page 4-5](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring the DNS Client

You can configure the DNS client to use a DNS server on your network.

BEFORE YOU BEGIN

Ensure that you have a domain name server on your network.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **ip host name address1 [address2... address6]**
3. **ip domain-name name [use-vrf vrf-name]**

Send document comments to nexus7k-docfeedback@cisco.com.

4. **ip domain-list** *name* [**use-vrf** *vrf-name*]
5. **ip name-server** *server-address1* [*server-address2...* *server-address6*] [**use-vrf** *vrf-name*]
6. **ip domain lookup**
7. **show hosts**
8. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	ip host <i>name address1</i> [<i>address2...</i> <i>address6</i>] Example: switch(config)# ip host cisco-rtp 192.0.2.1	Defines up to six static host name-to-address mappings in the host name cache. The address can be either an IPv4 address or an IPv6 address.
Step 3	ip domain-name <i>name</i> [use-vrf <i>vrf-name</i>] Example: switch(config)# ip domain-name myserver.com	<p>(Optional) Defines the default domain name server that Cisco NX-OS uses to complete unqualified host names. You can optionally define a VRF that Cisco NX-OS uses to resolve this domain name server if it cannot be resolved in the VRF that you configured this domain name under.</p> <p>Cisco NX-OS appends the default domain name to any host name that does not contain a complete domain name before starting a domain-name lookup.</p>
Step 4	ip domain-list <i>name</i> [use-vrf <i>vrf-name</i>] Example: switch(config)# ip domain-list mycompany.com	<p>(Optional) Defines additional domain name servers that Cisco NX-OS can use to complete unqualified host names. You can optionally define a VRF that Cisco NX-OS uses to resolve this domain name server if it cannot be resolved in the VRF that you configured this domain name under.</p> <p>Cisco NX-OS uses each entry in the domain list to append that domain name to any host name that does not contain a complete domain name before starting a domain-name lookup. Cisco NX-OS continues this for each entry in the domain list until it finds a match.</p>
Step 5	ip name-server <i>address1</i> [<i>address2...</i> <i>address6</i>] [use-vrf <i>vrf-name</i>] Example: switch(config)# ip name-server 192.0.2.22	<p>(Optional) Defines up to six name servers. The address can be either an IPv4 address or an IPv6 address.</p> <p>You can optionally define a VRF that Cisco NX-OS uses to reach this name server if it cannot be reached in the VRF that you configured this name server under.</p>

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 6	ip domain-lookup Example: switch(config)# ip domain-lookup	(Optional) Enables DNS-based address translation. Enabled by default.
Step 7	show hosts Example: switch(config)# show hosts	(Optional) Displays information about DNS.
Step 8	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure a default domain name and enable DNS lookup:

```
switch# config t
switch(config)# ip domain-name cisco.com 192.0.2.1 use-vrf management
switch(config)# ip domain-lookup
switch(config)# copy running-config startup-config
```

Configuring Virtualization

You can configure a DNS client within a VRF. If you do not enter vrf configuration mode, your DNS client configuration applies to the default VRF.

You can optionally configure a DNS client to use a specified VRF other than the VRF under which you configured the DNS client as a backup VRF. For example, you can configure a DNS client in the Red VRF but use the Blue VRF to communicate with the DNS server if the server cannot be reached through the Red VRF.

BEFORE YOU BEGIN

Ensure that you have a domain name server on your network.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

9. **config t**
10. **vrf context** *vrf-name*
11. **ip domain-name** *name* [**se-vrf** *vrf-name*]
12. **ip domain-list** *name* [**use-vrf** *vrf-name*]
13. **ip name-server** *server-address1* [*server-address2...* *server-address6*] [**use-vrf** *vrf-name*]
14. **ip domain lookup**
15. **show hosts**
16. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 1	vrf context vrf-name Example: switch(config)# vrf context Red switch(config-vrf)#	Creates a VRF and enters VRF configuration mode.
Step 2	ip domain-name name [use-vrf vrf-name] Example: switch(config)# ip domain-name myserver.com	(Optional) Defines the default domain name server that Cisco NX-OS uses to complete unqualified host names. You can optionally define a VRF that Cisco NX-OS uses to resolve this domain name server if it cannot be resolved in the VRF that you configured this domain name under. Cisco NX-OS appends the default domain name to any host name that does not contain a complete domain name before starting a domain-name lookup.
Step 3	ip domain-list name [use-vrf vrf-name] Example: switch(config)# ip domain-list mycompany.com	(Optional) Defines additional domain name servers that Cisco NX-OS can use to complete unqualified host names. You can optionally define a VRF that Cisco NX-OS uses to resolve this domain name server if it cannot be resolved in the VRF that you configured this domain name under. Cisco NX-OS uses each entry in the domain list to append that domain name to any host name that does not contain a complete domain name before starting a domain-name lookup. Cisco NX-OS continues this for each entry in the domain list until it finds a match.
Step 4	ip name-server address1 [address2... address6] [use-vrf vrf-name] Example: switch(config)# ip name-server 192.0.2.22	(Optional) Defines up to six name servers. The address can be either an IPv4 address or an IPv6 address. You can optionally define a VRF that Cisco NX-OS uses to reach this name server if it cannot be reached in the VRF that you configured this name server under.
Step 5	ip domain-lookup Example: switch(config-vrf)# ip domain-lookup	(Optional) Enables DNS-based address translation for this VRF. Enabled by default.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 6	show hosts Example: switch(config)-vrf# show hosts	(Optional) Displays information about DNS.
Step 7	copy running-config startup-config Example: switch(config-vrf)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure a default domain name and enable DNS lookup within a VRF:

```
switch# config t
switch(config)# vrf context Red
switch(config-vrf)# ip domain-name cisco.com 192.0.2.1 use-vrf management
switch(config-vrf)# ip domain-lookup
switch(config-vrf)# copy running-config startup-config
```

Verifying the DNS Client Configuration

To verify the DNS client configuration, use the following commands:

Command	Purpose
show hosts	Displays information about DNS.

DNS Client Example Configuration

This example establishes a domain list with several alternate domain names:

```
ip domain list csi.com
ip domain list telecomprog.edu
ip domain list merit.edu
```

This example configures the host name-to-address mapping process and specifies IP DNS-based translation. The example also configures the addresses of the name servers and the default domain name.

```
ip domain lookup
ip name-server 192.168.1.111 192.168.1.2
ip domain name cisco.com
```

Default Settings

Table 4-1 lists the default settings for DNS Client parameters.

Send document comments to nexus7k-docfeedback@cisco.com.

Table 4-1 **Default DNS Client Parameters**

Parameters	Default
DNS client	Enabled

Additional References

For additional information related to implementing DNS Client, see the following sections:

- [Related Documents, page 4-8](#)
- [Standards, page 4-8](#)

Related Documents

Related Topic	Document Title
DNS Client CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs and VRFs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for DNS

[Table 4-2](#) lists the release history for this feature.

Table 4-2 **Feature History for DNS**

Feature Name	Releases	Feature Information
DNS	4.0(1)	This feature was introduced.



Send document comments to nexus7k-docfeedback@cisco.com.



PART 1

Routing

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 5

Configuring OSPFv2

This chapter describes how to configure Open Shortest Path First version 2 (OSPFv2) for IPv4 networks.

This chapter includes the following sections:

- [Information About OSPFv2, page 5-1](#)
- [Licensing Requirements for OSPFv2, page 5-12](#)
- [Prerequisites for OSPFv2, page 5-13](#)
- [Configuration Guidelines and Limitations, page 5-13](#)
- [Configuring Basic OSPFv2, page 5-13](#)
- [Configuring Advanced OSPFv2, page 5-22](#)
- [Verifying the OSPFv2 Configuration, page 5-41](#)
- [Displaying OSPFv2 Statistics, page 5-42](#)
- [OSPFv2 Example Configuration, page 5-42](#)
- [Default Settings, page 5-42](#)
- [Additional References, page 5-43](#)
- [Feature History for OSPFv2, page 5-44](#)

Information About OSPFv2

OSPFv2 is an IETF link-state protocol (see the [“Link-State Protocols” section on page 1-9](#)) for IPv4 networks. An OSPFv2 router sends a special message, called a *hello packet*, out each OSPF-enabled interface to discover other OSPFv2 neighbor routers. Once a neighbor is discovered, the two routers compare information in the Hello packet to determine if the routers have compatible configurations. The neighbor routers attempt to establish *adjacency*, which means that the routers synchronize their link-state databases to ensure that they have identical OSPFv2 routing information. Adjacent routers share *link-state advertisements* (LSAs) that include information about the operational state of each link, the cost of the link, and any other neighbor information. The routers then flood these received LSAs out every OSPF-enabled interface so that all OSPFv2 routers eventually have identical link-state databases. When all OSPFv2 routers have identical link-state databases, the network is *converged* (see the [“Convergence” section on page 1-6](#)). Each router then uses Dijkstra’s Shortest Path First (SPF) algorithm to build its route table.

You can divide OSPFv2 networks into areas. Routers send most LSAs only within one area, which reduces the CPU and memory requirements for an OSPF-enabled router.

Send document comments to nexus7k-docfeedback@cisco.com.

OSPFv2 supports IPv4, while OSPFv3 supports IPv6. For more information, see [Chapter 6](#), “Configuring OSPFv3.”

This section includes the following topics:

- [Hello Packet, page 5-2](#)
- [Neighbors, page 5-2](#)
- [Adjacency, page 5-3](#)
- [Designated Routers, page 5-3](#)
- [Areas, page 5-4](#)
- [Link-State Advertisements, page 5-5](#)
- [OSPFv2 and the Unicast RIB, page 5-7](#)
- [Authentication, page 5-7](#)
- [Advanced Features, page 5-8](#)

Hello Packet

OSPFv2 routers periodically send Hello packets on every OSPF-enabled interface. The *hello interval* determines how frequently the router sends these Hello packets and is configured per interface. OSPFv2 uses Hello packets for the following tasks:

- Neighbor discovery
- Keepalives
- Bidirectional communications
- Designated router election (see the “[Designated Routers](#)” section on [page 5-3](#))

The Hello packet contains information about the originating OSPFv2 interface and router, including the assigned OSPFv2 cost of the link, the hello interval, and optional capabilities of the originating router. An OSPFv2 interface that receives these Hello packets determines if the settings are compatible with the receiving interface settings. Compatible interfaces are considered neighbors and are added to the neighbor table (see the “[Neighbors](#)” section on [page 5-2](#)).

Hello packets also include a list of router IDs for the routers that the originating interface has communicated with. If the receiving interface sees its own router ID in this list, then bidirectional communication has been established between the two interfaces.

OSPFv2 uses Hello packets as a keepalive message to determine if a neighbor is still communicating. If a router does not receive a Hello packet by the configured *dead interval* (usually a multiple of the hello interval), then the neighbor is removed from the local neighbor table.

Neighbors

An OSPFv2 interface must have a compatible configuration with a remote interface before the two can be considered neighbors. The two OSPFv2 interfaces must match the following criteria:

- Hello interval
- Dead interval
- Area ID (see the “[Areas](#)” section on [page 5-4](#))
- Authentication

Send document comments to nexus7k-docfeedback@cisco.com.

- Optional capabilities

If there is a match, the following information is entered into the neighbor table:

- Neighbor ID—The router ID of the neighbor.
- Priority—Priority of the neighbor. The priority is used for designated router election (see the [“Designated Routers” section on page 5-3](#)).
- State—Indication of whether the neighbor has just been heard from, is in the process of setting up bidirectional communications, is sharing the link-state information, or has achieved full adjacency.
- Dead time—Indication of the time since the last Hello packet was received from this neighbor.
- IP Address—The IP address of the neighbor.
- Designated Router—Indication of whether the neighbor has been declared as the designated router or as the backup designated router (see the [“Designated Routers” section on page 5-3](#)).
- Local interface—The local interface that received the Hello packet for this neighbor.

Adjacency

Not all neighbors establish adjacency. Depending on the network type and designated router establishment, some neighbors become fully adjacent and share LSAs with all their neighbors, while other neighbors do not. For more information, see the [“Designated Routers” section on page 5-3](#).

Adjacency is established using Database Description packets, Link State Request packets, and Link State Update packets in OSPF. The Database Description packet includes just the LSA headers from the link-state database of the neighbor (see the [“Link-State Database” section on page 5-7](#)). The local router compares these headers with its own link-state database and determines which LSAs are new or updated. The local router sends a Link State Request packet for each LSA that it needs new or updated information on. The neighbor responds with a Link State Update packet. This exchange continues until both routers have the same link-state information.

Designated Routers

Networks with multiple routers present a unique situation for OSPF. If every router floods the network with LSAs, the same link-state information will be sent from multiple sources. Depending on the type of network, OSPFv2 might use a single router, the [designated router \(DR\)](#), to control the LSA floods and represent the network to the rest of the OSPFv2 area (see the [“Areas” section on page 5-4](#)). If the DR fails, OSPFv2 selects a [backup designated router \(BDR\)](#). If the DR fails, OSPFv2 uses the BDR.

Network types are as follows:

- Point-to-point—A network that exists only between two routers. All neighbors on a point-to-point network establish adjacency and there is no DR.
- Broadcast—A network with multiple routers that can communicate over a shared medium that allows broadcast traffic, such as Ethernet. OSPFv2 routers establish a DR and BDR that controls LSA flooding on the network. OSPFv2 uses the well-known IPv4 multicast addresses 224.0.0.5 and a MAC address of 0100.5300.0005 to communicate with neighbors.


The DR and BDR are selected based on the information in the Hello packet. When an interface sends a Hello packet, it sets the priority field and the DR and BDR field if it knows who the DR and BDR are. The routers follow an election procedure based on which routers declare themselves in the DR and BDR fields and the priority field in the Hello packet. As a final tie breaker, OSPFv2 chooses the highest router IDs as the DR and BDR.

Send document comments to nexus7k-docfeedback@cisco.com.

All other routers establish adjacency with the DR and the BDR and use the IPv4 multicast address 224.0.0.6 to send LSA updates to the DR and BDR. [Figure 5-1](#) shows this adjacency relationship between all routers and the DR.

DRs are based on a router interface. A router might be the DR for one network and not for another network on a different interface.

Figure 5-1 DR in Multi-Access Network

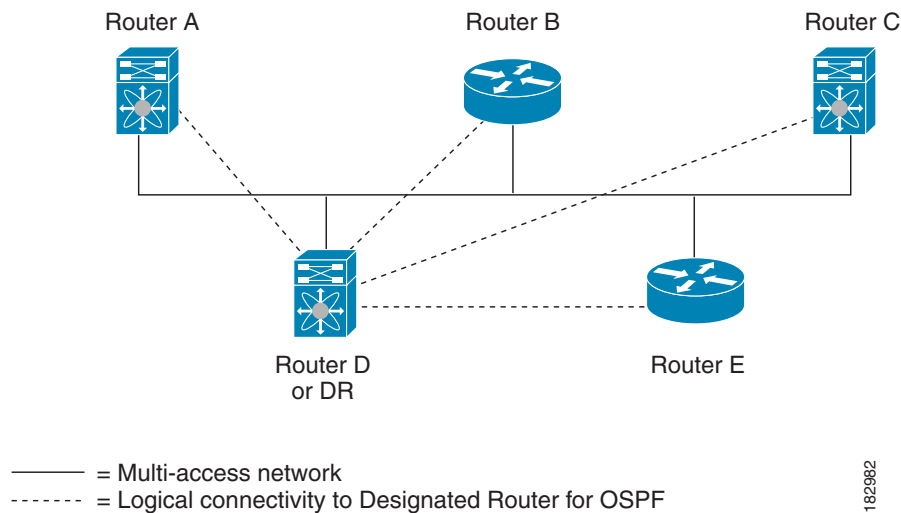


Areas

You can limit the CPU and memory requirements that OSPFv2 puts on the routers by dividing an OSPFv2 network into *areas*. An area is a logical division of routers and links within an OSPFv2 domain that creates separate subdomains. LSA flooding is contained within an area, and the link-state database is limited to links within the area. You can assign an area ID to the interfaces within the defined area. The Area ID is a 32-bit value that can be expressed as a number or in dotted decimal notation, such as 10.2.3.1.

If you define more than one area in an OSPFv2 network, you must also define the backbone area, which has the reserved area ID of 0. If you have more than one area, then one or more routers become *area border routers* (ABRs). An ABR connects to both the backbone area and at least one other defined area (see [Figure 5-2](#)).

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 5-2 OSPFv2 Areas

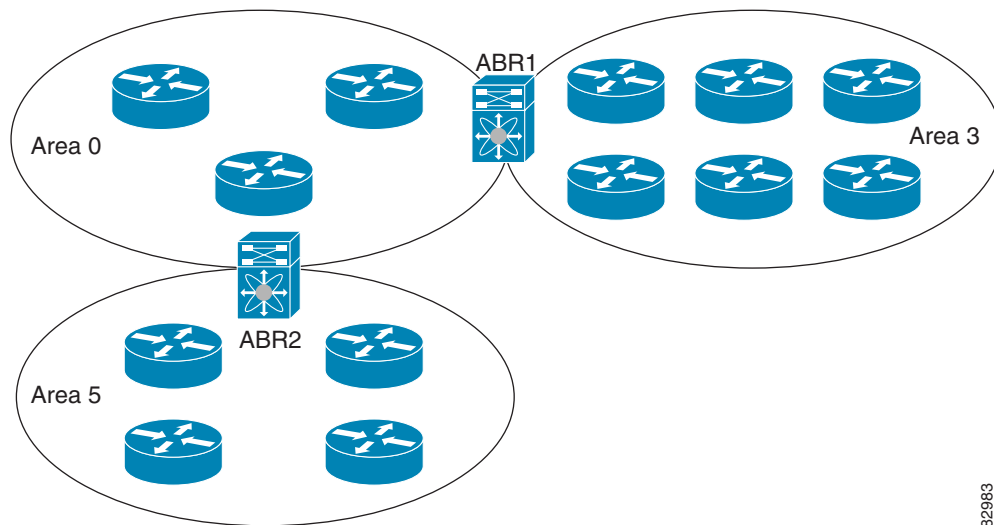

182983

The ABR has a separate link-state database for each area to which it connects. The ABR sends Network Summary (type 3) LSAs (see the “[Route Summarization](#)” section on page 5-10) from one connected area to the backbone area. The backbone area sends summarized information about one area to another area. In [Figure 5-2](#), Area 0 sends summarized information about Area 5 to Area 3.

OSPFv2 defines one other router type: the autonomous system boundary router (ASBR). This router connects an OSPFv2 area to another autonomous system. An autonomous system is a network controlled by a single technical administration entity. OSPFv2 can redistribute its routing information into another autonomous system or receive redistributed routes from another autonomous system. For more information, see “[Advanced Features](#)” section on page 5-8.)

Link-State Advertisements

OSPFv2 uses link-state advertisements (LSAs) to build its routing table.

This section includes the following topics:

- [LSA Types](#), page 5-5
- [Link Cost](#), page 5-6
- [Flooding and LSA Group Pacing](#), page 5-6
- [Link-State Database](#), page 5-7
- [Opaque LSAs](#), page 5-7

LSA Types

[Table 5-1](#) shows the LSA types supported by Cisco NX-OS.

Send document comments to nexus7k-docfeedback@cisco.com.

Table 5-1 LSA Types

Type	Name	Description
1	Router LSA	LSA sent by every router. This LSA includes the state and the cost of all links and a list of all OSPFv2 neighbors on the link. Router LSAs trigger an SPF recalculation. Router LSAs are flooded to local OSPFv2 area.
2	Network LSA	LSA sent by the DR. This LSA lists all routers in the multi-access network. Network LSAs trigger an SPF recalculation. See the “Designated Routers” section on page 5-3 .
3	Network Summary LSA	LSA sent by the area border router to an external area for each destination in the local area. This LSA includes the link cost from the area border router to the local destination. See the “Areas” section on page 5-4 .
4	ASBR Summary LSA	LSA sent by the area border router to an external area. This LSA advertises the link cost to the ASBR only. See the “Areas” section on page 5-4 .
5	AS External LSA	LSA generated by the ASBR. This LSA includes the link cost to an external autonomous system destination. AS External LSAs are flooded throughout the autonomous system. See the “Areas” section on page 5-4 .
7	NSSA External LSA	LSA generated by the ASBR within a not-so-stubby area (NSSA). This LSA includes the link cost to an external autonomous system destination. NSSA External LSAs are flooded only within the local NSSA. See the “Areas” section on page 5-4 .
9–11	Opaque LSAs	LSA used to extend OSPF. See the “Opaque LSAs” section on page 5-7 .

Link Cost

Each OSPFv2 interface is assigned a *link cost*. The cost is an arbitrary number. By default, Cisco NX-OS assigns a cost that is the configured reference bandwidth divided by the interface bandwidth. By default, the reference bandwidth is 40 Gb/s. The link cost is carried in the LSA updates for each link.

Flooding and LSA Group Pacing

When an OSPFv2 router receives an LSA, it forwards that LSA out every OSPF-enabled interface, flooding the OSPFv2 area with this information. This LSA flooding guarantees that all routers in the network have identical routing information. LSA flooding depends on the OSPFv2 area configuration (see the [“Areas” section on page 5-4](#)). The LSAs are flooded based on the *link-state refresh* time (every 30 minutes by default). Each LSA has its own link-state refresh time.

You can control the flooding rate of LSA updates in your network by using the LSA group pacing feature. LSA group pacing can reduce high CPU or buffer utilization. This feature groups LSAs with similar link-state refresh times to allow OSPFv2 to pack multiple LSAs into an OSPFv2 Update message.

By default, LSAs with link-state refresh times within four minutes of each other are grouped together. You should lower this value for large link-state databases or raise it for smaller databases to optimize the OSPFv2 load on your network.

Send document comments to nexus7k-docfeedback@cisco.com.

Link-State Database

Each router maintains a link-state database for the OSPFv2 network. This database contains all the collected LSAs, and includes information on all the routes through the network. OSPFv2 uses this information to calculate the best path to each destination and populates the routing table with these best paths.

LSAs are removed from the link-state database if no LSA update has been received within a set interval, called the MaxAge. Routers flood a repeat of the LSA every 30 minutes to prevent accurate link-state information from being aged out. Cisco NX-OS supports the LSA grouping feature to prevent all LSAs from refreshing at the same time. For more information, see the [“Flooding and LSA Group Pacing” section on page 5-6](#).

Opaque LSAs

Opaque LSAs allow you to extend OSPF functionality. Opaque LSAs consist of a standard LSA header followed by application-specific information. This information might be used by OSPFv2 or by other applications. OSPFv2 uses Opaque LSAs to support OSPFv2 Graceful Restart capability (see the [“High Availability and Graceful Restart” section on page 5-11](#)). Three Opaque LSA types are defined as follows:

- LSA type 9—Flooded to the local network.
- LSA type 10—Flooded to the local area.
- LSA type 11—Flooded to the local autonomous system.

OSPFv2 and the Unicast RIB

OSPFv2 runs the Dijkstra shortest path first algorithm on the link-state database. This algorithm selects the best path to each destination based on the sum of all the link costs for each link in the path. The resultant shortest path for each destination is then put in the OSPFv2 route table. When the OSPFv2 network is converged, this route table feeds into the unicast RIB. OSPFv2 communicates with the unicast RIB to do the following:

- Add or remove routes
- Handle route redistribution from other protocols
- Provide convergence updates to remove stale OSPFv2 routes and for stub router advertisements (see the [“OSPFv2 Stub Router Advertisements” section on page 5-12](#))

OSPFv2 also runs a modified Dijkstra algorithm for fast recalculation for summary and external (type 3, 4, 5, and 7) LSA changes.

Authentication

You can configure authentication on OSPFv2 messages to prevent unauthorized or invalid routing updates in your network. Cisco NX-OS supports two authentication methods:

- Simple password authentication
- MD5 authentication digest

You can configure the OSPFv2 authentication for an OSPFv2 area or per interface.

Send document comments to nexus7k-docfeedback@cisco.com.

Simple Password Authentication

Simple password authentication uses a simple clear-text password that is sent as part of the OSPFv2 message. The receiving OSPFv2 router must be configured with the same clear-text password to accept the OSPFv2 message as a valid route update. Because the password is in clear text, anyone who can watch traffic on the network can learn the password.

MD5 Authentication

You should use MD5 authentication to authenticate OSPFv2 messages. You configure a password that is shared at the local router and all remote OSPFv2 neighbors. For each OSPFv2 message, Cisco NX-OS creates an MD5 one-way message digest based on the message itself and the encrypted password. The interface sends this digest with the OSPFv2 message. The receiving OSPFv2 neighbor validates the digest using the same encrypted password. If the message has not changed, the digest calculation is identical and the OSPFv2 message is considered valid.

MD5 authentication includes a sequence number with each OSPFv2 message to ensure that no message is replayed in the network.

Advanced Features

Cisco NX-OS supports a number of advanced OSPFv2 features that enhance the usability and scalability of OSPFv2 in the network. This section includes the following topics:

- [Stub Area, page 5-8](#)
- [Not-So-Stubby Area, page 5-9](#)
- [Virtual Links, page 5-9](#)
- [Route Redistribution, page 5-10](#)
- [Route Summarization, page 5-10](#)
- [High Availability and Graceful Restart, page 5-11](#)
- [OSPFv2 Stub Router Advertisements, page 5-12](#)
- [Multiple OSPFv2 Instances, page 5-12](#)
- [SPF Optimization, page 5-12](#)
- [Virtualization Support, page 5-12](#)

Stub Area


You can limit the amount of external routing information that floods an area by making it a *stub area*. A stub area is an area that does not allow AS External (type 5) LSAs (see the [“Link-State Advertisements” section on page 5-5](#)). These LSAs are usually flooded throughout the local autonomous system to propagate external route information. Stub areas have the following requirements:

- All routers in the stub area are stub routers. See the [“Stub Routing” section on page 1-7](#).
- No ASBR routers exist in the stub area.
- You cannot configure virtual links in the stub area.

[Figure 5-3](#) shows an example of an OSPFv2 autonomous system where all routers in Area 10 have to go through the ABR to reach external autonomous systems. Area 10 can be configured as a stub area.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 5-3 Stub Area

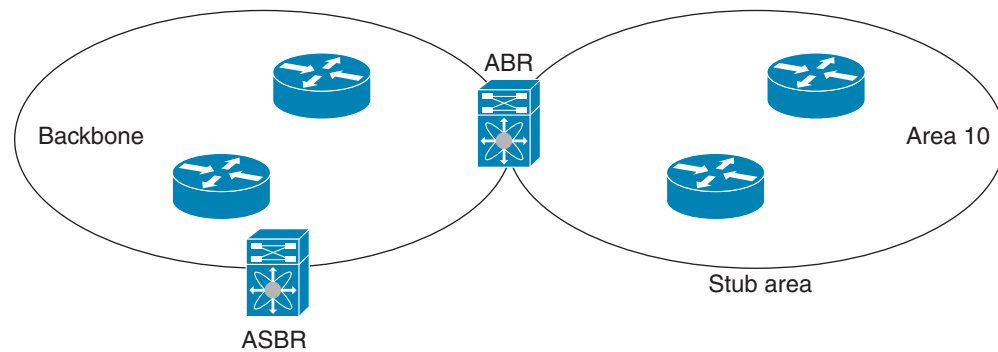

182984

Stub areas use a default route for all traffic that needs to go through the backbone area to the external autonomous system. The default route is 0.0.0.0 for IPv4.

Not-So-Stubby Area

A Not-so-Stubby Area ([NSSA](#)) is similar to a stub area, except that an NSSA allows you to import autonomous system external routes within an NSSA using redistribution. The NSSA ASBR redistributes these routes and generates NSSA External (type 7) LSAs that it floods throughout the NSSA. You can optionally configure the ABR that connects the NSSA to other areas to translate this NSSA External LSA to AS External (type 5) LSAs. The ABR then floods these AS External LSAs throughout the OSPFv2 autonomous system. Summarization and filtering are supported during the translation. See the [“Link-State Advertisements”](#) section on page 5-5 for details on NSSA External LSAs.

You can, for example, use NSSA to simplify administration if you are connecting a central site using OSPFv2 to a remote site that is using a different routing protocol. Before NSSA, the connection between the corporate site border router and a remote router could not be run as an OSPFv2 stub area because routes for the remote site could not be redistributed into a stub area. With NSSA, you can extend OSPFv2 to cover the remote connection by defining the area between the corporate router and remote router as an NSSA (see the [“Configuring NSSA”](#) section on page 5-26).


The backbone Area 0 cannot be an NSSA.

Virtual Links

Virtual links allow you to connect an OSPFv2 area ABR to a backbone area ABR when a direct physical connection is not available. [Figure 5-4](#) shows a virtual link that connects Area 3 to the backbone area through Area 5.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 5-4 Virtual Links

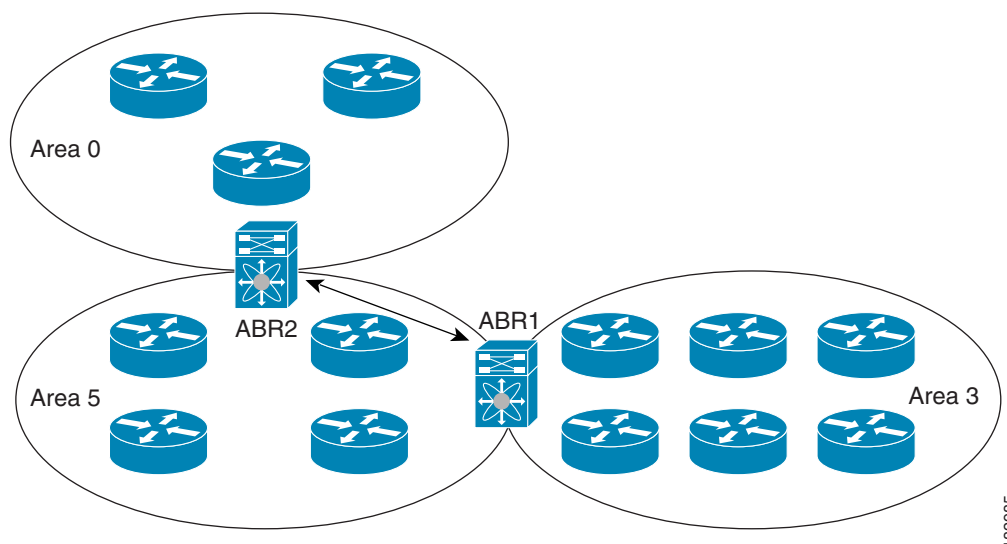

You can also use virtual links to temporarily recover from a partitioned area, which occurs when a link within the area fails, isolating part of the area from reaching the designated ABR to the backbone area.

Route Redistribution

OSPFv2 can learn routes from other routing protocols by using route redistribution. See the [“Route Redistribution” section on page 1-6](#). You configure OSPFv2 to assign a link cost for these redistributed routes or a default link cost for all redistributed routes.

Route redistribution uses route maps to control which external routes are redistributed. See [Chapter 15, “Configuring Route Policy Manager,”](#) for details on configuring route maps. You can use route maps to modify parameters in the AS External (type 5) and NSSA External (type 7) LSAs before these external routes are advertised in the local OSPFv2 autonomous system.

Route Summarization

Because OSPFv2 shares all learned routes with every OSPF-enabled router, you might want to use route summarization to reduce the number of unique routes that are flooded to every OSPF-enabled router. Route summarization simplifies route tables by replacing more-specific addresses with an address that represents all the specific addresses. For example, you can replace 10.1.1.0/24, 10.1.2.0/24, and 10.1.3.0/24 with one summary address, 10.1.0.0/16.

Typically, you would summarize at the boundaries of area border routers (ABRs). Although you could configure summarization between any two areas, it is better to summarize in the direction of the backbone so that the backbone receives all the aggregate addresses and injects them, already summarized, into other areas. The two types of summarization are as follows:

- Inter-area route summarization
- External route summarization

You configure inter-area route summarization on ABRs, summarizing routes between areas in the autonomous system. To take advantage of summarization, you should assign network numbers in areas in a contiguous way to be able to lump these addresses into one range.

Send document comments to nexus7k-docfeedback@cisco.com.

External route summarization is specific to external routes that are injected into OSPFv2 using route redistribution. You should make sure that external ranges that are being summarized are contiguous. Summarizing overlapping ranges from two different routers could cause packets to be sent to the wrong destination. Configure external route summarization on ASBRs that are redistributing routes into OSPF.

When you configure a summary address, Cisco NX-OS automatically configures a discard route for the summary address to prevent routing black holes and route loops.

High Availability and Graceful Restart

Cisco NX-OS supports high-availability. If a Cisco NX-OS system experiences a cold reboot, the network stops forwarding traffic to the system and removes the system from the network topology. In this scenario, OSPFv2 experiences a stateless restart, and removes all neighbor adjacencies on the local system. Cisco NX-OS applies the startup configuration and OSPFv2 rediscovers the neighbors and establishes the adjacencies again.

A platform with two supervisors that run Cisco NX-OS can experience a stateful supervisor switchover. Before the switchover happens, OSPFv2 initiates a graceful restart by announcing that OSPFv2 will be unavailable for some time. During a switchover, the network continues to forward traffic and keeps the system in the network topology.

After a switchover, Cisco NX-OS applies the running configuration, and OSPFv2 informs the neighbors that it is operational again. The neighbors help to reestablish adjacencies.

OSPFv2 automatically restarts if the process experiences problems. After the restart, OSPFv2 initiates a graceful restart so that the platform is not taken out of the network topology. If you manually restart OSPF, it performs a graceful restart, which is similar to a stateful switchover. The running configuration is applied in both cases.

A graceful restart, or nonstop forwarding (NSF), allows OSPFv2 to remain in the data forwarding path through a process restart. When OSPFv2 needs to restart, it first sends a link-local opaque (type 9) LSA, called a grace LSA (see the [“Opaque LSAs” section on page 5-7](#)). This restarting OSPFv2 platform is called NSF capable.

The grace LSA includes a grace period, which is a specified time that the neighbor OSPFv2 interfaces hold onto the LSAs from the restarting OSPFv2 interface. (Typically, OSPFv2 tears down the adjacency and discards all LSAs from a down or restarting OSPFv2 interface.) The participating neighbors, which are called NSF helpers, keep all LSAs that originate from the restarting OSPFv2 interface as if the interface were still adjacent.

When the restarting OSPFv2 interface is operational again, it rediscovers its neighbors, establishes adjacency, and starts sending its LSA updates again. At this point, the NSF helpers recognize that graceful restart has finished.



Note

If the restarting OSPFv2 interface does not come back up before the end of the grace period, or if the network experiences a topology change, the OSPFv2 neighbors tear down adjacency with the restarting OSPFv2 and treat it as a normal OSPFv2 restart.



Note

You must enable graceful restart to support in-service software upgrades (ISSU) for OSPFv2. If you disable graceful restart, Cisco NX-OS issues a warning that ISSU cannot be supported with this configuration.

Send document comments to nexus7k-docfeedback@cisco.com.

OSPFv2 Stub Router Advertisements

You can configure an OSPFv2 interface to act as a stub router using the OSPFv2 Stub Router Advertisements feature. Use this feature when you want to limit the OSPFv2 traffic through this router, such as when you want to introduce a new router to the network in a controlled manner or limit the load on a router that is already overloaded. You might also want to use this feature for various administrative or traffic engineering reasons.

OSPFv2 stub router advertisements do not remove the OSPFv2 router from the network topology, but they do prevent other OSPFv2 routers from using this router to route traffic to other parts of the network. Only the traffic that is destined for this router or directly connected to this router is sent.

OSPFv2 stub router advertisements mark all stub links (directly connected to the local router) to the cost of the local OSPFv2 interface. All remote links are marked with the maximum cost (0xFFFF).

Multiple OSPFv2 Instances

Cisco NX-OS supports multiple instances of the OSPFv2 protocol that run on the same node. You cannot configure multiple instances over the same interface. By default, every instance uses the same system router ID. You must manually configure the router ID for each instance if the instances are in the same OSPFv2 autonomous system.

SPF Optimization

Cisco NX-OS optimizes the SPF algorithm in the following ways:

- Partial SPF for Network (type 2) LSAs, Network Summary (type 3) LSAs, and AS External (type 5) LSAs—When there is a change on any of these LSAs, Cisco NX-OS performs a faster partial calculation rather than running the whole SPF calculation.
- SPF timers—You can configure different timers for controlling SPF calculations. These timers include exponential backoff for subsequent SPF calculations. The exponential backoff limits the CPU load of multiple SPF calculations.

Virtualization Support

OSPFv2 supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. You can have up to four instances of OSPFv2 in a VDC. For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for OSPFv2

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	OSPFv2 requires an Enterprise Services license. For a complete explanation of the NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Prerequisites for OSPFv2

OSPFv2 has the following prerequisites:

- You must be familiar with routing fundamentals to configure OSPF.
- You are logged on to the switch.
- You have configured at least one interface for IPv4 that is capable of communicating with a remote OSPFv2 neighbor.
- You have installed the Enterprise Services license.
- You have completed the OSPFv2 network strategy and planning for your network. For example, you must decide whether multiple areas are required.
- You have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature”](#) section on page 5-13).
- You have installed the Advanced Services license and entered the desired VDC (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1*) if you are configuring VDCs.

Configuration Guidelines and Limitations

OSPFv2 has the following configuration guidelines and limitations:

- You can have up to four instances of OSPFv2 in a VDC.



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring Basic OSPFv2

Configure OSPFv2 after you have designed your OSPFv2 network.

This section includes the following topics:

- [Enabling the OSPFv2 Feature, page 5-13](#)
- [Creating an OSPFv2 Instance, page 5-14](#)
- [Configuring Optional Parameters on an OSPFv2 Instance, page 5-16](#)
- [Configuring Optional Parameters on an OSPFv2 Instance, page 5-16](#)
- [Configuring Networks in OSPFv2, page 5-17](#)
- [Configuring Authentication for an Area, page 5-19](#)

Enabling the OSPFv2 Feature

You must enable the OSPFv2 feature before you can configure OSPFv2.

Send document comments to nexus7k-docfeedback@cisco.com.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

- 1. **config t**
- 2. **feature ospf**
- 3. **show feature**
- 4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	feature ospf Example: switch(config)# feature ospf	Enables the OSPFv2 feature.
Step 3	show feature Example: switch(config)# show feature	(Optional) Displays enabled and disabled features.
Step 4	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no feature ospf** command to disable the OSPFv2 feature and remove all associated configuration.

Command	Purpose
no feature ospf Example: switch(config)# no feature ospf	Disables the OSPFv2 feature and removes all associated configuration.

Creating an OSPFv2 Instance

The first step in configuring OSPFv2 is to create an OSPFv2 instance. You assign a unique instance tag for this OSPFv2 instance. The instance tag can be any string.

For more information about OSPFv2 instance parameters, see the [“Configuring Advanced OSPFv2” section on page 5-22](#).

Send document comments to nexus7k-docfeedback@cisco.com.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the “[Enabling the OSPFv2 Feature](#)” section on page 5-13).

Use the **show ip ospf instance-tag** command to verify that the instance tag is not in use.

OSPFv2 must be able to obtain a router identifier (for example, a configured loopback address) or you must configure the router ID option.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf instance-tag**
3. **router-id ip-address**
4. **show ip ospf instance-tag**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf instance-tag Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	router-id ip-address Example: switch(config-router)# router-id 192.0.2.1	(Optional) Configures the OSPFv2 router ID. This IP address identifies this OSPFv2 instance and must exist on a configured interface in the system.
Step 4	show ip ospf instance-tag Example: switch(config-router)# show ip ospf 201	(Optional) Displays OSPF information.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no router ospf** command to remove the OSPFv2 instance and all associated configuration.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
no router ospf <i>instance-tag</i>	Deletes the OSPF instance and the associated configuration.
Example: switch(config)# no router ospf 201	


Note

This command does not remove OSPF configuration in interface mode. You must manually remove any OSPFv2 commands configured in interface mode.

Configuring Optional Parameters on an OSPFv2 Instance

You can configure optional parameters for OSPF.

For more information about OSPFv2 instance parameters, see the [“Configuring Advanced OSPFv2” section on page 5-22](#).

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature” section on page 5-13](#)).

OSPFv2 must be able to obtain a router identifier (for example, a configured loopback address) or you must configure the router ID option.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

DETAILED STEPS

You can configure the following optional parameters for OSPFv2 in router configuration mode:

Command	Purpose
distance <i>number</i>	Configures the administrative distance for this OSPFv2 instance. The range is from 1 to 255. The default is 110.
Example: switch(config-router)# distance 25	
log-adjacency-changes [detail]	Generates a system message whenever a neighbor changes state.
Example: switch(config-router)# log-adjacency-changes	
maximum-paths <i>path-number</i>	Configures the maximum number of equal OSPFv2 paths to a destination in the route table. This command is used for load balancing. The range is from 1 to 16. The default is 8.
Example: switch(config-router)# maximum-paths 4	

The following example shows how to create an OSPFv2 instance:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Networks in OSPFv2

You can configure a network to OSPFv2 by associating it through the interface that the router uses to connect to that network (see the [“Neighbors” section on page 5-2](#)). You can add all networks to the default backbone area (Area 0), or you can create new areas using any decimal number or an IP address.



Note

All areas must connect to the backbone area either directly or through a virtual link.



Note

OSPF is not enabled on an interface until you configure a valid IP address for that interface.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature” section on page 5-13](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **ip address** *ip-prefix/length*
4. **ip router ospf** *instance-tag area area-id* [secondaries none]
5. **show ip ospf** *instance-tag interface interface-type slot/port*
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ip address <i>ip-prefix/length</i> Example: switch(config-if)# ip address 192.0.2.1/16	Assigns an IP address and subnet mask to this interface.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	ip router ospf instance-tag area area-id [secondaries none] Example: switch(config-if)# ip router ospf 201 area 0	Adds the interface to the OSPFv2 instance and area.
Step 5	show ip ospf instance-tag interface interface-type slot/port Example: switch(config-if)# show ip ospf 201 interface ethernet 1/2	(Optional) Displays OSPF information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

You can configure the following optional parameters for OSPFv2 in interface configuration mode:

Command	Purpose
ip ospf cost number Example: switch(config-if)# ip ospf cost 25	Configures the OSPFv2 cost metric for this interface. The default is to calculate cost metric, based on reference bandwidth and interface bandwidth. The range is from 1 to 65535.
ip ospf dead-interval seconds Example: switch(config-if)# ip ospf dead-interval 50	Configures the OSPFv2 dead interval, in seconds. The range is from 1 to 65535. The default is four times the hello interval, in seconds.
ip ospf hello-interval seconds Example: switch(config-if)# ip ospf hello-interval 25	Configures the OSPFv2 hello interval, in seconds. The range is from 1 to 65535. The default is 10 seconds.
ip ospf mtu-ignore Example: switch(config-if)# ip ospf mtu-ignore	Configures OSPFv2 to ignore any IP MTU mismatch with a neighbor. The default is to not establish adjacency if the neighbor MTU does not match the local interface MTU.
ip ospf passive-interface Example: switch(config-if)# ip ospf passive-interface	Suppresses routing updates on the interface.
ip ospf priority number Example: switch(config-if)# ip ospf priority 25	Configures the OSPFv2 priority, used to determine the DR for an area. The range is from 0 to 255. The default is 1. See the “Designated Routers” section on page 5-3 .
ip ospf shutdown Example: switch(config-if)# ip ospf shutdown	Shuts down the OSPFv2 instance on this interface.

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to add a network area 10 in OSPFv2 instance 201:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router ospf 201 area 10
switch(config-if)# copy running-config startup-config
```

Use the **show ip ospf interface** command to verify the interface configuration. Use the **show ip ospf neighbor** command to see the neighbors for this interface.

Configuring Authentication for an Area

You can configure authentication for all networks in an area or for individual interfaces in the area. Interface authentication configuration overrides area authentication.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature”](#) section on page 5-13).

Ensure that all neighbors on an interface share the same authentication configuration, including the shared authentication key.

Create the key-chain for this authentication configuration. See the *Cisco NX-OS Security Configuration Guide*.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf instance-tag**
3. **area area-id authentication [message-digest]**
4. **interface interface-type slot/port**
5. **ip ospf authentication-key [0 | 3] key**
or
ip ospf message-digest-key key-id md5 [0 | 3] key
6. **show ip ospf instance-tag interface interface-type slot/port**
7. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf instance-tag Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	area area-id authentication [message-digest] Example: switch(config-router)# area 10 authentication	Configures the authentication mode for an area.
Step 4	interface interface-type slot/port Example: switch(config-router)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 5	ip ospf authentication-key [0 3] key Example: switch(config-if)# ip ospf authentication-key 0 mypass	(Optional) Configures simple password authentication for this interface. Use this command if the authentication is not set to key-chain or message-digest. 0 configures the password in clear text. 3 configures the password as 3DES encrypted.
	ip ospf message-digest-key key-id md5 [0 3] key Example: switch(config-if)# ip ospf message-digest-key 21 md5 0 mypass	(Optional) Configures message digest authentication for this interface. Use this command if the authentication is set to message-digest. The key-id range is from 1 to 255. The MD5 option 0 configures the password in clear text and 3 configures the pass key as 3DES encrypted.
Step 6	show ip ospf instance-tag interface interface-type slot/port Example: switch(config-if)# show ip ospf 201 interface ethernet 1/2	(Optional) Displays OSPF information.
Step 7	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Configuring Authentication for an Interface

You can configure authentication for individual interfaces in the area. Interface authentication configuration overrides area authentication.

Send document comments to nexus7k-docfeedback@cisco.com.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the “[Enabling the OSPFv2 Feature](#)” section on page 5-13).

Ensure that all neighbors on an interface share the same authentication configuration, including the shared authentication key.

Create the key-chain for this authentication configuration. See the *Cisco NX-OS Security Configuration Guide*.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **ip ospf authentication** [**key-chain** *key-id* | **message-digest** | **null**]
4. **ip ospf authentication-key** [**0** | **3**] *key*
or
ip ospf message-digest-key *key-id md5* [**0** | **3**] *key*
5. **show ip ospf instance-tag interface** *interface-type slot/port*
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ip ospf authentication [key-chain <i>key-name</i> message-digest null] Example: switch(config-if)# ip ospf authentication message-digest	Configures interface authentication mode for OSPFv2. Overrides area-based authentication for this interface. All neighbors must share this authentication type. See the <i>Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1</i> for details on key chains.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	ip ospf authentication-key [0 3 7] <i>key</i> Example: switch(config-if)# ip ospf authentication-key 0 mypass	(Optional) Configures simple password authentication for this interface. Use this command if the authentication is not set to key-chain or message-digest. The options are as follows: <ul style="list-style-type: none"> 0—configures the password in clear text. 3—configures the pass key as 3DES encrypted. 7—configures the key as Cisco type 7 encrypted.
Step 5	ip ospf message-digest-key <i>key-id</i> md5 [0 3 7] <i>key</i> Example: switch(config-if)# ip ospf message-digest-key 21 md5 0 mypass	(Optional) Configures message digest authentication for this interface. Use this command if the authentication is set to message-digest. The key-id range is from 1 to 255. The MD5 options are as follows: <ul style="list-style-type: none"> 0—configures the password in clear text. 3—configures the pass key as 3DES encrypted. 7—configures the key as Cisco type 7 encrypted.
Step 6	show ip ospf instance-tag interface <i>interface-type slot/port</i> Example: switch(config-if)# show router ospf 201 interface ethernet 1/2	(Optional) Displays OSPF information.
Step 7	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to set an interface for simple, unencrypted passwords and set the password for Ethernet interface 1/2:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# exit
switch(config)# interface ethernet 1/2
switch(config-if)# ip router ospf 201 area 10
switch(config-if)# ip ospf authentication
switch(config-if)# ip ospf authentication-key 0 mypass
switch(config-if)# copy running-config startup-config
```

Configuring Advanced OSPFv2

Configure OSPFv2 after you have designed your OSPFv2 network.

This section includes the following topics:

- [Configuring Filter Lists for Border Routers, page 5-23](#)
- [Configuring Stub Areas, page 5-24](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- [Configuring a Totally Stubby Area, page 5-26](#)
- [Configuring NSSA, page 5-26](#)
- [Configuring Virtual Links, page 5-28](#)
- [Configuring Redistribution, page 5-30](#)
- [Configuring Route Summarization, page 5-32](#)
- [Configuring Stub Route Advertisements, page 5-33](#)
- [Modifying the Default Timers, page 5-34](#)
- [Configuring Graceful Restart, page 5-37](#)
- [Restarting an OSPFv2 Instance, page 5-38](#)
- [Configuring Graceful Restart, page 5-37](#)

Configuring Filter Lists for Border Routers

You can separate your OSPFv2 domain into a series of areas that contain related networks. All areas must connect to the backbone area through an area border router (ABR). OSPFv2 domains can connect to external domains as well, through an *autonomous system border router* (ASBR). See the “Areas” section on [page 5-4](#).

ABRs have the following optional configuration parameters:

- Area range—Configures route summarization between areas. See the “[Configuring Route Summarization](#)” section on [page 5-32](#).
- Filter list—Filters the Network Summary (type 3) LSAs on an ABR that are allowed in from an external area.

ASBRs also support filter lists.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the “[Enabling the OSPFv2 Feature](#)” section on [page 5-13](#)).

Create the route map that the filter list uses to filter IP prefixes in incoming or outgoing Network Summary (type 3) LSAs. See [Chapter 15](#), “[Configuring Route Policy Manager](#).”

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf** *instance-tag*
3. **area** *area-id* **filter-list route-map** *map-name* {in | out}
4. **show ip ospf policy** statistics
5. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf instance-tag Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	area area-id filter-list route-map map-name {in out} Example: switch(config-router)# area 10 filter-list route-map FilterLSAs in	Filters incoming or outgoing Network Summary (type 3) LSAs on an ABR.
Step 4	show ip ospf policy statistics area id filter-list {in out} Example: switch(config-if)# show ip ospf policy statistics area 10 filter-list in	(Optional) Displays OSPF policy information.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure a filter list in Area 10:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# area 10 filter-list route-map FilterLSAs in
switch(config-router)# copy running-config startup-config
```

Configuring Stub Areas

You can configure a stub area for part of an OSPFv2 domain where external traffic is not necessary. Stub areas block AS External (type 5) LSAs, limiting unnecessary routing to and from selected networks. See the [“Stub Area” section on page 5-8](#). You can optionally block all summary routes from going into the stub area.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature” section on page 5-13](#)).

Ensure that there are no virtual links or ASBRs in the proposed stub area.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. **config t**
2. **router ospf** *instance-tag*
3. **area** *area-id* **stub**
4. **area** *area-id* **default-cost** *cost*
5. **show ip ospf** *instance-tag*
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf <i>instance-tag</i> Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	area <i>area-id</i> stub Example: switch(config-router)# area 10 stub	Creates this area as a stub area.
Step 4	area <i>area-id</i> default-cost <i>cost</i> Example: switch(config-router)# area 10 default-cost 25	(Optional) Sets the cost metric for the default summary route sent into this stub area. The range is from 0 to 16777215. The default is 1.
Step 5	show ip ospf <i>instance-tag</i> Example: switch(config-if)# show ip ospf 201	(Optional) Displays OSPF information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a stub area:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# area 10 stub
switch(config-router)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring a Totally Stubby Area

You can create a totally stubby area and prevent all summary route updates from going into the stub area. To create a totally stubby area, use the following command in router configuration mode:

Command	Purpose
area <i>area-id</i> stub no-summary	Creates this area as a totally stubby area.
Example: <pre>switch(config-router)# area 20 stub no-summary</pre>	

Configuring NSSA

You can configure an NSSA for part of an OSPFv2 domain where limited external traffic is required. See the [“Not-So-Stubby Area” section on page 5-9](#). You can optionally translate this external traffic to an AS External (type 5) LSA and flood the OSPFv2 domain with this routing information. An NSSA can be configured with the following optional parameters:

- **No redistribution**—Redistributed routes bypass the NSSA and are redistributed to other areas in the OSPFv2 autonomous system. Use this option when the NSSA ASBR is also an ABR.
- **Default information originate**—Generates an NSSA External (type 7) LSA for a default route to the external autonomous system. Use this option on an NSSA ASBR if the ASBR contains the default route in the routing table. This option can be used on an NSSA ABR whether or not the ABR contains the default route in the routing table.
- **Route map**—Filters the external routes so that only those routes that you want are flooded throughout the NSSA and other areas.
- **Translate**—Translates NSSA External LSAs to AS External LSAs for areas outside the NSSA. Use this command on an NSSA ABR to flood the redistributed routes throughout the OSPFv2 autonomous system. You can optionally suppress the forwarding address in these AS External LSAs. If you choose this option, the forwarding address is set to 0.0.0.0.
- **No summary**—Blocks all summary routes from flooding the NSSA. Use this option on the NSSA ABR.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature” section on page 5-13](#)).

Ensure that there are no virtual links in the proposed NSSA and that it is not the backbone area.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf *instance-tag***
3. **area *area-id* nssa [no-redistribution] [default-information-originate [route-map *map-name*]] [no-summary] [translate type7 {always | never} [suppress-fa]]**

Send document comments to nexus7k-docfeedback@cisco.com.

4. **area** *area-id* **default-cost** *cost*
5. **show ip ospf** *instance-tag*
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf <i>instance-tag</i> Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	area <i>area-id</i> nssa [no-redistribution] [default-information-originate] [route-map <i>map-name</i>] [no-summary] [translate type7 { always never }] [suppress-fa] Example: switch(config-router)# area 10 nssa	Creates this area as an NSSA.
Step 4	area <i>area-id</i> default-cost <i>cost</i> Example: switch(config-router)# area 10 default-cost 25	(Optional) Sets the cost metric for the default summary route sent into this NSSA.
Step 5	show ip ospf <i>instance-tag</i> Example: switch(config-if)# show ip ospf 201	(Optional) Displays OSPF information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create an NSSA that blocks all summary route updates:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# area 10 nssa no-summary
switch(config-router)# copy running-config startup-config
```

The following example shows how to create an NSSA that generates a default route:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# area 10 nssa default-info-originate
switch(config-router)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to create an NSSA that filters external routes and blocks all summary route updates:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# area 10 nssa route-map ExternalFilter no-summary
switch(config-router)# copy running-config startup-config
```

The following example shows how to create an NSSA that always translates NSSA External (type 5) LSAs to AS External (type 7) LSAs:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# area 10 nssa translate type 7 always
switch(config-router)# copy running-config startup-config
```

Configuring Virtual Links

A virtual link connects an isolated area to the backbone area through an intermediate area. See the [“Virtual Links” section on page 5-9](#). You can configure the following optional parameters for a virtual link:

- Authentication—Sets a simple password or MD5 message digest authentication and associated keys.
- Dead interval—Sets the time that a neighbor waits for a Hello packet before declaring the local router as dead and tearing down adjacencies.
- Hello interval—Sets the time between successive Hello packets.
- Retransmit interval—Sets the estimated time between successive LSAs.
- Transmit delay—Sets the estimated time to transmit an LSA to a neighbor.



Note

You must configure the virtual link on both routers involved before the link becomes active.

You cannot add a virtual link to a stub area.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature” section on page 5-13](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf instance-tag**
3. **area area-id virtual-link router-id**
4. **show ip ospf virtual-link [brief]**
5. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf instance-tag Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	area area-id virtual-link router-id Example: switch(config-router)# area 10 virtual-link 10.1.2.3 switch(config-router-vlink)#	Creates one end of a virtual link to a remote router. You must create the virtual link on that remote router to complete the link.
Step 4	show ip ospf virtual-link [brief] Example: switch(config-router-vlink)# show ip ospf virtual-link	(Optional) Displays OSPF virtual link information.
Step 5	copy running-config startup-config Example: switch(config-router-vlink)# copy running-config startup-config	(Optional) Saves this configuration change.

You can configure the following optional commands in virtual link configuration mode:

Command or Action	Purpose
authentication [key-chain key-id message-digest null] Example: switch(config-router-vlink)# authentication message-digest	(Optional) Overrides area-based authentication for this virtual link.
authentication-key [0 3] key Example: switch(config-router-vlink)# authentication-key 0 mypass	(Optional) Configures a simple password for this virtual link. Use this command if the authentication is not set to key-chain or message-digest. 0 configures the password in clear text. 3 configures the password as 3DES encrypted.
dead-interval seconds Example: switch(config-router-vlink)# dead-interval 50	(Optional) Configures the OSPFv2 dead interval, in seconds. The range is from 1 to 65535. The default is four times the hello interval, in seconds.
hello-interval seconds Example: switch(config-router-vlink)# hello-interval 25	(Optional) Configures the OSPFv2 hello interval, in seconds. The range is from 1 to 65535. The default is 10 seconds.

Send document comments to nexus7k-docfeedback@cisco.com.

Command or Action	Purpose
message-digest-key <i>key-id md5 [0 3]</i> <i>key</i> Example: switch(config-router-vlink)# message-digest-key 21 md5 0 mypass	(Optional) Configures message digest authentication for this virtual link. Use this command if the authentication is set to message-digest. 0 configures the password in cleartext. 3 configures the pass key as 3DES encrypted.
retransmit-interval <i>seconds</i> Example: switch(config-router-vlink)# retransmit-interval 50	(Optional) Configures the OSPFv2 retransmit interval, in seconds. The range is from 1 to 65535. The default is 5.
transmit-delay <i>seconds</i> Example: switch(config-router-vlink)# transmit-delay 2	(Optional) Configures the OSPFv2 transmit-delay, in seconds. The range is from 1 to 450. The default is 1.

The following example shows how to create a simple virtual link between two ABRs.

The configuration for ABR 1 (router ID 27.0.0.55) is as follows:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# area 10 virtual-link 10.1.2.3
switch(config-router)# copy running-config startup-config
```

The configuration for ABR 2 (Router ID 10.1.2.3) is as follows:

```
switch# config t
switch(config)# router ospf 101
switch(config-router)# area 10 virtual-link 27.0.0.55
switch(config-router)# copy running-config startup-config
```

Configuring Redistribution

You can redistribute routes learned from other routing protocols into an OSPFv2 autonomous system through the ASBR.

You can configure the following optional parameters for route redistribution in OSPF:

- Default information originate—Generates an AS External (type 5) LSA for a default route to the external autonomous system.
- Default metric—Sets all redistributed routes to the same cost metric.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature”](#) section on page 5-13).

Create the necessary route maps used for redistribution.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**

Send document comments to nexus7k-docfeedback@cisco.com.

2. **router ospf** *instance-tag*
3. **redistribute** {*bgp id* | *direct* | *eigrp id* | *isis id* | *ospf id* | *rip id* | *static*} **route-map** *map-name*
4. **default-information originate** [*always*] [*route-map map-name*]
5. **default-metric** *cost*
6. **exit**
7. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf <i>instance-tag</i> Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	redistribute { <i>bgp id</i> <i>direct</i> <i>eigrp id</i> <i>isis id</i> <i>ospf id</i> <i>rip id</i> <i>static</i> } route-map <i>map-name</i> Example: switch(config-router)# redistribute bgp route-map FilterExternalBGP	Redistributes the selected protocol into OSPF through the configured route map.
Step 4	default-information originate [<i>always</i>] [<i>route-map map-name</i>] Example: switch(config-router)# default-information-originate route-map DefaultRouteFilter	Creates a default route into this OSPF domain. <i>always</i> == always generate the default. Conditionally (if the default route is in the rib) <i>route-map</i> - generate default if route map returns true. (add to redistribute concept)
Step 5	default-metric <i>cost</i> Example: switch(config-router)# default-metric 25	Sets the cost metric for the redistributed routes.
Step 6	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to redistribute the Border Gateway Protocol (BGP) into OSPF:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# redistribute bgp route-map FilterExternalBGP
switch(config-router)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Route Summarization

You can configure route summarization for inter-area routes by configuring an address range that is summarized. You can also configure route summarization for external, redistributed routes by configuring a summary address for those routes on an ASBR. See the “Route Summarization” section on page 5-10.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the “Enabling the OSPFv2 Feature” section on page 5-13).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf** *instance-tag*
3. **area** *area-id* **range** *ip-prefix/length* [**no-advertise**]
or
4. **summary-address** *ip-prefix/length* [**no-advertise** | **tag** *tag-id*]
5. **show ip ospf summary-address**
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf <i>instance-tag</i> Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	area <i>area-id</i> range <i>ip-prefix/length</i> [no-advertise] Example: switch(config-router)# area 10 range 10.3.0.0/16	Creates a summary address on an ABR for a range of addresses and optionally does not advertise this summary address in a Network Summary (type 3) LSA.
Step 4	summary-address <i>ip-prefix/length</i> [no-advertise tag <i>tag</i>] Example: switch(config-router)# summary-address 10.5.0.0/16 tag 2	Creates a summary address on an ASBR for a range of addresses and optionally assigns a tag for this summary address that can be used for redistribution with route maps.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 5	show ip ospf summary-address Example: switch(config-router)# show ip ospf summary-address	(Optional) Displays information about OSPF summary addresses.
Step 6	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create summary addresses between areas on an ABR:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# area 10 range 10.3.0.0/16
switch(config-router)# copy running-config startup-config
```

The following example shows how to create summary addresses on an ASBR:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# summary-address 10.5.0.0/16
switch(config-router)# copy running-config startup-config
```

Configuring Stub Route Advertisements

Use Stub Route Advertisements when you want to limit the OSPFv2 traffic through this router for a short time. See the [“OSPFv2 Stub Router Advertisements”](#) section on page 5-12.

Stub route advertisements can be configured with the following optional parameters:

- On startup—Sends stub route advertisements for the specified announce time.
- Wait for BGP—Sends stub router advertisements until BGP converges.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature”](#) section on page 5-13).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf instance-tag**
3. **max-metric router-lsa [on-startup [announce-time] [wait-for bgp tag]]**
4. **copy running-config startup-config**



Note

You should not save the running configuration of a router when it is configured for a graceful shutdown because the router will continue to advertise a maximum metric after it is reloaded.

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf instance-tag Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	max-metric router-lsa [on-startup [announce-time] [wait-for bgp tag]] Example: switch(config-router)# max-metric router-lsa	Configures OSPFv2 stub route advertisements. on-start-up - advertise when it first comes up or system start time. wait for that instance of bgp to come up. add to concepts
Step 4	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to enable the Stub Router Advertisements feature on startup for the default 600 seconds:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# max-metric router-lsa on-startup
switch(config-router)# copy running-config startup-config
```

Modifying the Default Timers

OSPFv2 includes a number of timers that control the behavior of protocol messages and shortest path first (SPF) calculations. OSPFv2 includes the following optional timer parameters:

- LSA arrival time—Sets the minimum interval allowed between LSAs arriving from a neighbor. LSAs that arrive faster than this time are dropped.
- Pacing LSAs—Set the interval at which LSAs are collected into a group and refreshed, checksummed, or aged. This timer controls how frequently LSA updates occur and optimizes how many are sent in an LSA update message (see the [“Flooding and LSA Group Pacing”](#) section on page 5-6).
- Throttle LSAs—Set rate limits for generating LSAs. This timer controls how frequently an LSA is generated if no topology change occurs.
- Throttle SPF calculation—Controls how frequently the SPF calculation is run.

At the interface level, you can also control the following timers:

- Retransmit interval—Sets the estimated time between successive LSAs.
- Transmit delay—Sets the estimated time to transmit an LSA to a neighbor.

Send document comments to nexus7k-docfeedback@cisco.com.

See the “Configuring Networks in OSPFv2” section on page 5-17 for information about the hello interval and dead timer.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the “Enabling the OSPFv2 Feature” section on page 5-13).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf** *instance-tag*
3. **timers lsa-arrival** *msec*
4. **timers lsa-group-pacing** *seconds*
5. **timers throttle lsa** *hold-interval*
6. **timers throttle spf** *delay-time hold-time*
7. **interface** *type slot/port*
8. **ip ospf hello-interval** *seconds*
9. **ip ospf dead-interval** *seconds*
10. **ip ospf retransmit-interval** *seconds*
11. **ip ospf transmit-delay** *seconds*
12. **show ip ospf**
13. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf <i>instance-tag</i> Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	timers lsa-arrival <i>msec</i> Example: switch(config-router)# timers lsa-arrival 2000	Sets the LSA arrival time in milliseconds. The range is from 10 to 600000. The default is 1000 milliseconds.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	timers lsa-group-pacing <i>seconds</i> Example: switch(config-router)# timers lsa-group-pacing 2000	Sets the interval in seconds for grouping LSAs. The range is from 1 to 1800. The default is 240 seconds.
Step 5	timers throttle lsa hold-interval Example: switch(config-router)# timers throttle lsa 3000	Sets the rate limit in milliseconds for generating LSAs. The range is from 10 to 600000. The default is 5000 milliseconds.
Step 6	timers throttle spf <i>delay-time hold-time max-wait</i> Example: switch(config-router)# timers throttle spf 3000 2000 4000	Sets the SPF best path schedule initial delay time and the minimum hold time in seconds between SPF best path calculations. The range is from 1 to 600000. The default is no delay time and 5000 millisecond hold time.
Step 7	interface <i>type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 8	ip ospf hello-interval <i>seconds</i> Example: switch(config-if)# ip ospf retransmit-interval 30	Sets the hello interval this interface. The range is from 1 to 65535. The default is 10.
Step 9	ip ospf dead-interval <i>seconds</i> Example: switch(config-if)# ip ospf retransmit-interval 30	Sets the dead interval for this interface. The range is from 1 to 65535.
Step 10	ip ospf retransmit-interval <i>seconds</i> Example: switch(config-if)# ip ospf retransmit-interval 30	Sets the estimated time in seconds between LSAs transmitted from this interface. The range is from 1 to 65535. The default is 5.
Step 11	ip ospf transmit-delay <i>seconds</i> Example: switch(config-if)# ip ospf transmit-delay 600 switch(config-if)#	Sets the estimated time in seconds to transmit an LSA to a neighbor. The range is from 1 to 450. The default is 1.
Step 12	show ip ospf Example: switch(config-if)# show ip ospf	(Optional) Displays information about OSPF.
Step 13	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to control LSA flooding with the `lsa-group-pacing` option:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# timers lsa-group-pacing 300
switch(config-router)# copy running-config startup-config
```

Configuring Graceful Restart

Graceful restart is enabled by default. You can configure the following optional parameters for graceful restart in an OSPFv2 instance:

- **Grace period**—Configures how long neighbors should wait after a graceful restart has started before tearing down adjacencies.
- **Helper mode disabled**—Disables helper mode on the local OSPFv2 instance. OSPFv2 will not participate in the graceful restart of a neighbor.
- **Planned graceful restart only**—Configures OSPFv2 to support graceful restart only in the event of a planned restart.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the “[Enabling the OSPFv2 Feature](#)” section on [page 5-13](#)).

Ensure that all neighbors are configured for graceful restart with matching optional parameters set.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospf** *instance-tag*
3. **graceful-restart**
4. **graceful-restart grace-period** *seconds*
5. **graceful-restart helper-disable**
6. **graceful-restart planned-only**
7. **show ip ospf** *instance-tag*
8. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf instance-tag Example: switch(config)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	graceful-restart Example: switch(config-router)# graceful-restart	Enables a graceful restart. A graceful restart is enabled by default.
Step 4	graceful-restart grace-period seconds Example: switch(config-router)# graceful-restart grace-period 120	(Optional) Sets the grace period, in seconds. The range is from 5 to 1800. The default is 60 seconds.
Step 5	graceful-restart helper-disable Example: switch(config-router)# graceful-restart helper-disable	(Optional) Disables helper mode. Enabled by default.
Step 6	graceful-restart planned-only Example: switch(config-router)# graceful-restart planned-only	(Optional) Configures a graceful restart for planned restarts only.
Step 7	show ip ospf instance-tag Example: switch(config-if)# show ip ospf 201	(Optional) Displays OSPF information.
Step 8	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to enable a graceful restart if it has been disabled and set the grace period to 120 seconds:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# graceful-restart
switch(config-router)# graceful-restart grace-period 120
switch(config-router)# copy running-config startup-config
```

Restarting an OSPFv2 Instance

You can restart an OSPv2 instance. This clears all neighbors for the instance.

Send document comments to nexus7k-docfeedback@cisco.com.

To restart an OSPFv2 instance and remove all associated neighbors, use the following command:

Command	Purpose
restart ospf <i>instance-tag</i>	Restarts the OSPFv2 instance and removes all neighbors.
Example: switch(config)# restart ospf 201	

Configuring OSPFv2 with Virtualization

You can configure multiple OSPFv2 instances in each VDC. You can also create multiple VRFs within each VDC and use the same or multiple OSPFv2 instances in each VRF. You assign an OSPFv2 interface to a VRF.



Note

Configure all other parameters for an interface after you configure the VRF for an interface. Configuring a VRF for an interface deletes all the configuration for that interface.

BEFORE YOU BEGIN

Create the VDCs.

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv2 Feature”](#) section on page 5-13).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **vrf context** *vrf_name*
3. **exit**
4. **router ospf** *instance-tag*
5. **vrf** *vrf-name*
6. <optional parameters configured>
7. **interface** *interface-type slot/port*
8. **vrf member** *vrf-name*
9. **ip-address** *ip-prefix/length*
10. **router ospf** *instance-tag* **area** *area-id*
11. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	vrf context <i>vrf-name</i> Example: switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode.
Step 3	router ospf <i>instance-tag</i> Example: switch(config-vrf)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 4	vrf <i>vrf-name</i> Example: switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#	Enters VRF configuration mode.
Step 5	maximum-paths <i>paths</i> Example: switch(config-router-vrf)# maximum-paths 4	(Optional) Configures the maximum number of equal OSPFv2 paths to a destination in the route table for this VRF. Used for load balancing.
Step 6	interface <i>interface-type slot/port</i> Example: switch(config-router-vrf)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 7	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 8	ip address <i>ip-prefix/length</i> Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 9	ip router ospf <i>instance-tag area area-id</i> Example: switch(config-if)# ip router ospf 201 area 0	Assigns this interface to the OSPFv2 instance and area configured.
Step 10	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to create a VRF and add an interface to the VRF:

```
switch# config t
switch(config)# vrf context NewVRF
switch(config)# router ospf 201
switch(config)# interface ethernet 1/2
switch(config-if)# vrf member NewVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router ospf 201 area 0
switch(config)# copy running-config startup-config
```

Verifying the OSPFv2 Configuration

To verify the OSPFv2 configuration, use the following commands:

Command	Purpose
show ip ospf	Displays the OSPFv2 configuration.
show ip ospf border-routers [<i>vrf {vrf-name all default management}</i>]	Displays the OSPFv2 border router configuration.
show ip ospf database [<i>vrf {vrf-name all default management}</i>]	Displays the OSPFv2 link-state database summary.
show ip ospf interface <i>number</i> [<i>vrf {vrf-name all default management}</i>]	Displays the OSPFv2 interface configuration.
show ip ospf lsa-content-changed-list [<i>interface-type number</i>] [<i>vrf {vrf-name all default management}</i>]	Displays the OSPFv2 LSAs that have changed.
show ip ospf neighbors [<i>neighbor-id</i>] [<i>detail</i>] [<i>interface-type number</i>] [<i>vrf {vrf-name all default management}</i>] [<i>summary</i>]	Displays the list of OSPFv2 neighbors.
show ip ospf request-list <i>neighbor-id</i> [<i>interface-type number</i>] [<i>vrf {vrf-name all default management}</i>]	Displays the list of OSPFv2 link-state requests.
show ip ospf retransmission-list [<i>neighbor-id</i>] [<i>interface-type number</i>] [<i>vrf {vrf-name all default management}</i>]	Displays the list of OSPFv2 link-state retransmissions.
show ip ospf route [<i>ospf-route</i>] [<i>summary</i>] [<i>vrf {vrf-name all default management}</i>]	Displays the internal OSPFv2 routes.
show ip ospf summary-address [<i>vrf {vrf-name all default management}</i>]	Displays information about the OSPFv2 summary addresses.
show ip ospf virtual-links [<i>brief</i>] [<i>vrf {vrf-name all default management}</i>]	Displays information about OSPFv2 virtual links.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
show ip ospf vrf { <i>vrf-name</i> all default management }	Displays information about VRF-based OSPFv2 configuration.
show running-configuration ospf	Displays the current running OSPFv2 configuration.

Displaying OSPFv2 Statistics

To display OSPFv2 statistics, use the following commands:

Command	Purpose
show ip ospf policy statistics area <i>area-id</i> filter-list { in out } [vrf { <i>vrf-name</i> all default management }]	Displays the OSPFv2 route policy statistics for an area.
show ip ospf policy statistics redistribute { bgp <i>id</i> direct eigrp <i>id</i> isis <i>id</i> ospf <i>id</i> rip <i>id</i> static } <i>vrf</i> { <i>vrf-name</i> all default management }	Displays the OSPFv2 route policy statistics.
show ip ospf statistics [vrf { <i>vrf-name</i> all default management }]	Displays the OSPFv2 event counters.
show ip ospf traffic [<i>interface-type</i> <i>number</i>] [vrf { <i>vrf-name</i> all default management }]	Displays the OSPFv2 packet counters.

OSPFv2 Example Configuration

The following example shows how to configure OSPFv2:

```
feature ospf
router ospf 201
  router-id 290.0.2.1

interface ethernet 1/2
  ip router ospf 201 area 10
  ip ospf authentication
  ip ospf authentication-key 0 mypass
```

Default Settings

Table 5-2 lists the default settings for OSPFv2 parameters.

Table 5-2 *Default OSPFv2 Parameters*

Parameters	Default
Hello interval	10 seconds
Dead interval	40 seconds

Send document comments to nexus7k-docfeedback@cisco.com.

Table 5-2 **Default OSPFv2 Parameters (continued)**

Parameters	Default
Graceful restart grace period	60 seconds
Graceful restart notify period	15 seconds
OSPFv2 feature	Disabled
Stub router advertisement announce time	600 seconds
Reference bandwidth for link cost calculation	40 Gb/s
LSA minimal arrival time	1000 milliseconds
LSA group pacing	240 seconds
SPF calculation initial delay time	0 milliseconds
SPF calculation hold time	5000 milliseconds
SPF calculation initial delay time	0 milliseconds

Additional References

For additional information related to implementing OSPF, see the following sections:

- [Related Documents, page 5-44](#)
- [MIBs, page 5-44](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
OSPFv2 CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>
OSPFv3 for IPv6 networks	Chapter 6, “Configuring OSPFv3”
Route maps	Chapter 15, “Configuring Route Policy Manager”

MIBs

MIBs	MIBs Link
<ul style="list-style-type: none"> OSPF-MIB OSPF-TRAP-MIB 	To locate and download MIBs, go to the following URL: http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

Feature History for OSPFv2

[Table 5-3](#) lists the release history for this feature.

Table 5-3 *Feature History for IOSPFv2*

Feature Name	Releases	Feature Information
OSPFv2	4.0(1)	This feature was introduced.



CHAPTER 6

Configuring OSPFv3

This chapter describes how to configure Open Shortest Path First version 3 (OSPFv3) for IPv6 networks.

This chapter includes the following sections:

- [Information About OSPFv3, page 6-1](#)
- [Licensing Requirements for OSPFv3, page 6-12](#)
- [Prerequisites for OSPFv3, page 6-12](#)
- [Configuration Guidelines and Limitations, page 6-13](#)
- [Configuring Basic OSPFv3, page 6-13](#)
- [Configuring Advanced OSPFv3, page 6-19](#)
- [Verifying OSPFv3 Configuration, page 6-36](#)
- [Displaying OSPFv3 Statistics, page 6-37](#)
- [OSPFv3 Example Configuration, page 6-37](#)
- [Related Topics, page 6-37](#)
- [Default Settings, page 6-38](#)
- [Additional References, page 6-38](#)
- [Feature History for OSPFv3, page 6-39](#)

Information About OSPFv3

OSPFv3 is an IETF link-state protocol (see [“Overview” section on page 1-1](#)). An OSPFv3 router sends a special message, called a *hello packet*, out each OSPF-enabled interface to discover other OSPFv3 neighbor routers. Once a neighbor is discovered, the two routers compare information in the Hello packet to determine if the routers have compatible configurations. The neighbor routers attempt to establish *adjacency*, which means that the routers synchronize their link-state databases to ensure that they have identical OSPFv3 routing information. Adjacent routers share *link-state advertisements* (LSAs) that include information about the operational state of each link, the cost of the link, and any other neighbor information. The routers then flood these received LSAs out every OSPF-enabled interface so that all OSPFv3 routers eventually have identical link-state databases. When all OSPFv3 routers have identical link-state databases, the network is *converged* (see the [“Convergence” section on page 1-6](#)). Each router then uses Dijkstra’s Shortest Path First (SPF) algorithm to build its route table.

You can divide OSPFv3 networks into areas. Routers send most LSAs only within one area, which reduces the CPU and memory requirements for an OSPF-enabled router.

Send document comments to nexus7k-docfeedback@cisco.com.

OSPFv3 supports IPv6. For information about OSPF for IPv4, see [Chapter 5, “Configuring OSPFv2”](#).

This section includes the following topics:

- [Comparison of OSPFv3 and OSPFv2, page 6-2](#)
- [Hello Packet, page 6-2](#)
- [Neighbors, page 6-3](#)
- [Adjacency, page 6-3](#)
- [Designated Routers, page 6-4](#)
- [Areas, page 6-5](#)
- [Link-State Advertisement, page 6-5](#)
- [OSPFv3 and the IPv6 Unicast RIB, page 6-7](#)
- [Address Family Support, page 6-8](#)
- [Advanced Features, page 6-8](#)

Comparison of OSPFv3 and OSPFv2

Much of the OSPFv3 protocol is the same as in OSPFv2. OSPFv3 is described in RFC 2740.

The key differences between the OSPFv3 and OSPFv2 protocols are as follows:

- OSPFv3 expands on OSPFv2 to provide support for IPv6 routing prefixes and the larger size of IPv6 addresses.
- LSAs in OSPFv3 are expressed as prefix and prefix length instead of address and mask.
- The router ID and area ID are 32-bit numbers with no relationship to IPv6 addresses.
- OSPFv3 uses link-local IPv6 addresses for neighbor discovery and other features.
- OSPFv3 uses IPv6 for authentication.
- OSPFv3 redefines LSA types.

Hello Packet

OSPFv3 routers periodically send Hello packets on every OSPF-enabled interface. The *hello interval* determines how frequently the router sends these Hello packets and is configured per interface. OSPFv3 uses Hello packets for the following tasks:

- Neighbor discovery
- Keepalives
- Bidirectional communications
- Designated router election (see the [“Designated Routers” section on page 6-4](#))

The Hello packet contains information about the originating OSPFv3 interface and router, including the assigned OSPFv3 cost of the link, the hello interval, and optional capabilities of the originating router. An OSPFv3 interface that receives these Hello packets determines if the settings are compatible with the receiving interface settings. Compatible interfaces are considered neighbors and are added to the neighbor table (see the [“Neighbors” section on page 6-3](#)).

Send document comments to nexus7k-docfeedback@cisco.com.

Hello packets also include a list of router IDs for the routers that the originating interface has communicated with. If the receiving interface sees its own router ID in this list, then bidirectional communication has been established between the two interfaces.

OSPFv3 uses Hello packets as a keepalive message to determine if a neighbor is still communicating. If a router does not receive a Hello packet by the configured *dead interval* (usually a multiple of the hello interval), then the neighbor is removed from the local neighbor table.

Neighbors

An OSPFv3 interface must have a compatible configuration with a remote interface before the two can be considered neighbors. The two OSPFv3 interfaces must match the following criteria:

- Hello interval
- Dead interval
- Area ID (see the “[Areas](#)” section on page 6-5)
- Authentication
- Optional capabilities

If there is a match, the information is entered into the neighbor table:

- Neighbor ID—The router ID of the neighbor router.
- Priority—Priority of the neighbor router. The priority is used for designated router election (see the “[Designated Routers](#)” section on page 6-4).
- State—Indication of whether the neighbor has just been heard from, is in the process of setting up bidirectional communications, is sharing the link-state information, or has achieved full adjacency.
- Dead time—Indication of how long since the last Hello packet was received from this neighbor.
- Link-local IPv6 Address—The link-local IPv6 address of the neighbor.
- Designated Router—Indication of whether the neighbor has been declared the designated router or backup designated router (see the “[Designated Routers](#)” section on page 6-4).
- Local interface—The local interface that received the Hello packet for this neighbor.

When the first Hello packet is received from a new neighbor, the neighbor is entered into the neighbor table in the init state. Once bidirectional communication is established, the neighbor state becomes 2-way. ExStart and exchange states come next, as the two interfaces exchange their link-state database. Once this is all complete, the neighbor moves into the full state, signifying full adjacency. If the neighbor fails to send any Hello packets in the dead interval, then the neighbor is moved to the down state and is no longer considered adjacent.

Adjacency

Not all neighbors establish adjacency. Depending on the network type and designated router establishment, some neighbors become fully adjacent and share LSAs with all their neighbors, while other neighbors do not. For more information, see the “[Designated Routers](#)” section on page 6-4.

Adjacency is established using Database Description packets, Link State Request packets, and Link State Update packets in OSPFv3. The Database Description packet includes just the LSA headers from the link-state database of the neighbor (see the “[Link-State Database](#)” section on page 6-7). The local router compares these headers with its own link-state database and determines which LSAs are new or

Send document comments to nexus7k-docfeedback@cisco.com.

updated. The local router sends a Link State Request packet for each LSA that it needs new or updated information on. The neighbor responds with a Link State Update packet. This exchange continues until both routers have the same link-state information.

Designated Routers

Networks with multiple routers present a unique situation for OSPFv3. If every router floods the network with LSAs, the same link-state information will be sent from multiple sources. Depending on the type of network, OSPFv3 might use a single router, the *designated router* (DR), to control the LSA floods and represent the network to the rest of the OSPFv3 area (see the “Areas” section on page 6-5). If the DR fails, OSPFv3 selects a *backup designated router* (BDR). If the DR fails, OSPFv3 uses the BDR.

Network types are as follows:


- **Point-to-point**—A network that exists only between two routers. All neighbors on a point-to-point network establish adjacency and there is no DR.
- **Broadcast**—A network with multiple routers that can communicate over a shared medium that allows broadcast traffic, such as Ethernet. OSPFv3 routers establish a DR and BDR that controls LSA flooding on the network. OSPFv3 uses the well-known IPv6 multicast addresses, FF02::5, and a MAC address of 0100.5300.0005 to communicate with neighbors.

The DR and BDR are selected based on the information in the Hello packet. When an interface sends a Hello packet, it sets the priority field and the DR and BDR field if it knows who the DR and BDR are. The routers follow an election procedure based on which routers declare themselves in the DR and BDR fields and the priority field in the Hello packet. As a final tie breaker, OSPFv3 chooses the highest router IDs as the DR and BDR.

All other routers establish adjacency with the DR and the BDR and use the IPv6 multicast address FF02::6 to send LSA updates to the DR and BDR. Figure 6-1 shows this adjacency relationship between all routers and the DR.

DRs are based on a router interface. A router might be the DR for one network and not for another network on a different interface.

Figure 6-1 DR in Multi-Access Network

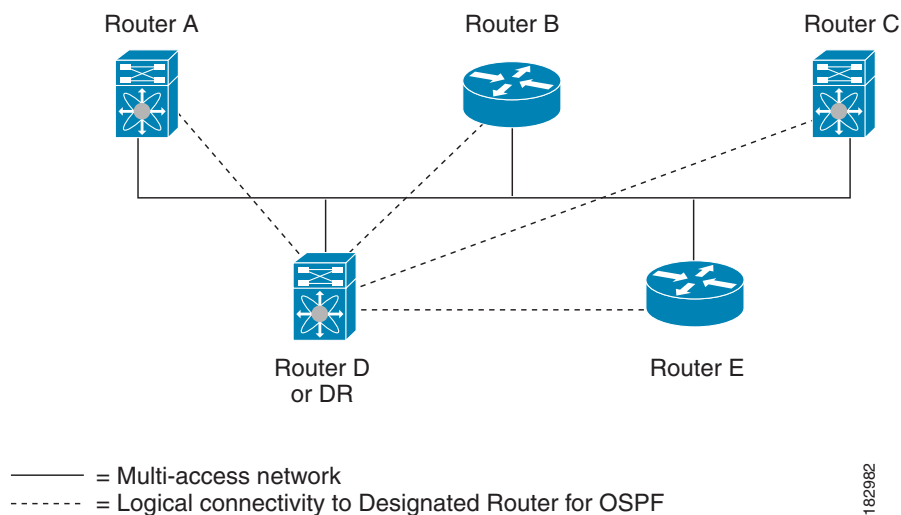

182982


Send document comments to nexus7k-docfeedback@cisco.com.

Areas

You can limit the CPU and memory requirements that OSPFv3 puts on the routers by dividing an OSPFv3 network into *areas*. An area is a logical division of routers and links within an OSPFv3 domain that creates separate subdomains. LSA flooding is contained within an area, and the link-state database is limited to links within the area. You can assign an area ID to the interfaces within the defined area. The Area ID is a 32-bit value that can be expressed as a number or in dotted decimal notation, such as 10.2.3.1.

If you define more than one area in an OSPFv3 network, you must also define the backbone area, which has the reserved area ID of 0. If you have more than one area, then one or more routers become area border routers (ABRs). An ABR connects to both the backbone area and at least one other defined area (see [Figure 6-2](#)).

Figure 6-2 OSPFv3 Areas

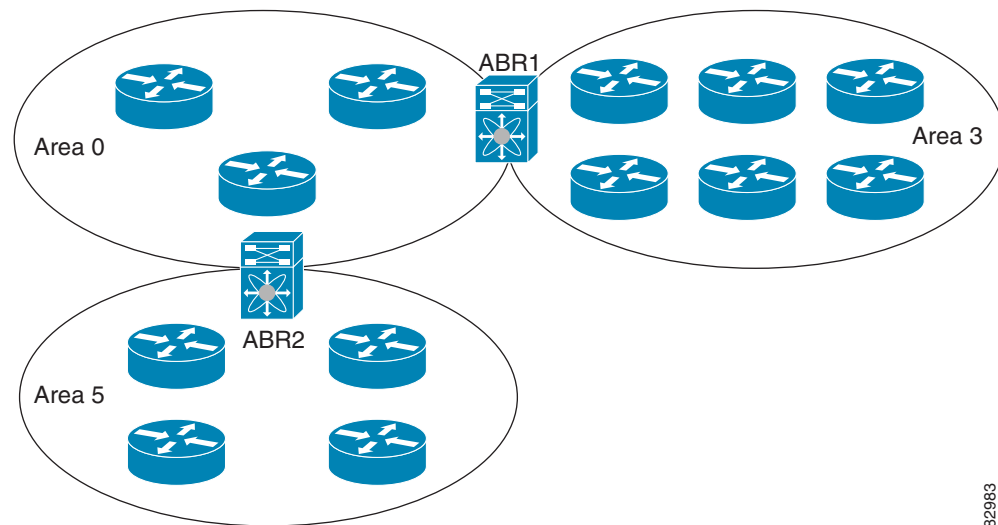

182983

The ABR has a separate link-state database for each area which it connects to. The ABR sends Inter-Area Prefix (type 3) LSAs (see the “[Route Summarization](#)” section on [page 6-10](#)) from one connected area to the backbone area. The backbone area sends summarized information about one area to another area. In [Figure 6-2](#), Area 0 sends summarized information about Area 5 to Area 3.

OSPFv3 defines one other router type: the autonomous system boundary router (ASBR). This router connects an OSPFv3 area to another autonomous system. An autonomous system is a network controlled by a single technical administration entity. OSPFv3 can redistribute its routing information into another autonomous system or receive redistributed routes from another autonomous system. For more information, see “[Advanced Features](#)” section on [page 6-8](#).

Link-State Advertisement

OSPFv3 uses link-state advertisements (LSAs) to build its routing table.

This section includes the following topics:

- [LSA Types](#), [page 6-6](#)
- [Link Cost](#), [page 6-6](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- [Flooding and LSA Group Pacing](#), page 6-6
- [Link-State Database](#), page 6-7

LSA Types

[Table 6-1](#) shows the LSA types supported by Cisco NX-OS.

Table 6-1 LSA Types

Type	Name	Description
1	Router LSA	LSA sent by every router. This LSA includes state and cost of all links. Does not include prefix information. Router LSAs trigger an SPF recalculation. Router LSAs are flooded to the local OSPFv3 area.
2	Network LSA	LSA sent by the DR. Lists all routers in the multi-access network. This LSA does not include prefix information. Network LSAs trigger an SPF recalculation. See the “Designated Routers” section on page 6-4.
3	Inter-Area Prefix LSA	LSA sent by the area border router to an external area for each destination in local area. This LSA includes the link cost from area the border router to the local destination. See the “Areas” section on page 6-5.
4	Inter-Area Router LSA	LSA sent by the area border router to an external area. This LSA advertises the link cost to the ASBR only. See the “Areas” section on page 6-5.
5	AS External LSA	LSA generated by the ASBR. This LSA includes the link cost to an external autonomous system destination. AS External LSAs are flooded throughout the autonomous system. See the “Areas” section on page 6-5.
7	Type-7 LSA	LSA generated by the ASBR within an NSSA. This LSA includes the link cost to an external autonomous system destination. Type-7 LSAs are flooded only within the local NSSA. See the “Areas” section on page 6-5.
8	Link LSA	LSA sent by every router, using a link-local flooding scope (see the “Flooding and LSA Group Pacing” section on page 6-6). This LSA includes the link-local address and IPv6 prefixes for this link.
9	Intra-Area Prefix LSA	LSA sent by every router. This LSA includes any prefix or link state changes. Intra-Area Prefix LSAs are flooded to the local OSPFv3 area. This LSA does not trigger an SPF recalculation.
11	Grace LSAs	LSA sent by a restarting router, using a link-local flooding scope. This LSA is used for a graceful restart of OSPFv3. See the “High Availability and Graceful Restart” section on page 6-11.

Link Cost

Each OSPFv3 interface is assigned a *link cost*. The cost is an arbitrary number. By default, Cisco NX-OS assigns a cost that is the configured reference bandwidth divided by the interface bandwidth. By default, the reference bandwidth is 40 Gb/s. The link cost is carried in the LSA updates for each link.

Flooding and LSA Group Pacing

OSPFv3 floods LSA updates to different sections of the network, depending on the LSA type. OSPFv3 uses the following flooding scopes:

Send document comments to nexus7k-docfeedback@cisco.com.

- Link-local—LSA is flooded only on the local link, and no further. Used for Link LSAs and Grace LSAs.
- Area-local—LSA is flooded throughout a single OSPF area only. Used for Router LSAs, Network LSAs, Inter-Area-Prefix LSAs, Inter-Area-Router LSAs, and Intra-Area-Prefix LSAs.
- AS scope—LSA is flooded throughout the routing domain. Used for AS External LSAs.

LSA flooding guarantees that all routers in the network have identical routing information. LSA flooding depends on the OSPFv3 area configuration (see the [“Areas” section on page 6-5](#)). The LSAs are flooded based on the [link-state refresh](#) time (every 30 minutes by default). Each LSA has its own link-state refresh time.

You can control the flooding rate of LSA updates in your network by using the LSA group pacing feature. LSA group pacing can reduce high CPU or buffer utilization. This feature groups LSAs with similar link-state refresh times to allow OSPFv3 to pack multiple LSAs into an OSPFv3 Update message.

By default, LSAs with link-state refresh times within four minutes of each other are grouped together. You should lower this value for large link-state databases or raise it for smaller databases to optimize the OSPFv3 load on your network.

Link-State Database

Each router maintains a link-state database for the OSPFv3 network. This database contains all the collected LSAs, and includes information on all the routes through the network. OSPFv3 uses this information to calculate the best path to each destination and populates the routing table with these best paths.

LSAs are removed from the link-state database if no LSA update has been received within a set interval, called the MaxAge. Routers flood a repeat of the LSA every 30 minutes to prevent accurate link-state information from being aged out. Cisco NX-OS supports the LSA grouping feature to prevent all LSAs from refreshing at the same time. For more information, see the [“Flooding and LSA Group Pacing” section on page 6-6](#).

OSPFv3 and the IPv6 Unicast RIB

OSPFv3 runs the Dijkstra shortest path first algorithm on the link-state database. This algorithm selects the best path to each destination based on the sum of all the link costs for each link in the path. The resultant shortest path for each destination is then put in the OSPFv3 route table. When the OSPFv3 network is converged, this route table feeds into the IPv6 unicast RIB. OSPFv3 communicates with the IPv6 unicast RIB to do the following:

- Add or remove routes
- Handle route redistribution from other protocols
- Provide convergence updates to remove stale OSPFv3 routes and for stub router advertisements (see the [“Multiple OSPFv3 Instances” section on page 6-11](#))

OSPFv3 also runs a modified Dijkstra algorithm for fast recalculation for Inter-Area Prefix, Inter-Area Router, AS-External, Type-7, and Intra-Area Prefix (type 3, 4, 5, 7, 8) LSA changes.

Send document comments to nexus7k-docfeedback@cisco.com.

Address Family Support

Cisco NX-OS supports multiple address families, such as unicast IPv6 and multicast IPv6. OSPFv3 features that are specific to an *address family* are as follows:

- Default routes
- Route summarization
- Route redistribution
- Filter lists for border routers
- SPF optimization

Use the **address-family ipv6 unicast** command to enter the IPv6 unicast address family configuration mode when configuring these features.

Advanced Features

Cisco NX-OS supports a number of advanced OSPFv3 features that enhance the usability and scalability of OSPFv3 in the network.

This section includes the following topics:

- [Stub Area, page 6-8](#)
- [Not-So-Stubby Area, page 6-9](#)
- [Virtual Links, page 6-9](#)
- [Route Redistribution, page 6-10](#)
- [Route redistribution uses route maps to control which external routes are redistributed. See Chapter 15, “Configuring Route Policy Manager,” for details on configuring route maps. You can use route maps to modify parameters in the AS External \(type 5\) and Type-7 LSAs before these external routes are advertised in the local OSPFv3 autonomous system., page 6-10](#)
- [Route Summarization, page 6-10](#)
- [High Availability and Graceful Restart, page 6-11](#)
- [Multiple OSPFv3 Instances, page 6-11](#)
- [SPF Optimization, page 6-12](#)
- [Virtualization Support, page 6-12](#)

Stub Area


You can limit the amount of external routing information that floods an area by making it a *stub area*. A stub area is an area that does not allow AS External (type 5) LSAs (see the [“Link-State Advertisement” section on page 6-5](#)). These LSAs are usually flooded throughout the local autonomous system to propagate external route information. Stub areas have the following requirements:

- All routers in the stub area are stub routers. See the [“Stub Routing” section on page 1-7](#).
- No ASBR routers exist in the stub area.
- You cannot configure virtual links in the stub area.

[Figure 6-3](#) shows an example an OSPFv3 autonomous system where all routers in Area 10 have to go through the ABR to reach external autonomous systems. Area 10 can be configured as a stub area.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 6-3 Stub Area

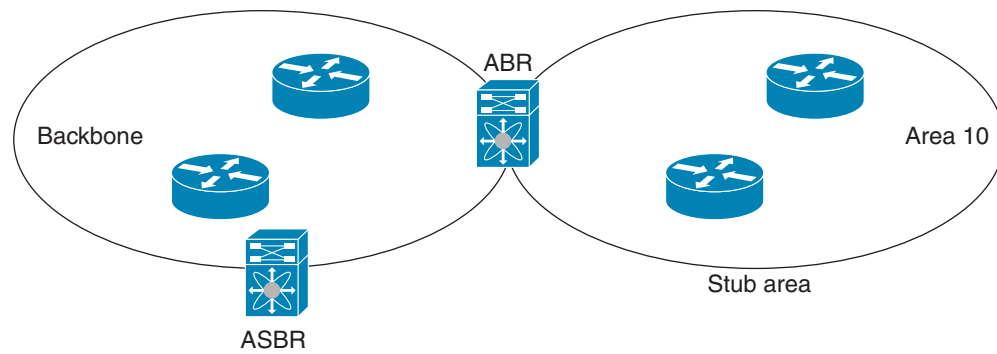

Stub areas use a default route for all traffic that needs to go through the backbone area to the external autonomous system. The default route is an Inter-Area-Prefix LSA with prefix length set to 0 for IPv6.

Not-So-Stubby Area

A Not-So-Stubby Area ([NSSA](#)) is similar to the stub area, except that an NSSA allows you to import autonomous system external routes within an NSSA using redistribution. The NSSA ASBR redistributes these routes and generates Type-7 LSAs that it floods throughout the NSSA. You can optionally configure the ABR that connects the NSSA to other areas to translate this Type-7 LSA to AS External (type 5) LSAs. The ABR then floods these AS External LSAs throughout the OSPFv3 autonomous system. Summarization and filtering are supported during the translation. See the [“Link-State Advertisement”](#) section on page 6-5 for details on Type-7 LSAs.

You can, for example, use NSSA to simplify administration if you are connecting a central site using OSPFv3 to a remote site that is using a different routing protocol. Before NSSA, the connection between the corporate site border router and a remote router could not be run as an OSPFv3 stub area because routes for the remote site could not be redistributed into a stub area. You needed to maintain two routing protocols. With NSSA, you can extend OSPFv3 to cover the remote connection by defining the area between the corporate router and remote router as an NSSA (see the [“Configuring NSSA”](#) section on page 6-23).


The backbone Area 0 cannot be an NSSA.

Virtual Links

Virtual links allow you to connect an OSPFv3 area ABR to a backbone area ABR when a direct physical connection is not available. [Figure 6-4](#) shows a virtual link that connects Area 3 to the backbone area through Area 5.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 6-4 Virtual Links

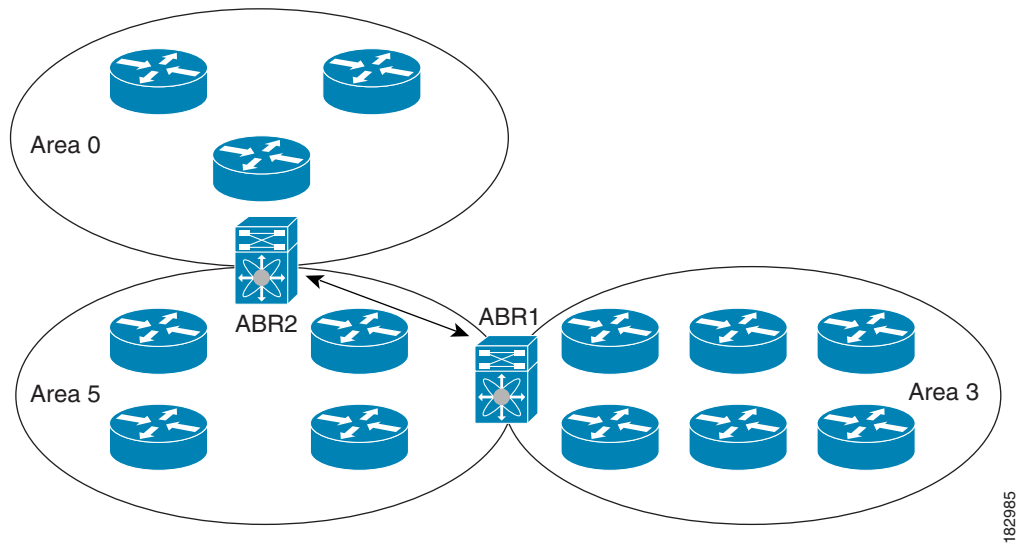

You can also use virtual links to temporarily recover from a partitioned area, which occurs when a link within the area fails, isolating part of the area from reaching the designated ABR to the backbone area.

Route Redistribution

OSPFv3 can learn routes from other routing protocols by using route redistribution. See the [“Route Redistribution” section on page 1-6](#). You configure OSPFv3 to assign a link cost for these redistributed routes or a default link cost for all redistributed routes.

Route redistribution uses route maps to control which external routes are redistributed. See [Chapter 15, “Configuring Route Policy Manager,”](#) for details on configuring route maps. You can use route maps to modify parameters in the AS External (type 5) and Type-7 LSAs before these external routes are advertised in the local OSPFv3 autonomous system.

Route Summarization

Because OSPFv3 shares all learned routes with every OSPF-enabled router, you might want to use route summarization to reduce the number of unique routes that are flooded to every OSPF-enabled router. Route summarization simplifies route tables by replacing more-specific addresses with an address that represents all the specific addresses. For example, you can replace 2010:11:22:0:1000::1 and 2010:11:22:0:2000:679:1 with one summary address, 2010:11:22::/32.

Typically, you would summarize at the boundaries of area border routers (ABRs). Although you could configure summarization between any two areas, it is better to summarize in the direction of the backbone so that the backbone receives all the aggregate addresses and injects them, already summarized, into other areas. The two types of summarization are as follows:

- Inter-area route summarization
- External route summarization

You configure inter-area route summarization on ABRs, summarizing routes between areas in the autonomous system. To take advantage of summarization, you should assign network numbers in areas in a contiguous way to be able to lump these addresses into one range.

Send document comments to nexus7k-docfeedback@cisco.com.

External route summarization is specific to external routes that are injected into OSPFv3 using route redistribution. You should make sure that external ranges that are being summarized are contiguous. Summarizing overlapping ranges from two different routers could cause packets to be sent to the wrong destination. Configure external route summarization on ASBRs that are redistributing routes into OSPF.

When you configure a summary address, Cisco NX-OS automatically configures a discard route for the summary address to prevent routing black holes and route loops.

High Availability and Graceful Restart

Cisco NX-OS supports high-availability. If a Cisco NX-OS system experiences a cold reboot, the network stops forwarding traffic to the system and removes the system from the network topology. In this scenario, OSPFv3 experiences a stateless restart, and removes all neighbor adjacencies on the local system. Cisco NX-OS applies the startup configuration and OSPFv3 rediscovers the neighbors and establishes the adjacencies again.

OSPFv3 automatically restarts if the process experiences problems. After the restart, OSPFv3 initiates a graceful restart so that the platform is not taken out of the network topology. If you manually restart OSPF, it performs a graceful restart, which is similar to a stateful switchover. The running configuration is applied in both cases.

A graceful restart, or nonstop forwarding (NSF), allows OSPFv3 to remain in the data forwarding path through a process restart. When OSPFv3 needs to restart, it first sends a link-local Grace (type 11) LSA. This restarting OSPFv3 platform is called NSF capable.

The Grace LSA includes a grace period, which is a specified time that the neighbor OSPFv3 interfaces hold onto the LSAs from the restarting OSPFv3 interface. (Typically, OSPFv3 tears down the adjacency and discards all LSAs from a down or restarting OSPFv3 interface.) The participating neighbors, which are called NSF helpers, keep all LSAs that originate from the restarting OSPFv3 interface as if the interface were still adjacent.

When the restarting OSPFv3 interface is operational again, it rediscovers its neighbors, establishes adjacency, and starts sending its LSA updates again. At this point, the NSF helpers recognize that graceful restart has finished.



Note

If the restarting OSPFv3 interface does not come back up before the end of the grace period, or if the network experiences a topology change, the OSPFv3 neighbors tear down adjacency with the restarting OSPFv3 and treat it as a normal OSPFv3 restart.



Note

You must enable graceful restart to support in-service software upgrades (ISSU) for OSPFv3. If you disable graceful restart, Cisco NX-OS issues a warning that ISSU cannot be supported with this configuration.

Multiple OSPFv3 Instances

Cisco NX-OS supports multiple instances of the OSPFv3 protocol. By default, every instance uses the same system router ID. You must manually configure the router ID for each instance if the instances are in the same OSPFv3 autonomous system.

The OSPFv3 header includes an instance ID field to identify that OSPFv3 packet for a particular OSPFv3 instance. You can assign the OSPFv3 instance. The interface drops all OSPFv3 packets that do not have a matching OSPFv3 instance ID in the packet header.

Send document comments to nexus7k-docfeedback@cisco.com.

Cisco NX-OS allows only one OSPFv3 instance on an interface.

SPF Optimization

Cisco NX-OS optimizes the SPF algorithm in the following ways:

- Partial SPF for Network (type 2) LSAs, Inter-Area Prefix (type 3) LSAs, and AS External (type 5) LSAs—When there is a change on any of these LSAs, Cisco NX-OS performs a faster partial calculation rather than running the whole SPF calculation.
- SPF timers—You can configure different timers for controlling SPF calculations. These timers include exponential backoff for subsequent SPF calculations. The exponential backoff limits the CPU load of multiple SPF calculations.

Virtualization Support

OSPFv3 supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for OSPFv3

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	OSPFv3 requires an Enterprise Services license. For a complete explanation of the NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Prerequisites for OSPFv3

OSPFv3 has the following prerequisites:

- You must be familiar with routing fundamentals to configure OSPFv3.
- You must be logged on to the switch.
- You have configured at least one interface for IPv6 that is capable of communicating with a remote OSPFv3 neighbor.
- You have installed the Enterprise Services license.
- You have completed the OSPFv3 network strategy and planning for your network. For example, you must decide whether multiple areas are required.
- You have enabled the OSPF feature (see the [“Enabling the OSPFv3 Feature”](#) section on page 6-13).
- You have installed the Advanced Services license and entered the desired VDC (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1*) if you are configuring VDCs.

Send document comments to nexus7k-docfeedback@cisco.com.

- You are familiar with IPv6 addressing and basic configuration. See [Chapter 3, “Configuring IPv6”](#) for information on IPv6 routing and addressing.

Configuration Guidelines and Limitations

OSPFv3 has the following configuration guidelines and limitations:

- You can have up to four instances of OSPFv3 in a VDC.



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring Basic OSPFv3

Configure OSPFv3 after you have designed your OSPFv3 network.

This section includes the following topics:

- [Enabling the OSPFv3 Feature, page 6-13](#)
- [Creating an OSPFv3 Instance, page 6-14](#)
- [Configuring Networks in OSPFv3, page 6-16](#)

Enabling the OSPFv3 Feature

You must enable the OSPFv3 feature before you can configure OSPFv3.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **feature ospfv3**
3. **show feature**
4. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	feature ospfv3 Example: switch(config)# feature ospfv3	Enables the OSPFv3 feature.
Step 3	show feature Example: switch(config)# show feature	(Optional) Displays enabled and disabled features.
Step 4	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no feature ospfv3** command to disable the OSPFv3 feature and remove all associated configuration.

Command	Purpose
no feature ospfv3 Example: switch(config)# no feature ospfv3	Disables the OSPFv3 feature and removes all associated configuration.

Creating an OSPFv3 Instance

The first step in configuring OSPFv3 is to create an instance or OSPFv3 instance. You assign a unique instance tag for this OSPFv3 instance. The instance tag can be any string. For each OSPFv3 instance, you can also configure the following optional parameters:

- Router ID—Configures the router ID for this OSPFv3 instance. If you do not use this parameter, the router ID selection algorithm is used. See the [“Router IDs” section on page 1-5](#).
- Administrative distance—Rates the trustworthiness of a routing information source. See the [“Administrative Distance” section on page 1-6](#).
- Log adjacency changes—Creates a system message whenever an OSPFv3 neighbor changes its state.
- Maximum paths—Sets the maximum number of equal paths that OSPFv3 installs in the route table for a particular destination. Use this parameter for load balancing between multiple paths.
- Reference bandwidth—Controls the calculated OSPFv3 cost metric for a network. The calculated cost is the reference bandwidth divided by the interface bandwidth. You can override the calculated cost by assigning a link cost when a network is added to the OSPFv3 instance. See the [“Configuring Networks in OSPFv3” section on page 6-16](#).

Send document comments to nexus7k-docfeedback@cisco.com.

For more information about OSPFv3 instance parameters, see the “[Configuring Advanced OSPFv3](#)” section on page 6-19.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPFv3 feature (see the “[Enabling the OSPFv3 Feature](#)” section on page 6-13).

Ensure that the OSPFv3 instance tag that you plan on using is not already in use on this router.

Use the **show ospfv3 instance-tag** command to verify that the instance tag is not in use.

OSPFv3 must be able to obtain a router identifier (for example, a configured loopback address) or you must configure the router ID option.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3 instance-tag**
3. **router-id ip-address**
4. **show ipv6 ospfv3 instance-tag**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 instance-tag Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	router-id id Example: switch(config-router)# router-id 192.0.2.1	(Optional) Configures the OSPFv3 router ID. This ID uses the dotted decimal notation and identifies this OSPFv3 instance and must exist on a configured interface in the system.
Step 4	show ipv6 ospfv3 instance-tag Example: switch(config-router)# show ipv6 ospfv3 201	(Optional) Displays OSPFv3 information.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

Use the **no router ospfv3** command to remove the OSPFv3 instance and all associated configuration.

Command	Purpose
no router ospfv3 <i>instance-tag</i>	Deletes the OSPFv3 instance and all associated configuration.
Example: switch(config)# no router ospfv3 201	



Note

This command does not remove OSPF configuration in interface mode. You must manually remove any OSPFv3 commands configured in interface mode.

You can configure the following optional parameters for OSPFv3 in router configuration mode:

Command	Purpose
log-adjacency-changes [<i>detail</i>]	Generates a system message whenever a neighbor changes state.
Example: switch(config-router)# log-adjacency-changes	

Use the **address-family ipv6 unicast** command to configure the following optional parameters for OSPFv3 in address family configuration mode:

Command	Purpose
distance <i>number</i>	Configures the administrative distance for this OSPFv3 instance. The range is from 1 to 255. The default is 110.
Example: switch(config-router-af)# distance 25	
maximum-paths <i>paths</i>	Configures the maximum number of equal OSPFv3 paths to a destination in the route table. The range is from 1 to 16. The default is 8. Used for load balancing.
Example: switch(config-router-af)# maximum-paths 4	

The following example shows how to create an OSPFv3 instance:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# copy running-config startup-config
```

Configuring Networks in OSPFv3

You can configure a network to OSPFv3 by associating it through the interface that the router uses to connect to that network (see the “[Neighbors](#)” section on page 6-3). You can add all networks to the default backbone area (Area 0), or you can create new areas using any decimal number or an IP address.



Note

All areas must connect to the backbone area either directly or through a virtual link.

Send document comments to nexus7k-docfeedback@cisco.com.

**Note**

OSPFv3 is not enabled on an interface until you configure a valid IPv6 address for that interface.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPFv3 feature (see the [“Enabling the OSPFv3 Feature”](#) section on page 6-13).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **ipv6 address** *ipv6-prefix/length*
4. **ipv6 router ospfv3** *instance-tag area area-id* [**secondaries none**]
5. **show ipv6 ospfv3** *instance-tag interface interface-type slot/port*
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ipv6 address <i>ipv6-prefix/length</i> Example: switch(config-if)# ipv6 address 2001:0DB8::1/48	Assigns an IPv6 address to this interface.
Step 4	ipv6 router ospfv3 <i>instance-tag area area-id</i> [secondaries none] Example: switch(config-if)# ipv6 router ospfv3 201 area 0	Adds the interface to the OSPFv3 instance and area.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 5	show ipv6 ospfv3 instance-tag interface <i>interface-type slot/port</i> Example: switch(config-if)# show ipv6 ospfv3 201 interface ethernet 1/2	(Optional) Displays OSPFv3 information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

You can configure the following optional parameters for OSPFv3 in interface configuration mode:

Command	Purpose
ospfv3 cost <i>number</i> Example: switch(config-if)# ospfv3 cost 25	Configures the OSPFv3 cost metric for this interface. The default is to calculate cost metric, based on reference bandwidth and interface bandwidth. The range is from 1 to 65535.
ospfv3 dead-interval <i>seconds</i> Example: switch(config-if)# ospfv3 dead-interval 50	Configures the OSPFv3 dead interval, in seconds. The range is from 1 to 65535. The default is four times the hello interval, in seconds.
ospfv3 hello-interval <i>seconds</i> Example: switch(config-if)# ospfv3 hello-interval 25	Configures the OSPFv3 hello interval, in seconds. The range is from 1 to 65535. The default is 10 seconds.
ospfv3 instance <i>instance</i> Example: switch(config-if)# ospfv3 instance 25	Configures the OSPFv3 instance ID. The range is from 0 to 255. The default is 0. The instance ID is link-local in scope.
ospfv3 mtu-ignore Example: switch(config-if)# ospfv3 mtu-ignore	Configures OSPFv3 to ignore any IP maximum transmission unit (MTU) mismatch with a neighbor. The default is to not establish adjacency if the neighbor MTU does not match the local interface MTU.
ospfv3 network { broadcast point-point } Example: switch(config-if)# ospfv3 network broadcast	Sets the OSPFv3 network type.
ospfv3 passive-interface Example: switch(config-if)# ospfv3 passive-interface	Suppresses routing updates on the interface.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
ospfv3 priority <i>number</i> Example: switch(config-if)# ospfv3 priority 25	Configures the OSPFv3 priority, used to determine the DR for an area. The range is from 0 to 255. The default is 1. See the “Designated Routers” section on page 6-4 .
ospfv3 shutdown Example: switch(config-if)# ospfv3 shutdown	Shuts down the OSPFv3 instance on this interface.

The following example shows how to add a network area 10 in OSPFv3 instance 201:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# ipv6 address 2001:0DB8::1/48
switch(config-if)# ipv6 ospfv3 201 area 10
switch(config-if)# copy running-config startup-config
```

Configuring Advanced OSPFv3

Configure OSPFv3 after you have designed your OSPFv3 network.

This section includes the following topics:

- [Configuring Filter Lists for Border Routers, page 6-19](#)
- [Configuring Stub Areas, page 6-21](#)
- [Configuring a Totally Stubby Area, page 6-22](#)
- [Configuring NSSA, page 6-23](#)
- [Configuring Virtual Links, page 6-25](#)
- [Configuring Redistribution, page 6-27](#)
- [Configuring Route Summarization, page 6-29](#)
- [Modifying the Default Timers, page 6-30](#)
- [Configuring Graceful Restart, page 6-32](#)
- [Restarting an OSPFv3 Instance, page 6-34](#)
- [Configuring OSPFv3 with Virtualization, page 6-34](#)

Configuring Filter Lists for Border Routers

You can separate your OSPFv3 domain into a series of areas that contain related networks. All areas must connect to the backbone area through an area border router (ABR). OSPFv3 domains can connect to external domains as well, through an autonomous system border router (ASBR). See the [“Areas” section on page 6-5](#).

ABRs have the following optional configuration parameters:

- Area range—Configures route summarization between areas. See the [“Configuring Route Summarization” section on page 6-29](#).

Send document comments to nexus7k-docfeedback@cisco.com.

- Filter list—Filters the Inter-Area Prefix (type 3) LSAs on an ABR that are allowed in from an external area.

ASBRs also support filter lists.

BEFORE YOU BEGIN

Create the route map that the filter list uses to filter ip prefixes in incoming or outgoing Inter-Area Prefix (type 3) LSAs. See [Chapter 15, “Configuring Route Policy Manager.”](#)

Ensure that you have enabled the OSPFv3 feature (see the [“Enabling the OSPFv3 Feature”](#) section on [page 6-13](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3 instance-tag**
3. **address-family ipv6 unicast**
4. **area area-id filter-list route-map map-name {in | out}**
5. **show ipv6 ospfv3 policy statistics area id filter-list {in | out}**
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 instance-tag Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	address-family ipv6 unicast Example: switch(config-router)# address-family ipv6 unicast switch(config-router-af)#	Enters IPv6 unicast address family mode.
Step 4	area area-id filter-list route-map map-name {in out} Example: switch(config-router-af)# area 10 filter-list route-map FilterLSAs in	Filters incoming or outgoing Inter-Area Prefix (type 3) LSAs on an ABR.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 5	show ipv6 ospfv3 policy statistics area <i>id</i> filter-list {in out} Example: switch(config-if)# show ipv6 ospfv3 policy statistics area 10 filter-list in	(Optional) Displays OSPFv3 policy information.
Step 6	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to enable graceful restart if it has been disabled:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# address-family ipv6 unicast
switch(config-router-af)# area 10 filter-list route-map FilterLSAs in
switch(config-router-af)# copy running-config startup-config
```

Configuring Stub Areas

You can configure a stub area for part of an OSPFv3 domain where external traffic is not necessary. Stub areas block AS External (type 5) LSAs, limiting unnecessary routing to and from selected networks. See the “[Stub Area](#)” section on page 6-8. You can optionally block all summary routes from going into the stub area.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the “[Enabling the OSPFv3 Feature](#)” section on page 6-13).

Ensure that there are no virtual links or ASBRs in the proposed stub area.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3 *instance-tag***
3. **area *area-id* stub**
4. **address-family ipv6 unicast**
5. **area *area-id* default-cost *cost***
6. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 instance-tag Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	area area-id stub Example: switch(config-router)# area 10 stub	Creates this area as a stub area.
Step 4	address-family ipv6 unicast Example: switch(config-router)# address-family ipv6 unicast switch(config-router-af)#	(Optional) Enters IPv6 unicast address family mode.
Step 5	area area-id default-cost cost Example: switch(config-router-af)# area 10 default-cost 25	(Optional) Sets the cost metric for the default summary route sent into this stub area. The range is from 0 to 16777215.
Step 6	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a stub area that blocks all summary route updates:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# area 10 stub no-summary
switch(config-router)# copy running-config startup-config
```

Configuring a Totally Stubby Area

You can create a totally stubby area and prevent all summary route updates from going into the stub area.

To create a totally stubby area, use the following command in router configuration mode:

Command	Purpose
area area-id stub no-summary Example: switch(config-router)# area 20 stub no-summary	Creates this area as a totally stubby area.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring NSSA

You can configure an NSSA for part of an OSPFv3 domain where limited external traffic is required. See the [“Not-So-Stubby Area” section on page 6-9](#). You can optionally translate this external traffic to an AS External (type 5) LSA and flood the OSPFv3 domain with this routing information. An NSSA can be configured with the following optional parameters:

- **No redistribution**—Redistributed routes bypass the NSSA and are redistributed to other areas in the OSPFv3 autonomous system. Use this option when the NSSA ASBR is also an ABR.
- **Default information originate**—Generates a Type-7 LSA for a default route to the external autonomous system. Use this option on an NSSA ASBR if the ASBR contains the default route in the routing table. This option can be used on an NSSA ABR whether or not the ABR contains the default route in the routing table.
- **Route map**—Filters the external routes so that only those routes you want are flooded throughout the NSSA and other areas.
- **Translate**—Translates Type-7 LSAs to AS External (type 5) LSAs for areas outside the NSSA. Use this command on an NSSA ABR to flood the redistributed routes throughout the OSPFv3 autonomous system. You can optionally suppress the forwarding address in these AS External LSAs.
- **No summary**—Blocks all summary routes from flooding the NSSA. Use this option on the NSSA ABR.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv3 Feature” section on page 6-13](#)).

Ensure that there are no virtual links in the proposed NSSA and that it is not the backbone area.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3 *instance-tag***
3. **area *area-id* nssa [no-redistribution] [default-information-originate [route-map *map-name*]] [no-summary] [translate type7 {always | never}] [suppress-fa]**
4. **address-family ipv6 unicast**
5. **area *area-id* default-cost *cost***
6. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 instance-tag Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	area area-id nssa [no-redistribution] [default-information-originate] [route-map map-name] [no-summary] [translate type7 {always never}] [suppress-fa] Example: switch(config-router)# area 10 nssa	Creates this area as an NSSA.
Step 4	address-family ipv6 unicast Example: switch(config-router)# address-family ipv6 unicast switch(config-router-af)#	(Optional) Enters IPv6 unicast address family mode.
Step 5	area area-id default-cost cost Example: switch(config-router-af)# area 10 default-cost 25	(Optional) Sets the cost metric for the default summary route sent into this NSSA. The range is from 0 to 16777215.
Step 6	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create an NSSA that blocks all summary route updates:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# area 10 nssa no-summary
switch(config-router)# copy running-config startup-config
```

The following example shows how to create an NSSA that generates a default route;

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# area 10 nssa default-info-originate
switch(config-router)# copy running-config startup-config
```

The following example shows how to create an NSSA that filters external routes and blocks all summary route updates:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# area 10 nssa route-map ExternalFilter no-summary
switch(config-router)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to create an NSSA that always translates Type-7 LSAs to AS External (type 5) LSAs:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# area 10 nssa translate type 7 always
switch(config-router)# copy running-config startup-config
```

The following example shows how to create an NSSA that blocks all summary route updates:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# area 10 nssa no-summary
switch(config-router)# copy running-config startup-config
```

Configuring Virtual Links

A virtual link connects an isolated area to the backbone area through an intermediate area. See the [“Virtual Links” section on page 6-9](#). You can configure the following optional parameters for a virtual link:

- Authentication—Sets simple password or MD5 message digest authentication and associated keys.
- Dead interval—Sets the time that a neighbor waits for a Hello packet before declaring the local router as dead and tearing down adjacencies.
- Hello interval—Sets the time between successive Hello packets.
- Retransmit interval—Sets the estimated time between successive LSAs.
- Transmit delay—Sets the estimated time to transmit an LSA to a neighbor.



Note

You must configure the virtual link on both routers involved before the link becomes active.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv3 Feature” section on page 6-13](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3 *instance-tag***
3. **area *area-id* virtual-link *router-id***
4. **show ipv6 ospfv3 virtual-link [brief]**
5. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 instance-tag Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	area area-id virtual-link router-id Example: switch(config-router)# area 10 virtual-link 2001:0DB8::1 switch(config-router-vlink)#	Creates one end of a virtual link to a remote router. You must create the virtual link on that remote router to complete the link.
Step 4	show ipv6 ospfv3 virtual-link [brief] Example: switch(config-if)# show ipv6 ospfv3 virtual-link	(Optional) Displays OSPFv3 virtual link information.
Step 5	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

You can configure the following optional commands in virtual link configuration mode:

Command or Action	Purpose
dead-interval seconds Example: switch(config-router-vlink)# dead-interval 50	(Optional) Configures the OSPFv3 dead interval, in seconds. The range is from 1 to 65535. The default is four times the hello interval, in seconds.
hello-interval seconds Example: switch(config-router-vlink)# hello-interval 25	(Optional) Configures the OSPFv3 hello interval, in seconds. The range is from 1 to 65535. The default is 10 seconds.
retransmit-interval seconds Example: switch(config-router-vlink)# retransmit-interval 50	(Optional) Configures the OSPFv3 retransmit interval, in seconds. The range is from 1 to 65535. The default is 5.
transmit-delay seconds Example: switch(config-router-vlink)# transmit-delay 2	(Optional) Configures the OSPFv3 transmit-delay, in seconds. The range is from 1 to 450. The default is 1.

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to create a simple virtual link between two ABRs:

Configuration for ABR 1 (router ID 2001:0DB8::1) is as follows:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# area 10 virtual-link 2001:0DB8::10
switch(config-router)# copy running-config startup-config
```

Configuration for ABR 2 (router ID 2001:0DB8::10) is as follows:

```
switch# config t
switch(config)# router ospf 101
switch(config-router)# area 10 virtual-link 2001:0DB8::1
switch(config-router)# copy running-config startup-config
```

Configuring Redistribution

You can redistribute routes learned from other routing protocols into an OSPFv3 autonomous system through the ASBR.

You can configure the following optional parameters for route redistribution in OSPF:

- **Default information originate**—Generates an AS External (type 5) LSA for a default route to the external autonomous system.
- **Default metric**—Sets all redistributed routes to the same cost metric.

BEFORE YOU BEGIN

Create the necessary route maps used for redistribution.

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv3 Feature”](#) section on page 6-13).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3 *instance-tag***
3. **address-family ipv6 unicast**
4. **redistribute {bgp *id* | direct | isis *id* | rip *id* | static} route-map *map-name***
5. **default-information originate [always] [route-map *map-name*]**
6. **default-metric *cost***
7. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 instance-tag Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	address-family ipv6 unicast Example: switch(config-router)# address-family ipv6 unicast switch(config-router-af)#	Enters IPv6 unicast address family mode.
Step 4	redistribute {bgp id direct isis id rip id static} route-map map-name Example: switch(config-router-af)# redistribute bgp route-map FilterExternalBGP	Redistributes the selected protocol into OSPFv3, through the configured route map.
Step 5	default-information originate [always] [route-map map-name] Example: switch(config-router-af)# default-information-originate route-map DefaultRouteFilter	Creates a default route into this OSPFv3 domain.
Step 6	default-metric cost Example: switch(config-router-af)# default-metric 25	Sets the cost metric for the redistributed routes. The range is from 1 to 16777214.
Step 7	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to redistribute the Border Gateway Protocol (BGP) into OSPFv3:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# address-family ipv6 unicast
switch(config-router)# redistribute bgp route-map FilterExternalBGP
switch(config-router)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Route Summarization

You can configure route summarization for inter-area routes by configuring an address range that is summarized. You can also configure route summarization for external, redistributed routes by configuring a summary address for those routes on an ASBR. See the [“Route Summarization” section on page 6-10](#).

BEFORE YOU BEGIN

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv3 Feature” section on page 6-13](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3 instance-tag**
3. **address-family ipv6 unicast**
4. **area area-id range ipv6-prefix/length [no-advertise]**
or
5. **summary-address ipv6-prefix/length [no-advertise] [tag tag]**
6. **show ipv6 ospfv3 summary-address**
7. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 instance-tag Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	address-family ipv6 unicast Example: switch(config-router)# address-family ipv6 unicast switch(config-router-af)#	Enters IPv6 unicast address family mode.
Step 4	area area-id range ipv6-prefix/length [no-advertise] Example: switch(config-router-af)# area 10 range 2001:0DB8::/48 advertise	Creates a summary address on an ABR for a range of addresses. Optionally advertises this summary address in a Inter-Area Prefix (type 3) LSA.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 5	summary-address <i>ipv6-prefix/length</i> [no-advertise] [tag tag] Example: switch(config-router-af)# summary-address 2001:0DB8::/48 tag 2	Creates a summary address on an ASBR for a range of addresses and optionally assigns a tag for this summary address that can be used for redistribution with route maps.
Step 6	show ipv6 ospfv3 summary-address Example: switch(config-router)# show ipv6 ospfv3 summary-address	(Optional) Displays information about OSPFv3 summary addresses.
Step 7	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create summary addresses between areas on an ABR:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# address-family ipv6 unicast
switch(config-router)# area 10 range 2001:0DB8::/48
switch(config-router)# copy running-config startup-config
```

The following example shows how to create summary addresses on an ASBR:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# address-family ipv6 unicast
switch(config-router)# summary-address 2001:0DB8::/48
switch(config-router)# copy running-config startup-config
```

Modifying the Default Timers

OSPFv3 includes a number of timers that control the behavior of protocol messages and shortest path first (SPF) calculations. OSPFv3 includes the following optional timer parameters:

- LSA arrival time—Sets the minimum interval allowed between LSAs arriving from a neighbor. LSAs that arrive faster than this time are dropped.
- Pacing LSAs—Set the interval at which LSAs are collected into a group and refreshed, checksummed, or aged. This timer controls how frequently LSA updates occur and optimizes how many are sent in an LSA update message (see the [“Flooding and LSA Group Pacing”](#) section on page 6-6).
- Throttle LSAs—Set rate limits for generating LSAs. This timer controls how frequently an LSA is generated if no topology change occurs.
- Throttle SPF calculation—Controls how frequently the SPF calculation is run.

At the interface level, you can also control the following timers:

- Retransmit interval—Sets the estimated time between successive LSAs.
- Transmit delay—Sets the estimated time to transmit an LSA to a neighbor.

See the [“Configuring Networks in OSPFv3”](#) section on page 6-16 for information on the hello interval and dead timer.

Send document comments to nexus7k-docfeedback@cisco.com.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3 *instance-tag***
3. **timers lsa-arrival *msec***
4. **timers lsa-group-pacing *seconds***
5. **timers throttle *hold-interval***
6. **address-family ipv6 unicast**
7. **timers throttle spf *delay-time hold-time***
8. **interface *type slot/port***
9. **ospfv3 retransmit-interval *seconds***
10. **ospfv3 transmit-delay *seconds***
11. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 <i>instance-tag</i> Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	timers lsa-arrival <i>msec</i> Example: switch(config-router)# timers lsa-arrival 2000	Sets the LSA arrival time in milliseconds. The range is from 10 to 600000. The default is 1000 milliseconds.
Step 4	timers lsa-group-pacing <i>seconds</i> Example: switch(config-router)# timers lsa-group-pacing 2000	Sets the interval in seconds for grouping LSAs. The range is from 1 to 1800. The default is 240 seconds.
Step 5	timers throttle lsa <i>hold-interval</i> Example: switch(config-router)# timers throttle lsa 3000	Sets the rate limit in milliseconds for generating LSAs. The range is from 10 to 600000. The default is 5000 milliseconds.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 6	address-family ipv6 unicast Example: switch(config-router)# address-family ipv6 unicast switch(config-router-af)#	Enters IPv6 unicast address family mode.
Step 7	timers throttle spf delay-time hold-time Example: switch(config-router)# timers throttle spf 3000 2000	Sets the SPF best path schedule initial delay time and the minimum hold time in seconds between SPF best path calculations. The range is from 1 to 600000. The default is no delay time and 5000 millisecond hold time.
Step 8	interface type slot/port Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 9	ospfv3 retransmit-interval seconds Example: switch(config-if)# ospfv3 retransmit-interval 30	Sets the estimated time in seconds between LSAs transmitted from this interface. The range is from 1 to 65535. The default is 5.
Step 10	ospfv3 transmit-delay seconds Example: switch(config-if)# ospfv3 transmit-delay 600 switch(config-if)#	Sets the estimated time in seconds to transmit an LSA to a neighbor. The range is from 1 to 450. The default is 1.
Step 11	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to control LSA flooding with the lsa-group-pacing option:

```
switch# config t
switch(config)# router ospf 201
switch(config-router)# timers lsa-group-pacing 300
switch(config-router)# copy running-config startup-config
```

Configuring Graceful Restart

Graceful restart is enabled by default. You can configure the following optional parameters for graceful restart in an OSPFv3 instance:

- Grace period—Configures how long neighbors should wait after a graceful restart has started before tearing down adjacencies.
- Helper mode disabled—Disables helper mode on the local OSPFv3 instance. OSPFv3 will not participate in the graceful restart of a neighbor.
- Planned graceful restart only—Configures OSPFv3 to support graceful restart only in the event of a planned restart.

Send document comments to nexus7k-docfeedback@cisco.com.

BEFORE YOU BEGIN

Ensure that you have enabled the OSPFv3 feature (see the “[Enabling the OSPFv3 Feature](#)” section on page 6-13).

Ensure that all neighbors are configured for graceful restart with matching optional parameters set.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router ospfv3** *instance-tag*
3. **graceful-restart**
4. **graceful-restart grace-period** *seconds*
5. **graceful-restart helper-disable**
6. **graceful-restart planned-only**
7. **show ipv6 ospfv3** *instance-tag*
8. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospfv3 <i>instance-tag</i> Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 3	graceful-restart Example: switch(config-router)# graceful-restart	Enables graceful restart. A graceful restart is enabled by default.
Step 4	graceful-restart grace-period <i>seconds</i> Example: switch(config-router)# graceful-restart grace-period 120	Sets the grace period, in seconds. The range is from 5 to 1800. The default is 60 seconds.
Step 5	graceful-restart helper-disable Example: switch(config-router)# graceful-restart helper-disable	Disables helper mode. Enabled by default.
Step 6	graceful-restart planned-only Example: switch(config-router)# graceful-restart planned-only	Configures graceful restart for planned restarts only.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 7	show ipv6 ospfv3 instance-tag Example: switch(config-if)# show ipv6 ospfv3 201	(Optional) Displays OSPFv3 information.
Step 8	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to enable graceful restart if it has been disabled, and set the grace period to 120 seconds:

```
switch# config t
switch(config)# router ospfv3 201
switch(config-router)# graceful-restart
switch(config-router)# graceful-restart grace-period 120
switch(config-router)# copy running-config startup-config
```

Restarting an OSPFv3 Instance

You can restart an OSPFv3 instance. This clears all neighbors for the instance.

To restart an OSPFv3 instance and remove all associated neighbors, use the following command:

Command	Purpose
restart ospfv3 instance-tag Example: switch(config)# restart ospfv3 201	Restarts the OSPFv3 instance and removes all neighbors.

Configuring OSPFv3 with Virtualization

You can configure multiple OSPFv3 instances in each VDC. You can also create multiple VRFs within each VDC and use the same or multiple OSPFv3 instances in each VRF. You assign an OSPFv3 interface to a VRF.



Note

Configure all other parameters for an interface after you configure the VRF for an interface. Configuring a VRF for an interface deletes all the configuration for that interface.

BEFORE YOU BEGIN

Create the VDCs.

Ensure that you have enabled the OSPF feature (see the [“Enabling the OSPFv3 Feature”](#) section on page 6-13).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. **config t**
2. **vrf context** *vrf_name*
3. **router ospfv3** *instance-tag*
4. **vrf** *vrf-name*
5. <optional parameters configured>
6. **interface** *type slot/port*
7. **vrf member** *vrf-name*
8. **ipv6 address** *ipv6-prefix/length*
9. **ipv6 ospfv3** *instance-tag area area-id*
10. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	vrf context <i>vrf-name</i> Example: switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode.
Step 3	router ospfv3 <i>instance-tag</i> Example: switch(config)# router ospfv3 201 switch(config-router)#	Creates a new OSPFv3 instance with the configured instance tag.
Step 4	vrf <i>vrf-name</i> Example: switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#	Enters VRF configuration mode.
Step 5	maximum-paths <i>paths</i> Example: switch(config-router-vrf)# maximum-paths 4	(Optional) Configures the maximum number of equal OSPFv3 paths to a destination in the route table for this VRF. Used for load balancing.
Step 6	interface <i>type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 7	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 8	ipv6 address <i>ipv6-prefix/length</i> Example: switch(config-if)# ipv6 address 2001:0DB8::1/48	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 9	ipv6 ospfv3 <i>instance-tag area area-id</i> Example: switch(config-if)# ipv6 ospfv3 201 area 0	Assigns this interface to the OSPFv3 instance and area configured.
Step 10	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a VRF and add an interface to the VRF:

```
switch# config t
switch(config)# vrf context NewVRF
switch(config-vrf)# exit
switch(config)# router ospfv3 201
switch(config-router)# exit
switch(config)# interface ethernet 1/2
switch(config-if)# vrf member NewVRF
switch(config-if)# ipv6 address 2001:0DB8::1/48
switch(config-if)# ipv6 ospfv3 201 area 0
switch(config-if)# copy running-config startup-config
```

Verifying OSPFv3 Configuration

To verify OSPFv3 configuration, use one of the following commands:

Command	Purpose
show ipv6 ospfv3	Displays the OSPFv3 configuration.
show ipv6 ospfv3 border-routers	Displays the internal OSPF routing table entries to an ABR and ASBR.
show ipv6 ospfv3 database	Displays lists of information related to the OSPFv3 database for a specific router.
show ipv6 ospfv3 interface <i>type number</i> [vrf { <i>vrf-name</i> all default management }]	Displays the OSPFv3 interface configuration.
show ipv6 ospfv3 neighbors	Displays the neighbor information. Use the clear ospfv3 neighbors command to remove adjacency with all neighbors.
show ipv6 ospfv3 request-list	Displays a list of LSAs requested by a router.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
show ipv6 ospfv3 retransmission-list	Displays a list of LSAs waiting to be retransmitted.
show ipv6 ospfv3 summary-address	Displays a list of all summary address redistribution information configured under an OSPFv3 instance.
show running-configuration ospfv3	Displays the current running OSPFv3 configuration.

Displaying OSPFv3 Statistics

To display OSPFv3 statistics, use the following commands:

Command	Purpose
show ipv6 ospfv3 memory	Displays the OSPFv3 memory usage statistics.
show ipv6 ospfv3 policy statistics area <i>area-id</i> filter-list {in out} [vrf {<i>vrf-name</i> all default management}]	Displays the OSPFv3 route policy statistics for an area.
show ipv6 ospfv3 policy statistics redistribute {bgp <i>id</i> direct isis <i>id</i> rip <i>id</i> static} vrf {<i>vrf-name</i> all default management}}	Displays the OSPFv3 route policy statistics.
show ipv6 ospfv3 statistics [vrf {<i>vrf-name</i> all default management}]	Displays the OSPFv3 event counters.
show ipv6 ospfv3 traffic [<i>interface-type number</i>] [vrf {<i>vrf-name</i> all default management}]	Displays the OSPFv3 packet counters.

OSPFv3 Example Configuration

The following example shows how to configure OSPFv3:

```
feature ospfv3
router ospfv3 201
  router-id 290.0.2.1

interface ethernet 1/2
  ipv6 address 2001:0DB8::1/48
  ipv6 ospfv3 201 area 10
```

Related Topics

The following topics can give more information on OSPF:

- [Chapter 5, “Configuring OSPFv2”](#)

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

- [Chapter 15, “Configuring Route Policy Manager”](#)

Default Settings

[Table 6-2](#) lists the default settings for OSPFv3 parameters.

Table 6-2 **Default OSPFv3 Parameters**

Parameters	Default
Hello interval	10 seconds
Dead interval	40 seconds
Graceful restart grace period	60 seconds
Graceful restart notify period	15 seconds
OSPFv3 feature	Disabled
Stub router advertisement announce time	600 seconds
Reference bandwidth for link cost calculation	40 Gb/s
LSA minimal arrival time	1000 milliseconds
LSA group pacing	240 seconds
SPF calculation initial delay time	0 milliseconds
SPF calculation hold time	5000 milliseconds
SPF calculation initial delay time	0 milliseconds

Additional References

For additional information related to implementing OSPF, see the following sections:

- [Related Documents, page 6-39](#)
- [MIBs, page 6-39](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
OSPFv3 CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

MIBs

MIBs	MIBs Link
<ul style="list-style-type: none">• OSPF-MIB• OSPF-TRAP-MIB	To locate and download MIBs, go to the following URL: http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

Feature History for OSPFv3

Table 6-3 lists the release history for this feature.

Table 6-3 Feature History for IOSPFv3

Feature Name	Releases	Feature Information
OSPFv3	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 7

Configuring EIGRP

This chapter describes how to configure the Enhanced Interior Gateway Routing Protocol (*EIGRP*).

This chapter includes the following sections:

- [Information About EIGRP, page 7-1](#)
- [Licensing Requirements for EIGRP, page 7-8](#)
- [Prerequisites for EIGRP, page 7-8](#)
- [Configuration Guidelines and Limitations, page 7-8](#)
- [Configuring Basic EIGRP, page 7-9](#)
- [Configuring Advanced EIGRP, page 7-14](#)
- [Configuring Virtualization for EIGRP, page 7-25](#)
- [Verifying EIGRP Configuration, page 7-27](#)
- [Displaying EIGRP Statistics, page 7-27](#)
- [EIGRP Example Configuration, page 7-27](#)
- [Related Topics, page 7-28](#)
- [Default Settings, page 7-28](#)
- [Additional References, page 7-28](#)
- [Feature History for EIGRP, page 7-29](#)

Information About EIGRP

EIGRP combines the benefits of distance vector protocols with the features of link-state protocols. EIGRP sends out periodic Hello messages for neighbor discovery. Once EIGRP learns a new neighbor, it sends a one-time update of all the local EIGRP routes and route metrics. The receiving EIGRP router calculates the route distance based on the received metrics and the locally assigned cost of the link to that neighbor. After this initial full route table update, EIGRP sends incremental updates to only those neighbors affected by the route change. This process speeds convergence and minimizes the bandwidth used by EIGRP.

This section includes the following topics:

- [EIGRP Components, page 7-2](#)
- [EIGRP Route Updates, page 7-3](#)
- [Advanced EIGRP, page 7-4](#)

Send document comments to nexus7k-docfeedback@cisco.com.

EIGRP Components

EIGRP has the following basic components:

- [Reliable Transport Protocol, page 7-2](#)
- [Neighbor Discovery and Recovery, page 7-2](#)
- [Diffusing Update Algorithm, page 7-2](#)

Reliable Transport Protocol

The [Reliable Transport Protocol](#) guarantees ordered delivery of EIGRP packets to all neighbors. (See the [“Neighbor Discovery and Recovery” section on page 7-2](#).) The Reliable Transport Protocol supports an intermixed transmission of multicast and unicast packets. The reliable transport can send multicast packets quickly when unacknowledged packets are pending. This provision helps to ensure that the convergence time remains low for various speed links. See the [“Configuring Advanced EIGRP” section on page 7-14](#) for details about modifying the default timers that control the multicast and unicast packet transmissions.

The Reliable Transport Protocol includes the following message types:

- Hello—Used for neighbor discovery and recovery. By default, EIGRP sends a periodic multicast Hello message on the local network at the configured [hello interval](#). By default, the hello interval is 5 seconds.
- Acknowledgement—Verify reliable reception of Updates, Queries, and Replies.
- Updates—Send to affected neighbors when routing information changes. Updates include the route destination, address mask, and route metrics such as delay and bandwidth. The update information is stored in the EIGRP topology table.
- Queries and Replies—Sent as necessary as part of the Diffusing Update Algorithm used by EIGRP.

Neighbor Discovery and Recovery

EIGRP uses the Hello messages from the Reliable Transport Protocol to discover neighboring EIGRP routers on directly attached networks. EIGRP adds neighbors to the neighbor table. The information in the neighbor table includes the neighbor address, the interface it was learned on, and the [hold time](#), which indicates how long EIGRP should wait before declaring a neighbor unreachable. By default, the hold time is three times the hello interval or 15 seconds.

EIGRP sends a series of Update messages to new neighbors to share the local EIGRP routing information. This route information is stored in the EIGRP topology table. After this initial transmission of the full EIGRP route information, EIGRP sends Update messages only when a routing change occurs. These Update messages contain only the new or changed information and are sent only to the neighbors affected by the change. See the [“EIGRP Route Updates” section on page 7-3](#).

EIGRP also uses the Hello messages as a keepalive to its neighbors. As long as Hello messages are received, Cisco NX-OS can determine that a neighbor is alive and functioning.

Diffusing Update Algorithm

The [Diffusing Update Algorithm](#) (DUAL) calculates the routing information based on the destination networks in the topology table. The topology table includes the following information:

- IPv4 or IPv6 address/mask—The network address and network mask for this destination.

Send document comments to nexus7k-docfeedback@cisco.com.

- Successors—The IP address and local interface connection for all *feasible successors* or neighbors that advertise a shorter distance to the destination than the current *feasible distance*.
- Feasibility distance (FD)—The lowest calculated distance to the destination. The feasibility distance is the sum of the advertised distance from a neighbor plus the cost of the link to that neighbor.

DUAL uses the distance metric to select efficient, loop-free paths. DUAL selects routes to insert into the unicast Routing Information Base (RIB) based on feasible successors. When a topology change occurs, DUAL looks for feasible successors in the topology table. If there are feasible successors, DUAL selects the feasible successor with the lowest feasible distance and inserts that into the unicast RIB, avoiding unnecessary recomputation.

When there are no feasible successors but there are neighbors advertising the destination, DUAL transitions from the passive state to the active state and triggers a recomputation to determine a new successor or next-hop router to the destination. The amount of time required to recompute the route affects the convergence time. EIGRP sends Query messages to all neighbors, searching for feasible successors. Neighbors that have a feasible successor send a Reply message with that information. Neighbors that do not have feasible successors trigger a DUAL recomputation.

EIGRP Route Updates

When a topology change occurs, EIGRP sends an Update message with only the changed routing information to affected neighbors. This Update message includes the distance information to the new or updated network destination.

The distance information in EIGRP is represented as a composite of available route metrics, including bandwidth, delay, load utilization, and link reliability. Each metric has an associated weight that determines if the metric is included in the distance calculation. You can configure these metric weights. You can fine-tune link characteristics to achieve optimal paths, but we recommend that you use the default settings for most configurable metrics.

This section includes the following topics:

- [Internal Route Metrics, page 7-3](#)
- [External Route Metrics, page 7-4](#)
- [EIGRP and the Unicast RIB, page 7-4](#)

Internal Route Metrics

Internal routes are routes that occur between neighbors within the same EIGRP autonomous system. These routes have the following metrics:

- Next hop—The IP address of the next-hop router.
- Delay—The sum of the delays configured on the interfaces that make up the route to the destination network. Configured in tens of microseconds.
- Bandwidth—The calculation from the lowest configured bandwidth on an interface that is part of the route to the destination.



Note We recommend that you use the default bandwidth value. This bandwidth parameter is also used by EIGRP.

- MTU—The smallest maximum transmission unit value along the route to the destination.

Send document comments to nexus7k-docfeedback@cisco.com.

- Hop count—The number of hops or routers that the route passes through to the destination. This metric is not directly used in the DUAL computation.
- Reliability—An indication of the reliability of the links to the destination.
- Load—An indication of how much traffic is on the links to the destination.

By default, EIGRP uses the bandwidth and delay metrics to calculate the distance to the destination. You can modify the metric weights to include the other metrics in the calculation.

External Route Metrics

External routes are routes that occur between neighbors in different EIGRP autonomous systems. These routes have the following metrics:

- Next hop—The IP address of the next-hop router.
- Router ID—The router ID of the router that redistributed this route into EIGRP.
- AS Number—The autonomous system number of the destination.
- Protocol ID—A code that represents the routing protocol that learned the destination route.
- Tag—An arbitrary tag that can be used for route maps.
- Metric—The route metric for this route from the external routing protocol.

EIGRP and the Unicast RIB

EIGRP adds all learned routes to the EIGRP topology table and the unicast RIB. When a topology change occurs, EIGRP uses these routes to search for a feasible successor. EIGRP also listens for notifications from the unicast RIB for changes in any routes redistributed to EIGRP from another routing protocol.

Advanced EIGRP

You can use the advanced features of EIGRP to optimize your EIGRP configuration.

This section includes the following topics:

- [Address Families, page 7-5](#)
- [Authentication, page 7-5](#)
- [Stub Routers, page 7-5](#)
- [Route Summarization, page 7-6](#)
- [Route Redistribution, page 7-6](#)
- [Load Balancing, page 7-6](#)
- [Split Horizon, page 7-6](#)
- [Virtualization Support, page 7-7](#)
- [Graceful Restart and High Availability, page 7-7](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Address Families

EIGRP supports both IPv4 and IPv6 address families. For backward compatibility, you can configure EIGRPv4 in route configuration mode or in IPV4 address family mode. You must configure EIGRP for IPv6 in address family mode.

Address family configuration mode includes the following EIGRP features:

- Authentication
- AS number
- Default route
- Metrics
- Distance
- Graceful restart
- Logging
- Load balancing
- Redistribution
- Router ID
- Stub router
- Timers

Authentication

You can configure authentication on EIGRP messages to prevent unauthorized or invalid routing updates in your network. EIGRP authentication supports MD5 authentication digest.

You can configure the EIGRP authentication per virtual routing and forwarding (VRF) instance or interface using key-chain management for the authentication keys. Key-chain management allows you to control changes to the authentication keys used by MD5 authentication digest. See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1* for more details about creating key-chains.

For MD5 authentication, you configure a password that is shared at the local router and all remote EIGRP neighbors. When an EIGRP message is created, Cisco NX-OS creates an MD5 one-way message digest based on the message itself and the encrypted password and sends this digest along with the EIGRP message. The receiving EIGRP neighbor validates the digest using the same encrypted password. If the message has not changed, the calculation is identical and the EIGRP message is considered valid.

MD5 authentication also includes a sequence number with each EIGRP message that is used to ensure that no message is replayed in the network.

Stub Routers

You can use the EIGRP stub routing feature to improve network stability, reduce resource usage, and simplify stub router configuration. Stub routers connect to the EIGRP network through a remote router. See the [“Stub Routing” section on page 1-7](#).

When using EIGRP stub routing, you need to configure the distribution and remote routers to use EIGRP and configure only the remote router as a stub. EIGRP stub routing does not automatically enable summarization on the distribution router. In most cases, you need to configure summarization on the distribution routers.

Send document comments to nexus7k-docfeedback@cisco.com.

Without EIGRP stub routing, even after the routes that are sent from the distribution router to the remote router have been filtered or summarized, a problem might occur. For example, if a route is lost somewhere in the corporate network, EIGRP could send a query to the distribution router. The distribution router could then send a query to the remote router even if routes are summarized. If a problem communicating over the WAN link between the distribution router and the remote router occurs, EIGRP could get stuck in active condition and cause instability elsewhere in the network. EIGRP stub routing allows you to prevent queries to the remote router.

Route Summarization

You can configure a summary aggregate address for a specified interface. Route summarization simplifies route tables by replacing a number of more-specific addresses with an address that represents all the specific addresses. For example, you can replace 10.1.1.0/24, 10.1.2.0/24, and 10.1.3.0/24 with one summary address, 10.1.0.0/16.

If more specific routes are in the routing table, EIGRP advertises the summary address from the interface with a metric equal to the minimum metric of the more specific routes.



Note

EIGRP does not support automatic route summarization.

Route Redistribution

You can use EIGRP to redistribute direct routes, static routes, routes learned by other EIGRP autonomous systems, or routes from other protocols. You configure route map with the redistribution to control which routes are passed into EIGRP. A route map allows you to filter routes based on attributes such as the destination, origination protocol, route type, route tag, and so on. See [Chapter 15, “Configuring Route Policy Manager.”](#)

You also configure the default metric that is used for all imported routes into EIGRP.

Load Balancing

You can use load balancing to allow a router to distribute traffic over all the router network ports that are the same distance from the destination address. Load balancing increases the utilization of network segments which increases effective network bandwidth.

Cisco NX-OS supports the Equal Cost Multiple Paths (ECMP) feature with up to 16 equal-cost paths in the EIGRP route table and the unicast RIB. You can configure EIGRP to load balance traffic across some or all of those paths.



Note

EIGRP in Cisco NX-OS does not support unequal cost load balancing.

Split Horizon

You can use split horizon to ensure that EIGRP never advertises a route out of the interface where it was learned.

Split horizon is a method that controls the sending of EIGRP update and query packets. When you enable split horizon on an interface, Cisco NX-OS does not send update and query packets for destinations that were learned from this interface. Controlling update and query packets in this manner reduces the possibility of routing loops.

Send document comments to nexus7k-docfeedback@cisco.com.

Split horizon with poison reverse configures EIGRP to advertise a learned route as unreachable back through that the interface that EIGRP learned the route from.

EIGRP uses split horizon or split horizon with poison reverse in the following scenarios:

- Exchanging topology tables for the first time between two routers in startup mode.
- Advertising a topology table change.
- Sending a Query message.

By default, the split horizon feature is enabled on all interfaces.

Virtualization Support

Cisco NX-OS supports multiple instances of the EIGRP protocol that runs on the same system. EIGRP supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. See the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

By default, every instance uses the same system router ID. You can optionally configure a unique router ID for each instance.

Graceful Restart and High Availability

Cisco NX-OS supports nonstop forwarding and graceful restart for EIGRP.

You can use nonstop forwarding for EIGRP to forward data packets along known routes in the FIB while the EIGRP routing protocol information is being restored following a failover. With NSF, peer networking devices do not experience routing flaps. During failover, data traffic is forwarded through intelligent modules while the standby supervisor becomes active.

If a Cisco NX-OS system experiences a cold reboot, network does not forward traffic to the system and removes the system from the network topology. In this scenario, EIGRP experiences a stateless restart, and all neighbors are removed. Cisco NX-OS applies the startup configuration, and EIGRP rediscovers the neighbors and shares the full EIGRP routing information again.

A dual supervisor platform that runs Cisco NX-OS can experience a stateful supervisor switchover. Before the switchover occurs, EIGRP uses a graceful restart to announce that EIGRP will be unavailable for some time. During a switchover, EIGRP uses nonstop forwarding to continue forwarding traffic based on the information in the FIB, and the system is not taken out of the network topology.

The graceful restart-capable router uses Hello messages to notify its neighbors that a graceful restart operation has started. When a graceful restart-aware router receives a notification from a graceful restart-capable neighbor that a graceful restart operation is in progress, both routers immediately exchange their topology tables. The graceful restart-aware router then performs the following actions to assist the restarting router:

- The router expires the EIGRP Hello hold timer to reduce the time interval set for Hello messages. This allows the graceful restart-aware router to reply to the restarting router more quickly and reduces the amount of time required for the restarting router to rediscover neighbors and rebuild the topology table.
- The router starts the route-hold timer. This timer sets the period of time that the graceful restart-aware router will hold known routes for the restarting neighbor. The default time period is 240 seconds.

Send document comments to nexus7k-docfeedback@cisco.com.

- The router notes in the peer list that the neighbor is restarting, maintains adjacency, and holds known routes for the restarting neighbor until the neighbor signals that it is ready for the graceful restart-aware router to send its topology table or the route-hold timer expires. If the route-hold timer expires on the graceful restart-aware router, the graceful restart-aware router discards held routes and treats the restarting router as a new router joining the network and reestablishing adjacency.

After the switchover, Cisco NX-OS applies the running configuration, and EIGRP informs the neighbors that it is operational again.



Note

You must enable graceful restart to support in-service software upgrades (ISSU) for EIGRP. If you disable graceful restart, Cisco NX-OS issues a warning that ISSU cannot be supported with this configuration.

Licensing Requirements for EIGRP

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	EIGRP requires an Enterprise Services license. For a complete explanation of the NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Prerequisites for EIGRP

EIGRP has the following prerequisites:

- You must enable the EIGRP feature (see the [“Enabling the EIGRP Feature”](#) section on page 7-9).
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1*).

Configuration Guidelines and Limitations

EIGRP has the following configuration guidelines and limitations:

- A metric configuration (either through the default-metric configuration option or through a route map) is required for redistribution from any other protocol, connected routes, or static routes (see [Chapter 15, “Configuring Route Policy Manager”](#)).
- For graceful restart, an NSF-aware router must be up and completely converged with the network before it can assist an NSF-capable router in a graceful restart operation.
- For graceful restart, neighboring devices participating in the graceful restart must be NSF-aware or NSF-capable.
- Cisco NX-OS EIGRP is compatible with EIGRP in the Cisco IOS software.
- Do not change the metric weights without a good reason. If you change the metric weights, you must apply the change to all EIGRP routers in the same autonomous system.
- Consider using stubs for larger networks.

Send document comments to nexus7k-docfeedback@cisco.com.

- Avoid redistribution between different EIGRP autonomous systems because the EIGRP vector metric will not be preserved.
- The **no {ip | ipv6} next-hop-self** command does not guarantee reachability of the next hop.
- The **{ip | ipv6} passive-interface eigrp** command suppresses neighbors from forming.
- Cisco NX-OS does not support IGRP or connecting IGRP and EIGRP clouds.
- Autosummarization is not enabled by default.
- Cisco NX-OS supports only IP.

**Note**

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring Basic EIGRP

This section includes the following topics:

- [Enabling the EIGRP Feature, page 7-9](#)
- [Creating an EIGRP Instance, page 7-10](#)
- [Restarting an EIGRP Instance, page 7-12](#)
- [Disabling an EIGRP Instance, page 7-13](#)
- [Configuring a Passive Interface for EIGRP, page 7-13](#)
- [Disabling EIGRP on an Interface, page 7-13](#)

Enabling the EIGRP Feature

You must enable the EIGRP feature before you can configure EIGRP.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **feature eigrp**
3. **show feature**
4. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	feature eigrp Example: switch(config)# feature eigrp	Enables the EIGRP feature.
Step 3	show feature Example: switch(config)# show feature	(Optional) Displays information about enabled features.
Step 4	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no feature eigrp** command to disable the EIGRP feature and remove all associated configuration.

Command	Purpose
no feature eigrp Example: switch(config)# no feature eigrp	Disables the EIGRP feature and removes all associated configuration.

Creating an EIGRP Instance

You can create an EIGRP instance and associate an interface with that instance. You assign a unique autonomous system number for this EIGRP process (see the [“Autonomous Systems”](#) section on page 1-5). Routes are not advertised or accepted from other autonomous systems unless you enable route redistribution.

BEFORE YOU BEGIN

Ensure that you have enabled the EIGRP feature (see the [“Enabling the EIGRP Feature”](#) section on page 7-9).

EIGRP must be able to obtain a router ID (for example, a configured loopback address) or you must configure the router ID option.

If you configure an instance tag that does not qualify as an AS number, you must configure the AS number explicitly or this EIGRP instance will remain in the shutdown state.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. **config t**
2. **router eigrp** *instance-tag*
3. **autonomous-system** *as-number*
4. **interface** *interface-type slot/port*
5. **{ip | ipv6} router eigrp** *instance-tag*
6. **show {ip | ipv6} eigrp interfaces**
7. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router eigrp <i>instance-tag</i> Example: switch(config)# router eigrp Test1 switch(config-router)#	Creates a new EIGRP process with the configured instance tag. The instance tag can be any case-sensitive alphanumeric string up to 63 characters. If you configure an <i>instance-tag</i> that does not qualify as an AS number, you must use the autonomous-system command to configure the AS number explicitly or this EIGRP instance will remain in the shutdown state
Step 3	autonomous-system <i>as-number</i> Example: switch(config-router)# autonomous-system 33	(Optional) Configures a unique AS numbr for this EIGRP instance. The range is from 1 to 65535.
Step 4	log-adjacency-changes Example: switch(config-router)# log-adjacency-changes	(Optional). Generates a system message whenever an adjacency changes state. This command is enabled by default.
Step 5	log-neighbor-warnings [<i>seconds</i>] Example: switch(config-router)# log-neighbor-warnings	(Optional) Generates a system message whenever a neighbor warning occurs. You can configure the time between warning messages, from 1 to 65535, in seconds. The default is 10 seconds. This command is enabled by default.
Step 6	interface <i>interface-type slot/port</i> Example: switch(config-router)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode. Use ? to determine the slot and port ranges.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 7	<pre>{ip ipv6} router eigrp instance-tag</pre> <p>Example: switch(config-if)# ip router eigrp Test1</p>	Associates this interface with the configured EIGRP process. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.
Step 8	<pre>show {ip ipv6} eigrp interfaces</pre> <p>Example: switch(config-if)# show ip eigrp interfaces</p>	Displays information about EIGRP interfaces.
Step 9	<pre>copy running-config startup-config</pre> <p>Example: switch(config)# copy running-config startup-config</p>	(Optional) Saves this configuration change.

Use the **no router eigrp** command to remove the EIGRP process and the associated configuration.

Command	Purpose
<pre>no router eigrp instance-tag</pre> <p>Example: switch(config)# no router eigrp Test1</p>	Deletes the EIGRP process and all associated configuration.



Note

You should also remove any EIGRP commands configured in interface mode if you remove the EIGRP process.

The following example shows how to create an EIGRP process and configure an interface for EIGRP:

```
switch# config t
switch(config)# router eigrp Test1
switch(config)# interface ethernet 1/2
switch(config-if)# ip router eigrp Test1
switch(config-if)# no shutdown
switch(config-if)# copy running-config startup-config
```

For more information about other EIGRP parameters, see the [“Configuring Advanced EIGRP” section on page 7-14](#).

Restarting an EIGRP Instance

You can restart an EIGRP instance. This clears all neighbors for the instance.

To restart an EIGRP instance and remove all associated neighbors, use the following commands:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
flush-routes Example: switch(config)# flush-routes	(Optional) Flushes all EIGRP routes in the unicast RIB when this EIGRP instance restarts.
restart eigrp instance-tag Example: switch(config)# restart eigrp Test1	Restarts the EIGRP instance and removes all neighbors. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.

Disabling an EIGRP Instance

To disable an EIGRP instance, use the following command in router configuration mode:

Command	Purpose
switch(config-router)# shutdown Example: switch(config-router)# shutdown	Disables this instance of EIGRP. The EIGRP router configuration remains.

Configuring a Passive Interface for EIGRP

You can configure a passive interface for EIGRP. A passive interface does not participate in EIGRP adjacency but the network address for the interface remains in the EIGRP topology table.

To configure a passive interface for EIGRP, use the following command in interface configuration mode:

Command	Purpose
{ip ipv6} passive-interface eigrp instance-tag	Suppresses EIGRP hellos, which prevents neighbors from forming and sending routing updates on an EIGRP interface. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.

Disabling EIGRP on an Interface

To disable EIGRP on an interface, use the following command in interface configuration mode:

Command	Purpose
switch(config-if)# {ip ipv6} eigrp instance-tag shutdown Example: switch(config-router)# ip eigrp Test1 shutdown	Disables EIGRP on this interface. The EIGRP interface configuration remains but the network address is not in the topology table and the interface does not participate in EIGRP adjacency. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Advanced EIGRP

This section includes the following topics:

- [Configuring Authentication in EIGRP, page 7-14](#)
- [Configuring EIGRP Stub Routing, page 7-16](#)
- [Configuring a Summary Address for EIGRP, page 7-17](#)
- [Redistributing Routes into EIGRP, page 7-17](#)
- [Configuring Load Balancing in EIGRP, page 7-19](#)
- [Configuring Graceful Restart for EIGRP, page 7-20](#)
- [Adjusting the Interval Between Hello Packets and the Hold Time, page 7-22](#)
- [Disabling Split Horizon, page 7-23](#)
- [Tuning EIGRP, page 7-23](#)

Configuring Authentication in EIGRP

You can configure authentication between neighbors for EIGRP. See the [“Authentication” section on page 7-5](#).

You can configure EIGRP authentication for the EIGRP process or for individual interfaces. Interface EIGRP authentication configuration overrides the EIGRP process-level authentication configuration.

BEFORE YOU BEGIN

Ensure that you have enabled the EIGRP feature (see the [“Enabling the EIGRP Feature” section on page 7-9](#)).

Ensure that all neighbors for an EIGRP process share the same authentication configuration, including the shared authentication key.

Create the key-chain for this authentication configuration. See the *Cisco NX-OS Security Configuration Guide*.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router eigrp** *instance-tag*
3. **address-family** {**ipv4** | **ipv6**} **unicast**
4. **authentication key-chain** *key-chain*
5. **authentication mode md5**
6. **interface** *interface-type slot/port*
7. {**ip** | **ipv6**} **router eigrp** *instance-tag*
8. {**ip** | **ipv6**} **authentication key-chain eigrp** *instance-tag key-chain*
9. {**ip** | **ipv6**} **authentication mode eigrp** *instance-tag md5*
10. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router eigrp instance-tag Example: switch(config)# router eigrp Test1 switch(config-router)#	<p>Creates a new EIGRP process with the configured instance tag. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.</p> <p>If you configure an <i>instance-tag</i> that does not qualify as an AS number, you must use the autonomous-system command to configure the AS number explicitly or this EIGRP instance will remain in the shutdown state</p>
Step 3	address-family {ipv4 ipv6} unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters the address-family configuration mode. This command is optional for IPv4.
Step 4	authentication key-chain key-chain Example: switch(config-router-af)# authentication key-chain routeKeys	Associates a key chain with this EIGRP process for this VRF. The key chain can be any case-sensitive alphanumeric string up to 63 characters.
Step 5	authentication mode md5 Example: switch(config-router-af)# authentication mode md5	Configures MD5 message digest authentication mode for this VRF.
Step 6	interface interface-type slot/port Example: switch(config-router-af)interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode. Use ? to find the supported interfaces.
Step 7	{ip ipv6} router eigrp instance-tag Example: switch(config-if)# ip router eigrp Test1	Associates this interface with the configured EIGRP process. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.
Step 8	{ip ipv6} authentication key-chain eigrp instance-tag key-chain Example: switch(config-if)# ip authentication key-chain eigrp Test1 routeKeys	<p>Associates a key chain with this EIGRP process for this interface. This configuration overrides the authentication configuration set in the router VRF mode.</p> <p>The instance tag can be any case-sensitive alphanumeric string up to 63 characters.</p>

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 9	<pre>{ip ipv6} authentication mode eigrp instance-tag md5</pre> <p>Example:</p> <pre>switch(config-if)# ip authentication mode eigrp Test1 md5</pre>	<p>Configures the MD5 message digest authentication mode for this interface. This configuration overrides the authentication configuration set in the router VRF mode.</p> <p>The instance tag can be any case-sensitive alphanumeric string up to 63 characters.</p>
Step 10	<pre>copy running-config startup-config</pre> <p>Example:</p> <pre>switch(config)# copy running-config startup-config</pre>	(Optional) Saves this configuration change.

The following example shows how to configure MD5 message digest authentication for EIGRP over Ethernet interface 1/2:

```
switch# config t
switch(config)# router eigrp Test1
switch(config-router)# exit
switch(config)# interface ethernet 1/2
switch(config-if)# ip router eigrp Test1
switch(config-if)# ip authentication key-chain eigrp Test1 routeKeys
switch(config-if)# ip authentication mode eigrp Test1 md5
switch(config-if)# copy running-config startup-config
```

Configuring EIGRP Stub Routing

To configure a router for EIGRP stub routing, use the following command in address-family configuration mode:

Command	Purpose
<pre>switch(config-router-af)# stub [direct receive-only redistributed [direct] leak-map map-name]</pre> <p>Example:</p> <pre>switch(config-router-af)# eigrp stub redistributed</pre>	<p>Configures a remote router as an EIGRP stub router. The map name can be any case-sensitive alphanumeric string up to 63 characters.</p>

The following example shows how to configure a stub router to advertise directly connected and redistributed routes:

```
switch# config t
switch(config)# router eigrp Test1
switch(config-router)# address-family ipv6 unicast
switch(config-router-af)# stub direct redistributed
switch(config-router-af)# copy running-config startup-config
```

Use the **show ip eigrp neighbor detail** command to verify that a router has been configured as a stub router. The last line of the output shows the stub status of the remote or spoke router. The following example shows that output from the **show ip eigrp neighbor detail** command:

```
Router# show ip eigrp neighbor detail
IP-EIGRP neighbors for process 201
```

Send document comments to nexus7k-docfeedback@cisco.com.

```

H   Address                Interface   Hold Uptime   SRTT   RTO   Q   Seq Type
                        (sec)                (ms)      Cnt  Num
0   10.1.1.2                Se3/1       11 00:00:59   1    4500  0   7
Version 12.1/1.2, Retrans: 2, Retries: 0
Stub Peer Advertising ( CONNECTED SUMMARY ) Routes

```

Configuring a Summary Address for EIGRP

You can configure a summary aggregate address for a specified interface. If any more specific routes are in the routing table, EIGRP will advertise the summary address out the interface with a metric equal to the minimum of all more specific routes. See the [“Route Summarization” section on page 7-6](#).

To configure a summary aggregate address, use the following command in interface configuration mode:

Command	Purpose
<pre>switch(config-if)# {ip ipv6} summary-address eigrp instance-tag ip-prefix/length [distance leak-map map-name]</pre> <p>Example:</p> <pre>switch(config-if)# ip summary-address eigrp Test1 192.0.2.0/8</pre>	<p>Configures a summary aggregate address as either an IP address and network mask, or an IP prefix/length. The instance tag and map name can be any case-sensitive alphanumeric string up to 63 characters.</p> <p>You can optionally configure the administrative distance for this aggregate address. The default administrative distance is 5 for aggregate addresses.</p>

The following example causes EIGRP to summarize network 192.0.2.0 out Ethernet 1/2 only:

```
switch(config)# interface ethernet 1/2
switch(config-if)# ip summary-address eigrp Test1 192.0.2.0 255.255.255.0
```

Redistributing Routes into EIGRP

You can redistribute routes in EIGRP from other routing protocols.

BEFORE YOU BEGIN

Ensure that you have enabled the EIGRP feature (see the [“Enabling the EIGRP Feature” section on page 7-9](#)).

You must configure the metric (either through the default-metric configuration option or through a route map) for routes redistributed from any other protocol.

You must create a route map to control the types of routes that are redistributed into EIGRP. See [Chapter 15, “Configuring Route Policy Manager.”](#)

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**

Send document comments to nexus7k-docfeedback@cisco.com.

2. **router eigrp** *instance-tag*
3. **address-family** {**ipv4** | **ipv6**} **unicast**
4. **redistribute** {**bgp as** | {**eigrp** | **isis** | **ospf** | **ospfv3** | **rip**} *instance-tag* | **direct** | **static**} **route-map** *name*
5. **default-metric** *bandwidth delay reliability loading mtu*
6. **show** {**ip** | **ipv6**} **eigrp route-map statistics redistribute**
7. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router eigrp <i>instance-tag</i> Example: switch(config)# router eigrp Test1 switch(config-router)#	<p>Creates a new EIGRP process with the configured instance tag. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.</p> <p>If you configure an <i>instance-tag</i> that does not qualify as an AS number, you must use the autonomous-system command to configure the AS number explicitly or this EIGRP instance will remain in the shutdown state</p>
Step 3	address-family { ipv4 ipv6 } unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters the address-family configuration mode. This command is optional for IPv4.
Step 4	redistribute { bgp as { eigrp isis ospf ospfv3 rip } <i>instance-tag</i> direct static } route-map <i>name</i> Example: switch(config-router-af)# redistribute bgp 100 route-map BGPFilter	Injects routes from one routing domain into EIGRP. The instance tag and map name can be any case-sensitive alphanumeric string up to 63 characters.
Step 5	default-metric <i>bandwidth delay reliability loading mtu</i> Example: switch(config-router-af)# default-metric 500000 30 200 1 1500	<p>Sets the metrics assigned to routes learned through route redistribution. The default values are as follows:</p> <ul style="list-style-type: none"> bandwidth—100000 Kb/s delay—100 (10 microsecond units) reliability—255 loading—1 MTU—1492

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 6	show {ip ipv6} eigrp route-map statistics redistribute Example: switch(config-router-af)# show ip eigrp route-map statistics redistribute bgp	Displays information about EIGRP route map statistics.
Step 7	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to redistribute BGP into EIGRP for IPv4:

```
switch# config t
switch(config)# router eigrp Test1
switch(config-router)# redistribute bgp 100 route-map BGPFilter
switch(config-router)# default-metric 500000 30 200 1 1500
switch(config-router)# copy running-config startup-config
```

Configuring Load Balancing in EIGRP

You can configure load balancing in EIGRP. You can configure the number of Equal Cost Multiple Path (ECMP) routes using the maximum paths option. See the [“Configuring Load Balancing in EIGRP” section on page 7-19](#).

BEFORE YOU BEGIN

Ensure that you have enabled the EIGRP feature (see the [“Enabling the EIGRP Feature” section on page 7-9](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router eigrp *instance-tag***
3. **address-family {ipv4 | ipv6} unicast**
4. **maximum-paths *num-paths***
5. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router eigrp instance-tag Example: switch(config)# router eigrp Test1 switch(config-router)#	Creates a new EIGRP process with the configured instance tag. The instance tag can be any case-sensitive alphanumeric string up to 63 characters. If you configure an <i>instance-tag</i> that does not qualify as an AS number, you must use the autonomous-system command to configure the AS number explicitly or this EIGRP instance will remain in the shutdown state
Step 3	address-family {ipv4 ipv6} unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters the address-family configuration mode. This command is optional for IPv4.
Step 4	maximum-paths num-paths Example: switch(config-router-af)# maximum-paths 5	Sets the number of equal cost paths that EIGRP will accept in the route table. The range is from 1 to 16. The default is 8.
Step 5	copy running-config startup-config Example: switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure equal cost load balancing for EIGRP over IPv4 with a maximum of six equal cost paths:

```
switch# config t
switch(config)# router eigrp Test1
switch(config-router)# maximum-paths 6
switch(config-router)# copy running-config startup-config
```

Configuring Graceful Restart for EIGRP

You can configure graceful restart or nonstop forwarding for EIGRP. See the [“Graceful Restart and High Availability” section on page 7-7](#).



Note

Graceful restart is enabled by default.

Send document comments to nexus7k-docfeedback@cisco.com.

BEFORE YOU BEGIN

Ensure that you have enabled the EIGRP feature (see the “[Enabling the EIGRP Feature](#)” section on page 7-9).

An NSF-aware router must be up and completely converged with the network before it can assist an NSF-capable router in a graceful restart operation.

Neighboring devices participating in the graceful restart must be NSF-aware or NSF-capable.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router eigrp** *instance-tag*
3. **address-family** {*ipv4* | *ipv6*} **unicast**
4. **graceful-restart**
5. **timers nsf converge** *seconds*
6. **timers nsf route-hold** *seconds*
7. **timers nsf signal** *seconds*
8. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router eigrp <i>instance-tag</i> Example: switch(config)# router eigrp Test1 switch(config-router)#	<p>Creates a new EIGRP process with the configured instance tag. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.</p> <p>If you configure an <i>instance-tag</i> that does not qualify as an AS number, you must use the autonomous-system command to configure the AS number explicitly or this EIGRP instance will remain in the shutdown state</p>
Step 3	address-family { <i>ipv4</i> <i>ipv6</i> } unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters the address-family configuration mode. This command is optional for IPv4.
Step 4	graceful-restart Example: switch(config-router-af)# graceful-restart	Enables graceful restart. This feature is enabled by default.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 5	timers nsf converge <i>seconds</i> Example: switch(config-router-af)# timers nsf converge 100	Sets the time limit for the convergence after a switchover. The range is from 60 to 180 seconds. The default is 120.
Step 6	timers nsf route-hold <i>seconds</i> Example: switch(config-router-af)# timers nsf route-hold 200	Sets the hold time for routes learned from the graceful restart-aware peer. The range is from 20 to 300 seconds. The default is 240.
Step 7	timers nsf signal <i>seconds</i> Example: switch(config-router-af)# timers nsf signal 15	Sets the time limit for signaling a graceful restart. The range is from 10 to 30 seconds. The default is 20.
Step 8	copy running-config startup-config Example: switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure graceful restart for EIGRP over IPv6 using the default timer values:

```
switch# config t
switch(config)# router eigrp Test1
switch(config-router)# address-family ipv6 unicast
switch(config-router-af)# graceful-restart
switch(config-router-af)# copy running-config startup-config
```

Adjusting the Interval Between Hello Packets and the Hold Time

You can adjust the interval between Hello messages and the hold time.

By default, Hello messages are sent every 5 seconds. The hold time is advertised in Hello messages and indicates to neighbors the length of time that they should consider the sender valid. The default hold time is three times the hello interval, or 15 seconds.

To change the interval between hello packets, use the following command in interface configuration mode:

Command	Purpose
switch(config-if)# {ip ipv6} hello-interval eigrp <i>instance-tag</i> <i>seconds</i>	Configures the hello interval for an EIGRP routing process. The instance tag can be any case-sensitive alphanumeric string up to 63 characters. The range is from 1 to 65535 seconds. The default is 5.

On very congested and large networks, the default hold time might not be sufficient time for all routers to receive hello packets from their neighbors. In this case, you might want to increase the hold time.

Send document comments to nexus7k-docfeedback@cisco.com.

To change the hold time, use the following command in interface configuration mode:

Command	Purpose
<code>switch(config-if)# {ip ipv6} hold-time eigrp instance-tag seconds</code>	Configures the hold time for an EIGRP routing process. The instance tag can be any case-sensitive alphanumeric string up to 63 characters. The range is from 1 to 65535.

Use the `show ip eigrp interface detail` command to verify timer configuration.

Disabling Split Horizon

You can use split horizon to block route information from being advertised by a router out of any interface from which that information originated. Split horizon usually optimizes communications among multiple routing devices, particularly when links are broken.

By default, split horizon is enabled on all interfaces.

To disable split horizon, use the following command in interface configuration mode:

Command	Purpose
<code>switch(config-if)# no {ip ipv6} split-horizon eigrp instance-tag</code>	Disables split horizon.

Tuning EIGRP

You can configure optional parameters to tune EIGRP for your network.

You can configure the following optional parameters in address-family configuration mode:

Command	Purpose
<code>default-information originate [always route-map map-name]</code> Example: <code>switch(config-router-af)# default-information originate always</code>	Originates or accepts the default route with prefix 0.0.0.0/0. When a route-map is supplied, the default route is originated only when the route map yields a true condition. The map name can be any case-sensitive alphanumeric string up to 63 characters.
<code>distance internal external</code> Example: <code>switch(config-router-af)# distance 25 100</code>	Configures the administrative distance for this EIGRP process. The range is from 1 to 255. The internal value sets the distance for routes learned from within the same autonomous system (the default value is 90). The external value sets the distance for routes learned from an external autonomous system (the default value is 170).

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
metric max-hops <i>hop-count</i> Example: switch(config-router-af)# metric max-hops 70	Sets maximum allowed hops for an advertised route. Routes over this maximum are advertised as unreachable. The range is from 1 to 255. The default is 100.
metric weights <i>tos k1 k2 k3 k4 k5</i> Example: switch(config-router-af)# metric weights 0 1 3 0 1 0	Adjusts the EIGRP metric or K value. EIGRP uses the following formula to determine the total metric to the network: $\text{metric} = [k1 * \text{bandwidth} + (k2 * \text{bandwidth}) / (256 - \text{load}) + k3 * \text{delay}] * [k5 / (\text{reliability} + k4)]$ Default values and ranges are as follows: <ul style="list-style-type: none"> • TOS—0. The range is from 0 to 8. • k1—1. The range is from 0 to 255. • k2—0. The range is from 0 to 255. • k3—1. The range is from 0 to 255. • k4—0. The range is from 0 to 255. • k5—0. The range is from 0 to 255.
timers active-time { <i>time-limit</i> disabled } Example: switch(config-router-af)# timers active-time 200.	Sets the time the router waits in minutes (after sending a query) before declaring the route to be stuck in the active (SIA) state. The range is from 1 to 65535. The default is 3.

You can configure the following optional parameters in interface configuration mode:

Command	Purpose
{ ip ipv6 } bandwidth eigrp <i>instance-tag bandwidth</i>	Configures the bandwidth metric for EIGRP on an interface. The instance tag can be any case-sensitive alphanumeric string up to 63 characters. The bandwidth range is from 1 to 2,560,000,000 Kb/s.
{ ip ipv6 } bandwidth-percent eigrp <i>instance-tag percent</i>	Configures the percentage of bandwidth that EIGRP might use on an interface. The instance tag can be any case-sensitive alphanumeric string up to 63 characters. The percent range is from 0 to 100. The default is 50.
no { ip ipv6 } delay eigrp <i>instance-tag delay</i>	Configures the delay metric for EIGRP on an interface. The instance tag can be any case-sensitive alphanumeric string up to 63 characters. The delay range is from 1 to 16777215 (in tens of microseconds).

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
<code>{ip ipv6} distribute-list eigrp instance-tag {prefix-list name route-map name} {in out}</code>	Configures the route filtering policy for EIGRP on this interface. The instance tag, prefix list name, and route map name can be any case-sensitive alphanumeric string up to 63 characters.
<code>no {ip ipv6} next-hop-self eigrp instance-tag</code>	Configures EIGRP to use the received next-hop address rather than the address for this interface. The default is to use the IP address of this interface for the next-hop address. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.
<code>{ip ipv6} offset-list eigrp instance-tag {prefix-list name route-map name} {in out} offset</code>	Adds an offset to incoming and outgoing metrics to routes learned by EIGRP. The instance tag, prefix list name, and route map name can be any case-sensitive alphanumeric string up to 63 characters.
<code>{ip ipv6} passive-interface eigrp instance-tag</code>	Suppresses EIGRP hellos, which prevents neighbors from forming and sending routing updates on an EIGRP interface. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.

Configuring Virtualization for EIGRP

You can configure multiple EIGRP processes in each VDC. You can also create multiple VRFs within each VDC and use the same or multiple EIGRP processes in each VRF. You assign an interface to a VRF



Note

Configure all other parameters for an interface after you configure the VRF for an interface. Configuring a VRF for an interface deletes all other configuration for that interface.

BEFORE YOU BEGIN

Ensure that you have enabled the EIGRP feature (see the [“Enabling the EIGRP Feature”](#) section on page 7-9).

Create the VDCs and VRFs.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **vrf context** *vrf-name*
3. **router eigrp** *instance-tag*
4. **interface ethernet** *slot/port*
5. **vrf member** *vrf-name*
6. **{ip | ipv6} router eigrp** *instance-tag*

Send document comments to nexus7k-docfeedback@cisco.com.

7. copy running-config startup-config

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	vrf context <i>vrf-name</i> Example: switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode. The VRN name can be any case-sensitive alphanumeric string up to 63 characters.
Step 3	router eigrp <i>instance-tag</i> Example: switch(config)# router eigrp Test1 switch(config-router)#	Creates a new EIGRP process with the configured instance tag. The instance tag can be any case-sensitive alphanumeric string up to 63 characters. If you configure an <i>instance-tag</i> that does not qualify as an AS number, you must use the autonomous-system command to configure the AS number explicitly or this EIGRP instance will remain in the shutdown state
Step 4	interface ethernet <i>slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode. Use ? to find the slot and port ranges.
Step 5	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF. The VRF name can be any case-sensitive alphanumeric string up to 63 characters.
Step 6	{ip ipv6} router eigrp <i>instance-tag</i> Example: switch(config-if)# ip router eigrp Test1	Adds this interface to the EIGRP process. The instance tag can be any case-sensitive alphanumeric string up to 63 characters.
Step 7	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a VRF and add an interface to the VRF:

```
switch# config t
switch(config)# vrf context NewVRF
switch(config-vrf)# router eigrp Test1
switch(config-router)# interface ethernet 1/2
switch(config-if)# ip router eigrp Test1
switch(config-if)# vrf member NewVRF
switch(config-if)# copy running-config startup-config
```


Send document comments to nexus7k-docfeedback@cisco.com.

Verifying EIGRP Configuration

To verify the EIGRP configuration, use the following commands:

Command	Purpose
show {ip ipv6} eigrp [instance-tag]	Displays a summary of the configured EIGRP processes.
show {ip ipv6} eigrp [instance-tag] interfaces [type number] [brief] [detail]	Displays information about all configured EIGRP interfaces.
show {ip ipv6} eigrp instance-tag neighbors [type number] [detail]	Displays information about all the EIGRP neighbors. Use this command to verify the EIGRP neighbor configuration.
show {ip ipv6} eigrp [instance-tag] route [ip-prefix/length] [active] [all-links] [detail-links] [pending] [summary] [zero-successors] [vrf vrf-name]	Displays information about all the EIGRP routes.
show {ip ipv6} eigrp [instance-tag] topology [ip-prefix/length] [active] [all-links] [detail-links] [pending] [summary] [zero-successors] [vrf vrf-name]	Displays information about the EIGRP topology table.
show running-configuration eigrp	Displays the current running EIGRP configuration.

Displaying EIGRP Statistics

To display EIGRP statistics, use the following commands:

Command	Purpose
show {ip ipv6} eigrp [instance-tag] accounting [vrf vrf-name]	Displays accounting statistics for EIGRP.
show {ip ipv6} eigrp [instance-tag] route-map statistics redistribute	Displays redistribution statistics for EIGRP.
show {ip ipv6} eigrp [instance-tag] traffic [vrf vrf-name]	Displays traffic statistics for EIGRP.

EIGRP Example Configuration

The following example shows how to configure EIGRP:

```
feature eigrp
interface ethernet 1/2
 ip address 192.0.2.55/24
 ip router eigrp Test1
 no shutdown
router eigrp Test1
 router-id 192.0.2.1
```

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Related Topics

See [Chapter 15, “Configuring Route Policy Manager”](#) for more information on route maps.

Default Settings

[Table 7-1](#) lists the default settings for EIGRP parameters.

Table 7-1 *Default EIGRP Parameters*

Parameters	Default
Administrative distance	<ul style="list-style-type: none"> Internal routes—90 External routes—170
Bandwidth percent	50 percent
Default metric for redistributed routes	<ul style="list-style-type: none"> bandwidth—100000 Kb/s delay—100 (10 microsecond units) reliability—255 loading—1 MTU—1500
EIGRP feature	Disabled
Hello interval	5 seconds
Hold time	15 seconds
Equal-cost paths	8
Metric weights	1 0 1 0 0
Next-hop address advertised	IP address of local interface
NSF convergence time	120
NSF route-hold time	240
NSF signal time	20
Redistribution	Disabled
Split horizon	Enabled

Additional References

For additional information related to implementing EIGRP, see the following sections:

- [Related Documents, page 7-29](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
EIGRP CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs and VRFs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>
http://www.cisco.com/warp/public/103/1.html	<i>Introduction to EIGRP Tech Note</i>
http://www.cisco.com/en/US/tech/tk365/technologies_q_and_a_item09186a008012dac4.shtml	EIGRP Frequently Asked Questions

MIBs

MIBs	MIBs Link
CISCO-EIGRP-MIB	To locate and download MIBs, go to the following URL: http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

Feature History for EIGRP

Table 7-2 lists the release history for this feature.

Table 7-2 Feature History for EIGRP

Feature Name	Releases	Feature Information
EIGRP IPv6 support	4.1(2)	Added support for IPv6.
EIGRP authentication	4.0(3)	Added the ability to configure authentication within a VRF for EIGRP.
EIGRP	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 8

Configuring IS-IS

This chapter describes how to configure Integrated Intermediate System-to-Intermediate System (IS-IS).

This chapter includes the following sections:

- [Information about IS-IS, page 8-1](#)
- [Licensing Requirements for IS-IS, page 8-6](#)
- [Prerequisites for IS-IS, page 8-6](#)
- [Configuration Guidelines and Limitations, page 8-6](#)
- [Configuring IS-IS, page 8-6](#)
- [Verifying IS-IS Configuration, page 8-26](#)
- [Displaying IS-IS Statistics, page 8-27](#)
- [IS-IS Example Configuration, page 8-28](#)
- [Related Topics, page 8-28](#)
- [Default Settings, page 8-28](#)
- [Default Settings, page 8-28](#)
- [Additional References, page 8-29](#)
- [Feature History for IS-IS, page 8-30](#)

Information about IS-IS

IS-IS is an Interior Gateway Protocol (IGP) based on Standardization (ISO)/International Engineering Consortium (IEC) 10589. Cisco NX-OS supports Internet Protocol version 4 (IPv4). IS-IS is a dynamic link-state routing protocol that can detect changes in the network topology and calculate loop-free routes to other nodes in the network. Each router maintains a link-state database that describes the state of the network and sends packets on every configured link to discover neighbors. IS-IS floods the link-state information across the network to each neighbor. The router also sends advertisements and updates on the link-state database through all the existing neighbors.



Note

Cisco NX-OS does not support IPv6 for IS-IS.

This section includes the following topics:

- [IS-IS Overview, page 8-2](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- [IS-IS Authentication, page 8-3](#)
- [Mesh Groups, page 8-4](#)
- [Overload Bit, page 8-4](#)
- [Route Summarization, page 8-4](#)
- [Route Redistribution, page 8-5](#)
- [Load Balancing, page 8-5](#)
- [Virtualization Support, page 8-5](#)
- [High Availability and Graceful Restart, page 8-5](#)
- [Multiple IS-IS Instances, page 8-5](#)

IS-IS Overview

IS-IS sends a *hello packet* out every configured interface to discover IS-IS neighbor routers. The hello packet contains information, such as the authentication, area, and supported protocols, which the receiving interface uses to determine compatibility with the originating interface. The hello packets are also padded to ensure that IS-IS establishes adjacencies only with interfaces that have matching maximum transmission unit (MTU) settings. Compatible interfaces form adjacencies, which update routing information in the link-state database through link-state update messages (LSPs). By default, the router sends a periodic LSP refresh every 10 minutes and the LSPs remain in the link-state database for 20 minutes (the LSP lifetime). If the router does not receive an LSP refresh before the end of the LSP lifetime, the router deletes the LSP from the database.

The LSP interval must be less than the LSP lifetime or the LSPs time out before they are refreshed.

IS-IS sends periodic hello packets to adjacent routers. If you configure transient mode for hello packets, these hello packets do not include the excess padding used before IS-IS establishes adjacencies. If the MTU value on adjacent routers changes, IS-IS can detect this change and send padded hello packets for a period of time. IS-IS uses this feature to detect mismatched MTU values on adjacent routers. See the “[Configuring the Transient Mode for Hello Padding](#)” section on page 8-17.

IS-IS Areas

You can design IS-IS networks as a single area that includes all routers in the network or as multiple areas that connect into a backbone or Level 2 area. Routers in a nonbackbone area are Level 1 routers which establish adjacencies within a local area (intra-area routing). Level 2 area routers establish adjacencies to other Level 2 routers and perform routing between Level 1 areas (inter-area routing). A router can have both Level 1 and Level 2 areas configured. These Level 1/Level 2 routers act as area border routers which route information from the local area to the Level 2 backbone area (see [Figure 8-1](#)).


Within a Level 1 area, routers know how to reach all other routers in that area. The Level 2 routers know how to reach other area border routers and other Level 2 routers. Level 1/Level 2 routers straddle the boundary between two areas, routing traffic to and from the Level 2 backbone area. Level1/Level2 routers use the attached (ATT) bit signal Level 1 routers to set a default route to this Level1/Level2 router to connect to the Level 2 area.

In some instances, such as when you have two or more Level1/Level 2 routers in an area, you may want to control which Level1/Level2 router that the Level 1 routers use as the default route to the Level 2 area. You can configure which Level1/Level2 router sets the attached bit. See the “[Verifying IS-IS Configuration](#)” section on page 8-26.

Send document comments to nexus7k-docfeedback@cisco.com.

Each IS-IS instance in Cisco NX-OS supports either a single Level 1 or Level 2 area, or one of each. By default, all IS-IS instances automatically support Level 1 and Level 2 routing.

Figure 8-1 *IS-IS Network Divided into Areas*

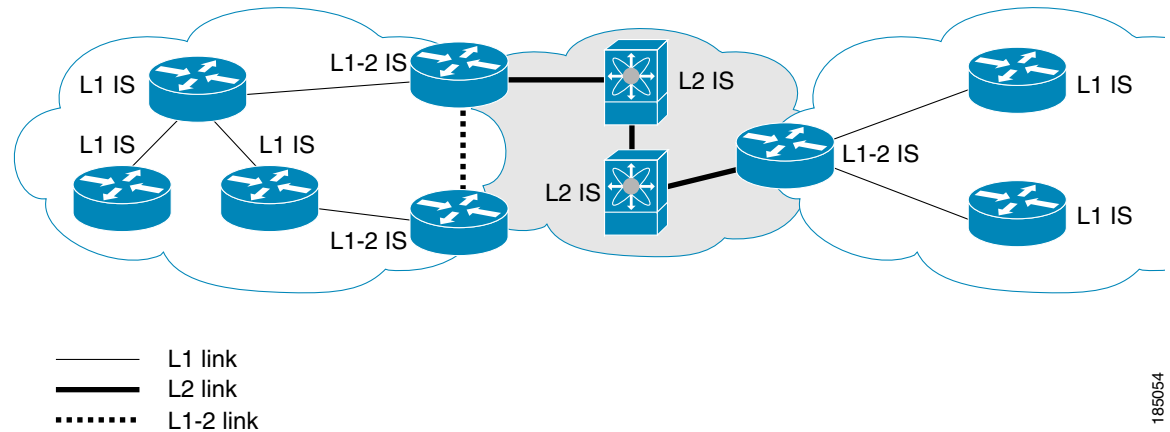

An autonomous system boundary router (ASBR) advertises external destinations throughout the IS-IS autonomous system. External routes are the routes redistributed into IS-IS from any other protocol.

NET and System ID

Each IS-IS instance has an associated network entity title (NET). The NET is comprised of the IS-IS system ID, which uniquely identifies this IS-IS instance in the area and the area ID. For example, if the NET is 47.0004.004d.0001.0001.0c11.1111.00, then the system ID is 0000.0c11.1111.00 and the area is ID 47.0004.004d.0001.

Designated Intermediate System

IS-IS uses a designated intermediate system (DIS) in broadcast networks to prevent each router from forming unnecessary links with every other router on the broadcast network. IS-IS routers send LSPs to the DIS, which manages all the link-state information for the broadcast network. You can configure the IS-IS priority which IS-IS uses to select the DIS in an area.



Note

No DIS is required on a point-to-point network.

IS-IS Authentication

You can configure authentication to control adjacencies and the exchange of LSPs. Routers that want to become neighbors must exchange the same password for their configured level of authentication. IS-IS blocks a router that does not have the correct password. You can configure IS-IS authentication globally or for an individual interface for Level 1, Level 2, or both Level 1/Level 2 routing.

IS-IS supports the following authentication methods:

- Clear text—All packets exchanged carry a cleartext 128-bit password.
- MD5 digest—All packets exchanged carry a message digest that is based on a 128-bit key.

Send document comments to nexus7k-docfeedback@cisco.com.

To provide protection against passive attacks, IS-IS never sends the MD5 secret key as cleartext through the network. In addition, IS-IS includes a sequence number in each packet to protect against replay attacks.

You can use also keychains for hello and LSP authentication. See *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1* for information on keychain management.

Mesh Groups

A *mesh group* is a set of interfaces in which all routers reachable over the interfaces have at least one link to every other router. Many links can fail without isolating one or more routers from the network.

In normal flooding, an interface receives a new LSP and floods the LSP out over all other interfaces on the router. With mesh groups, when an interface that is part of a mesh group receives a new LSP, the interface does not flood the new LSP over the other interfaces that are part of that mesh group.



Note

You may want to limit LSPs in certain mesh network topologies to improve network scalability. Limiting LSP floods may also reduce the reliability of the network (in case of failures). For this reason, we recommend that you use mesh groups only if specifically required, and then only after careful network design.

You can also configure mesh groups in block mode for parallel links between routers. In this mode, all LSPs are blocked on that interface in a mesh group after the routers initially exchange their link-state information.

Overload Bit

IS-IS uses the overload bit to tell other routers not to use the local router to forward traffic but to continue routing traffic destined for that local router.

You may want to use the overload bit in these situations:

- The router is in a critical condition.
- Graceful introduction and removal of the router to/from the network.
- Other (administrative or traffic engineering) reasons. For example, to wait for BGP convergence.

Route Summarization

You can configure a summary aggregate address. Route summarization simplifies route tables by replacing a number of more-specific addresses with an address that represents all the specific addresses. For example, you can replace 10.1.1.0/24, 10.1.2.0/24, and 10.1.3.0/24 with one summary address, 10.1.0.0/16.

If more specific routes are in the routing table, IS-IS advertises the summary address with a metric equal to the minimum metric of the more specific routes.



Note

Cisco NX-OS does not support automatic route summarization.

Send document comments to nexus7k-docfeedback@cisco.com.

Route Redistribution

You can use IS-IS to redistribute static routes, routes learned by other IS-IS autonomous systems, or routes from other protocols. You configure redistribution by using a route policy to control which routes are passed into IS-IS. A route policy allows you to filter routes based on attributes such as the destination, origination protocol, route type, route tag, and so on. For more information, see [Chapter 15, “Configuring Route Policy Manager.”](#)

Whenever you redistribute routes into an IS-IS routing domain, Cisco NX-OS does not, by default, redistribute the default route into the IS-IS routing domain. You can generate a *default route* into IS-IS, which can be controlled by a route policy.

You also configure the default metric that is used for all imported routes into IS-IS.

Load Balancing

You can use load balancing to allow a router to distribute traffic over all the router network ports that are the same distance from the destination address. Load balancing increases the utilization of network segments and increases effective network bandwidth.

Cisco NX-OS supports the Equal Cost Multiple Paths (ECMP) feature with up to 16 equal-cost paths in the IS-IS route table and the unicast RIB. You can configure IS-IS to load balance traffic across some or all of those paths.

Virtualization Support

Cisco NX-OS supports multiple instances of the IS-IS protocol that runs on the same system. IS-IS supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). You can configure up to four IS-IS instances in a VDC.

By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. See the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1e* and [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

High Availability and Graceful Restart

Cisco NX-OS supports RFC 3847 for graceful restart of IS-IS. IS-IS automatically restarts if the process experiences problems. After the restart, IS-IS initiates a graceful restart so that the platform is not taken out of the network topology. If you manually restart IS-IS, it performs a graceful restart and applies the running configuration.



Note

You must enable graceful restart to support in-service software upgrades (ISSU) for IS-IS. If you disable graceful restart, Cisco NX-OS issues a warning that ISSU cannot be supported with this configuration.

Multiple IS-IS Instances

Cisco NX-OS supports a maximum of four instances of the IS-IS protocol that run on the same node. You cannot configure multiple instances over the same interface. Every instance uses the same system router ID.

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Licensing Requirements for IS-IS

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	IS-IS requires an Enterprise Services license. For a complete explanation of the NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Prerequisites for IS-IS

IS-IS has the following prerequisites:

- You must enable the IS-IS feature (see the [“Enabling the IS-IS Feature” section on page 8-7](#)).
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1*).

Configuration Guidelines and Limitations

IS-IS has the following configuration guidelines and limitations:

- You can configure a maximum of four IS-IS instances per VDC.

Configuring IS-IS

To configure IS-IS, follow these steps:

-
- | | |
|---------------|---|
| Step 1 | Enable the IS-IS feature (see the “Enabling the IS-IS Feature” section on page 8-7). |
| Step 2 | Create an IS-IS instance (see the “Creating an IS-IS Instance” section on page 8-8). |
| Step 3 | Add an interface to the IS-IS instance (see the “Shutting Down IS-IS” section on page 8-11). |
| Step 4 | Configure optional features, such as authentication, mesh groups, and dynamic host exchange. |
-

This section contains the following topics:

- [IS-IS Configuration Modes, page 8-7](#)
- [Enabling the IS-IS Feature, page 8-7](#)
- [Creating an IS-IS Instance, page 8-8](#)
- [Restarting an IS-IS Instance, page 8-10](#)
- [Shutting Down IS-IS, page 8-11](#)
- [Shutting Down IS-IS, page 8-11](#)
- [Configuring IS-IS Authentication in an Area, page 8-13](#)
- [Configuring IS-IS Authentication on an Interface, page 8-14](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- [Configuring a Mesh Group, page 8-15](#)
- [Configuring a Designated Intermediate System, page 8-16](#)
- [Configuring Dynamic Host Exchange, page 8-16](#)
- [Setting the Overload Bit, page 8-16](#)
- [Configuring the Attached Bit, page 8-17](#)
- [Configuring a Summary Address, page 8-17](#)
- [Configuring Redistribution, page 8-19](#)
- [Configuring Virtualization, page 8-22](#)
- [Tuning IS-IS, page 8-24](#)

**Note**

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

IS-IS Configuration Modes

The following sections show how to enter each of the configuration modes. From a mode, you can enter the ? command to display the commands available in that mode.

This section includes the following topics:

- [Router Configuration Mode, page 8-7](#)
- [Router Address Family Configuration Mode, page 8-7](#)

Router Configuration Mode

The following example shows how to enter router configuration mode:

```
switch#: config t
switch(config)# router isis isp
switch(config-router)#
```

Router Address Family Configuration Mode

The following example shows how to enter router address family configuration mode:

```
switch(config)# router isis isp
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)#
```

Enabling the IS-IS Feature

You must enable the IS-IS feature before you can configure IS-IS.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. `config t`
2. `feature isis`
3. `show feature`
4. `copy running-config startup-config`

DETAILED STEPS

	Command	Purpose
Step 1	<code>config t</code> Example: <code>switch# config t</code> <code>switch(config)#</code>	Enters configuration mode.
Step 2	<code>feature isis</code> Example: <code>switch(config)# feature isis</code>	Enables the IS-IS feature.
Step 3	<code>show feature</code> Example: <code>switch(config)# show feature</code>	(Optional) Displays enabled and disabled features.
Step 4	<code>copy running-config startup-config</code> Example: <code>switch(config)# copy running-config startup-config</code>	(Optional) Saves this configuration change.

Use the **`no feature isis`** command to disable the IS-IS feature and remove all associated configuration.

Command	Purpose
<code>no feature isis</code> Example: <code>switch(config)# no feature isis</code>	Disables the IS-IS feature and removes all associated configuration.

Creating an IS-IS Instance

You can create an IS-IS instance and configure the area level for that instance.

BEFORE YOU BEGIN

Ensure that you have enabled the IS-IS feature (see the [“Enabling the IS-IS Feature”](#) section on page 8-7).

Ensure that you are in the correct VDC (or use the **`switchto vdc`** command).

SUMMARY STEPS

1. `config t`

Send document comments to nexus7k-docfeedback@cisco.com.

2. **router isis** *instance-tag*
3. **net** *network-entity-title*
4. **is-type** {*level-1* | *level-2* | *level-1-2*}
5. **show isis** [*vrf vrf-name*] **process**
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router isis <i>instance-tag</i> Example: switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured <i>instance tag</i> .
Step 3	net <i>network-entity-title</i> Example: switch(config-router)# net 47.0004.004d.0001.0001.0c11.1111.00	Configures the NET for this IS-IS instance.
Step 4	is-type { <i>level-1</i> <i>level-2</i> <i>level-1-2</i> } Example: switch(config-router)# is-type level-2	(Optional) Configures the area level for this IS-IS instance. The default is level-1-2.
Step 5	show isis [<i>vrf vrf-name</i>] process Example: switch(config)# show isis process	(Optional) Displays a summary of IS-IS information for all IS-IS instances.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no router isis** command to remove the IS-IS instance and the associated configuration.

Command	Purpose
no router isis <i>instance-tag</i> Example: switch(config)# no router isis Enterprise	Deletes the IS-IS instance and all associated configuration.



Note

You must also remove any IS-IS commands configured in interface mode to completely remove all configuration for the IS-IS instance.

Send document comments to nexus7k-docfeedback@cisco.com.

You can configure the following optional parameters for IS-IS:

Command	Purpose
distance <i>value</i> Example: switch(config-router)# distance 30	Sets the administrative distance for IS-IS. The range is from 1 to 255. The default is 115. See the “Administrative Distance” section on page 1-6 .
log-adjacency-changes Example: switch(config-router)# log-adjacency-changes	Sends a system message whenever an IS-IS neighbor changes state.
lsp-mtu <i>size</i> Example: switch(config-router)# lsp-mtu 600	Sets the MTU for LSPs in this IS-IS instance. The range is from 128 to 4352 bytes. The default is 1492.
maximum-paths <i>number</i> Example: switch(config-router)# maximum-paths 6	Configures the maximum number of equal-cost paths that IS-IS maintains in the route table. The range is from 1 to 16. The default is 4.
reference-bandwidth <i>bandwidth-value</i> {Mbps Gbps} Example: switch(config-router)# reference-bandwidth 100 Gbps	Sets the default reference bandwidth used for calculating the IS-IS cost metric. The range is from 1 to 4000 Gbps. The default is 40 Gbps.

The following example shows how to create an IS-IS instance in a level 2 area:

```
switch# config t
switch(config)# router isis Enterprise
switch(config-router)# net 47.0004.004d.0001.0001.0c11.1111.00
switch(config-router)# is-type level 2
switch(config-router)# copy running-config startup-config
```

To clear neighbor statistics and remove adjacencies, use the following command in router configuration mode:

Command	Purpose
clear isis [<i>instance-tag</i>] adjacency [* <i>system-id</i> <i>interface</i>] Example: switch(config-if)# clear isis adjacency *	Clears neighbor statistics and removed adjacencies for this IS-IS instance.

Restarting an IS-IS Instance

You can restart an IS-IS instance. This clears all neighbors for the instance.

To restart an IS-IS instance and remove all associated neighbors, use the following command:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
restart isis instance-tag Example: switch(config)# restart isis Enterprise	Restarts the IS-IS instance and removes all neighbors.

Shutting Down IS-IS

You can shut down the IS-IS instance. This disables this IS-IS instance and retains the configuration. To shut down the IS-IS instance, use the following command in router configuration mode:

Command	Purpose
shutdown Example: switch(config-router)# shutdown	Disables the IS-IS instance.

Configuring IS-IS on an Interface

You can add an interface to an IS-IS instance.

BEFORE YOU BEGIN

Ensure that you have enabled the IS-IS feature (see the [“Enabling the IS-IS Feature”](#) section on page 8-7).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **ip router isis** *instance-tag*
4. **show isis** [**vrf** *vrf-name*] [*instance-tag*] **interface** [*interface-type slot/port*]
5. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface interface-type slot/port Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ip router isis instance-tag Example: switch(config-if)# ip router isis Enterprise	Associates this IPv4 interface with an IS-IS instance.
Step 4	show isis [vrf vrf-name] [instance-tag] interface [interface-type slot/port] Example: switch(config)# show isis Enterprise ethernet 1/2	(Optional) Displays IS-IS information for an interface.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

You can configure the following optional parameters for IS-IS in interface mode:

Command	Purpose
isis circuit-type {level-1 level-2 level-1-2} Example: switch(config-if)# isis circuit-type level-2	Sets the type of adjacency that this interface participates in. Use this command only for routers that participate in both Level 1 and Level 2 areas.
isis metric value {level-1 level-2} Example: switch(config-if)# isis metric 30	Sets the IS-IS metric for this interface. The range is from 1 to 16777214. The default is 10.
isis passive {level-1 level-2 level-1-2} Example: switch(config-if)# isis passive level-2	Prevents the interface from forming adjacencies but still advertises the prefix associated with the interface.

The following example shows how to add Ethernet 1/2 interface to an IS-IS instance:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# ip router isis Enterprise
switch(config-if)# copy running-config startup-config
```


Send document comments to nexus7k-docfeedback@cisco.com.

Configuring IS-IS Authentication in an Area

You can configure IS-IS to authenticate LSPs in an area.

BEFORE YOU BEGIN

Ensure that you have enabled the IS-IS feature (see the “[Enabling the IS-IS Feature](#)” section on [page 8-7](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router isis *instance-tag***
3. **authentication-type {cleartext | md5} {level-1 | level-2}**
4. **authentication key-chain *key* {level-1 | level-2}**
5. **authentication-check {level-1 | level-2}**
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router isis <i>instance-tag</i> Example: switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured <i>instance tag</i> .
Step 3	authentication-type {cleartext md5} {level-1 level-2} Example: switch(config-router)# authentication-type cleartext level-2	Sets the authentication method used for a Level 1 or Level 2 area as cleartext or as an MD5 authentication digest.
Step 4	authentication key-chain <i>key</i> {level-1 level-2} Example: switch(config-router)# authentication key-chain ISISKey level-2	Configures the authentication key used for an IS-IS area-level authentication.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 5	authentication-check {level-1 level-2} Example: switch(config-router)# authentication-check level-2	(Optional) Enables checking the authentication parameters in a received packet.
Step 6	copy running-config startup-config Example: switch(config-router)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure cleartext authentication on an IS-IS instance:

```
switch# config t
switch(config)# router isis Enterprise
switch(config-router)# authentication-type cleartext level-2
switch(config-router)# authentication key-chain ISISKey level-2
switch(config-router)# copy running-config startup-config
```

Configuring IS-IS Authentication on an Interface

You can configure IS-IS to authenticate Hello packets on an interface.

BEFORE YOU BEGIN

- Ensure that you have enabled the IS-IS feature (see the [“Enabling the IS-IS Feature”](#) section on page 8-7).
- Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **isis authentication-type { cleartext | md5 } {level-1 | level-2}**
4. **isis authentication key-chain** *key* {level-1 | level-2}
5. **isis authentication-check {level-1 | level-2}**
6. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface interface-type slot/port Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	isis authentication-type {cleartext md5} {level-1 level-2} Example: switch(config-if)# isis authentication-type cleartext level-2	Sets the authentication type for IS-IS on this interface as cleartext or as an MD5 authentication digest.
Step 4	isis authentication key-chain key {level-1 level-2} Example: switch(config-if)# isis authentication-key ISISKey level-2	Configures the authentication key used for IS-IS on this interface.
Step 5	isis authentication-check {level-1 level-2} Example: switch(config-if)# isis authentication-check	Optional) Enables checking the authentication parameters in a received packet.
Step 6	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure cleartext authentication on an IS-IS instance:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# isis authentication-type cleartext level-2
switch(config-if)# isis authentication key-chain ISISKey
switch(config-if)# copy running-config startup-config
```

Configuring a Mesh Group

You can add an interface to a mesh group to limit the amount of LSP flooding for interfaces in that mesh group. You can optionally block all LSP flooding on an interface in a mesh group.

To add an interface to a mesh group, use the following command in interface configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
isis mesh-group { blocked <i>mesh-id</i> }	Adds this interface to a mesh group. The range is from 1 to 4294967295.
Example: switch(config-if)# isis mesh-group 1	

Configuring a Designated Intermediate System

You can configure a router to become the designated intermediate system (DIS) for a multiaccess network by setting the interface priority.

To configure the DIS, use the following command in interface configuration mode:

Command	Purpose
isis priority <i>number</i> { level-1 level-2 }	Sets the priority for DIS selection. The range is from 0 to 127. The default is 64.
Example: switch(config-if)# isis priority 100 level-1	

Configuring Dynamic Host Exchange

You can configure IS-IS to map between the system ID and the hostname for a router using dynamic host exchange.

To configure dynamic host exchange, use the following command in router configuration mode:

Command	Purpose
hostname dynamic	Enables dynamic host exchange.
Example: switch(config-router)# hostname dynamic	

Setting the Overload Bit

You can configure the router to signal other routers not to use this router as an intermediate hop in their shortest path first (SPF) calculations. You can optionally configure the overload bit temporarily on startup, until BGP converges.

In addition to setting the overload bit, you might also want to suppress certain types of IP prefix advertisements from LSPs for Level 1 or Level 2 traffic.

To set the overload bit, use the following command in router configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
set-overload-bit { always on-startup { <i>seconds</i> wait-for bgp <i>as-number</i> }} [suppress [<i>interlevel</i> <i>external</i>]] Example: switch(config-router)# set-overload-bit on-startup 30	Sets the overload bit for IS-IS. The <i>seconds</i> range is from 5 to 86400.

Configuring the Attached Bit

You can configure the attached bit to control which Level1/Level2 router that the Level 1 routers use as the default route to the Level 2 area. If you disable setting the attached bit, the Level 1 routers will not use this Level1/Level 2 router to reach the Level 2 area.

To configure the attached bit for a Level1/Level2 router, use the following command in router configuration mode:

Command	Purpose
[no] attached-bit Example: switch(config-router)# no attached-bit	Configures the Level1/Level 2 router to set the attached bit. This is enabled by default.

Configuring the Transient Mode for Hello Padding

You can configure the transient mode for hello padding to pad hello packets when IS-IS establishes adjacency and remove that padding after IS-IS establishes adjacency.

To configure the mode for hello padding, use the following command in router configuration mode:

Command	Purpose
[no] isis hello-padding Example: switch(config-if)# no isis hello-padding	Pads the hello packet to the full MTU. The default is enabled. Use the no form of this command to configure the transient mode of hello padding.

Configuring a Summary Address

You can create aggregate addresses that are represented in the routing table by a summary address. One summary address can include multiple groups of addresses for a given level. Cisco NX-OS advertises the smallest metric of all the more-specific routes.

BEFORE YOU BEGIN

Ensure that you have enabled the IS-IS feature (see the [“Enabling the IS-IS Feature”](#) section on page 8-7).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. **config t**
2. **router isis *instance-tag***
3. **address-family ipv4 unicast**
4. **summary-address *ip-prefix/mask-len* {level-1 | level-2 | level-1-2}**
5. **show isis [*vrf vrf-name*] ip summary-address *ip-prefix* [*longer-prefixes*]**
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router isis <i>instance-tag</i> Example: switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured <i>instance tag</i> .
Step 3	address-family ipv4 unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters address family configuration mode.
Step 4	summary-address {<i>ip-prefix/mask-len</i> {level-1 level-2 level-1-2}} Example: switch(config-router-af)# summary-address 192.0.2.0/24 level-2	Configures a summary address for an ISIS area for IPv4 addresses.
Step 5	show isis [<i>vrf vrf-name</i>] ip summary-address <i>ip-prefix</i> [<i>longer-prefixes</i>] Example: switch(config-if)# show isis ip summary-address	(Optional) Displays IS-IS IPv4 summary address information.
Step 6	copy running-config startup-config Example: switch(config--if)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure an IPv4 unicast summary address for IS-IS:

```
switch# config t
switch(config)# router isis Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# summary-address 192.0.2.0/24 level-2
switch(config-router-af)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Redistribution

You can configure IS-IS to accept routing information from another routing protocol and redistribute that information through the IS-IS network. You can optionally assign a default route for redistributed routes.

BEFORE YOU BEGIN

Ensure that you have enabled the IS-IS feature (see the “[Enabling the IS-IS Feature](#)” section on [page 8-7](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router isis** *instance-tag*
3. **address-family ipv4 unicast**
4. **redistribute** {{ **bgp** *as* | { **eigrp** | **isis** | **ospf** | **ospfv3** | **rip** } *instance-tag* | **static** } **route-map** *map-name*
5. **default-information originate** [**always**] [**route-map** *map-name*]
6. **distribute** {**level-1** | **level-2**} **into** {**level-1** | **level-2**} { **route-map** *route-map* | **all** }
7. **show isis** [**vrf** *vrf-name*] **ip route** *ip-prefix* [*detail* | **longer-prefixes** [**summary** | **detail**]]
8. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router isis <i>instance-tag</i> Example: switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured <i>instance tag</i> .
Step 3	address-family ipv4 unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters address family configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	redistribute { bgp <i>as</i> { eigrp isis ospf ospfv3 rip } <i>instance-tag</i> static direct } route-map <i>map-name</i> Example: switch(config-router-af)# redistribute eigrp 201 route-map ISISmap	Redistributes routes from other protocols into IS-IS. See the “ Configuring Route Maps ” section on page 15-9 for more information about route maps.
Step 5	default-information originate [always] [route-map <i>map-name</i>] Example: switch(config-router-af)# default-information originate always	(Optional) Generates a default route into IS-IS.
Step 6	distribute { level-1 level-2 } into { level-1 level-2 } { route-map <i>route-map</i> all } Example: switch(config-router-af)# distribute level-1 into level-2 all	(Optional) Redistributes routes from one IS-IS level to the other IS-IS level.
Step 7	show isis [vrf <i>vrf-name</i>] ip route [<i>ip-prefix</i> [detail longer-prefixes] [summary detail]] Example: switch(config-router-af)# show isis ip route	(Optional) Shows the routes IS-IS.
Step 8	copy running-config startup-config Example: switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to redistribute EIGRP into IS-IS:

```
switch# config t
switch(config)# router isis Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# redistribute eigrp 201 route-map ISISmap
switch(config-router-af)# copy running-config startup-config
```

Configuring a Graceful Restart

You can configure a graceful restart for IS-IS.

BEFORE YOU BEGIN

Ensure that you have enabled the IS-IS feature (see the “[Enabling the IS-IS Feature](#)” section on page 8-7).

Create the VDCs and VRFs.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. `config t`
2. `router isis instance-tag`
3. `graceful-restart`
4. `graceful-restart t3 manual time`
5. `show running-config isis`
6. `copy running-config startup-config`

DETAILED STEPS

	Command	Purpose
Step 1	<code>config t</code> Example: switch# <code>config t</code> switch(config)#	Enters configuration mode.
Step 2	<code>router isis <i>instance-tag</i></code> Example: switch(config)# <code>router isis Enterprise</code> switch(config-router)#	Creates a new IS-IS process with the configured name.
Step 3	<code>graceful-restart</code> Example: switch(config-router)# <code>graceful-restart</code>	Enables a graceful restart and the graceful restart helper functionality. Enabled by default.
Step 4	<code>graceful-restart t3 manual <i>time</i></code> Example: switch(config-router)# <code>graceful-restart t3 manual 300</code>	Configures the graceful restart T3 timer. The range is from 30 to 65535 seconds. The default is 60.
Step 5	<code>show running-config isis</code> Example: switch(config-router)# <code>show running-config isis</code>	(Optional) Displays the IS-IS configuration.
Step 6	<code>copy running-config startup-config</code> Example: switch(config-router)# <code>copy running-config startup-config</code>	(Optional) Saves this configuration change.

The following example shows how to enable a graceful restart:

```
switch# config t
switch(config)# router isis Enterprise
switch(config-router)# graceful-restart
switch(config-router)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Virtualization

You can configure multiple IS-IS instances in each VDC. You can also create multiple VRFs within each VDC and use the same or multiple IS-IS instances in each VRF. You assign an IS-IS interface to a VRF.

You must configure a NET for the configured VRF.



Note

Configure all other parameters for an interface after you configure the VRF for an interface. Configuring a VRF for an interface deletes all the configuration for that interface.

BEFORE YOU BEGIN

Ensure that you have enabled the IS-IS feature (see the “[Enabling the IS-IS Feature](#)” section on [page 8-7](#)).

Create the VDCs.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **vrf context** *vrf_name*
3. **exit**
4. **router isis** *instance-tag*
5. **vrf** *vrf_name*
6. **net** *network-entity-title*
7. **exit**
8. **interface** *type slot/port*
9. **vrf member** *vrf-name*
10. **ip address** *ip-prefix/length*
11. **ip router isis** *instance-tag*
12. **show isis** [**vrf** *vrf-name*] [*instance-tag*] **interface** [*interface-type slot/port*]
13. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	vrf context <i>vrf-name</i> Example: switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode.
Step 3	exit Example: switch(config-vrf)# exit switch(config)#	Exits VRF configuration mode.
Step 4	router isis <i>instance-tag</i> Example: switch(config)# router isis Enterprise switch(config-router)#	Creates a new IS-IS instance with the configured instance tag.
Step 5	vrf <i>vrf-name</i> Example: switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#	(Optional) Enters VRF configuration mode.
Step 6	net <i>network-entity-title</i> Example: switch(config-router-vrf)# net 47.0004.004d.0001.0001.0c11.1111.00	Configures the NET for this IS-IS instance.
Step 7	exit Example: switch(config-router-vrf)# exit switch(config-router)#	Exits router VRF configuration mode.
Step 8	interface ethernet <i>slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 9	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 10	ip address <i>ip-prefix/length</i> Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 11	ip router isis <i>instance-tag</i> Example: switch(config-if)# ip router isis Enterprise	Associates this IPv4 interface with an IS-IS instance.
Step 12	show isis [vrf <i>vrf-name</i>] [<i>instance-tag</i>] interface [<i>interface-type slot/port</i>] Example: switch(config-if)# show isis Enterprise ethernet 1/2	(Optional) Displays IS-IS information for an interface. in a VRF.
Step 13	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a VRF and add an interface to the VRF:

```
switch# config t
switch(config)# vrf context NewVRF
switch(config-vrf)# exit
switch(config)# router isis Enterprise
switch(config-router)# vrf NewVRF
switch(config-router-vrf)# net 47.0004.004d.0001.0001.0c11.1111.00
switch(config-router-vrf)# interface ethernet 1/2
switch(config-if)# vrf member NewVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router isis Enterprise
switch(config-if)# copy running-config startup-config
```

Tuning IS-IS

You can tune IS-IS to match your network requirements.

You can use the following optional commands in router configuration mode to tune IS-IS:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
lsp-gen-interval [level-1 level-2] <i>lsp-max-wait</i> [<i>lsp-initial-wait</i> <i>lsp-second-wait</i>] Example: switch(config-router)# lsp-gen-interval level-1 500 500 500	Configures the IS-IS throttle for LSP generation. The optional parameters are as follows: <ul style="list-style-type: none"> lsp-max-wait—The maximum wait between the trigger and LSP generation. The range is from 500 to 65535 milliseconds. lsp-initial-wait—The initial wait between the trigger and LSP generation. The range is from 50 to 65535 milliseconds. lsp-second-wait—The second wait used for LSP throttle during backoff. The range is from 50 to 65535 milliseconds.
max-lsp-lifetime <i>lifetime</i> Example: switch(config-router)# max-lsp-lifetime 500	Sets the maximum LSP lifetime in seconds. The range is from 1 to 65535. The default is 1200.
metric-style transition Example: switch(config-router)# metric-style transition	Enables IS-IS to generate and accept both narrow metric-style Type Length Value (TLV) objects and wide metric-style TLV objects. The default is disabled.
spf-interval [level-1 level-2] <i>spf-max-wait</i> [<i>spf-initial-wait</i> <i>spf-second-wait</i>] Example: switch(config-router)# spf-interval level-2 500 500 500	Configures the interval between LSA arrivals. The optional parameters are as follows: <ul style="list-style-type: none"> lsp-max-wait—The maximum wait between the trigger and SPF computation. The range is from 500 to 65535 milliseconds. lsp-initial-wait—The initial wait between the trigger and SPF computation. The range is from 50 to 65535 milliseconds. lsp-second-wait—The second wait used for SPF computation during backoff. The range is from 50 to 65535 milliseconds.
wide-metric-only Example: switch(config-router)# wide-metric-only	Configures the IS-IS instance to advertise a wide metric.

You can use the following optional command in router address configuration mode:

Command	Purpose
adjacency-check Example: switch(config-router-af)# adjacency-check	Performs an adjacency check to verify that an IS-IS instance forms an adjacency only with a remote IS-IS entity that supports the same address family. Enabled by default.

You can use the following optional commands in interface configuration mode to tune IS-IS:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
isis csnp-interval <i>seconds</i> [level-1 level-2] Example: switch(config-if)# isis csnp-interval 20	Sets the Complete sequence number PDU (CSNP) interval in seconds for IS-IS. The range is from 1 to 65535. The default is 10.
isis hello-interval <i>seconds</i> [level-1 level-2] Example: switch(config-if)# isis hello-interval 20	Sets the hello interval in seconds for IS-IS. The range is from 1 to 65535. The default is 10.
isis hello-multiplier <i>num</i> [level-1 level-2] Example: switch(config-if)# isis hello-multiplier 20	Specifies the number of IS-IS hello packets that a neighbor must miss before the router tears down an adjacency. The range is from 3 to 1000. The default is 3.
isis lsp-interval <i>milliseconds</i> Example: switch(config-if)# isis lsp-interval 20	Sets the interval in milliseconds between LSPs sent on this interface during flooding. The range is from 10 to 65535. The default is 33.

Verifying IS-IS Configuration

To verify the IS-IS configuration, use the following commands:

Command	Purpose
show isis [<i>instance-tag</i>] adjacency [<i>interface</i>] [detail summary] [vrf <i>vrf-name</i>]	Displays the IS-IS adjacencies. Use the clear isis adjacency command to clear these statistics.
show isis [<i>instance-tag</i>] database [level-1 level-2] [detail summary] [<i>LSP ID</i>] {[ip prefix <i>ip-prefix</i>] [router-id <i>router-id</i>] [adjacency node-id] [zero-sequence] } [vrf <i>vrf-name</i>]	Displays the IS-IS LSP database.
show isis [<i>instance-tag</i>] hostname [vrf <i>vrf-name</i>]	Displays the dynamic host exchange information.
show isis [<i>instance-tag</i>] interface [brief <i>interface</i>] [level-1 level-2] [vrf <i>vrf-name</i>]	Displays the IS-IS interface information.
show isis [<i>instance-tag</i>] mesh-group [<i>mesh-id</i>] [vrf <i>vrf-name</i>]	Displays the mesh group information.
show isis [<i>instance-tag</i>] protocol [vrf <i>vrf-name</i>]	Displays information about the IS-IS protocol.
show isis [<i>instance-tag</i>] ip redistribute route [<i>ip-address</i> summary] [[<i>ip-prefix</i> longer-prefixes [summary]]] [vrf <i>vrf-name</i>]	Displays the IS-IS route redistribution information.
show isis [<i>instance-tag</i>] ip route [<i>ip-address</i> summary] [[<i>ip-prefix</i>] longer-prefixes [summary]]] [detail] [vrf <i>vrf-name</i>]	Displays the IS-IS route table.
show isis [<i>instance-tag</i>] rrm [<i>interface</i>] [vrf <i>vrf-name</i>]	Displays the IS-IS interface retransmission information.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
show isis [<i>instance-tag</i>] srm [<i>interface</i>] [vrf <i>vrf-name</i>]	Displays the IS-IS interface flooding information.
show isis [<i>instance-tag</i>] ssn [<i>interface</i>] [vrf <i>vrf-name</i>]	Displays the IS-IS interface PSNP information.
show isis [<i>instance-tag</i>] ip summary-address [<i>ip-address</i>] [<i>ip-prefix</i> [<i>longer-prefixes</i>]] [vrf <i>vrf-name</i>]	Displays IS-IS the summary address information.
show running-configuration isis	Displays the current running IS-IS configuration.
show tech-support isis [detail]	Displays the technical support details for IS-IS.

For detailed information about the fields in the output from these commands, see the *Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1*.

Displaying IS-IS Statistics

To display IS-IS statistics, use the following commands:

Command	Purpose
show isis [<i>instance-tag</i>] adjacency [<i>interface</i>] [system-ID] [detail] [summary] [vrf <i>vrf-name</i>]	Displays the IS-IS adjacency statistics.
show isis [<i>instance-tag</i>] database [level-1 level-2] [detail summary] [<i>lsip</i>] [{ adjacency <i>id</i>] ip prefix <i>prefix</i>] [router-id <i>id</i>] [zero-sequence]} [vrf <i>vrf-name</i>]	Displays the IS-IS database statistics.
show isis [<i>instance-tag</i>] statistics [<i>interface</i>] [vrf <i>vrf-name</i>]	Displays the IS-IS interface statistics.
show isis ip route-map statistics redistribute { bgp <i>id</i> eigrp <i>id</i> isis <i>id</i> ospf <i>id</i> rip <i>id</i> static } [vrf <i>vrf-name</i>]	Displays the IS-IS redistribution statistics
show isis route-map statistics distribute { level-1 level-2 } into { level-1 level-2 }} [vrf <i>vrf-name</i>]	Displays IS-IS distribution statistics for routes distributed between levels.
show isis [<i>instance-tag</i>] spf-log [detail] [vrf <i>vrf-name</i>]	Displays the IS-IS SPF calculation statistics.
show isis [<i>instance-tag</i>] traffic [<i>interface</i>] [vrf <i>vrf-name</i>]	Displays the IS-IS traffic statistics.

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

To clear IS-IS configuration statistics, perform one of the following tasks:

Command	Purpose
clear isis [<i>instance-tag</i>] adjacency [* [<i>interface</i>] [<i>system-id id</i>]] [<i>vrf vrf-name</i>]	Clears the IS-IS adjacency statistics.
clear isis ip route-map statistics redistribute { bgp <i>id</i> direct eigrp <i>id</i> isis <i>id</i> ospf <i>id</i> rip <i>id</i> static } [<i>vrf vrf-name</i>]	Clears the IS-IS redistribution statistics
clear isis route-map statistics distribute { level-1 level-2 } into { level-1 level-2 } } [<i>vrf</i> <i>vrf-name</i>]	Clears IS-IS distribution statistics for routes distributed between levels.
clear isis [<i>instance-tag</i>] statistics [* <i>interface</i>] [<i>vrf vrf-name</i>]	Clears the IS-IS interface statistics.
clear isis [<i>instance-tag</i>] traffic [* <i>interface</i>] [<i>vrf</i> <i>vrf-name</i>]	Clears the IS-IS traffic statistics.

IS-IS Example Configuration

The following example shows how to configure IS-IS:

```
router isis Enterprise
  is-type level-1
  net 49.0001.0000.0000.0003.00
  graceful-restart
  address-family ipv4 unicast
  default-information originate

interface ethernet 2/1
  ip address 192.0.2.1/24
  isis circuit-type level-1
  ip router isis Enterprise
```

Related Topics

See the [Chapter 15, “Configuring Route Policy Manager”](#) for more information on route maps.

Default Settings

[Table 8-1](#) lists the default settings for IS-IS parameters.

Table 8-1 *Default IS-IS Parameters*

Parameters	Default
Administrative distance	115
Area level	level-1-2
DIS priority	64

Send document comments to nexus7k-docfeedback@cisco.com.

Table 8-1 **Default IS-IS Parameters**

Parameters	Default
Graceful restart	enabled
Hello multiplier	3
Hello padding	enabled
Hello time	10 seconds
IS-IS feature	disabled
LSP interval	33
LSP MTU	1492
Maximum LSP lifetime	1200 seconds
Maximum paths	4
Metric	10
Reference bandwidth	40 Gbps

Additional References

For additional information related to implementing IS-IS, see the following sections:

- [Related Documents, page 8-30](#)
- [Standards, page 8-30](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
IS-IS CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs and VRFs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for IS-IS

[Table 8-2](#) lists the release history for this feature.

Table 8-2 **Feature History for IS-IS**

Feature Name	Releases	Feature Information
Transient mode for hello padding	4.1(2)	Added support to set or unset the hello padding mode.
Attached bit	4.1(2)	Added support to set or unset the attached bit.
IS-IS	4.0(1)	This feature was introduced.



CHAPTER 9

Configuring Basic BGP

This chapter describes how to configure Border Gateway Protocol version 4 (BGP) on a Cisco NX-OS device.

This chapter includes the following sections:

- [Information About Basic BGP, page 9-1](#)
- [Licensing Requirements for Basic BGP, page 9-7](#)
- [Prerequisites for BGP, page 9-7](#)
- [Guidelines and Limitations for BGP, page 9-8](#)
- [CLI Configuration Modes, page 9-8](#)
- [Configuring Basic BGP, page 9-10](#)
- [Verifying Basic BGP Configuration, page 9-20](#)
- [Displaying BGP Statistics, page 9-21](#)
- [Basic BGP Example Configuration, page 9-22](#)
- [Related Topics, page 9-22](#)
- [Where to Go Next, page 9-22](#)
- [Default Settings, page 9-22](#)
- [Additional References, page 9-22](#)
- [Feature History for BGP, page 9-23](#)

Information About Basic BGP

Cisco NX-OS supports BGP version 4, which includes multiprotocol extensions that allow BGP to carry routing information for IP multicast routes and multiple Layer 3 protocol address families. BGP uses TCP as a reliable transport protocol to create TCP sessions with other BGP-enabled devices.

BGP uses a path-vector routing algorithm to exchange routing information between BGP-enabled networking devices or *BGP speakers*. Based on this information, each BGP speaker determines a path to reach a particular destination while detecting and avoiding paths with routing loops. The routing information includes the actual route prefix for a destination, the path of autonomous systems to the destination, and additional path attributes.

Send document comments to nexus7k-docfeedback@cisco.com.

BGP selects a single path, by default, as the best path to a destination host or network. Each path carries well-known mandatory, well-known discretionary, and optional transitive attributes that are used in BGP best-path analysis. You can influence BGP path selection by altering some of these attributes by configuring BGP policies. See the “[Route Policies and Resetting BGP Sessions](#)” section on page 10-3 for more information.

BGP also supports load balancing or equal-cost multipath (ECMP). See the “[Load Sharing and Multipath](#)” section on page 10-7 for more information.

**Note**

Cisco NX-OS does not support IPv6 for BGP.

To deploy and configure basic BGP in your network, you should understand the following concepts:

- [BGP Autonomous Systems](#), page 9-2
- [Administrative Distance](#), page 9-2
- [BGP Peers](#), page 9-3
- [BGP Router Identifier](#), page 9-4
- [BGP Path Selection](#), page 9-4
- [BGP and the Unicast RIB](#), page 9-7
- [BGP Virtualization](#), page 9-7

BGP Autonomous Systems

An *autonomous system* (AS) is a network controlled by a single administration entity. An autonomous system forms a routing domain with one or more interior gateway protocols (IGPs) and a consistent set of routing policies. BGP supports 16-bit and 32-bit autonomous system numbers. For more information, see the “[Autonomous Systems](#)” section on page 1-5.

Separate BGP autonomous systems dynamically exchange routing information through external BGP (eBGP) peering sessions. BGP speakers within the same autonomous system can exchange routing information through internal BGP (iBGP) peering sessions.

Administrative Distance

An *administrative distance* is a rating of the trustworthiness of a routing information source. By default, BGP uses the administrative distances shown in [Table 9-1](#).

Table 9-1 *BGP Default Administrative Distances*

Distance	Default Value	Function
External	20	Applied to routes learned from eBGP.
Internal	200	Applied to routes learned from iBGP.
Local	200	Applied to routes originated by the router.

Send document comments to nexus7k-docfeedback@cisco.com.

**Note**

The administrative distance does not influence the BGP path selection algorithm, but it does influence whether BGP-learned routes are installed in the IP routing table.

For more information, see the [“Administrative Distance”](#) section on page 1-6.

BGP Peers

A BGP speaker does not discover another BGP speaker automatically. You must configure the relationships between BGP speakers. A *BGP peer* is a BGP speaker that has an active TCP connection to another BGP speaker.

BGP Sessions

BGP uses TCP port 179 to create a TCP session with a peer. When a TCP connection is established between peers, each BGP peer initially exchanges all of its routes—the complete BGP routing table—with the other peer. After this initial exchange, the BGP peers send only incremental updates when a topology change occurs in the network or when a routing policy change occurs. In the periods of inactivity between these updates, peers exchange special messages called *keepalives*. The *hold time* is the maximum time limit that can elapse between receiving consecutive BGP update or keepalive messages.

Cisco NX-OS supports the following peer configuration options:

- Individual IPv4 address—BGP establishes a session with the BGP speaker that matches the remote address and AS number.
- IPv4 prefix peers for a single AS number—BGP establishes sessions with BGP speakers that match the prefix and the AS number.
- Dynamic AS number prefix peers—BGP establishes sessions with BGP speakers that match the prefix and an AS number from a list of configured AS numbers.

Dynamis AS Numbers for Prefix Peers

Cisco NX-OS accepts a range or list of AS numbers to establish BGP sessions. For example, if you configure BGP to use IPv4 prefix 192.0.2.0/8 and AS numbers 33, 66, and 99, BGP establishes a session with 192.0.2.1 with AS number 66 but rejects a session from 192.0.2.2 with AS number 50.)

Cisco NX-OS does not associate prefix peers with dynamic AS numbers as either interior BGP (iBGP) or external BGP (eBGP) sessions until after the session is established. See [Chapter 10, “Configuring Advanced BGP”](#) for more information on iBGP and eBGP.

**Note**

The dynamic AS number prefix peer configuration overrides the individual AS number configuration that is inherited from a BGP template. See [Chapter 10, “Configuring Advanced BGP”](#) for more information on templates.

Send document comments to nexus7k-docfeedback@cisco.com.

BGP Router Identifier

To establish BGP sessions between peers, BGP must have a *router ID*, which is sent to BGP peers in the OPEN message when a BGP session is established. The BGP router ID is a 32-bit value that is often represented by an IPv4 address. You can configure the router ID. By default, Cisco NX-OS sets the router ID to the IPv4 address of a loopback interface on the router. If no loopback interface is configured on the router, then the software chooses the highest IPv4 address configured to a physical interface on the router to represent the BGP router ID. The BGP router ID must be unique to the BGP peers in a network.

If BGP does not have a router ID, it cannot establish any peering sessions with BGP peers.

BGP Path Selection

Although BGP might receive advertisements for the same route from multiple sources, BGP selects only one path as the best path. BGP puts the selected path in the IP routing table and propagates the path to its peers.

The best-path algorithm runs each time that a path is added or withdrawn for a given network. The best-path algorithm also runs if you change the BGP configuration. BGP selects the best path from the set of valid paths available for a given network.

Cisco NX-OS implements the BGP best-path algorithm in the following steps:

-
- | | |
|---------------|---|
| Step 1 | Compares two paths to determine which is better (see the “ Step 1—Comparing Pairs of Paths ” section on page 9-4). |
| Step 2 | Iterates over all paths and determines in which order to compare the paths to select the overall best path (see the “ Step 2—Determining the Order of Comparisons ” section on page 9-6). |
| Step 3 | Determines whether the old and new best paths differ enough so that the new best path should be used (see the “ Step 3—Determining the Best-Path Change Suppression ” section on page 9-6). |
-



Note

The order of comparison determined in Part 2 is important. Consider the case where you have three paths, A, B, and C. When Cisco NX-OS compares A and B, it chooses A. When Cisco NX-OS compares B and C, it chooses B. But when Cisco NX-OS compares A and C, it might not choose A because some BGP metrics apply only among paths from the same neighboring autonomous system and not among all paths.

The path selection uses the the BGP AS-path attribute. The AS-path attribute includes the list of autonomous system numbers (AS numbers) traversed in the advertised path. If you subdivide your BGP autonomous system into a collection or confederation of autonomous systems, the AS-path contains confederation segments that list these locally defined autonomous systems.

Step 1—Comparing Pairs of Paths

This first step in the BGP best-path algorithm compares two paths to determine which path is better. The following sequence describes the basic steps that Cisco NX-OS uses to compare two paths to determine the better path:

1. Cisco NX-OS chooses a valid path for comparison. (For example, a path that has an unreachable next-hop is not valid.)

Send document comments to nexus7k-docfeedback@cisco.com.

2. Cisco NX-OS chooses the path with the highest weight.
3. Cisco NX-OS chooses the path with the highest local preference.
4. If one of the paths is locally originated, Cisco NX-OS chooses that path.
5. Cisco NX-OS chooses the path with the shorter AS-path.



Note When calculating the length of the AS-path, Cisco NX-OS ignores confederation segments, and counts AS sets as 1. See the [“AS Confederations” section on page 10-4](#) for more information.

6. Cisco NX-OS chooses the path with the lower origin. Interior Gateway Protocol (IGP) is considered lower than EGP.
7. Cisco NX-OS chooses the path with the lower multi- exit discriminator (MED).

You can configure a number of options that affect whether or not this step is performed. In general, Cisco NX-OS compares the MED of both paths if the paths were received from peers in the same autonomous system; otherwise, Cisco NX-OS skips the MED comparison.

You can configure Cisco NX-OS to always perform the best-path algorithm MED comparison, regardless of the peer autonomous system in the paths. See the [“Tuning the Best-Path Algorithm” section on page 10-8](#) for more information. Otherwise, Cisco NX-OS will perform a MED comparison that depends on the AS-path attributes of the two paths being compared:

- a. If a path has no AS-path or the AS-path starts with an AS_SET, then the path is internal, and Cisco NX-OS compares the MED to other internal paths.
- b. If the AS-path starts with an AS_SEQUENCE, then the peer autonomous system is the first AS number in the sequence, and Cisco NX-OS compares the MED to other paths that have the same peer autonomous system.
- c. If the AS-path contains only confederation segments or starts with confederation segments followed by an AS_SET, the path is internal and Cisco NX-OS compares the MED to other internal paths.
- d. If the AS-path starts with confederation segments followed by an AS_SEQUENCE, then the peer autonomous system is the first AS number in the AS_SEQUENCE, and Cisco NX-OS compares the MED to other paths that have the same peer autonomous system.



Note If Cisco NX-OS receives no MED attribute with the path, then Cisco NX-OS considers the MED to be 0 unless you configure the best-path algorithm to set a missing MED to the highest possible value. See the [“Tuning the Best-Path Algorithm” section on page 10-8](#) for more information.

- e. If the nondeterministic MED comparison feature is enabled, the best path algorithm uses the Cisco IOS style of MED comparison. See the [“Tuning the Best-Path Algorithm” section on page 10-8](#) for more information.
8. If one path is from an internal peer and the other path is from an external peer, then Cisco NX-OS chooses the path from the external peer.
9. If the paths have different IGP metrics to their next-hop addresses, then Cisco NX-OS chooses the path with the lower IGP metric.
10. Cisco NX-OS uses the path that was selected by the best-path algorithm the last time that it was run.

Send document comments to nexus7k-docfeedback@cisco.com.

If all path parameters in Step 1 through Step 9 are the same, then you can configure the best-path algorithm to compare the router IDs. See the [“Tuning the Best-Path Algorithm” section on page 10-8](#) for more information. If the path includes an originator attribute, then Cisco NX-OS uses that attribute as the router ID to compare to; otherwise, Cisco NX-OS uses the router ID of the peer that sent the path. If the paths have different router IDs, Cisco NX-OS chooses the path with the lower router ID.



Note When using the attribute originator as the router ID, it is possible that two paths have the same router ID. It is also possible to have two BGP sessions with the same peer router, and therefore you can receive two paths with the same router ID.

11. Cisco NX-OS selects the path with the shorter cluster length. If a path was not received with a cluster list attribute, the cluster length is 0.
12. Cisco NX-OS chooses the path received from the peer with the lower IP address. Locally generated paths (for example, redistributed paths) have a peer IP address of 0.



Note

Paths that are equal after step 9 can be used for multipath if you configure multipath. See the [“Load Sharing and Multipath” section on page 10-7](#) for more information.

Step 2—Determining the Order of Comparisons

The second step of the BGP best-path algorithm implementation is to determine the order in which Cisco NX-OS compares the paths:

1. Cisco NX-OS partitions the paths into groups. Within each group Cisco NX-OS compares the MED among all paths. Cisco NX-OS uses the same rules as in the [“Step 1—Comparing Pairs of Paths” section on page 9-4](#) to determine whether MED can be compared between any two paths. Typically, this comparison results in one group being chosen for each neighbor autonomous system. If you configure the **bgp bestpath med always** command, then Cisco NX-OS chooses just one group that contains all the paths.
2. Cisco NX-OS determines the best path in each group by iterating through all paths in the group and keeping track of the best one so far. Cisco NX-OS compares each path with the temporary best path found so far and if the new path is better, it becomes the new temporary best path and Cisco NX-OS compares it with the next path in the group.
3. Cisco NX-OS forms a set of paths that contain the best path selected from each group in Step 2. Cisco NX-OS selects the overall best path from this set of paths by going through them as in Step 2.

Step 3—Determining the Best-Path Change Suppression

The next part of the implementation is to determine whether Cisco NX-OS will use the new best path or suppress the new best path. The router can continue to use the existing best path if the new one is identical to the old path (if the router ID is the same). Cisco NX-OS continues to use the existing best path to avoid route changes in the network.

You can turn off the suppression feature by configuring the best-path algorithm to compare the router IDs. See the [“Tuning the Best-Path Algorithm” section on page 10-8](#) for more information. If you configure this feature, the new best path is always preferred to the existing one.

You cannot suppress the best-path change if any of the following conditions occur:

- The existing best path is no longer valid.

Send document comments to nexus7k-docfeedback@cisco.com.

- Either the existing or new best paths were received from internal (or confederation) peers or were locally generated (for example, by redistribution).
- The paths were received from the same peer (the paths have the same router ID).
- The paths have different weights, local preferences, origins, or IGP metrics to their next-hop addresses.
- The paths have different MEDs.

BGP and the Unicast RIB

BGP communicates with the unicast routing information base (unicast RIB) to store IPv4 routes in the unicast routing table. After selecting the best path, if BGP determines that the best path change needs to be reflected in the routing table, it sends a route update to the unicast RIB.

BGP receives route notifications regarding changes to its routes in the unicast RIB. It also receives route notifications about other protocol routes to support redistribution.

BGP also receives notifications from the unicast RIB regarding next-hop changes. BGP uses these notifications to keep track of the reachability and IGP metric to the next-hop addresses.

Whenever the next-hop reachability or IGP metrics in the unicast RIB change, BGP triggers a best-path recalculation for affected routes.

BGP Virtualization

BGP supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for Basic BGP

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	BGP requires an Enterprise Services license. For a complete explanation of the NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco NX-OS Licensing Guide</i> .

Prerequisites for BGP

BGP has the following prerequisites:

- You must enable the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).
- You should have a valid router ID configured on the system.
- You must have an AS number, either assigned by a Regional Internet Registry (RIR) or locally administered.

Send document comments to nexus7k-docfeedback@cisco.com.

- You must configure at least one IGP that is capable of recursive next-hop resolution.
- You must configure an address family under a neighbor for the BGP session establishment.

Guidelines and Limitations for BGP

Use the following guidelines and limitations to configure BGP:

- The dynamic AS number prefix peer configuration overrides individual AS number configuration inherited from a BGP template.
- If you configure a dynamic AS number for prefix peers in an AS confederation, BGP establishes sessions with only the AS numbers in the local confederation.
- BGP sessions created through a dynamic AS number prefix peer ignore any configured eBGP multihop time-to-live (TTL) value or a disabled check for directly connected peers.
- Configure a router ID for BGP to avoid automatic router ID changes and session flaps.
- Use the maximum-prefix configuration option per peer to restrict the number of routes received and system resources used.
- Configure the update-source to establish a session with BGP/eBGP multihop sessions.
- Specify a BGP policy if you configure redistribution.
- Define the BGP router ID within a VRF.
- If you decrease the keepalive and hold timer values, you might experience BGP session flaps.
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see to the *Cisco NX-OS Virtual Device Context Configuration Guide*).
- If you configure VRFs, install the Advanced Services license and enter the desired VRF (see [Chapter 13, “Configuring Layer 3 Virtualization”](#)).

CLI Configuration Modes

The following sections describe how to enter each of the CLI configuration modes for BGP. From a mode, you can enter the ? command to display the commands available in that mode.

Global Configuration Mode

Use global configuration mode to create a BGP process and configure advanced features such as AS confederation and route dampening. For more information, see [Chapter 10, “Configuring Advanced BGP”](#).

The following example shows how to enter router configuration mode:

```
switch# configuration
switch(config)# router bgp 64496
switch(config-router)#
```

BGP supports Virtual Routing and Forwarding (VRF). You can configure BGP within the appropriate VRF if you are using VRFs in your network. See the [“Configuring Virtualization” section on page 10-35](#) for more information.

The following example shows how to enter VRF configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

```
switch(config)# router bgp 64497
switch(config-router)# vrf vrf_A
switch(config-router-vrf)#
```

Address Family Configuration Mode

You can optionally configure the address families that BGP supports. Use the **address-family** command in router configuration mode to configure features for an address family. Use the **address-family** command in neighbor configuration mode to configure the specific address family for the neighbor.

You must configure the address families if you are using route redistribution, address aggregation, load balancing, and other advanced features.

The following example shows how to enter address family configuration mode from the router configuration mode:

```
switch(config)# router bgp 64496
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)#
```

The following example shows how to enter VRF address family configuration mode if you are using VRFs:

```
switch(config)# router bgp 64497
switch(config-router)# vrf vrf_A
switch(config-router-vrf)# address-family ipv4 unicast
switch(config-router-vrf-af)#
```

Neighbor Configuration Mode

Cisco NX-OS provides the neighbor configuration mode to configure BGP peers. You can use neighbor configuration mode to configure all parameters for a peer.

The following example shows how to enter neighbor configuration mode:

```
switch(config)# router bgp 64496
switch(config-router)# neighbor 192.0.2.1
switch(config-router-neighbor)#
```

The following example shows how to enter VRF neighbor configuration mode:

```
switch(config)# router bgp 64497
switch(config-router)# vrf vrf_A
switch(config-router-vrf)# neighbor 192.0.2.1
switch(config-router-vrf-neighbor)#
```

Neighbor Address Family Configuration Mode

An address family configuration submode inside the neighbor configuration submode is available for entering address family-specific neighbor configuration and enabling the address family for the neighbor. Use this mode for advanced features such as limiting the number of prefixes allowed for this neighbor and removing private AS numbers for eBGP.

The following example shows how to enter neighbor address family configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

```
switch(config)# router bgp 64496
switch(config-router)# neighbor 192.0.2.1
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)#
```

The following example shows how to enter VRF neighbor address family configuration mode:

```
switch(config)# router bgp 64497
switch(config-router)# vrf vrf_A
switch(config-router-vrf)# neighbor 209.165.201.1
switch(config-router-vrf-neighbor)# address-family ipv4 unicast
switch(config-router-vrf-neighbor-af)#
```

Configuring Basic BGP

To configure a basic BGP, you need to enable BGP and configure a BGP peer. Configuring a basic BGP network consists of a few required tasks and many optional tasks. You must configure a BGP routing process and BGP peers.

This section includes the following topics:

- [Enabling the BGP Feature, page 9-10](#)
- [Creating a BGP Instance, page 9-11](#)
- [Restarting a BGP Instance, page 9-13](#)
- [Shutting Down BGP, page 9-13](#)
- [Configuring BGP Peers, page 9-13](#)
- [Configuring Dynamic AS Numbers for Prefix Peers, page 9-15](#)
- [Clearing BGP Information, page 9-17](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Enabling the BGP Feature

You must enable the BGP feature before you can configure BGP.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **feature bgp**
3. **show feature**
4. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	feature bgp Example: switch(config)# feature bgp	Enables the BGP feature.
Step 3	show feature Example: switch(config)# show feature	(Optional) Displays enabled and disabled features.
Step 4	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no feature bgp** command to disable the BGP feature and remove all associated configuration.

Command	Purpose
no feature bgp Example: switch(config)# no feature bgp	Disables the BGP feature and removes all associated configuration.

Creating a BGP Instance

You can create a BGP instance and assign a router ID to the BGP instance. See the [“BGP Router Identifier” section on page 9-4](#). Cisco NX-OS supports 2-byte or 4-byte autonomous system (AS) numbers.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the [“Enabling the BGP Feature” section on page 9-10](#)).

BGP must be able to obtain a router ID (for example, a configured loopback address).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router bgp** *autonomous-system-number*
3. **router-id** *ip-address*
4. **address-family ipv4** { **unicast** | **multicast** }

Send document comments to nexus7k-docfeedback@cisco.com.

5. **network** *ip-prefix* [**route-map** *map-name*]
6. **show** **bgp** **all**
7. **copy** **running-config** **startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>autonomous-system-number</i> Example: switch(config)# router bgp 64496 switch(config-router)#	Enables BGP and assigns the AS number to the local BGP speaker. The AS number can be a 16-bit integer or a 32-bit integer in the form of a higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format.
Step 3	router-id <i>ip-address</i> Example: switch(config-router)# router-id 192.0.2.255	(Optional) Configures the BGP router ID. This IP address identifies this BGP speaker. This command triggers an automatic notification and session reset for the BGP neighbor sessions.
Step 4	address-family ipv4 { unicast multicast } Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	(Optional) Enters global address family configuration mode for the IPv4 address family. This command triggers an automatic notification and session reset for all BGP neighbors.
Step 5	network <i>ip-prefix</i> [route-map <i>map-name</i>] Example: switch(config-router-af)# network 192.0.2.0	(Optional) Specifies a network as local to this autonomous system and adds it to the BGP routing table. For exterior protocols, the network command controls which networks are advertised. Interior protocols use the network command to determine where to send updates.
Step 6	show bgp all Example: switch(config-router-af)# show bgp all	(Optional) Displays information about all BGP address families.
Step 7	copy running-config startup-config Example: switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no router bgp** command to remove the BGP process and the associated configuration.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
no router bgp <i>autonomous-system-number</i> Example: switch(config)# no router bgp 201	Deletes the BGP process and the associated configuration.

The following example shows how to enable BGP with the IPv4 unicast address family and manually add one network to advertise:

```
switch# config t
switch(config)# router bgp 64496
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# network 192.0.2.0
switch(config-router-af)# copy running-config startup-config
```

Restarting a BGP Instance

You can restart a BGP instance and clear all peer sessions for the instance.

To restart a BGP instance and remove all associated peers, use the following command:

Command	Purpose
restart bgp <i>instance-tag</i> Example: switch(config)# restart bgp 201	Restarts the BGP instance and resets or reestablishes all peering sessions.

Shutting Down BGP

You can shut down the BGP protocol and gracefully disable BGP and retain the configuration.

To shut down BGP, use the following command in router configuration mode:

Command	Purpose
shutdown Example: switch(config-router)# shutdown	Gracefully shuts down BGP.

Configuring BGP Peers

You can configure a BGP peer within a BGP process. Each BGP peer has an associated keepalive timer and hold timers. You can set these timers either globally or for each BGP peer. A peer configuration overrides a global configuration.

Send document comments to nexus7k-docfeedback@cisco.com.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the “Enabling the BGP Feature” section on page 9-10).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router bgp** *autonomous-system-number*
3. **neighbor** *ip-address* **remote-as** *as-number*
4. **description** *text*
5. **timers** *keepalive-time* *hold-time*
6. **shutdown**
7. **address-family** **ipv4** { **unicast** | **multicast** }
8. **show bgp ipv4** { **unicast** | **multicast** } **neighbors**
9. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>autonomous-system-number</i> Example: switch(config)# router bgp 64496 switch(config-router)#	Enables BGP and assigns the AS number to the local BGP speaker. The AS number can be a 16-bit integer or a 32-bit integer in the form of a higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format.
Step 3	neighbor <i>ip-address</i> remote-as <i>as-number</i> Example: switch(config-router)# neighbor 209.165.201.1 remote-as 64497 switch(config-router-neighbor)#	Configures the IPv4 address and AS number for a remote BGP peer. The <i>ip-address</i> format is x.x.x.x.
Step 4	description <i>text</i> Example: switch(config-router-neighbor)# description Peer Router B switch(config-router-neighbor)#	(Optional) Adds a description for the neighbor. The description is an alphanumeric string up to 80 characters .
Step 5	timers <i>keepalive-time</i> <i>hold-time</i> Example: switch(config-router-neighbor)# timers 30 90	(Optional) Adds the keepalive and hold time BGP timer values for the neighbor. The range is from 0 to 3600 seconds. The default is 60 seconds for the keepalive time and 180 seconds for the hold time.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 6	shutdown Example: switch(config-router-neighbor)# shutdown	(Optional). Administratively shuts down this BGP neighbor. This command triggers an automatic notification and session reset for the BGP neighbor sessions.
Step 7	address-family ipv4 {unicast multicast} Example: switch(config-router-neighbor)# address-family ipv4 unicast switch(config-router-neighbor-af)#	Enters neighbor address family configuration mode for the unicast IPv4 address family.
Step 8	show bgp ipv4 {unicast multicast} neighbors Example: switch(config-router-neighbor-af)# show bgp ipv4 unicast neighbors	(Optional) Displays information about BGP peers.
Step 9	copy running-config startup-config Example: switch(config-router-neighbor-af) copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure a BGP peer:

```
switch# config t
switch(config)# router bgp 64496
switch(config-router)# neighbor 192.0.2.1 remote-as 64497
switch(config-router-neighbor)# description Peer Router B
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# copy running-config startup-config
```

Configuring Dynamic AS Numbers for Prefix Peers

You can configure multiple BGP peers within a BGP process. You can limit BGP session establishment to a single AS number or multiple AS numbers in a route map.

BGP sessions configured through dynamic AS numbers for prefix peers ignore the **ebgp-multihop** command and the **disable-connected-check** command.

You can change the list of AS numbers in the route map, but you must use the **no neighbor** command to change the route-map name. Changes to the AS numbers in the configured route map affect only new sessions.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**

Send document comments to nexus7k-docfeedback@cisco.com.

2. **router bgp** *autonomous-system-number*
3. **neighbor** *prefix* **remote-as** *route-map map-name*
4. **show bgp ipv4** {unicast | multicast} **neighbors**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>autonomous-system-number</i> Example: switch(config)# router bgp 64496 switch(config-router)#	Enables BGP and assigns the AS number to the local BGP speaker. The AS number can be a 16-bit integer or a 32-bit integer in the form of a higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format.
Step 3	neighbor <i>prefix</i> remote-as <i>route-map map-name</i> Example: switch(config-router)# neighbor 192.0.2.0/8 remote-as routemap BGPPeers switch(config-router-neighbor)#	Configures the IPv4 prefix and a route map for the list of accepted AS numbers for the remote BGP peers. The <i>prefix</i> format for IPv4 is x.x.x.x/length. The length range is from 1 to 32. The <i>map-name</i> can be any case-sensitive alphanumeric string up to 63 characters.
Step 4	show bgp ipv4 {unicast multicast} neighbors Example: switch(config-router-neighbor-af)# show bgp ipv4 unicast neighbors	(Optional) Displays information about BGP peers.
Step 5	copy running-config startup-config Example: switch(config-router-neighbor-af) copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure dynamic AS numbers for a prefix peer:

```
switch# config t
switch(config)# route-map BGPPeers
switch(config-route-map)# match as-number 64496, 64501-64510
switch(config-route-map)# match as-number as-path-list List1, List2
switch(config-route-map)# exit
switch(config)# router bgp 64496
switch(config-router)# neighbor 192.0.2.0/8 remote-as route-map BGPPeers
switch(config-router-neighbor)# description Peer Router B
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# copy running-config startup-config
```

See [Chapter 15, “Configuring Route Policy Manager.”](#) for information on route maps.

Send document comments to nexus7k-docfeedback@cisco.com.

Clearing BGP Information

To clear BGP information, use the following commands:

Command	Purpose
clear bgp all { <i>neighbor</i> * <i>as-number</i> peer-template <i>name</i> <i>prefix</i> } [vrf <i>vrf-name</i>]	Clears one or more neighbors from all address families. * clears all neighbors in all address families. The arguments are as follows: <ul style="list-style-type: none"> <i>neighbor</i>—IPv4 address of a neighbor. <i>as-number</i>—Autonomous system number. The AS number can be a 16-bit integer or a 32-bit integer in the form of higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format. <i>name</i>—Peer template name. The name can be any case-sensitive alphanumeric string up to 64 characters. <i>prefix</i>—IPv4 prefix. All neighbors within that prefix are cleared. <i>vrf-name</i>—VRF name. All neighbors in that VRF are cleared. The name can be any case-sensitive alphanumeric string up to 64 characters.
clear bgp all dampening [vrf <i>vrf-name</i>]	Clears route flap dampening networks in all address families. The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters.
clear bgp all flap-statistics [vrf <i>vrf-name</i>]	Clears route flap statistics in all address families. The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters.
clear bgp ip { unicast multicast } dampening [vrf <i>vrf-name</i>]	Clears route flap dampening networks in the selected address family. The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters.
clear bgp ip { unicast multicast } flap-statistics [vrf <i>vrf-name</i>]	Clears route flap statistics in the selected address family. The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
clear bgp ip {unicast multicast} {neighbor * as-number peer-template name prefix} [vrf vrf-name]	<p>Clears one or more neighbors from the selected address family. * clears all neighbors in the address family. The arguments are as follows:</p> <ul style="list-style-type: none"> <i>neighbor</i>—IPv4 address of a neighbor. <i>as-number</i>— Autonomous system number. The AS number can be a 16-bit integer or a 32-bit integer in the form of higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format. <i>name</i>—Peer template name. The name can be any case-sensitive alphanumeric string up to 64 characters. <i>prefix</i>—IPv4 prefix. All neighbors within that prefix are cleared. <i>vrf-name</i>—VRF name. All neighbors in that VRF are cleared. The name can be any case-sensitive alphanumeric string up to 64 characters.
clear ip bgp {unicast multicast} {neighbor * as-number peer-template name prefix} [vrf vrf-name]	<p>Clears one or more neighbors. * clears all neighbors in the address family. The arguments are as follows:</p> <ul style="list-style-type: none"> <i>neighbor</i>—IPv4 address of a neighbor. <i>as-number</i>— Autonomous system number. The AS number can be a 16-bit integer or a 32-bit integer in the form of higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format. <i>name</i>—Peer template name. The name can be any case-sensitive alphanumeric string up to 64 characters. <i>prefix</i>—IPv4 prefix. All neighbors within that prefix are cleared. <i>vrf-name</i>—VRF name. All neighbors in that VRF are cleared. The name can be any case-sensitive alphanumeric string up to 64 characters.
clear ip bgp dampening [ip-neighbor ip-prefix] [vrf vrf-name]	<p>Clears route flap dampening in one or more networks. The arguments are as follows:</p> <ul style="list-style-type: none"> <i>ip-neighbor</i>—IPv4 address of a neighbor. <i>ip-prefix</i>—IPv4. All neighbors within that prefix are cleared. <i>vrf-name</i>—VRF name. All neighbors in that VRF are cleared. The name can be any case-sensitive alphanumeric string up to 64 characters.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
clear ip bgp flap-statistics [<i>ip-neighbor</i> <i>ip-prefix</i>] [vrf <i>vrf-name</i>]	<p>Clears route flap statistics in one or more networks. The arguments are as follows:</p> <ul style="list-style-type: none"> • <i>ip-neighbor</i>—IPv4 address of a neighbor. • <i>ip-prefix</i>—IPv4. All neighbors within that prefix are cleared. • <i>vrf-name</i>—VRF name. All neighbors in that VRF are cleared. The name can be any case-sensitive alphanumeric string up to 64 characters.
clear ip mbgp { unicast multicast } { <i>neighbor</i> * <i>as-number</i> peer-template <i>name</i> <i>prefix</i> } [vrf <i>vrf-name</i>]	<p>Clears one or more neighbors. * clears all neighbors in the address family. The arguments are as follows:</p> <ul style="list-style-type: none"> • <i>neighbor</i>—IPv4 address of a neighbor. • <i>as-number</i>— Autonomous system number. The AS number can be a 16-bit integer or a 32-bit integer in the form of higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format. • <i>name</i>—Peer template name. The name can be any case-sensitive alphanumeric string up to 64 characters. • <i>prefix</i>—IPv4 prefix. All neighbors within that prefix are cleared. • <i>vrf-name</i>—VRF name. All neighbors in that VRF are cleared. The name can be any case-sensitive alphanumeric string up to 64 characters.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
clear ip mbgp dampening [<i>ip-neighbor</i> <i>ip-prefix</i>] [vrf <i>vrf-name</i>]	Clears route flap dampening in one or more networks. The arguments are as follows: <ul style="list-style-type: none"> <i>ip-neighbor</i>—IPv4 address of a neighbor. <i>ip-prefix</i>—IPv4. All neighbors within that prefix are cleared. <i>vrf-name</i>—VRF name. All neighbors in that VRF are cleared. The name can be any case-sensitive alphanumeric string up to 64 characters.
clear ip mbgp flap-statistics [<i>ip-neighbor</i> <i>ip-prefix</i>] [vrf <i>vrf-name</i>]	Clears route flap statistics one or more networks. The arguments are as follows: <ul style="list-style-type: none"> <i>ip-neighbor</i>—IPv4 address of a neighbor. <i>ip-prefix</i>—IPv4. All neighbors within that prefix are cleared. <i>vrf-name</i>—VRF name. All neighbors in that VRF are cleared. The name can be any case-sensitive alphanumeric string up to 64 characters.

Verifying Basic BGP Configuration

To verify the BGP configuration, use the following commands:

Command	Purpose
show bgp [vrf <i>vrf-name</i>] all [summary]	Displays the BGP information for all address families.
show bgp [vrf <i>vrf-name</i>] convergence	Displays the BGP information for all address families.
show bgp [vrf <i>vrf-name</i>] ip { unicast multicast } [<i>ip-address</i>] community { regex <i>expression</i> community } [no-advertise] [no-export] [no-export-subconfed]	Displays the BGP routes that match a BGP community.
show bgp [vrf <i>vrf-name</i>] ip { unicast multicast } [<i>ip-address</i>] community-list <i>list-name</i>	Displays the BGP routes that match a BGP community list.
show bgp [vrf <i>vrf-name</i>] ip { unicast multicast } [<i>ip-address</i>] { dampening dampened-paths [regex <i>expression</i>] }	Displays the information for BGP route dampening. Use the clear bgp dampening command to clear the route flap dampening information.
show bgp [vrf <i>vrf-name</i>] ip { unicast multicast } [<i>ip-address</i>] history-paths [regex <i>expression</i>]	Displays the BGP route history paths.
show bgp [vrf <i>vrf-name</i>] ip { unicast multicast } [<i>ip-address</i>] filter-list <i>list-name</i>	Displays the information for the BGP filter list.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] neighbors [ip-address]	Displays the information for BGP peers. Use the clear bgp neighbors command to clear these neighbors.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] {nexthop nexthop-database}	Displays the information for the BGP route next hop.
show bgp paths	Displays the BGP path information.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] policy name	Displays the BGP policy information. Use the clear bgp policy command to clear the policy information.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] prefix-list list-name	Displays the BGP routes that match the prefix list.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] received-paths	Displays the BGP paths stored for the soft reconfiguration.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] regexp expression	Displays the BGP routes that match the AS_path regular expression.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] route-map map-name	Displays the BGP routes that match the route map.
show bgp [vrf vrf-name] peer-policy name	Displays the information about BGP peer policies.
show bgp [vrf vrf-name] peer-session name	Displays the information about BGP peer sessions.
show bgp [vrf vrf-name] peer-template name	Displays the information about BGP peer templates. Use the clear bgp peer-template command to clear all neighbors in a peer template.
show bgp process	Displays the BGP process information.
show running-configuration bgp	Displays the current running BGP configuration.

Displaying BGP Statistics

To display BGP statistics, use the following commands:

Command	Purpose
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] flap-statistics	Displays the BGP route flap statistics. Use the clear bgp flap-statistics command to clear these statistics.
show bgp [vrf vrf-name] sessions	Displays the BGP sessions for all peers. Use the clear bgp sessions command to clear these statistics.
show bgp [vrf vrf-name] sessions	Displays the BGP sessions for all peers. Use the clear bgp sessions command to clear these statistics.
show bgp statistics	Displays the BGP statistics.

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Basic BGP Example Configuration

The following example shows a basic BGP configuration:

```
feature bgp
router bgp 64496
  neighbor 209.165.201.1 remote-as 64497
  address-family ipv4 multicast
  address-family ipv4 unicast
```

Related Topics

The following topics relate to BGP:

- [Chapter 15, “Configuring Route Policy Manager.”](#)

Where to Go Next

See [Chapter 10, “Configuring Advanced BGP”](#) for details on the following features:

- Peer templates
- Route redistribution
- Route maps

Default Settings

[Table 9-2](#) lists the default settings for BGP parameters.

Table 9-2 **Default BGP Parameters**

Parameters	Default
BGP feature	Disabled
keep alive interval	60 seconds
hold timer	180 seconds

Additional References

For additional information related to implementing BGP, see the following sections:

- [Related Documents, page 9-23](#)
- [MIBs, page 9-23](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
BGP CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs and VRFs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

MIBs

MIBs	MIBs Link
BGP4-MIB	To locate and download MIBs, go to the following URL:
CISCO-BGP4-MIB	http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

Feature History for BGP

Table 9-3 lists the release history for this feature.

Table 9-3 Feature History for BGP

Feature Name	Releases	Feature Information
Dynamic AS number for prefix peers	4.1(2)	Added support for a range of AS numbers for BGP prefix peer configuration.
BGP	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 10

Configuring Advanced BGP

This chapter describes how to configure advanced features of the Border Gateway Protocol (BGP).

This chapter includes the following sections:

- [Information About Advanced BGP, page 10-1](#)
- [Licensing Requirements for Advanced BGP, page 10-10](#)
- [Prerequisites for BGP, page 10-10](#)
- [Guidelines and Limitations for BGP, page 10-10](#)
- [Configuring Advanced BGP, page 10-11](#)
- [Verifying Advanced BGP Configuration, page 10-37](#)
- [Displaying BGP Statistics, page 10-38](#)
- [Related Topics, page 10-38](#)
- [Default Settings, page 10-38](#)
- [Default Settings, page 10-38](#)
- [Additional References, page 10-39](#)
- [Feature History for BGP, page 10-39](#)

Information About Advanced BGP

BGP is an interdomain routing protocol that provides loop-free routing between organizations or autonomous systems. Cisco NX-OS supports BGP version 4. BGP version 4 includes multiprotocol extensions that allow BGP to carry routing information for IP multicast routes and multiple Layer 3 protocol address families. BGP uses TCP as a reliable transport protocol to create TCP sessions with other BGP-enabled devices called BGP peers. When connecting to an external organization, the router creates external BGP (eBGP) peering sessions. BGP peers within the same organization exchange routing information through internal BGP (iBGP) peering sessions.



Note

Cisco NX-OS does not support IPv6 for BGP.

This section includes the following topics:

- [Peer Templates, page 10-2](#)
- [Authentication, page 10-2](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- [Route Policies and Resetting BGP Sessions, page 10-3](#)
- [eBGP, page 10-3](#)
- [iBGP, page 10-3](#)
- [Capabilities Negotiation, page 10-6](#)
- [Route Dampening, page 10-6](#)
- [Load Sharing and Multipath, page 10-7](#)
- [Route Aggregation, page 10-7](#)
- [Route Redistribution, page 10-8](#)
- [Tuning BGP, page 10-8](#)
- [Multiprotocol BGP, page 10-8](#)
- [Graceful Restart and High Availability, page 10-9](#)
- [ISSU, page 10-9](#)
- [Virtualization Support, page 10-10](#)

Peer Templates

BGP peer templates allow you to create blocks of common configuration that you can reuse across similar BGP peers. Each block allows you to define a set of attributes that a peer then inherits. You can choose to override some of the inherited attributes as well, making it a very flexible scheme for simplifying the repetitive nature of BGP configurations.

Cisco NX-OS implements three types of peer templates:

- The *peer-session* template defines BGP peer session attributes, such as the transport details, remote autonomous system number of the peer, and session timers. A peer-session template can also inherit attributes from another peer-session template (with locally defined attributes that override the attributes from an inherited peer-session).
- A *peer-policy* template defines the address-family dependent policy aspects for a peer including the inbound and outbound policy, filter-lists, and prefix-lists. A peer-policy template can inherit from a set of peer-policy templates. Cisco NX-OS evaluates these peer-policy templates in the order specified by the preference value in the inherit configuration. The lowest number is preferred over higher numbers.
- The *peer* template can inherit the peer-session and peer-policy templates to allow for simplified peer definitions. It is not mandatory to use a peer template but it can simplify the BGP configuration by providing reusable blocks of configuration.

Authentication

You can configure authentication for a BGP neighbor session. This authentication method adds an MD5 authentication digest to each TCP segment sent to the neighbor to protect BGP against unauthorized messages and TCP security attacks.



Note

The MD5 password must be identical between BGP peers.

Send document comments to nexus7k-docfeedback@cisco.com.

Route Policies and Resetting BGP Sessions

You can associate a route policy to a BGP peer. Route policies use route maps to control or modify the routes that BGP recognizes. You can configure a route policy for inbound or outbound route updates. The route policies can match on different criteria, such as a prefix or AS_path attribute, and selectively accept or deny the routes. Route policies can also modify the path attributes. See [Chapter 16, “Configuring Policy-Based Routing”](#) for more information on route policies.

When you change a route policy applied to a BGP peer, you must reset the BGP sessions for that peer. Cisco NX-OS supports the following three mechanisms to reset BGP peering sessions:

- **Hard reset**—A hard reset tears down the specified peering sessions, including the TCP connection, and deletes routes coming from the specified peer. This option interrupts packet flow through the BGP network. Hard reset is disabled by default.
- **Soft reconfiguration inbound**—A soft reconfiguration inbound triggers routing updates for the specified peer without resetting the session. You can use this option if you change an inbound route policy. Soft reconfiguration inbound saves a copy of all routes received from the peer before processing the routes through the inbound route policy. If you change the inbound route policy, Cisco NX-OS passes these stored routes through the modified inbound route policy to update the route table without tearing down existing peering sessions. Soft reconfiguration inbound can use significant memory resources to store the unfiltered BGP routes. Soft reconfiguration inbound is disabled by default.
- **Route Refresh**—A route refresh updates the inbound routing tables dynamically by sending route refresh requests to supporting peers when you change an inbound route policy. The remote BGP peer responds with a new copy of its routes that the local BGP speaker processes with the modified route policy. Cisco NX-OS automatically sends an outbound route refresh of prefixes to the peer.
- **BGP peers advertise the route refresh capability** as part of the BGP capability negotiation when establishing the BGP peer session. Route refresh is the preferred option and enabled by default.



Note

BGP also uses route maps for route redistribution, route aggregation, route dampening, and other features. See [Chapter 15, “Configuring Route Policy Manager,”](#) for more information on route maps.

eBGP

External BGP (eBGP) allows you to connect BGP peers from different autonomous systems to exchange routing updates. Connecting to external networks enables traffic from your network to be forwarded to other networks and across the Internet.

You should use loopback interfaces for establishing eBGP peering sessions because loopback interfaces are less susceptible to interface flapping. An interface *flap* occurs when the interface is administratively brought up or down because of a failure or maintenance issue. See the [“Configuring eBGP” section on page 10-21](#) for information on multihop, fast external failovers, and limiting the size of the AS-path attribute.


iBGP

Internal BGP (iBGP) allows you to connect BGP peers within the same autonomous system. You can use iBGP for multihomed BGP networks (networks that have more than one connection to the same external autonomous system).

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 10-1 shows an iBGP network within a larger BGP network.

Figure 10-1 iBGP Network

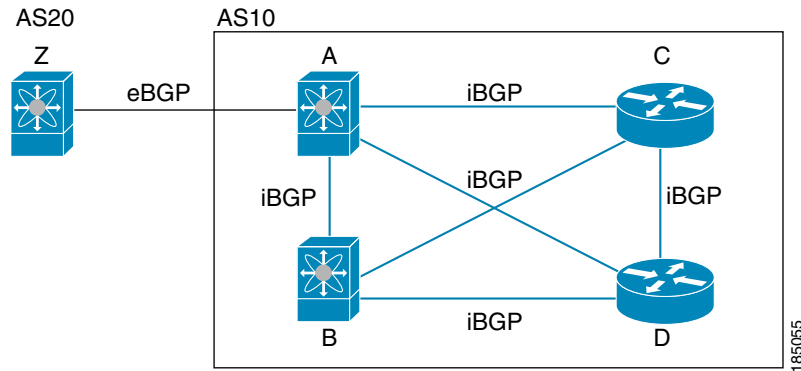

iBGP networks are fully meshed. Each iBGP peer has a direct connection to all other iBGP peers to prevent network loops.



Note

You should configure a separate interior gateway protocol in the iBGP network.

This section includes the following topics:

- [AS Confederations, page 10-4](#)
- [Router Reflector, page 10-5](#)


AS Confederations

A fully meshed iBGP network becomes complex as the number of iBGP peers grows. You can reduce the iBGP mesh by dividing the autonomous system into multiple subautonomous systems and grouping them into a single confederation. A confederation is a group of iBGP peers that use the same autonomous system number to communicate to external networks. Each subautonomous system is fully meshed within itself and has a few connections to other subautonomous systems in the same confederation.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 10-2 shows the BGP network from Figure 10-1, split into two subautonomous systems and one confederation.

Figure 10-2 AS Confederation

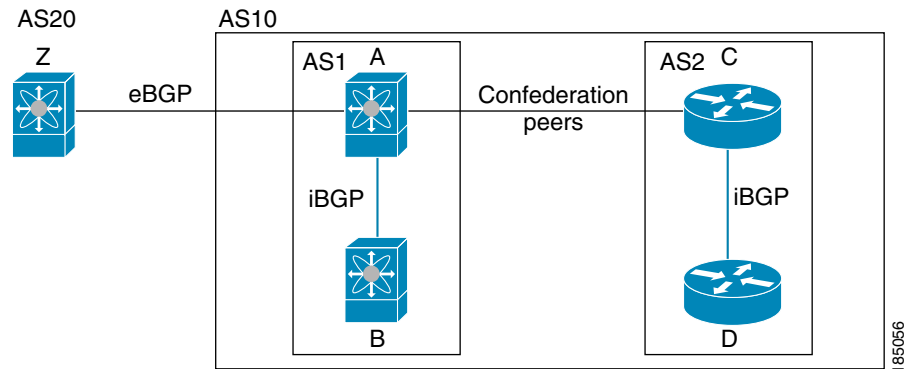

In this example, AS10 is split into two subautonomous systems, AS1 and AS2. Each subautonomous system is fully meshed, but there is only one link between the subautonomous systems. By using AS confederations, you can reduce the number of links compared to the fully meshed autonomous system in Figure 10-1.

Router Reflector

You can alternately reduce the iBGP mesh by using a router reflector configuration. Router reflectors pass learned routes to neighbors so that all iBGP peers do not need to be fully meshed.


Figure 10-1 shows a simple iBGP configuration with four meshed iBGP speakers (router A, B, C, and D). Without router reflectors, when router A receives a route from an external neighbor, it advertises the route to all three iBGP neighbors.

When you configure an iBGP peer to be a route reflector, it becomes responsible for passing iBGP learned routes to a set of iBGP neighbors.

In Figure 10-3, router B is the router reflector. When the router reflector receives routes advertised from router A, it advertises (reflects) the routes to routers C and D. Router A no longer has to advertise to both routers C and D.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 10-3 Router Reflector

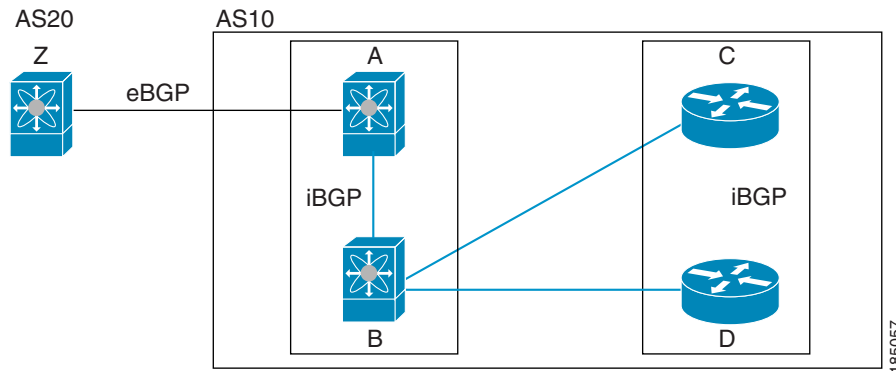

The router reflector and its client peers form a cluster. You do not have to configure all iBGP peers to act as client peers of the router reflector. You must configure any nonclient peer as fully meshed to guarantee that complete BGP updates reach all peers.

Capabilities Negotiation

A BGP speaker can learn about BGP extensions supported by a peer by using the capabilities negotiation feature. Capabilities negotiation allows BGP to use only the set of features supported by both BGP peers on a link.

If a BGP peer does not support capabilities negotiation, Cisco NX-OS will attempt a new session to the peer without capabilities negotiation if you have configured the address family as IPv4. Any other multiprotocol configuration requires capabilities negotiation.

Route Dampening

Route dampening is a BGP feature that minimizes the propagation of flapping routes across an internetwork. A route flaps when it alternates between the available and unavailable states in rapid succession.

For example, consider a network with three BGP autonomous systems: AS1, AS2, and AS3. Suppose that a route in AS1 flaps (it becomes unavailable). Without route dampening, AS1 sends a withdraw message to AS2. AS2 propagates the withdrawal message to AS3. When the flapping route reappears, AS1 sends an advertisement message to AS2, which sends the advertisement to AS3. If the route repeatedly becomes unavailable, and then available, AS1 sends many withdrawal and advertisement messages that propagate through the other autonomous systems.

Route dampening can minimize flapping. Suppose that the route flaps. AS2 (in which route dampening is enabled) assigns the route a penalty of 1000. AS2 continues to advertise the status of the route to neighbors. Each time that the route flaps, AS2 adds to the penalty value. When the route flaps so often that the penalty exceeds a configurable suppression limit, AS2 stops advertising the route, regardless of how many times that it flaps. The route is now dampened.

The penalty placed on the route decays until the reuse limit is reached. At that time, AS2 advertises the route again. When the reuse limit is at 50 percent, AS2 removes the dampening information for the route.

Send document comments to nexus7k-docfeedback@cisco.com.

**Note**

The router does not apply a penalty to a resetting BGP peer when route dampening is enabled, even though the peer reset withdraws the route.

Load Sharing and Multipath

BGP can install multiple equal-cost eBGP or iBGP paths into the routing table to reach the same destination prefix. Traffic to the destination prefix is then shared across all the installed paths.

The BGP best-path algorithm considers the paths as equal-cost paths if the following attributes are identical:

- Weight
- Local preference
- AS_path
- Origin code
- Multi-exit discriminator (MED)
- IGP cost to the BGP next hop

BGP selects only one of these multiple paths as the best path and advertises the path to the BGP peers.

**Note**

Paths received from different AS confederations are considered as equal-cost paths if the external AS_path values and the other attributes are identical.

**Note**

When you configure a router reflector for iBGP multipath, and the router reflector advertises the selected best path to its peers, the next hop for the path is not modified.

Route Aggregation

You can configure aggregate addresses. Route aggregation simplifies route tables by replacing a number of more specific addresses with an address that represents all the specific addresses. For example, you can replace these three more specific addresses, 10.1.1.0/24, 10.1.2.0/24, and 10.1.3.0/24 with one aggregate address, 10.1.0.0/16.

Aggregate prefixes are present in the BGP route table so that fewer routes are advertised.

**Note**

Cisco NX-OS does not support automatic route aggregation.

Route aggregation can lead to forwarding loops. To avoid this problem, when BGP generates an advertisement for an aggregate address, it automatically installs a summary discard route for that aggregate address in the local routing table. BGP sets the administrative distance of the summary discard to 220 and sets the route type to discard. BGP does not use discard routes for next-hop resolution.

Send document comments to nexus7k-docfeedback@cisco.com.

Route Redistribution

You can configure BGP to redistribute static routes or routes from other protocols. You configure a route policy with the redistribution to control which routes are passed into BGP. A route policy allows you to filter routes based on attributes such as the destination, origination protocol, route type, route tag, and so on. See [Chapter 15, “Configuring Route Policy Manager,”](#) for more information.

Tuning BGP

You can modify the default behavior of BGP through BGP timers and by adjusting the best-path algorithm.

This section includes the following topics:

- [BGP Timers, page 10-8](#)
- [Tuning the Best-Path Algorithm, page 10-8](#)

BGP Timers

BGP uses different types of timers for neighbor session and global protocol events. Each established session has a minimum of two timers for sending periodic keepalive messages and for timing out sessions when peer keepalives do not arrive within the expected time. In addition, there are other timers for handling specific features. Typically, you configure these timers in seconds. The timers include a random adjustment so that the same timers on different BGP peers trigger at different times.

Tuning the Best-Path Algorithm

You can modify the default behavior of the best-path algorithm through optional configuration parameters, including changing how the algorithm handles the MED attribute and the router ID.

Multiprotocol BGP

BGP on Cisco NX-OS supports multiple address families. Multiprotocol BGP (MP-BGP) carries different sets of routes depending on the address family. For example, BGP can carry one set of routes for IPv4 unicast routing, and one set of routes for IPv4 multicast routing. You can use MP-BGP for reverse-path forwarding (RPF) checks in IP multicast networks.



Note

Because Multicast BGP does not propagate multicast state information, you need a multicast protocol, such as Protocol Independent Multicast (PIM).

Use the router address-family and neighbor address-family configuration modes to support multiprotocol BGP configurations. MPBGP maintains separate RIBs for each configured address family, such as a unicast RIB and a multicast RIB for BGP.

A multiprotocol BGP network is backward compatible but BGP peers that do not support multiprotocol extensions cannot forward routing information, such as address family identifier information, that the multiprotocol extensions carry.

Send document comments to nexus7k-docfeedback@cisco.com.

Graceful Restart and High Availability

Cisco NX-OS supports nonstop forwarding and graceful restart for BGP.

You can use nonstop forwarding (NSF) for BGP to forward data packets along known routes in the Forward Information Base (FIB) while the BGP routing protocol information is being restored following a failover. With NSF, BGP peers do not experience routing flaps. During a failover, the data traffic is forwarded through intelligent modules while the standby supervisor becomes active.

If a Cisco NX-OS router experiences a cold reboot, the network does not forward traffic to the router and removes the router from the network topology. In this scenario, BGP experiences a nongraceful restart and removes all routes. When Cisco NX-OS applies the startup configuration, BGP reestablishes peering sessions and relearns the routes.

A Cisco NX-OS router that has dual supervisors can experience a stateful supervisor switchover. Before the switchover occurs, BGP announces that a graceful restart is starting and that BGP will be unavailable for some time. During the switchover, BGP uses nonstop forwarding to forward traffic based on the information in the FIB, and the system is not taken out of the network topology. The router that is restarted marks these routes from its peers as stale.

When a router detects that a graceful restart operation is in progress, both routers exchange their topology tables. When the router has route updates from all BGP peers, it removes all the stale routes and runs the best-path algorithm on the updated routes.

After the switchover, Cisco NX-OS applies the running configuration, and BGP informs the neighbors that it is operational again.

ISSU

Cisco NX-OS supports in-service software upgrades (ISSU). ISSU allows you to upgrade software without impacting forwarding.



Note

You must enable graceful restart to support ISSU for BGP.

BGP uses a peer hold timer to tear down sessions for peers that have become inactive and stopped responding. As part of the ISSU process, BGP control packets might not be received or transmitted during the switchover and peers may notice a loss of keepalive messages. However, as long as the hold time is greater than the switchover time, the peers should not tear down sessions with the local router.

Once switchover occurs, the peers receive TCP connection resets from the new active TCP on the local router. If you enabled graceful restart, the peers treat the resets as an indication that the router restarted and initiate the graceful-restart helper procedures.



Note

Cisco NX-OS cannot guarantee ISSU if the negotiated hold time between BGP peers is less than the system switchover time (approximately 29 seconds).

BGP supports ISSU in the following ways:

- If you disable graceful restart, Cisco NX-OS issues a warning that ISSU cannot be supported with this configuration.
- If you configure the hold time to be less than the system switchover time, Cisco NX-OS issues a similar warning. If the peer negotiates a shorter hold time, Cisco NX-OS logs a message.

Send document comments to nexus7k-docfeedback@cisco.com.

- When Cisco NX-OS starts an ISSU, BGP checks both the graceful restart status and thenegotiated hold time for all active peers. Cisco NX-OS issues appropriate warnings and ends the ISSU process if graceful restart is disabled or the negotiated hold times for the active peers is less than the system switchover time.

If the negotiated hold time is less than the system switchover time, you must reconfigure the hold timers on the BGP peers to be greater than the system switchover time and restart the BGP sessions before you can proceed with the ISSU.

Virtualization Support

Cisco NX-OS supports multiple instances of BGP that run on the same system. BGP supports Virtual Routing and Forwarding instances (VRFs) that exist within virtual device contexts (VDCs). You can configure one BGP instance in a VDC, but you can have multiple VDCs on the system.

By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. See the *Cisco NX-OS Virtual Device Context Configuration Guide* and [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for Advanced BGP

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	BGP requires an Enterprise Services license. For a complete explanation of the NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i>

Prerequisites for BGP

BGP has the following prerequisites:

- You must enable the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).
- You should have a valid router ID configured on the system.
- You must have an AS number, either assigned by a Regional Internet Registry (RIR) or locally administered.
- You must have reachability (such as an interior gateway protocol (IGP), a static route, or a direct connection) to the peer that you are trying to make a neighbor relationship with.
- You must explicitly configure an address family under a neighbor for the BGP session establishment.

Guidelines and Limitations for BGP

BGP has the following guidelines and limitations:

- The dynamic AS number prefix peer configuration overrides the individual AS number configuration inherited from a BGP template.

Send document comments to nexus7k-docfeedback@cisco.com.

- If you configure a dynamic AS number for prefix peers in an AS confederation, BGP establishes sessions with only the AS numbers in the local confederation.
- BGP sessions created through a dynamic AS number prefix peer ignore any configured eBGP multihop time-to-live (TTL) value or a disabled check for directly connected peers.
- Configure a router ID for BGP to avoid automatic router ID changes and session flaps.
- Use the maximum-prefix configuration option per peer to restrict the number of routes received and system resources used.
- Configure the update-source to establish a session with eBGP multihop sessions.
- Specify a BGP route map if you configure redistribution.
- Configure the BGP router ID within a VRF.
- If you decrease the keepalive and hold timer values, the network might experience session flaps.
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1*).

Configuring Advanced BGP

This section describes how to configure advanced BGP and includes the following topics:

- [Configuring BGP Session Templates, page 10-12](#)
- [Configuring BGP Peer-Policy Templates, page 10-14](#)
- [Configuring BGP Peer Templates, page 10-16](#)
- [Configuring Prefix Peering, page 10-19](#)
- [Configuring BGP Authentication, page 10-20](#)
- [Resetting a BGP Session, page 10-20](#)
- [Modifying the Next-Hop Address, page 10-21](#)
- [Disabling Capabilities Negotiation, page 10-21](#)
- [Configuring eBGP, page 10-21](#)
- [Configuring AS Confederations, page 10-23](#)
- [Configuring Router Reflector, page 10-24](#)
- [Configuring Route Dampening, page 10-26](#)
- [Configuring Load Sharing and ECMP, page 10-26](#)
- [Configuring Maximum Prefixes, page 10-26](#)
- [Configuring Dynamic Capability, page 10-27](#)
- [Configuring Aggregate Addresses, page 10-28](#)
- [Configuring Route Redistribution, page 10-28](#)
- [Configuring Multiprotocol BGP, page 10-30](#)
- [Tuning BGP, page 10-31](#)
- [Configuring a Graceful Restart, page 10-34](#)
- [Configuring Virtualization, page 10-35](#)

Send document comments to nexus7k-docfeedback@cisco.com.

**Note**

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring BGP Session Templates

You can use BGP session templates to simplify BGP configuration for multiple BGP peers with similar configuration needs. BGP templates allow you to reuse common configuration blocks. You configure BGP templates first, and then apply these templates to BGP peers.

With BGP session templates, you can configure session attributes such as inheritance, passwords, timers, and security.

A peer-session template can inherit from one other peer-session template. You can configure the second template to inherit from a third template. The first template also inherits this third template. This indirect inheritance can continue for up to seven peer-session templates.

Any attributes configured for the neighbor take priority over any attributes inherited by that neighbor from a BGP template.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

**Note**

When editing a template, you can use the **no** form of a command at either the peer or template level to explicitly override a setting in a template. You must use the **default** form of the command to reset that attribute to the default state.

SUMMARY STEPS

1. **config t**
2. **router bgp** *autonomous-system-number*
3. **template peer-session** *template-name*
4. Add appropriate attributes to the session template.
5. Add appropriate attributes to the session template.
6. **exit**
7. **neighbor** *ip-address* **remote-as** *as-number*
8. **inherit peer-session** *template-name*
9. Add appropriate neighbor attributes.
10. **show bgp peer-session** *template-name*
11. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>autonomous-system-number</i> Example: switch(config)# router bgp 65536 switch(config-router)#	Enables BGP and assigns the autonomous system number to the local BGP speaker.
Step 3	template peer-session <i>template-name</i> Example: switch(config-router)# template peer-session BaseSession switch(config-router-stmp)#	Enters peer-session template configuration mode.
Step 4	password <i>number password</i> Example: switch(config-router-stmp)# password 0 test	(Optional) Adds the clear text password <i>test</i> to the neighbor. The password is stored and displayed in type 3 encrypted form (3DES).
Step 5	timers <i>keepalive hold</i> Example: switch(config-router-stmp)# timers 30 90	(Optional) Adds the BGP keepalive and holdtimer values to the peer-session template. The default keepalive interval is 60. The default hold time is 180.
Step 6	exit Example: switch(config-router-stmp)# exit switch(config-router)#	Exits peer-session template configuration mode.
Step 7	neighbor <i>ip-address remote-as as-number</i> Example: switch(config-router)# neighbor 192.168.1.2 remote-as 65536 switch(config-router-neighbor)#	Places the router in the neighbor configuration mode for BGP routing and configures the neighbor IP address.
Step 8	inherit peer-session <i>template-name</i> Example: switch(config-router-neighbor)# inherit peer-session BaseSession switch(config-router-neighbor)	Applies a peer-session template to the peer.
Step 9	description <i>text</i> Example: switch(config-router-neighbor)# description Peer Router A switch(config-router-neighbor)	(Optional) Adds a description for the neighbor.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 10	show bgp peer-session <i>template-name</i> Example: switch(config-router-neighbor)# show bgp peer-session BaseSession	(Optional) Displays the peer-policy template.
Step 11	copy running-config startup-config Example: switch(config-router-neighbor)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **show bgp neighbor** command to see the template applied. See the *Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1* for details on all commands available in the template.

This example shows how to configure a BGP peer-session template and apply it to a BGP peer:

```
switch# config t
switch(config)# router bgp 65536
switch(config-router)# template peer-session BaseSession
switch(config-router-stmp)# timers 30 90
switch(config-router-stmp)# exit
switch(config-router)# neighbor 192.168.1.2 remote-as 65536
switch(config-router-neighbor)# inherit peer-session BaseSession
switch(config-router-neighbor)# description Peer Router A
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor)# copy running-config startup-config
```

Configuring BGP Peer-Policy Templates

You can configure a peer-policy template to define attributes for a particular address family. You assign a preference to each peer-policy template and these templates are inherited in the order specified, for up to five peer-policy templates in a neighbor address family.

Cisco NX-OS evaluates multiple peer policies for an address family using the preference value. The lowest preference value is evaluated first. Any attributes configured for the neighbor take priority over any attributes inherited by that neighbor from a BGP template.

Peer-policy templates can configure address family-specific attributes such as AS-path filter lists, prefix lists, route reflection, and soft reconfiguration.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).



Note

When editing a template, you can use the **no** form of a command at either the peer or template level to explicitly override a setting in a template. You must use the default form of the command to reset that attribute to the default state.

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. **config t**
2. **router bgp** *autonomous-system-number*
3. **template peer-policy** *template-name*
4. Add appropriate attributes to the policy template.
5. **exit**
6. **neighbor** *ip-address* **remote-as** *as-number*
7. **address-family**{ **ipv4** {**multicast** | **unicast**}
8. **inherit peer-policy** *template-name* *preference*
9. **show bgp peer-policy** *template-name*
10. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>autonomous-system-number</i> Example: switch(config)# router bgp 65536 switch(config-router)#	Enables BGP and assigns the autonomous system number to the local BGP speaker.
Step 3	template peer-policy <i>template-name</i> Example: switch(config-router)# template peer-policy BasePolicy switch(config-router-ptmp)#	Creates a peer-policy template.
Step 4	advertise-active-only Example: switch(config-router-ptmp)# advertise-active-only	(Optional) Advertises only active routes to the peer.
Step 5	maximum-prefix <i>number</i> Example: switch(config-router-ptmp)# maximum-prefix 20	(Optional) Sets the maximum number of prefixes allowed from this peer.
Step 6	exit Example: switch(config-router-ptmp)# exit switch(config-router)#	Exits peer-policy template configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 7	neighbor <i>ip-address</i> remote-as <i>as-number</i> Example: switch(config-router)# neighbor 192.168.1.2 remote-as 65536 switch(config-router-neighbor)#	Places the router in neighbor configuration mode for BGP routing and configures the neighbor IP address.
Step 8	address-family ipv4 { multicast unicast } Example: switch(config-router-neighbor)# address-family ipv4 unicast switch(config-router-neighbor-af)#	Enters global address family configuration mode for the IPv4 address family.
Step 9	inherit peer-policy <i>template-name</i> <i>preference</i> Example: switch(config-router-neighbor-af)# inherit peer-policy BasePolicy 1	Applies a peer-policy template to the peer address family configuration and assigns the preference value for this peer policy.
Step 10	show bgp peer-policy <i>template-name</i> Example: switch(config-router-neighbor-af)# show bgp peer-policy BasePolicy	(Optional) Displays the peer-policy template.
Step 11	copy running-config startup-config Example: switch(config-router-neighbor-af)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **show bgp neighbor** command to see the template applied. See the *Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1* for details on all commands available in the template.

This example shows how to configure a BGP peer-session template and apply it to a BGP peer:

This example shows how to configure a BGP peer-policy template and apply it to a BGP peer:

```
switch# config t
switch(config)# router bgp 65536
switch(config-router)# template peer-session BasePolicy
switch(config-router-ptmp)# maximum-prefix 20
switch(config-router-ptmp)# exit
switch(config-router)# neighbor 192.168.1.1 remote-as 65536
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# inherit peer-policy BasePolicy
switch(config-router-neighbor-af)# copy running-config startup-config
```

Configuring BGP Peer Templates

You can configure BGP peer templates to combine session and policy attributes in one reusable configuration block. Peer templates can also inherit peer-session or peer-policy templates. Any attributes configured for the neighbor take priority over any attributes inherited by that neighbor from a BGP template. You configure only one peer template for a neighbor, but that peer template can inherit peer-session and peer-policy templates.

Send document comments to nexus7k-docfeedback@cisco.com.

Peer templates support session and address family attributes, such as eBGP multihop time-to-live, maximum prefix, next-hop self, and timers.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the “[Enabling the BGP Feature](#)” section on [page 9-10](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).



Note

When editing a template, you can use the **no** form of a command at either the peer or template level to explicitly override a setting in a template. You must use the default form of the command to reset that attribute to the default state.

SUMMARY STEPS

1. **config t**
2. **router bgp** *autonomous-system-number*
3. **template peer** *template-name*
4. Add appropriate attributes to the peer template.
5. **exit**
6. **neighbor** *ip-address*
7. **inherit peer-policy** *template-name*
8. **exit**
9. Add appropriate neighbor attributes.
10. **show bgp peer-template** *template-name*
11. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>autonomous-system-number</i> Example: switch(config)# router bgp 65536	Enters BGP mode and assigns the autonomous system number to the local BGP speaker.
Step 3	template peer <i>template-name</i> Example: switch(config-router)# template peer BasePeer switch(config-router-neighbor)#	Enters peer template configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	inherit peer-session <i>template-name</i> Example: switch(config-router-neighbor)# inherit peer-session BaseSession	(Optional) Inherits a peer-session template in the peer template.
Step 5	address-family ipv4 {multicast unicast} Example: switch(config-router-neighbor)# address-family ipv4 unicast switch(config-router-neighbor-af)#	(Optional) Configures the global address family configuration mode for the IPv4 address family.
Step 6	inherit peer-policy <i>template-name preference</i> Example: switch(config-router-neighbor-af)# inherit peer-policy BasePolicy 1	(Optional) Applies a peer-policy template to the neighbor address family configuration and assigns the preference value for this peer policy.
Step 7	exit Example: switch(config-router-neighbor-af)# exit switch(config-router-neighbor)#	Exits BGP neighbor address family configuration mode.
Step 8	timers <i>keepalive hold</i> Example: switch(config-router-neighbor)# timers 45 100	(Optional) Adds the BGP timer values to the peer. These values override the timer values in the peer-session template, BaseSession.
Step 9	exit Example: switch(config-router-neighbor)# exit switch(config-router)#	Exits BGP peer template configuration mode.
Step 10	neighbor ip-address remote-as as-number Example: switch(config-router)# neighbor 192.168.1.2 remote-as 65536 switch(config-router-neighbor)#	Places the router in neighbor configuration mode for BGP routing and configures the neighbor IP address.
Step 11	inherit peer <i>template-name</i> Example: switch(config-router-neighbor)# inherit peer BasePeer	Inherits the peer template.
Step 12	timers <i>keepalive hold</i> Example: switch(config-router-neighbor)# timers 60 120	(Optional) Adds the BGP timer values to this neighbor. These values override the timer values in the peer template and the peer-session template.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 13	show bgp peer-template <i>template-name</i> Example: switch(config-router-neighbor-af)# show bgp peer-template BasePeer	(Optional) Displays the peer template.
Step 14	copy running-config startup-config Example: switch(config-router-neighbor-af)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **show bgp neighbor** command to see the template applied. See the *Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1* for details on all commands available in the template.

This example shows how to configure a BGP peer template and apply it to a BGP peer:

```
switch# config t
switch(config)# router bgp 65536
switch(config-router)# template peer BasePeer
switch(config-router-neighbor)# inherit peer-session BaseSession
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# inherit peer-policy BasePolicy 1
switch(config-router-neighbor-af)# exit
switch(config-router-neighbor)# exit
switch(config-router)# neighbor 192.168.1.2 remote-as 65536
switch(config-router-neighbor)# inherit peer BasePeer
switch(config-router-neighbor)# copy running-config startup-config
```

Configuring Prefix Peering

BGP supports the definition of a set of peers using a prefix for IPv4. This feature allows you to not have to add each neighbor to the configuration.

When defining a prefix peering, you must specify the remote AS number with the prefix. BGP accepts any peer that connects from that prefix and autonomous system if the prefix peering does not exceed the configured maximum peers allowed.

When a BGP peer that is part of a prefix peering disconnects, Cisco NX-OS holds its peer structures for a defined prefix peer timeout value. An established peer can reset and reconnect without danger of being blocked because other peers have consumed all slots for that prefix peering.

To configure the BGP prefix peering timeout value, use the following command in router configuration mode:

Command	Purpose
timers prefix-peer-timeout <i>value</i> Example: switch(config-router-neighbor)# timers prefix-peer-timeout 120	Configures the timeout value for prefix peering. The range is from 0 to 1200 seconds. The default value is 30.

To configure the maximum number of peers, use the following command in neighbor configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
maximum-peers <i>value</i> Example: switch(config-router-neighbor)# maximum-peers 120	Configures the maximum number of peers for this prefix peering. The range is from 1 to 1000.

This example shows how to configure a prefix peering that accepts up to 10 peers:

```
switch(config)# router bgp 65536
switch(config-router)# timers prefix-peer-timeout 120
switch(config-router)# neighbor 10.100.200.0/24 remote-as 65536
switch(config-router-neighbor)# maximum-peers 10
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)#
```

Use the **show ip bgp neighbor** command to show the details of the configuration for that prefix peering with a list of the currently accepted instances and the counts of active, maximum concurrent, and total accepted peers.

Configuring BGP Authentication

You can configure BGP to authenticate route updates from peers using MD5 digests.

To configure BGP to use MD5 authentication, use the following command in neighbor configuration mode:

Command	Purpose
password [0 3 7] <i>string</i> Example: switch(config-router-neighbor)# password BGPpassword	Configures an MD5 password for BGP neighbor sessions.

Resetting a BGP Session

If you modify a route policy for BGP, you must reset the associated BGP peer sessions. If the BGP peers do not support route refresh, you can configure a soft reconfiguration for inbound policy changes. Cisco NX-OS automatically attempts a soft reset for the session.

To configure soft reconfiguration inbound, use the following command in neighbor address-family configuration mode:

Command	Purpose
soft-reconfiguration inbound Example: switch(config-router-neighbor-af)# soft-reconfiguration inbound	Enables soft reconfiguration to store the inbound BGP route updates. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.

Send document comments to nexus7k-docfeedback@cisco.com.

To reset a BGP neighbor session, use the following command in any mode:

Command	Purpose
<pre>clear bgp ip {unicast multicast} ip-address soft {in out}</pre> <p>Example: switch# clear bgp ip unicast 192.0.2.1 soft in</p>	Resets the BGP session without tearing down the TCP session.

Modifying the Next-Hop Address

You can modify the next-hop address used in a route advertisement in the following ways:

- Disable next-hop calculation and use the local BGP speaker address as the next-hop address.
- Set the next-hop address as a third-party address. Use this feature in situations where the original next-hop address is on the same subnet as the peer that the route is being sent to. Using this feature saves an extra hop during forwarding.

To modify the next-hop address, use the following parameters in commands address-family configuration mode:

Command	Purpose
<pre>next-hop-self</pre> <p>Example: switch(config-router-neighbor-af) # next-hop-self</p>	Uses the local BGP speaker address as the next-hop address in route updates. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.
<pre>next-hop-third-party</pre> <p>Example: switch(config-router-neighbor-af) # next-hop-third-party</p>	Sets the next-hop address as a third-party address. Use this command for single-hop EBGP peers that do not have next-hop-self configured

Disabling Capabilities Negotiation

You can disable capabilities negotiations to interoperate with older BGP peers that do not support capabilities negotiation.

To disable capabilities negotiation, use the following command in neighbor configuration mode:

Command	Purpose
<pre>dont-capability-negotiate</pre> <p>Example: switch(config-router-neighbor) # dont-capability-negotiate</p>	Disables capabilities negotiation. You must manually reset the BGP sessions after configuring this command.

Configuring eBGP

This section includes the following topics:

Send document comments to nexus7k-docfeedback@cisco.com.

- [Disabling eBGP Single-Hop Checking, page 10-22](#)
- [Configuring eBGP Multihop, page 10-22](#)
- [Disabling a Fast External Failover, page 10-22](#)
- [Limiting the AS-path Attribute, page 10-23](#)

Disabling eBGP Single-Hop Checking

You can configure eBGP to disable checking whether a single-hop eBGP peer is directly connected to the local router. Use this option for configuring a single-hop loopback eBGP session between directly connected switches.

To disable checking whether or not a single-hop eBGP peer is directly connected, use the following command in neighbor configuration mode:

Command	Purpose
disable-connected-check	Disables checking whether or not a single-hop eBGP peer is directly connected. You must manually reset the BGP sessions after using this command.
Example: switch(config-router-neighbor) # disable-connected-check	

Configuring eBGP Multihop

You can configure the eBGP time-to-live (TTL) value to support eBGP multihop. In some situations, an eBGP peer is not directly connected to another eBGP peer and requires multiple hops to reach the remote eBGP peer. You can configure the eBGP TTL value for a neighbor session to allow these multihop sessions.

To configure eBGP multihop, use the following command in neighbor configuration mode:

Command	Purpose
ebgp-multihop <i>ttl-value</i>	Configures the eBGP TTL value for eBGP multihop. The range is from 2 to 255. You must manually reset the BGP sessions after using this command.
Example: switch(config-router-neighbor) # ebgp-multihop 5	

Disabling a Fast External Failover

Typically, when a BGP router loses connectivity to a directly connected eBGP peer, BGP triggers a fast external failover by resetting the eBGP session to the peer. You can disable this fast external failover to limit the instability caused by link flaps.

To disable fast external failover, use the following command in router configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
no fast-external-failover Example: switch(config-router)# no fast-external-failover	Disables a fast external failover for eBGP peers. This command is enabled by default.

Limiting the AS-path Attribute

You can configure eBGP to discard routes that have a high number of AS numbers in the AS-path attribute.

To discard routes that have a high number of AS numbers in the AS-path attribute, use the following command in router configuration mode:

Command	Purpose
maxas-limit <i>number</i> Example: switch(config-router)# maxas-limit 50	Discards eBGP routes that have a number of AS-path segments that exceed the specified limit. The range is from 1 to 2000.

Configuring AS Confederations

To configure an AS confederation, you must specify a confederation identifier. To the outside world, the group of autonomous systems within the AS confederation look like a single autonomous system with the confederation identifier as the autonomous system number.

To configure a BGP confederation identifier, use the following command in router configuration mode:

Command	Purpose
confederation identifier <i>as-number</i> Example: switch(config-router)# confederation identifier 4000	Configures a confederation identifier for an AS confederation. This command triggers an automatic notification and session reset for the BGP neighbor sessions.

To configure the autonomous systems that belong to the AS confederation, use the following command in router configuration mode:

Command	Purpose
bgp confederation peers <i>as-number</i> [<i>as-number2...</i>] Example: switch(config-router)# bgp confederation peers 5 33 44	Specifies a list of autonomous systems that belong to the confederation. This command triggers an automatic notification and session reset for the BGP neighbor sessions.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Router Reflector

You can configure iBGP peers as router reflector clients to the local BGP speaker, which acts as the router reflector. Together, a router reflector and its clients form a cluster. A cluster of clients usually has a single router reflector. In such instances, the cluster is identified by the router ID of the router reflector. To increase redundancy and avoid a single point of failure in the network, you can configure a cluster with more than one router reflector. You must configure all router reflectors in the cluster with the same 4-byte cluster ID so that a router reflector can recognize updates from router reflectors in the same cluster.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router bgp *as-number***
3. **cluster-id *cluster-id***
4. **address-family ipv4 {unicast | multicast}**
5. **client-to-client reflection**
6. **exit**
7. **neighbor *ip-address* remote-as *as-number***
8. **address-family ipv4 | {unicast | multicast}**
9. **route-reflector-client**
10. **show bgp ip {unicast | multicast} neighbors**
11. **copy running-config startup-config**

DETAILED STEPS

	Command or Action	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>as-number</i> Example: switch(config)# router bgp 65536 switch(config-router)#	Enters BGP mode and assigns the autonomous system number to the local BGP speaker.
Step 3	cluster-id <i>cluster-id</i> Example: switch(config-router)# cluster-id 192.0.2.1	Configures the local router as one of the router reflectors that serve the cluster. You specify a cluster ID to identify the cluster. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command or Action	Purpose
Step 4	address-family ipv4 {unicast multicast} Example: <pre>switch(config-router)# address-family ipv4 unicast switch(config-router-af)#</pre>	Enters router address family configuration mode for the specified address family.
Step 5	client-to-client reflection Example: <pre>switch(config-router-af)# client-to-client reflection</pre>	(Optional) Configures client-to-client route reflection. This feature is enabled by default. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.
Step 6	exit Example: <pre>switch(config-router-neighbor)# exit switch(config-router)#</pre>	Exits router address configuration mode.
Step 7	neighbor ip-address remote-as as-number Example: <pre>switch(config-router)# neighbor 192.0.2.10 remote-as 65536 switch(config-router-neighbor)#</pre>	Configures the IP address and AS number for a remote BGP peer.
Step 8	address-family ipv4 {unicast multicast} Example: <pre>switch(config-router-neighbor)# address-family ipv4 unicast switch(config-router-neighbor-af)#</pre>	Enters neighbor address family configuration mode for the unicast IPv4 address family.
Step 9	route-reflector-client Example: <pre>switch(config-router-neighbor-af)# route-reflector-client</pre>	Configures the device as a BGP router reflector and configures the neighbor as its client. This command triggers an automatic notification and session reset for the BGP neighbor sessions.
Step 10	show bgp ip {unicast multicast} neighbors Example: <pre>switch(config-router-neighbor-af)# show bgp ip unicast neighbors</pre>	(Optional) Displays the BGP peers.
Step 11	copy running-config startup-config Example: <pre>switch(config-router-neighbor-af)# copy running-config startup-config</pre>	(Optional) Saves this configuration change.

This example shows how to configure the router as a router reflector and add one neighbor as a client:

```
switch(config)# router bgp 65536
switch(config-router)# neighbor 192.0.2.10 remote-as 65536
switch(config-router-neighbor)# address-family ip unicast
switch(config-router-neighbor-af)# route-reflector-client
switch(config-router-neighbor-af)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Route Dampening

You can configure route dampening to minimize route flaps propagating through your iBGP network.

To configure route dampening, use the following command in address-family or VRF address family configuration mode:

Command	Purpose
dampening [{ <i>half-life</i> <i>reuse-limit</i> <i>suppress-limit</i> <i>max-suppress-time</i> <i>route-map</i> <i>map-name</i> }] Example: switch(config-router-af)# dampening route-map bgpDamp	Disables capabilities negotiation. The parameter values are as follows: <ul style="list-style-type: none"> half-life—The range is from 1 to 45. reuse-limit—The range is from 1 to 20000. suppress-limit—The range is from 1 to 20000. max-suppress-time—The range is from 1 to 255.

Configuring Load Sharing and ECMP

You can configure the maximum number of paths that BGP adds to the route table for equal-cost multipath load balancing.

To configure the maximum number of paths, use the following command in router address-family configuration mode:

Command	Purpose
maximum-paths [<i>ibgp</i>] <i>maxpaths</i> Example: switch(config-router-af)# maximum-paths 12	Configures the maximum number of equal-cost paths for load sharing. The range is from 1 to 16. The default is 8.

Configuring Maximum Prefixes

You can configure the maximum number of prefixes that BGP can receive from a BGP peer. If the number of prefixes exceeds this value, you can optionally configure BGP to generate a warning message or tear down the BGP session to the peer.

To configure the maximum allowed prefixes for a BGP peer, use the following command in neighbor address-family configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
maximum-prefix <i>maximum</i> [<i>threshold</i>] [restart <i>time</i> warming-only] Example: switch(config-router-neighbor-af) # maximum-prefix 12	Configures the maximum number of prefixes from a peer. The parameter ranges are as follows: <ul style="list-style-type: none"> • <i>maximum</i>—The range is from 1 to 300000. • <i>Threshold</i>—The range is from 1 to 100 percent. The default is 75 percent. • <i>time</i>—The range is from 1 to 65535 minutes. This command triggers an automatic notification and session reset for the BGP neighbor sessions if the prefix limit is exceeded.

Configuring Dynamic Capability

You can configure dynamic capability for a BGP peer.

To configure dynamic capability, use the following command in neighbor configuration mode:

Command	Purpose
dynamic-capability Example: switch(config-router-neighbor) # dynamic-capability	Enables dynamic capability. This command triggers an automatic notification and session reset for the BGP neighbor sessions. Disabled by default.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Aggregate Addresses

You can configure aggregate address entries in the BGP route table.

To configure an aggregate address, use the following command in router address-family configuration mode:

Command	Purpose
aggregate-address <i>ip-prefix/length</i> [as-set] [summary-only] [advertise-map <i>map-name</i> [attribute-map <i>map-name</i>] [suppress-map <i>map-name</i>] Example: <pre>switch(config-router-af)# aggregate-address 192.0.2.0/8 as-set</pre>	<p>Creates an aggregate address. The path advertised for this route is an autonomous system set that consists of all elements contained in all paths that are being summarized:</p> <ul style="list-style-type: none"> • The as-set keyword generates autonomous system set path information and community information from contributing paths. • The summary-only keyword filters all more specific routes from updates. • The advertise-map keyword and argument specify the route map used to select attribute information from selected routes. • The attribute-map keyword and argument specify the route map used to select attribute information from the aggregate. • The suppress-map keyword and argument conditionally filters more specific routes.

Configuring Route Redistribution

You can configure BGP to accept routing information from another routing protocol and redistribute that information through the BGP network. Optionally, you can assign a default route for redistributed routes.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router bgp** *as-number*
3. **address-family ipv4** {unicast | multicast}
4. **redistribute** {direct | {eigrp | isis | ospf | ospfv3 | rip} *instance-tag* | static} **route-map** *map-name*
5. **default-metric** *value*
6. **exit**
7. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>as-number</i> Example: switch(config)# router bgp 65536 switch(config-router)#	Enters BGP mode and assigns the autonomous system number to the local BGP speaker.
Step 3	address-family ipv4 {unicast multicast} Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters address family configuration mode.
Step 4	redistribute {direct {eigrp isis ospf ospfv3 rip} instance-tag static} route-map <i>map-name</i> Example: switch(config-router-af)# redistribute eigrp 201 route-map Eigrpmap	Redistributes routes from other protocols into BGP. See the “ Configuring Route Maps ” section on page 15-9 for more information about route maps.
Step 5	default-metric <i>value</i> Example: switch(config-router-af)# default-metric 33	(Optional) Generates a default route into BGP.
Step 6	copy running-config startup-config Example: switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to redistribute EIGRP into BGP:

```
switch# config t
switch(config)# router bgp 65536
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# redistribute eigrp 201 route-map Eigrpmap
switch(config-router-af)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Multiprotocol BGP

You can configure MP-BGP to support multiple address families, including IPv4 unicast and multicast routes.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router bgp *as-number***
3. **neighbor *ip-address* remote-as *as-number***
4. **address-family ipv4 {unicast | multicast}**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>as-number</i> Example: switch(config)# router bgp 65536 switch(config-router)#	Enters BGP mode and assigns the autonomous system number to the local BGP speaker.
Step 3	neighbor <i>ip-address</i> remote-as <i>as-number</i> Example: switch(config-router)# neighbor 192.168.1.2 remote-as 65537 switch(config-router-neighbor)#	Places the router in neighbor configuration mode for BGP routing and configures the neighbor IP address.
Step 4	address-family ipv4 {unicast multicast} Example: switch(config-router-neighbor)# address-family ipv4 multicast switch(config-router-neighbor-af)#	Enters address family configuration mode.
Step 5	copy running-config startup-config Example: switch(config-router-neighbor-af)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

This example shows how to enable advertising and receiving IPv4 routes for multicast RPF for a neighbor.:

```
switch# config t
switch(config)# interface ethernet 2/1
switch(config-if)# ip address 209.165.201.1
switch(config-if)# router bgp 65536
switch(config-router)# neighbor 192.168.1.2 remote-as 35537
switch(config-router-neighbor)# address-family ipv4 multicast
switch(config-router-neighbor-af)# exit
switch(config-router-neighbor-af)# copy running-config startup-config
```

Tuning BGP

You can tune BGP characteristics through a series of optional parameters.

To tune BGP, use the following optional commands in router configuration mode:

Command	Purpose
bestpath [always-compare-med compare-routerid med {missing-as-worst non-deterministic}] Example: switch(config-router)# bestpath always-compare-med	Modifies the best-path algorithm. The optional parameters are as follows: <ul style="list-style-type: none"> • always-compare-med—Compares MED on paths from different autonomous systems. • compare-routerid—Compares the router IDs for identical eBGP paths. • med missing-as-worst—Treats a missing MED as the highest MED. • med non-deterministic—Does not always pick the best MED path from among the paths from the same autonomous system.
enforce-first-as Example: switch(config-router)# enforce-first-as	Enforces the neighbor autonomous system to be the first AS number listed in the AS_path attribute for eBGP.
log-neighbor-changes Example: switch(config-router)# log-neighbor-changes	Generates a system message when a neighbor changes state.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
router-id <i>id</i> Example: switch(config-router)# router-id 209.165.20.1	Manually configures the router ID for this BGP speaker.
timers [bestpath-delay <i>delay</i> bgp <i>keepalive holdtime</i> prefix-peer-timeout <i>timeout</i>] Example: switch(config-router)# timers bgp 90 270	Sets the BGP timer values. The optional parameters are as follows: <ul style="list-style-type: none"> <i>delay</i>—Initial best-path timeout value after a restart. The range is from 0 to 3600 seconds. The default value is 300. <i>keepalive</i>—BGP session keepalive time. The range is from 0 to 3600 seconds. The default value is 60. <i>holdtime</i>—BGP session hold time. The range is from 0 to 3600 seconds. The default value is 180. <i>timeout</i>—Prefix peer timeout value. The range is from 0 to 1200 seconds. The default value is 30. You must manually reset the BGP sessions after configuring this command.

To tune BGP, use the following optional command in router address-family configuration mode:

Command	Purpose
distance <i>ebgp-distance ibgp distance local-distance</i> Example: switch(config-router-af)# distance 20 100 200	Sets the administrative distance for BGP. The range is from 1 to 255. The defaults are as follows: <ul style="list-style-type: none"> eBGP distance—20. iBGP distance—200. local distance—220. Local-distance is the administrative distance used for aggregate discard routes when they are installed in the RIB.

To tune BGP, use the following optional commands in neighbor configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
description <i>string</i> Example: switch(config-router-neighbor)# description main site	Sets a descriptive string for this BGP peer. The string can be up to 80 alphanumeric characters.
transport connection-mode passive Example: switch(config-router-neighbor)# transport connection-mode passive	Allows a passive connection setup only. This BGP speaker does not initiate a TCP connection to a BGP peer. You must manually reset the BGP sessions after configuring this command.
remove-private-as Example: switch(config-router-neighbor)# remove-private-as	Removes private AS numbers from outbound route updates to an eBGP peer. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.
update-source <i>interface-type number</i> Example: switch(config-router-neighbor)# update-source ethernet 2/1	Configures the BGP speaker to use the source IP address of the configured interface for BGP sessions to the peer. This command triggers an automatic notification and session reset for the BGP neighbor sessions.

To tune BGP, use the following optional commands in neighbor address-family configuration mode:

Command	Purpose
suppress-inactive Example: switch(config-router-neighbor-af)# suppress-inactive	Advertises the best (active) routes only to the BGP peer. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.
default-originate [route-map <i>map-name</i>] Example: switch(config-router-neighbor-af)# default-originate	Generates a default route to the BGP peer.
filter-list <i>list-name</i> { in out } Example: switch(config-router-neighbor-af)# filter-list BGPFilter in	Applies an AS_path filter list to this BGP peer for inbound or outbound route updates. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.
prefix-list <i>list-name</i> { in out } Example: switch(config-router-neighbor-af)# prefix-list PrefixFilter in	Applies a prefix list to this BGP peer for inbound or outbound route updates. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.
send-community Example: switch(config-router-neighbor-af)# send-community	Sends the community attribute to this BGP peer. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring a Graceful Restart

You can configure a graceful restart and enable the graceful restart helper feature for BGP.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the “[Enabling the BGP Feature](#)” section on [page 9-10](#)).

Create the VDCs and VRFs.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

- 1. **config t**
- 2. **router bgp *as-number***
- 3. **graceful-restart**
- 4. **graceful-restart [restart-time *time* | stalepath-time *time*]**
- 5. **graceful-restart-helper**
- 6. **show running-config bgp**
- 7. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router bgp <i>as-number</i> Example: switch(config)# router bgp 65536 switch(config-router)#	Creates a new BGP process with the configured autonomous system number.
Step 3	graceful-restart Example: switch(config-router)# graceful-restart	Enables a graceful restart and the graceful restart helper functionality. This command is enabled by default. This command triggers an automatic notification and session reset for the BGP neighbor sessions.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	graceful-restart [restart-time <i>time</i> stalepath-time <i>time</i>] Example: <pre>switch(config-router)# graceful-restart restart-time 300</pre>	<p>Configures the graceful restart timers.</p> <p>The optional parameters are as follows:</p> <ul style="list-style-type: none"> • restart-time—Maximum time for a restart sent to the BGP peer. The range is from 1 to 3600 seconds. The default is 120. • stalepath-time—Maximum time that BGP will keep the stale routes from the restarting BGP peer. The range is from 1 to 3600 seconds. The default is 300. <p>This command triggers an automatic notification and session reset for the BGP neighbor sessions.</p>
Step 5	graceful-restart-helper Example: <pre>switch(config-router)# graceful-restart-helper</pre>	<p>Enables the graceful restart helper functionality. Use this command if you have disabled graceful restart but you still want to enable graceful restart helper functionality. This command triggers an automatic notification and session reset for the BGP neighbor sessions.</p>
Step 6	show running-config bgp Example: <pre>switch(config-router)# show running-config bgp</pre>	<p>(Optional) Displays the BGP configuration.</p>
Step 7	copy running-config startup-config Example: <pre>switch(config-router)# copy running-config startup-config</pre>	<p>(Optional) Saves this configuration change.</p>

This example shows how to enable a graceful restart:

```
switch# config t
switch(config)# router bgp 65536
switch(config-router)# graceful-restart
switch(config-router)# copy running-config startup-config
```

Configuring Virtualization

You can configure one BGP process in each VDC. You can create multiple VRFs within each VDC and use the same BGP process in each VRF.

BEFORE YOU BEGIN

Ensure that you have enabled the BGP feature (see the [“Enabling the BGP Feature”](#) section on page 9-10).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**

Send document comments to nexus7k-docfeedback@cisco.com.

2. **vrf context** *vrf-name*
3. **exit**
4. **router bgp** *as-number*
5. **vrf** *vrf-name*
6. **neighbor** *ip-address* **remote-as** *as-number*
7. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	vrf context <i>vrf-name</i> Example: switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode.
Step 3	exit Example: switch(config-vrf)# exit switch(config)#	Exits VRF configuration mode.
Step 4	router bgp <i>as-number</i> Example: switch(config)# router bgp 65536 switch(config-router)#	Creates a new BGP process with the configured autonomous system number.
Step 5	vrf <i>vrf-name</i> Example: switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#	Enters the router VRF configuration mode and associates this BGP instance with a VRF.
Step 6	neighbor <i>ip-address</i> remote-as <i>as-number</i> Example: switch(config-router-vrf)# neighbor 209.165.201.1 remote-as 65536 switch(config-router--vrf-neighbor)#	Configures the IP address and AS number for a remote BGP peer.
Step 7	copy running-config startup-config Example: switch(config-router-vrf-neighbor)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

This example shows how to create a VRF and configure the router ID in the VRF:

```
switch# config t
switch(config)# vrf context NewVRF
switch(config-vrf)# exit
switch(config)# router bgp 65536
switch(config-router)# vrf NewVRF
switch(config-router-vrf)# neighbor 209.165.201.1 remote-as 65536
switch(config-router-vrf-neighbor)# copy running-config startup-config
```

Verifying Advanced BGP Configuration

To verify the BGP configuration, use the following commands:

Command	Purpose
show bgp [vrf vrf-name] all [summary]	Displays the BGP information for all address families.
show bgp [vrf vrf-name] convergence	Displays the BGP information for all address families.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] community {regex expression [community] [no-advertise] [no-export] [no-export-subconfed]}	Displays the BGP routes that match a BGP community.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] community-list list-name	Displays the BGP routes that match a BGP community list.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] {dampening dampened-paths [regex expression]}	Displays the information for BGP route dampening. Use the clear bgp dampening command to clear the route flap dampening information.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] history-paths [regex expression]	Displays the BGP route history paths.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] filter-list list-name	Displays the information for the BGP filter list.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] neighbors [ip-address]	Displays the information for BGP peers. Use the clear bgp neighbors command to clear these neighbors.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] {nexthop nexthop-database}	Displays the information for the BGP route next hop.
show bgp paths	Displays the BGP path information.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] policy name	Displays the BGP policy information. Use the clear bgp policy command to clear the policy information.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] prefix-list list-name	Displays the BGP routes that match the prefix list.
show bgp [vrf vrf-name] ip {unicast multicast} [ip-address] received-paths	Displays the BGP paths stored for the soft reconfiguration.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
show bgp [vrf <i>vrf-name</i>] ip { unicast multicast } [<i>ip-address</i>] regexp <i>expression</i>	Displays the BGP routes that match the AS_path regular expression.
show bgp [vrf <i>vrf-name</i>] ip { unicast multicast } [<i>ip-address</i>] route-map <i>map-name</i>	Displays the BGP routes that match the route map.
show bgp [vrf <i>vrf-name</i>] peer-policy <i>name</i>	Displays the information about BGP peer policies.
show bgp [vrf <i>vrf-name</i>] peer-session <i>name</i>	Displays the information about BGP peer sessions.
show bgp [vrf <i>vrf-name</i>] peer-template <i>name</i>	Displays the information about BGP peer templates. Use the clear bgp peer-template command to clear all neighbors in a peer template.
show bgp process	Displays the BGP process information.
show running-configuration bgp	Displays the current running BGP configuration.

Displaying BGP Statistics

To display BGP statistics, use the following commands:

Command	Purpose
show bgp [vrf <i>vrf-name</i>] ip { unicast multicast } [<i>ip-address</i>] flap-statistics	Displays the BGP route flap statistics. Use the clear bgp flap-statistics command to clear these statistics.
show bgp [vrf <i>vrf-name</i>] sessions	Displays the BGP sessions for all peers. Use the clear bgp sessions command to clear these statistics.
show bgp [vrf <i>vrf-name</i>] sessions	Displays the BGP sessions for all peers. Use the clear bgp sessions command to clear these statistics.
show bgp statistics	Displays the BGP statistics.

Related Topics

The following topics can give more information on BGP:

- [Chapter 9, “Configuring Basic BGP”](#)
- [Chapter 15, “Configuring Route Policy Manager”](#)

Default Settings

[Table 10-1](#) lists the default settings for BGP parameters.

Send document comments to nexus7k-docfeedback@cisco.com.

Table 10-1 **Default BGP Parameters**

Parameters	Default
BGP feature	disabled
keep alive interval	60 seconds
hold timer	180 seconds

Additional References

For additional information related to implementing BGP, see the following sections:

- [Related Documents, page 10-39](#)
- [MIBs, page 10-39](#)

Related Documents

Related Topic	Document Title
BGP CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs and VRFs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

MIBs

MIBs	MIBs Link
BGP4-MIB	To locate and download MIBs, go to the following URL:
CISCO-BGP4-MIB	http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

Feature History for BGP

[Table 10-2](#) lists the release history for this feature.

Table 10-2 **Feature History for BGP**

Feature Name	Releases	Feature Information
Dynamic AS number for prefix peers	4.1(2)	Added support for a range of AS numbers for BGP prefix peer configuration.
BGP	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 11

Configuring RIP

This chapter describes how to configure the Routing Information Protocol (RIP).

This chapter includes the following sections:

- [Information About RIP, page 11-1](#)
- [Licensing Requirements for RIP, page 11-4](#)
- [Prerequisites for RIP, page 11-4](#)
- [Configuration Guidelines and Limitations, page 11-4](#)
- [Configuring RIP, page 11-5](#)
- [Verifying RIP Configuration, page 11-17](#)
- [Displaying RIP Statistics, page 11-17](#)
- [RIP Example Configuration, page 11-18](#)
- [Related Topics, page 11-18](#)
- [Default Settings, page 11-18](#)
- [Default Settings, page 11-18](#)
- [Additional References, page 11-18](#)
- [Feature History for RIP, page 11-19](#)

Information About RIP

This section includes the following topics:

- [RIP Overview, page 11-2](#)
- [RIPv2 Authentication, page 11-2](#)
- [Split Horizon, page 11-2](#)
- [Route Filtering, page 11-3](#)
- [Route Summarization, page 11-3](#)
- [Route Redistribution, page 11-3](#)
- [Load Balancing, page 11-3](#)
- [High Availability, page 11-4](#)
- [Virtualization Support, page 11-4](#)

Send document comments to nexus7k-docfeedback@cisco.com.

RIP Overview

RIP uses User Datagram Protocol (UDP) data packets to exchange routing information in small internetworks. RIPv2 supports IPv4. RIPv2 uses an optional authentication feature supported by the RIPv2 protocol (see the [“RIPv2 Authentication” section on page 11-2](#)).

**Note**

Cisco NX-OS does not support IPv6 for RIP.

RIP uses the following two message types:

- Request—Sent to a multicast address to request route updates from other RIP-enabled routers.
- Response—Sent every 30 seconds by default (see the [“Verifying RIP Configuration” section on page 11-17](#)). The router also sends response messages after it receives a Request message. The response message contains the entire RIP route table. RIP sends multiple response packets for a request if the RIP routing table cannot fit in one response packet.

RIP uses a *hop count* for the routing metric. The hop count is the number of routers that a packet can traverse before reaching its destination. A directly connected network has a metric of 1; an unreachable network has a metric of 16. This small range of metrics makes RIP an unsuitable routing protocol for large networks.

RIPv2 Authentication

You can configure authentication on RIP messages to prevent unauthorized or invalid routing updates in your network. Cisco NX-OS supports a simple password or an MD5 authentication digest.

You can configure the RIP authentication per interface by using key-chain management for the authentication keys. Key-chain management allows you to control changes to the authentication keys used by an MD5 authentication digest or simple text password authentication. See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1* for more details about creating key-chains.

To use an MD5 authentication digest, you configure a password that is shared at the local router and all remote RIP neighbors. Cisco NX-OS creates an MD5 one-way message digest based on the message itself and the encrypted password and sends this digest with the RIP message (Request or Response). The receiving RIP neighbor validates the digest by using the same encrypted password. If the message has not changed, the calculation is identical and the RIP message is considered valid.

An MD5 authentication digest also includes a sequence number with each RIP message to ensure that no message is replayed in the network.

Split Horizon


You can use split horizon to ensure that RIP never advertises a route out of the interface where it was learned.

Split horizon is a method that controls the sending of RIP update and query packets. When you enable split horizon on an interface, Cisco NX-OS does not send update packets for destinations that were learned from this interface. Controlling update packets in this manner reduces the possibility of routing loops.

You can use split horizon with poison revers to configure an interface to advertise routes learned by RIP as unreachable over the interface that learned the routes. [Figure 11-1](#) shows a sample RIP network with split horizon with poison reverse enabled.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 11-1 RIP with Split Horizon Poison Reverse

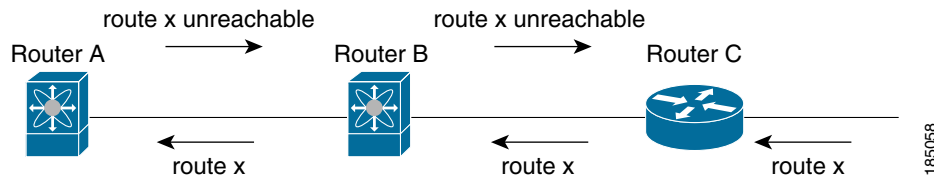

Router C learns about route X and advertises that route to router B. Router B in turn advertises route X to router A, but sends a route X unreachable update back to router C.

By default, split horizon is enabled on all interfaces.

Route Filtering

You can configure a route policy on a RIP-enabled interface to filter the RIP updates. Cisco NX-OS updates the route table with only those routes that the route policy allows.

Route Summarization

You can configure multiple summary aggregate addresses for a specified interface. Route summarization simplifies route tables by replacing a number of more-specific addresses with an address that represents all the specific addresses. For example, you can replace 10.1.1.0/24, 10.1.2.0/24, and 10.1.3.0/24 with one summary address, 10.1.0.0/16.

If more specific routes are in the routing table, RIP advertises the summary address from the interface with a metric equal to the maximum metric of the more specific routes.



Note

Cisco NX-OS does not support automatic route summarization.

Route Redistribution

You can use RIP to redistribute static routes or routes from other protocols. You configure redistribution use a route policy to control which routes are passed into RIP. A route policy allows you to filter routes based on attributes such as the destination, origination protocol, route type, route tag, and so on. For more information, see [Chapter 15, “Configuring Route Policy Manager.”](#)

Whenever you redistribute routes into a RIP routing domain, Cisco NX-OS does not, by default, redistribute the default route into the RIP routing domain. You can generate a *default route* into RIP, which can be controlled by a route policy.

You also configure the default metric that is used for all imported routes into RIP.

Load Balancing

You can use load balancing to allow a router to distribute traffic over all the router network ports that are the same distance from the destination address. Load balancing increases the utilization of network segments and increases effective network bandwidth.

Send document comments to nexus7k-docfeedback@cisco.com.

Cisco NX-OS supports the Equal Cost Multiple Paths (ECMP) feature with up to 16 equal-cost paths in the RIP route table and the unicast RIB. You can configure RIP to load balance traffic across some or all of those paths.

High Availability

Cisco NX-OS supports stateless restarts for RIP. After a reboot or supervisor switchover, Cisco NX-OS applies the running configuration and RIP immediately sends request packets to repopulate its routing table.

Virtualization Support

Cisco NX-OS supports multiple instances of the RIP protocol that runs on the same system. RIP supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs).

You can configure up to four RIP instances on a VDC. By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. See the *Cisco NX-OS Virtual Device Context Configuration Guide* and [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for RIP

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	RIP requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .

Prerequisites for RIP

RIP has the following prerequisites:

- You must enable the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 11-5).
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see to the *Cisco NX-OS Virtual Device Context Configuration Guide*).

Configuration Guidelines and Limitations

RIP has the following configuration guidelines and limitations:

- Cisco NX-OS does not support RIPv1. If Cisco NX-OS receives a RIPv1 packet, it logs a message and drops the packet.
- Cisco NX-OS does not establish adjacencies with RIPv1 routers.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring RIP

This section includes the following topics:

- [Enabling the RIP Feature, page 11-5](#)
- [Creating a RIP Instance, page 11-6](#)
- [Configuring RIP on an Interface, page 11-8](#)
- [Configuring a Passive Interface, page 11-10](#)
- [Configuring Route Summarization, page 11-11](#)
- [Configuring Route Summarization, page 11-11](#)
- [Configuring Route Redistribution, page 11-11](#)
- [Configuring Virtualization, page 11-13](#)
- [Tuning RIP, page 11-15](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Enabling the RIP Feature

You must enable the RIP feature before you can configure RIP.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **feature rip**
3. **show feature**
4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	feature rip Example: switch(config)# feature rip	Enables the RIP feature.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 3	show feature Example: switch(config)# show feature	(Optional) Displays enabled and disabled features.
Step 4	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no feature rip** command to disable the RIP feature and remove all associated configuration.

Command	Purpose
no feature rip Example: switch(config)# no feature rip	Disables the RIP feature and removes all associated configuration.

Creating a RIP Instance

You can create a RIP instance and configure the address family for that instance.

BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 11-5).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router rip** *instance-tag*
3. **address-family ip unicast**
4. **show ip rip** [**instance** *instance-tag*] [**vrf** *vrf-name*]
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router rip <i>instance-tag</i> Example: switch(config)# router RIP Enterprise switch(config-router)#	Creates a new RIP instance with the configured <i>instance-tag</i> .

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 3	address-family ipv4 unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Configures the address family for this RIP instance and enters address-family configuration mode.
Step 4	show ip rip [instance <i>instance-tag</i>] [vrf <i>vrf-name</i>] Example: switch(config-router-af)# show ip rip	(Optional) Displays a summary of RIP information for all RIP instances.
Step 5	copy running-config startup-config Example: switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no router rip** command to remove the RIP instance and the associated configuration.

Command	Purpose
no router rip <i>instance-tag</i> Example: switch(config)# no router rip Enterprise	Deletes the RIP instance and all associated configuration.



Note

You must also remove any RIP commands configured in interface mode.

You can configure the following optional parameters for RIP in address-family configuration mode:

Command	Purpose
distance <i>value</i> Example: switch(config-router-af)# distance 30	Sets the administrative distance for RIP. The range is from 1 to 255. The default is 120. See the “Administrative Distance” section on page 1-6 .
maximum-paths <i>number</i> Example: switch(config-router-af)# maximum-paths 6	Configures the maximum number of equal-cost paths that RIP maintains in the route table. The range is from 1 to 16. The default is 16.

The following example shows how to create a RIP instance for IPv4 and set the number of equal-cost paths for load balancing:

```
switch# config t
switch(config)# router rip Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# max-paths 10
switch(config-router-af)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Restarting a RIP Instance

You can restart a RIP instance. This clears all neighbors for the instance.
To restart an RIP instance and remove all associated neighbors, use the following command:

Command	Purpose
<code>restart rip instance-tag</code> Example: switch(config)# restart rip Enterprise	Restarts the RIP instance and removes all neighbors.

Configuring RIP on an Interface

You can add an interface to a RIP instance.

BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 11-5).
Enter the correct VDC if necessary before configuring RIP.

SUMMARY STEPS

1. `config t`
2. `interface interface-type slot/port`
3. `ip router rip instance-tag`
4. `show ip rip [instance instance-tag] interface [interface-type slot/port] [vrf vrf-name] [detail]`
5. `copy running-config startup-config`

DETAILED STEPS

	Command	Purpose
Step 1	<code>config t</code> Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	<code>interface interface-type slot/port</code> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	<code>ip router rip instance-tag</code> Example: switch(config-if)# ip router rip Enterprise	Associates this interface with a RIP instance.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	show ip rip [instance <i>instance-tag</i>] interface [<i>interface-type slot/port</i>] [vrf <i>vrf-name</i>] [detail] Example: switch(config-if)# show ip rip Enterprise tethernet 1/2	(Optional) Displays RIP information for an interface.
Step 5	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to add Ethernet 1/2 interface to a RIP instance:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# ip router rip Enterprise
switch(config)# copy running-config startup-config
```

Configuring RIP Authentication

You can configure authentication for RIP packets on an interface.

BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 11-5).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Configure a key chain if necessary before enabling authentication. See the *Cisco NX-OS Security Configuration Guide* for details on implementing key chains.

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **ip rip authentication mode**{text | md5}
4. **ip rip authentication keychain** *key*
5. **copy running-config startup-config**

DETAILED STEPS

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface interface-type slot/port Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ip rip authentication mode {text md5} Example: switch(config-if)# ip rip authentication mode md5	Sets the authentication type for RIP on this interface as cleartext or MD5 authentication digest.
Step 4	ip rip authentication keychain key Example: switch(config-if)# ip rip authentication keychain RIPKey	Configures the authentication key used for RIP on this interface.
Step 5	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a key chain and configure MD5 authentication on a RIP interface:

```
switch# config t
switch(config)# key chain RIPKey
switch(config)# key-string myrip
switch(config)# accept-lifetime 00:00:00 Jan 01 2000 infinite
switch(config)# send-lifetime 00:00:00 Jan 01 2000 infinite
switch(config)# interface ethernet 1/2
switch(config-if)# ip rip authentication mode md5
switch(config-if)# ip rip authentication keychain RIPKey
switch(config-if)# copy running-config startup-config
```

Configuring a Passive Interface

You can configure a RIP interface to receive routes but not send route updates by setting the interface to passive mode.

To configure a RIP interface in passive mode, use the following command in interface configuration mode:

Command	Purpose
ip rip passive-interface Example: switch(config-if)# ip rip passive-interface	Sets the interface into passive mode.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Split Horizon with Poison Reverse

You can configure an interface to advertise routes learned by RIP as unreachable over the interface that learned the routes by enabling poison reverse.

To configure split horizon with poison reverse on an interface, use the following command in interface configuration mode:

Command	Purpose
ip rip poison-reverse Example: switch(config-if)# ip rip poison-reverse	Enables split horizon with poison reverse. Split horizon with poison reverse is disabled by default.

Configuring Route Summarization

You can create aggregate addresses that are represented in the routing table by a summary address. Cisco NX-OS advertises the summary address metric that is the smallest metric of all the more-specific routes.

To configure a summary address on an interface, use the following command in interface configuration mode:

Command	Purpose
ip rip summary-address {ip-prefix/mask-len} Example: switch(config-if)# ip router rip summary-address 192.0.2.0/24	Configures a summary address for RIP for IPv4 addresses.

Configuring Route Redistribution

You can configure RIP to accept routing information from another routing protocol and redistribute that information through the RIP network. Redistributed routes can optionally be assigned a default route.

BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 11-5).

Enter the correct VDC if necessary before configuring RIP.

Configure a route map before configuring redistribution. See the [“Configuring Route Maps”](#) section on page 15-9 for details on configuring route maps.

SUMMARY STEPS

1. **config t**
2. **router rip instance-tag**
3. **address-family ipv4 unicast**

Send document comments to nexus7k-docfeedback@cisco.com.

4. **redistribute** {bgp as | direct | {eigrp | isis | ospf | ospfv3 | rip} instance-tag | static} route-map map-name
5. **default-information originate** [always] [route-map map-name]
6. **default-metric** value
7. **show ip rip route** [ip-prefix [longer-prefixes | shorter-prefixes]] [vrf vrf-name] [summary]
8. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router rip instance-tag Example: switch(config)# router rip Enterprise switch(config-router)#	Creates a new RIP instance with the configured instance-tag.
Step 3	address-family ipv4 unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#	Enters address family configuration mode.
Step 4	redistribute {bgp as direct {eigrp isis ospf ospfv3 rip} instance-tag static} route-map map-name Example: switch(config-router-af)# redistribute eigrp 201 route-map RIPmap	Redistributes routes from other protocols into RIP. See the “ Configuring Route Maps ” section on page 15-9 for more information about route maps.
Step 5	default-information originate [always] [route-map map-name] Example: switch(config-router-af)# default-information originate always	(Optional) Generates a default route into RIP, optionally controlled by a route map.
Step 6	default-metric value Example: switch(config-router-af)# distribute level-1 into level-2 all	(Optional) Sets the default metric for all redistributed routes. The range is from 1 to 15. The default is 1.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 7	show ip rip route [<i>ip-prefix</i> [<i>longer-prefixes</i> <i>shorter-prefixes</i>] [<i>vrf vrf-name</i>] [<i>summary</i>] Example: switch(config-router-af)# show ip rip route	(Optional) Shows the routes in RIP.
Step 8	copy running-config startup-config Example: switch(config-router-af)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to redistribute EIGRP into RIP:

```
switch# config t
switch(config)# router rip Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# redistribute eigrp 201 route-map RIPmap
switch(config-router-af)# copy running-config startup-config
```

Configuring Virtualization

You can configure multiple RIP instances in each VDC. You can also create multiple VRFs within each VDC and use the same or multiple RIP instances in each VRF. You assign a RIP interface to a VRF.



Note

Configure all other parameters for an interface after you configure the VRF for an interface. Configuring a VRF for an interface deletes all the configuration for that interface.

BEFORE YOU BEGIN

Ensure that you have enabled the RIP feature (see the [“Enabling the RIP Feature”](#) section on page 11-5). Create the VDCs.

SUMMARY STEPS

1. **config t**
2. **vrf context** *vrf_name*
3. **exit**
4. **router rip** *instance-tag*
5. **vrf** *vrf-name*
6. **address-family ipv4 unicast**
7. configure optional parameters
8. **interface ethernet** *slot/port*
9. **vrf member** *vrf-name*
10. **ip-address** *ip-prefix/length*

Send document comments to nexus7k-docfeedback@cisco.com.

11. `ip router rip instance-tag`
12. `show ip rip [instance instance-tag] interface [interface-type slot/port] [vrf vrf-name]`
13. `copy running-config startup-config`

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	vrf vrf-name Example: switch(config)# vrf RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF.
Step 3	exit Example: switch(config-vrf)# exit switch(config)#	Exits VRF configuration mode.
Step 4	router rip instance-tag Example: switch(config)# router rip Enterprise switch(config-router)#	Creates a new RIP instance with the configured instance tag.
Step 5	vrf context vrf-name Example: switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode.
Step 6	address-family ipv4 unicast Example: switch(config-router-vrf)# address-family ipv4 unicast switch(config-router-vrf-af)#	(Optional) Configures the VRF address family for this RIP instance.
Step 7	redistribute {bgp as direct {(eigrp isis ospf ospfv3 rip} instance-tag static} route-map map-name Example: switch(config-router-vrf-af)# redistribute eigrp 201 route-map RIPmap	(Optional) Redistributes routes from other protocols into RIP. See the “Configuring Route Maps” section on page 15-9 for more information about route maps.
Step 8	interface ethernet slot/port Example: switch(config-router-vrf-af)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 9	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 10	ip address <i>ip-prefix/length</i> Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 11	ip router rip <i>instance-tag</i> Example: switch(config-if)# ip router rip Enterprise	Associates this interface with a RIP instance.
Step 12	show ip rip [<i>instance instance-tag</i>] interface [<i>interface-type slot/port</i>] [<i>vrf vrf-name</i>] Example: switch(config-if)# show ip rip Enterprise ethernet 1/2	(Optional) Displays RIP information for an interface in a VRF.
Step 13	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a VRF and add an interface to the VRF:

```
switch# config t
switch(config)# vrf context RemoteOfficeVRF
switch(config-vrf)# exit
switch(config)# router rip Enterprise
switch(config-router)# vrf RemoteOfficeVRF
switch(config-router-vrf)# address-family ipv4 unicast
switch(config-router-vrf-af)# redistribute eigrp 201 route-map RIPmap
switch(config-router-vrf-af)# interface ethernet 1/2
switch(config-if)# vrf member RemoteOfficeVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router rip Enterprise
switch(config-if)# copy running-config startup-config
```

Tuning RIP

You can tune RIP to match your network requirements. RIP uses several timers that determine the frequency of routing updates, the length of time before a route becomes invalid, and other parameters. You can adjust these timers to tune routing protocol performance to better suit your internetwork needs.



Note

You must configure the same values for the RIP timers on all RIP-enabled routers in your network.

Send document comments to nexus7k-docfeedback@cisco.com.

You can use the following optional commands in address-family configuration mode to tune RIP:

Command	Purpose
timers basic <i>update timeout holddown garbage-collection</i> Example: switch(config-router-af)# timers basic 40 120 120 100	Sets the RIP timers in seconds. The parameters are as follows: <ul style="list-style-type: none"> • update—The range is from 5 to any positive integer. The default is 30. • timeout—The time that Cisco NX-OS waits before declaring a route as invalid. If Cisco NX-OS does not receive route update information for this route before the timeout interval ends, Cisco NX-OS declares the route as invalid. The range is from 1 to any positive integer. The default is 180. • holddown—The time during which Cisco NX-OS ignores better route information for an invalid route. The range is from 0 to any positive integer. The default is 180. • garbage-collection—The time from when Cisco NX-OS marks a route as invalid until Cisco NX-OS removes the route from the routing table. The range is from 1 to any positive integer. The default is 120.

You can use the following optional commands in interface configuration mode to tune RIP:

Command	Purpose
ip rip metric-offset <i>value</i> Example: switch(config-if)# ip rip metric-offset 10	Adds a value to the metric for every router received on this interface. The range is from 1 to 15. The default is 1.
ip rip route-filter (prefix-list <i>list-name</i> route-map <i>map-name</i>) [in out] Example: switch(config-if)# ip rip route-filter route-map InputMap in	Specifies a route map to filter incoming or outgoing RIP updates.

Send document comments to nexus7k-docfeedback@cisco.com.

Verifying RIP Configuration

To verify RIP configuration, use the following commands:

Command	Purpose
show ip rip instance [<i>instance-tag</i>] [vrf <i>vrf-name</i>]	Displays the status for an instance of RIP.
show ip rip [instance <i>instance-tag</i>] interface <i>slot/port</i> detail [vrf <i>vrf-name</i>]	Displays the RIP status for an interface.
show ip rip [instance <i>instance-tag</i>] neighbor [<i>interface-type number</i>] [vrf <i>vrf-name</i>]	Displays the RIP neighbor table.
show ip rip [instance <i>instance-tag</i>] route [<i>ip-prefix/length</i>] [longer-prefixes shorter--prefixes] [summary] [vrf <i>vrf-name</i>]	Displays the RIP route table.
show running-configuration rip	Displays the current running RIP configuration.

Displaying RIP Statistics

To display RIP statistics, use the following commands:

Command	Purpose
show ip rip [instance <i>instance-tag</i>] policy statistics redistribute { bgp <i>as</i> direct { eigrp isis ospf ospfv3 rip } [<i>instance-tag</i> static] [vrf <i>vrf-name</i>]	Displays the RIP policy status.
show ip rip [instance <i>instance-tag</i>] statistics <i>interface-type number</i> [vrf <i>vrf-name</i>]	Displays the RIP statistics.

Use the **clearip rip policy** command to clear policy statistics.

Use the **clear ip rip statistics** command to clear RIP statistics.

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

RIP Example Configuration

This example creates the Enterprise RIP instance in a VRF and adds Ethernet interface 1/2 to this RIP instance. The example also configures authentication for Ethernet interface 1/2 and redistributes EIGRP into this RIP domain.

```
vrf context NewVRF
!
feature rip
router rip Enterprise
vrf NewVRF
address-family ip unicast
redistribute eigrp 201 route-map RIPmap
max-paths 10
!
interface ethernet 1/2
vrf NewVRF
ip address 192.0.2.1/16
ip router rip Enterprise
ip rip authentication mode md5
ip rip authentication keychain RIPKey
```

Related Topics

See [Chapter 15, “Configuring Route Policy Manager”](#) for more information on route maps.

Default Settings

[Table 11-1](#) lists the default settings for RIP parameters.

Table 11-1 *Default RIP Parameters*

Parameters	Default
Maximum paths for load balancing	16
RIP feature	Disabled
Split horizon	Enabled

Additional References

For additional information related to implementing RIP, see the following sections:

- [Related Documents, page 11-19](#)
- [Standards, page 11-19](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
RIP CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs and VRFs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for RIP

Table 11-2 lists the release history for this feature.

Table 11-2 Feature History for RIP

Feature Name	Releases	Feature Information
RIP	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 12

Configuring Static Routing

This chapter describes how to configure static routing on the device.

This chapter includes the following sections:

- [Information About Static Routing, page 12-1](#)
- [Licensing Requirements for Static Routing, page 12-3](#)
- [Prerequisites for Static Routing, page 12-3](#)
- [Guidelines and Limitations, page 12-3](#)
- [Configuring Static Routing, page 12-3](#)
- [Verifying Static Routing Configuration, page 12-6](#)
- [Static Routing Example Configuration, page 12-6](#)
- [Default Settings, page 12-7](#)
- [Additional References, page 12-7](#)
- [Feature History for Static Routing, page 12-7](#)

Information About Static Routing

Routers forward packets using either route information from route table entries that you manually configure or the route information that is calculated using dynamic routing algorithms.

Static routes, which define explicit paths between two routers, cannot be automatically updated; you must manually reconfigure static routes when network changes occur. Static routes use less bandwidth than dynamic routes. No CPU cycles are used to calculate and analyze routing updates.

You can supplement dynamic routes with static routes where appropriate. You can redistribute static routes into dynamic routing algorithms but you cannot redistribute routing information calculated by dynamic routing algorithms into the static routing table.

You should use static routes in environments where network traffic is predictable and where the network design is simple. You should not use static routes in large, constantly changing networks because static routes cannot react to network changes. Most networks use dynamic routes to communicate between routers but may have one or two static routes configured for special cases. Static routes are also useful for specifying a gateway of last resort (a default router to which all unroutable packets are sent).

This section includes the following topics:

- [Administrative Distance, page 12-2](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- [Directly Connected Static Routes, page 12-2](#)
- [Fully Specified Static Routes, page 12-2](#)
- [Floating Static Routes, page 12-2](#)
- [Remote Next Hops for Static Routes, page 12-3](#)

Administrative Distance

An administrative distance is the metric used by routers to choose the best path when there are two or more routes to the same destination from two different routing protocols. An administrative distance guides the selection of one routing protocol (or static route) over another, when more than one protocol adds the same route to the unicast routing table. Each routing protocol is prioritized in order of most to least reliable using an administrative distance value.

Static routes have a default administrative distance of 1. A router prefers a static route to a dynamic route because the router considers a route with a low number to be the shortest. If you want a dynamic route to override a static route, you can specify an administrative distance for the static route. For example, if you have two dynamic routes with an administrative distance of 120, you would specify an administrative distance that is greater than 120 for the static route if you want the dynamic route to override the static route.

Directly Connected Static Routes

You need to specify only the output interface (the interface on which all packets are sent to the destination network) in a directly connected static route. The router assumes the destination is directly attached to the output interface and the packet destination is used as the next hop address. The next-hop can be an interface, only for point-to-point interfaces. For broadcast interfaces, the next-hop must be an IPv4/IPv6 address.

Fully Specified Static Routes

You must specify either the output interface (the interface on which all packets are sent to the destination network) or the next hop address in a fully specified static route. You can use a fully specified static route when the output interface is a multi-access interface and you need to identify the next-hop address. The next-hop address must be directly attached to the specified output interface.

Floating Static Routes

A floating static route is a static route that the router uses to back up a dynamic route. You must configure a floating static route with a higher administrative distance than the dynamic route that it backs up. In this instance, the router prefers a dynamic route to a floating static route. You can use a floating static route as a replacement if the dynamic route is lost.



Note

By default, a router prefers a static route to a dynamic route because a static route has a smaller administrative distance than a dynamic route.

Send document comments to nexus7k-docfeedback@cisco.com.

Remote Next Hops for Static Routes

You can specify the next-hop address of a neighboring router which is not directly connected to the router for static routes with remote (non-directly attached) next-hops. If a static route has remote next-hops during data-forwarding, the next-hops are recursively used in the unicast routing table to identify the corresponding directly attached next-hop(s) that have reachability to the remote next-hops.

Virtualization Support

Static routes support Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for Static Routing

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	Static routing requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i>

Prerequisites for Static Routing

Static routing has the following prerequisites:

- If the next-hop address for a static route is unreachable, the static route will not be added to the unicast routing table.

Guidelines and Limitations

Static routing has the following guidelines and limitations:

- You can specify an interface as the next-hop address for a static route only for point-to-point interfaces such as GRE tunnels.

Configuring Static Routing

This section includes the following topics:

- [Configuring a Static Route, page 12-4](#)

Send document comments to nexus7k-docfeedback@cisco.com.



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring a Static Route

You can configure a static route on the router.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **ip route** {*ip-prefix* | *ip-addr ip-mask*} [{*next-hop* | *nh-prefix*] | [*interface next-hop* | *nh-prefix*]} [**tag** *tag-value* [*pref*]
or
3. **ipv6 route** *ip6-prefix* {*nh-prefix* | *link-local-nh-prefix*} [{*nh-prefix* [*interface*] | *link-local-nh-prefix* [*interface*]}] [**tag** *tag-value* [*pref*]
4. **show** {**ip** | **ipv6**} **static-route**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	ip route { <i>ip-prefix</i> <i>ip-addr ip-mask</i> } [{ <i>next-hop</i> <i>nh-prefix</i>] [<i>interface next-hop</i> <i>nh-prefix</i>]} [tag <i>tag-value</i> [<i>pref</i>] Example: switch(config)# ip route 192.0.2.0/8 ethernet 1/2 192.0.2.4	Configures a static route and the interface for this static route. You can optionally configure the next-hop address. The <i>preference</i> value sets the administrative distance. The range is from 1 to 255. The default is 1.
	ipv6 route <i>ip6-prefix</i> { <i>nh-prefix</i> <i>link-local-nh-prefix</i> } (<i>nexthop</i> [<i>interface</i>] <i>link-local-nexthop</i> [<i>interface</i>]} [tag <i>tag-value</i> [<i>pref</i>] Example: switch(config)# ipv6 route 2001:0DB8::/48 6::6 ethernet 2/1	Configures a static route and the interface for this static route. You can optionally configure the next-hop address. The <i>preference</i> value sets the administrative distance. The range is from 1 to 255. The default is 1.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 3	show {ip ipv6} static-route Example: switch(config)# show ip static-route	(Optional) Displays information about static routes.
Step 4	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to configure a static route:

```
switch# config t
switch(config)# ip route 192.0.2.0/8 192.0.2.10
switch(config)# copy running-config startup-config
```

Use the **no {ip | ipv6} static-route** command to remove the static route.

Configuring Virtualization

You can configure a static route in a VRF.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **vrf context** *vrf-name*
3. **ip route** {*ip-prefix* | *ip-addr ip-mask*} {*next-hop* | *nh-prefix* | *interface*} [**tag** *tag-value*] [*pref*]
or
4. **ipv6 route** *ip6-prefix*{ {*next-hop* | *nh-prefix*} | *interface* | {*link-local interface*} } [*pref*]
5. **show {ip | ipv6} static-route vrf** *vrf-name*
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 1	vrf context <i>vrf-name</i> Example: switch(config)# vrf context StaticVrf	Creates a VRF and enters VRF configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 2	ip route {ip-prefix ip-addr ip-mask} {next-hop nh-prefix interface} [tag tag-value [pref] Example: switch(config-vrf)# ip route 192.0.2.0/8 ethernet 1/2 ipv6 route {ip6-prefix}{next-hop nh-prefix} interface [{link-local interface}] [pref] Example: switch(config-vrf)# ipv6 route 2001:0DB8::/48 ethernet 1/2	Configures a static route and the interface for this static route. You can optionally configure the next-hop address. The <i>preference</i> value sets the administrative distance. The range is from 1 to 255. The default is 1.
Step 3	show {ip ipv6} static-route vrf vrf-name Example: switch(config-vrf)# show ip static-route	(Optional) Displays information on static routes.
Step 4	copy running-config startup-config Example: switch(config-vrf)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to configure a static route:

```
switch# config t
switch(config)# vrf context StaticVrf
switch(config-vrf)# ip route 192.0.2.0/8 192.0.2.10
switch(config-vrf)# copy running-config startup-config
```

Verifying Static Routing Configuration

To view configuration information, use the following commands:

Command	Purpose
show ip static-route	Displays the configured static routes.
show ipv6 static-route vrf vrf-name	Displays static route information per-VRF.
show ipv6 static-route	Displays the configured static routes.

Static Routing Example Configuration

This example shows how to configure static routing:

```
config t
ip route 192.0.2.0/8 192.0.2.10
copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Default Settings

Table 12-1 lists the default settings for static routing parameters.

Table 12-1 *Default Static Routing Parameters*

Parameters	Default
administrative distance	1
RIP feature	disabled

Additional References

For additional information related to implementing static routing, see the following sections:

- [Related Documents, page 12-7](#)

Related Documents

Related Topic	Document Title
Static Routing CLI	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

Feature History for Static Routing

Table 12-2 lists the release history for this feature.

Table 12-2 *Feature History for Static Routing*

Feature Name	Releases	Feature Information
Static Routing	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 13

Configuring Layer 3 Virtualization

This chapter describes how to configure Layer 3 virtualization.

This chapter includes the following sections:

- [Layer 3 Virtualization, page 13-1](#)
- [Licensing Requirements for VRFs, page 13-5](#)
- [Prerequisites for VRF, page 13-6](#)
- [Guidelines and Limitations, page 13-6](#)
- [Configuring VRFs, page 13-6](#)
- [Verifying VRF Configuration, page 13-12](#)
- [VRF Example Configuration, page 13-12](#)
- [Related Topics, page 13-13](#)
- [Default Settings, page 13-13](#)
- [Default Settings, page 13-13](#)
- [Additional References, page 13-13](#)
- [Feature History for VRF, page 13-14](#)

Layer 3 Virtualization

This section contains the following topics:

- [Overview of Layer 3 Virtualization, page 13-1](#)
- [VRF and Routing, page 13-2](#)
- [VRF-Aware Services, page 13-3](#)

Overview of Layer 3 Virtualization


Cisco NX-OS supports a hierarchy of virtualization that can divide the physical system resources into multiple virtual device contexts (VDCs). Each VDC acts as a standalone device with both Layer 2 and Layer 3 services available. You can configure up to 4 VDCs, including the default VDC. See the *Cisco NX-OS Virtualization Configuration Guide* for more information on VDCs.

Send document comments to nexus7k-docfeedback@cisco.com.

Cisco NX-OS further virtualizes each VDC to support virtual routing and forwarding instances (VRFs). You can configure multiple VRFs in a VDC. Each VRF contains a separate address space with unicast and multicast route tables for IPv4 and IPv6 and makes routing decisions independent of any other VRF.

Figure 13-1 shows multiple independent VRFs in two different VDCs.

Figure 13-1 Multiple VRFs in VDCs

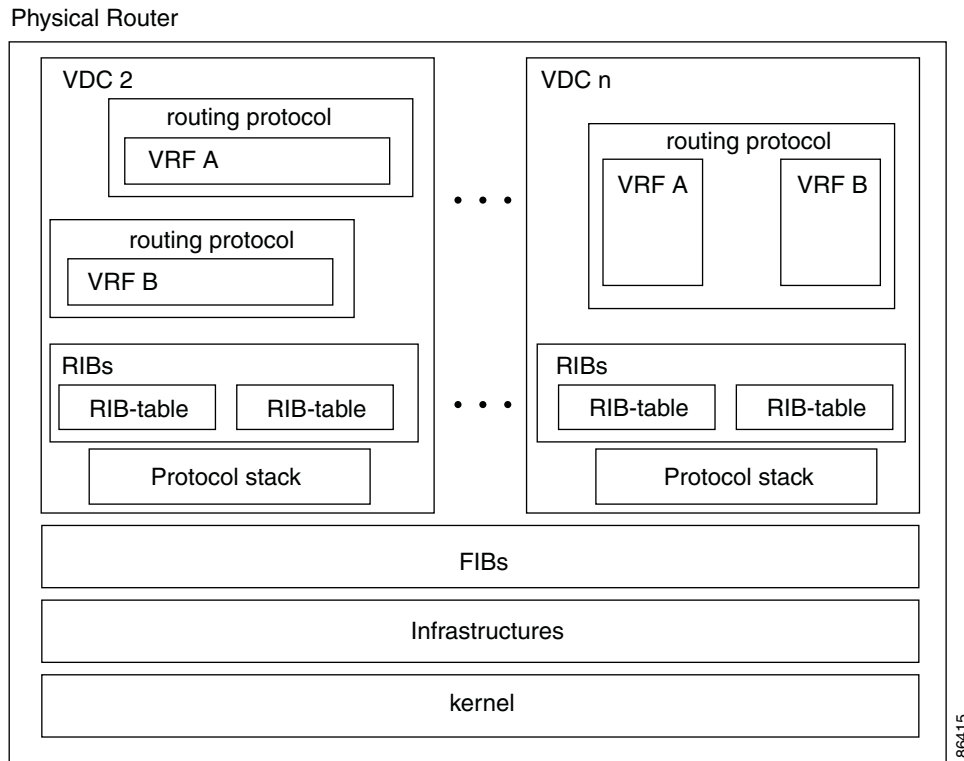

A VRF name is local to a VDC, so you can configure two VRFs with the same name if the VRFs exist in different VDCs. In Figure 13-1, VRF A in VDC 2 is independent of VRF B and VRF A in VDC n.

Each router has a default VRF and a management VRF. All Layer 3 interfaces and routing protocols exist in the default VRF until you assign them to another VRF. The mgmt0 interface exists in the management VRF and is accessible from any VDC. Each VDC has a unique IP address for the mgmt0 interface (see the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 4.1*).


VRF and Routing

All unicast and multicast routing protocols support VRFs. When you configure a routing protocol in a VRF, you set routing parameters for the VRF that are independent of routing parameters in another VRF for the same routing protocol instance.

You can assign interfaces and route protocols to a VRF to create virtual Layer 3 networks. An interface exists in only one VRF. Figure 13-2 shows one physical network split into two virtual networks with two VRFs. Routers Z, A, and B exist in VRF Red and form one address domain. These routers share route updates that do not include router C because router C is configured in a different VRF.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 13-2 VRFs in a Network

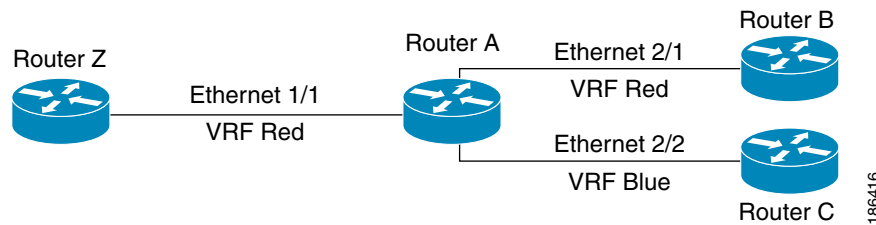

By default, Cisco NX-OS uses the VRF of the incoming interface to select which routing table to use for a route lookup. You can configure a route policy to modify this behavior and set the VRF that Cisco NX-OS uses for incoming packets. See [Chapter 16, “Configuring Policy-Based Routing”](#) for more information.

Cisco NX-OS prevents route leakage(import or export) between VRFs.

VRF-Aware Services

A fundamental feature of the Cisco NX-OS architecture is that every IP-based feature is VRF aware.

The following VRF-aware services can select a particular VRF to reach a remote server or to filter information based on the selected VRF:

- AAA—See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1* for more information.
- Call Home—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 4.1* for more information.
- DNS—See [Chapter 4, “Configuring DNS”](#) for more information.
- GLBP—See [Chapter 17, “Configuring GLBP”](#) for more information.
- HSRP—See [Chapter 18, “Configuring HSRP”](#) for more information.
- HTTP—See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 4.1* for more information.
- Licensing—See the *Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1* for more information.
- NetFlow—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 4.1* for more information.
- NTP—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 4.1* for more information.
- RADIUS—See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1* for more information.
- Ping and Traceroute —See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 4.1* for more information.
- SSH—See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 4.1* for more information.
- SNMP—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 4.1* for more information.

Send document comments to nexus7k-docfeedback@cisco.com.

- Syslog—See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 4.1e* for more information.
- TACACS+—See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1* for more information.
- TFTP—See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 4.1* for more information.
- VRRP—See [Chapter 19, “Configuring VRRP”](#) for more information.
- XML—See the *Cisco Nexus 7000 Series NX-OS XML Management Interface User Guide, Release 4.1* for more information.

See the appropriate configuration guide for each service for more information on configuring VRF support in that service.

This section contains the following topics:


- [Reachability, page 13-4](#)
- [Filtering, page 13-4](#)
- [Combining Reachability and Filtering, page 13-5](#)

Reachability

Reachability indicates which VRF contains the routing information necessary to get to the server providing the service. For example, you can configure an SNMP server that is reachable on the management VRF. When you configure that server address on the router, you also configure which VRF that Cisco NX-OS must use to reach the server.

[Figure 13-3](#) shows an SNMP server that is reachable over the management VRF. You configure router A to use the management VRF for SNMP server host 192.0.2.1.

Figure 13-3 Service VRF Reachability

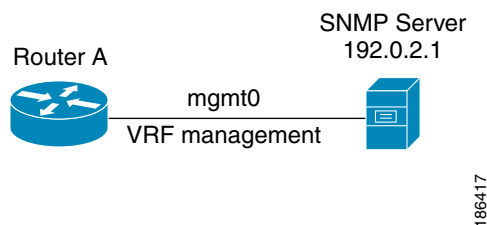


Filtering

Filtering allows you to limit the type of information that goes to a VRF-aware service based on the VRF. For example, you can configure a syslog server to support a particular VRF. [Figure 13-4](#) shows two syslog servers with each server supporting one VRF. syslog server A is configured in VRF Red, so Cisco NX-OS sends only system messages generated in VRF Red to syslog server A.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 13-4 Service VRF Filtering

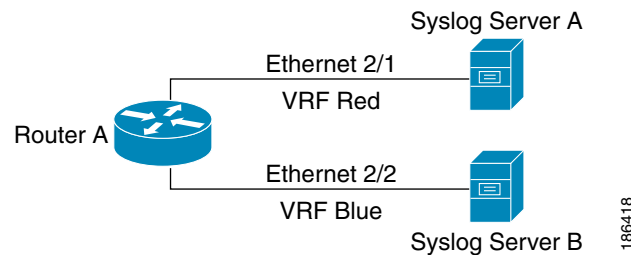


Combining Reachability and Filtering

You can combine reachability and filtering for VRF-aware services. You configure the VRF that Cisco NX-OS uses to connect to that service as well as the VRF that the service supports. If you configure a service in the default VRF, you can optionally configure the service to support all VRFs.

Figure 13-5 shows an SNMP server that is reachable on the management VRF. You can configure the SNMP server to support only the SNMP notifications from VRF Red, for example.

Figure 13-5 Service VRF Reachability Filtering

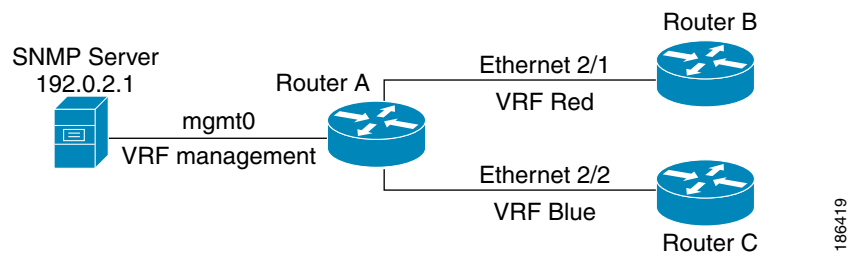

Licensing Requirements for VRFs

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	VRFs require no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Send document comments to nexus7k-docfeedback@cisco.com.

Prerequisites for VRF

VRFs have the following prerequisites:

- You must install the Advanced Services license to use VDCs besides the default VDC.

Guidelines and Limitations

VRFs have the following guidelines and limitations:

- When you make an interface a member of an existing VRF, Cisco NX-OS removes all layer 3 configuration. You should configure all layer 3 parameters after adding an interface to a VRF.
- You should add the mgmt0 interface to the management VRF and configure the mgmt0 IP address and other parameters after you add it to the management VRF.
- If you configure an interface for a VRF before the VRF exists, the interface is operationally down until you create the VRF.
- Cisco NX-OS creates the default and management VRFs by default. You should make the mgmt0 interface a member of the management VRF.
- The **write erase boot** command does not remove the management VRF configuration. You must use the **write erase** command and then the **write erase boot** command.

Configuring VRFs

This section contains the following topics:

- [Creating a VRF, page 13-6](#)
- [Assigning VRF Membership to an Interface, page 13-8](#)
- [Configuring VRF Parameters for a Routing Protocol, page 13-9](#)
- [Configuring a VRF-Aware Service, page 13-10](#)
- [Setting the VRF Scope, page 13-12](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Creating a VRF

You can create a VRF in a VDC.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**

Send document comments to nexus7k-docfeedback@cisco.com.

2. **vrf context** *vrf-name*
3. configure optional parameters
4. **show vrf** [*vrf-name*]
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	vrf context <i>name</i> Example: switch(config)# vrf definition Enterprise switch(config-vrf)#	Creates a new VRF and enters VRF configuration mode. The <i>name</i> can be any case-sensitive alphanumeric string up to 32 characters.
Step 3	ip route <i>ip-prefix interface-type number nexthop</i> Example: switch(config-vrf)# ip route 192.0.2.0/8 ethernet 1/2 192.0.2.6	(Optional) Configures a static route.
Step 4	show vrf [<i>vrf-name</i>] Example: switch(config-vrf)# show vrf Enterprise	(Optional) Displays VRF information.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no vrf context** command to delete the VRF and the associated configuration:

Command	Purpose
no vrf context <i>name</i> Example: switch(config)# no vrf context Enterprise	Deletes the VRF and all associated configuration.

Any commands available in global configuration mode are also available in VRF configuration mode.

The following example shows how to create a VRF and add a static route to the VRF:

```
switch# config t
switch(config)# vrf context Enterprise
switch(config-vrf)# ip route 192.0.2.0/8 ethernet 1/2 192.0.2.8
switch(config-vrf)# exit
switch(config)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Assigning VRF Membership to an Interface

You can make an interface a member of a VRF.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Assign the IP address for an interface after you have configured the interface for a VRF.

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **vrf member** *vrf-name*
4. **ip address** *ip-prefix/length*
5. **show vrf** *vrf-name interface interface-type number*
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 4	ip address <i>ip-prefix/length</i> Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 5	show vrf <i>vrf-name interface interface-type number</i> Example: switch(config-vrf)# show vrf Enterprise interface ethernet 1/2	(Optional) Displays VRF information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to add an interface to the VRF:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# vrf member RemoteOfficeVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# copy running-config startup-config
```

Configuring VRF Parameters for a Routing Protocol

You can associate a routing protocol with one or more VRFs. See the appropriate chapter for information on how to configure VRFs for the routing protocol. This section uses OSPFv2 as an example protocol for the detailed configuration steps.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **router protocol tag**
3. **vrf vrf-name**
4. configure optional parameters for the protocol in the VRF.
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	router ospf instance-tag Example: switch(config-vrf)# router ospf 201 switch(config-router)#	Creates a new OSPFv2 instance with the configured instance tag.
Step 3	vrf vrf-name Example: switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#	Enters VRF configuration mode.
Step 4	maximum-paths paths Example: switch(config-router-vrf)# maximum-paths 4	(Optional) Configures the maximum number of equal OSPFv2 paths to a destination in the route table for this VRF. Used for load balancing.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 5	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 6	vrf member <i>vrf-name</i> Example: switch(config-if)# vrf member RemoteOfficeVRF	Adds this interface to a VRF.
Step 7	ip address <i>ip-prefix/length</i> Example: switch(config-if)# ip address 192.0.2.1/16	Configures an IP address for this interface. You must do this step after you assign this interface to a VRF.
Step 8	ip router ospf <i>instance-tag area area-id</i> Example: switch(config-if)# ip router ospf 201 area 0	Assigns this interface to the OSPFv2 instance and area configured.
Step 9	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a VRF and add an interface to the VRF:

```
switch# config t
switch(config)# vrf context RemoteOfficeVRF
switch(config-vrf)# exit
switch(config)# router ospf 201
switch(config-router)# vrf RemoteOfficeVRF
switch(config-router-vrf)# maximum-paths 4
switch(config-router-vrf)# interface ethernet 1/2
switch(config-if)# vrf member RemoteOfficeVRF
switch(config-if)# ip address 192.0.2.1/16
switch(config-if)# ip router ospf 201 area 0
switch(config-if)# exit
switch(config)# copy running-config startup-config
```

Configuring a VRF-Aware Service

You can configure a VRF-aware service for reachability and filtering. See the [“VRF-Aware Services” section on page 13-3](#) for links to the appropriate chapter or configuration guide for information on how to configure the service for VRFs. This section uses SNMP and IP domain lists as example services for the detailed configuration steps.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. **config t**
2. **service parameters [filter_vrf vrf-name] [use-vrf vrf-name]**
3. **vrf context [vrf-name]**
4. **service parameters [all-vrfs][use-vrf vrf-name]**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	snmp-server host ip-address [filter-vrf vrf-name] [use-vrf vrf-name] Example: switch(config)# snmp-server host 192.0.2.1 use-vrf Red switch(config-vrf)#	Configures a global SNMP server and configures the VRF that Cisco NX-OS uses to reach the service. Use the filter-vrf keyword to filter information from the selected VRF to this server.
Step 3	vrf context vrf-name Example: switch(config)# vrf context Blue switch(config-vrf)#	Creates a new VRF.
Step 4	ip domain-list domain-name [all-vrfs] [use-vrf vrf-name] Example: switch(config-vrf)# ip domain-list List all-vrfs use-vrf Blue switch(config-vrf)#	Configures the domain list in the VRF and optionally configures the VRF that Cisco NX-OS uses to reach the domain name listed.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to send SNMP information for all VRFs to SNMP host 192.0.2.1, reachable on VRF Red:

```
switch# config t
switch(config)# snmp-server host 192.0.2.1 for-all-vrfs use-vrf Red
switch(config)# copy running-config startup-config
```

The following example shows how to Filter SNMP information for VRF Blue to SNMP host 192.0.2.12, reachable on VRF Red:

```
switch# config t
switch(config)# vrf definition Blue
switch(config-vrf)# snmp-server host 192.0.2.12 use-vrf Red
switch(config)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Setting the VRF Scope

You can set the VRF scope for all EXEC commands (for example, **show** commands). This automatically restricts the scope of the output of EXEC commands to the configured VRF. You can override this scope by using the VRF keywords available for some EXEC commands.

To set the VRF scope, use the following command in EXEC mode:

Command	Purpose
routing-context vrf <i>vrf-name</i> Example: switch# routing-context vrf red switch%red#	Sets the routing context for all EXEC commands. Default routing context is the default VRF.

To return to the default VRF scope, use the following command in EXEC mode:

Command	Purpose
routing-context vrf default Example: switch%red# routing-context vrf default switch#	Sets the default routing context.

Verifying VRF Configuration

To display VRF configuration information, use one of the following commands:

Command	Purpose
show vrf [<i>vrf-name</i>]	Displays the information for all or one VRF.
show vrf [<i>vrf-name</i>] detail	Displays detailed information for all or one VRF.
show vrf [<i>vrf-name</i>] [interface <i>interface-type slot/port</i>]	Displays the VRF status for an interface.

VRF Example Configuration

This example shows how to configure VRF Red, add an SNMP server to that VRF, and add an instance of OSPF to VRF Red:

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

```
config t
vrf context Red
  snmp-server host 192.0.2.12 use-vrf Red
router ospf 201
interface ethernet 1/2
  vrf member Red
  ip address 192.0.2.1/16
  ip router ospf 201 area 0
```

Related Topics

The following topics can give more information on VRFs:

- *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 4.1*
- *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 4.1*

Default Settings

[Table 13-1](#) lists the default settings for VRF parameters.

Table 13-1 **Default VRF Parameters**

Parameters	Default
Configured VRFs	default, management
routing context	default VRF

Additional References

For additional information related to implementing virtualization, see the following sections:

- [Related Documents, page 13-14](#)
- [Standards, page 13-14](#)

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Related Documents

Related Topic	Document Title
VRF CLI	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for VRF

[Table 13-2](#) lists the release history for this feature.

Table 13-2 Feature History for VRF

Feature Name	Releases	Feature Information
VRF	4.0(1)	This feature was introduced.



CHAPTER 14

Managing the Unicast RIB and FIB

This chapter describes how to manage routes in the unicast Routing Information Base (RIB) and the Forwarding Information Base (FIB) on the Cisco NX-OS device.


This chapter includes the following sections:

- [Information About the Unicast RIB and FIB, page 14-1](#)
- [Licensing Requirements for the Unicast RIB and FIB, page 14-2](#)
- [Guidelines and Limitations, page 14-3](#)
- [Managing the Unicast RIB and FIB, page 14-3](#)
- [Verifying the Unicast RIB and FIB, page 14-10](#)
- [Additional References, page 14-11](#)
- [Feature History for Unicast RIB and FIB, page 14-11](#)

Information About the Unicast RIB and FIB

The unicast RIB (IPv4 RIB and IPv6 RIB) and FIB are part of the Cisco NX-OS forwarding architecture, as shown in [Figure 14-1](#).

Figure 14-1 Cisco NX-OS Forwarding Architecture

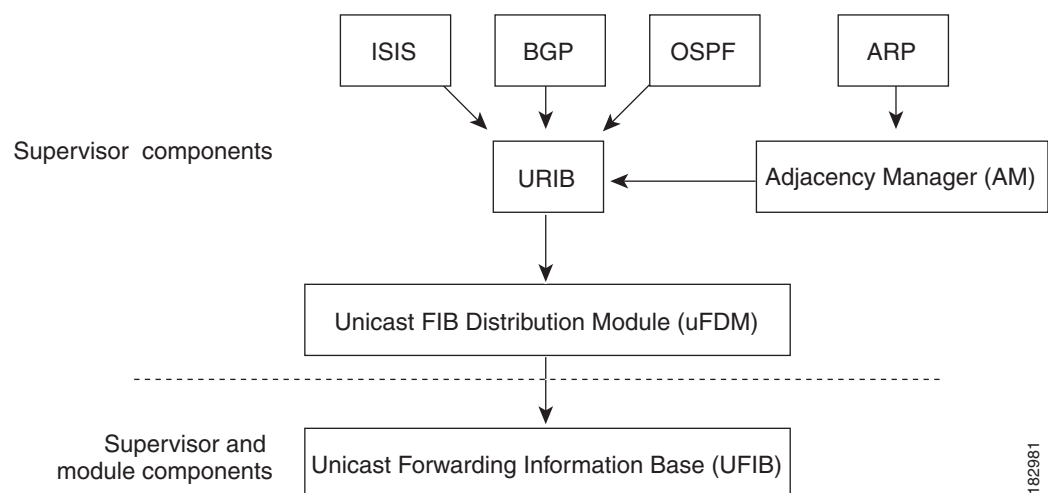

182981

Send document comments to nexus7k-docfeedback@cisco.com.

The unicast RIB exists on the active supervisor. It maintains the routing table with directly connected routes, static routes, and routes learned from dynamic unicast routing protocols. The unicast RIB also collects adjacency information from sources such as the Address Resolution Protocol (ARP). The unicast RIB determines the best next hop for a given route and populates the unicast forwarding information bases (FIB) on the modules by using the services of the unicast FIB distribution module (FDM).

Each dynamic routing protocol must update the unicast RIB for any route that has timed out. The unicast RIB then deletes that route and recalculates the best next hop for that route (if an alternate path is available).

This section includes the following topics:

- [Layer 3 Consistency Checker, page 14-2](#)
- [Virtualization Support, page 14-2](#)

Layer 3 Consistency Checker

In rare instances, an inconsistency can occur between the unicast RIB and the FIB on each module. In Cisco NX-OS Release 4.0(3) and later releases, Cisco NX-OS supports the Layer 3 consistency checker. This feature detects inconsistencies between the unicast IPv4 RIB on the supervisor module and the FIB on each interface module. Inconsistencies include the following:

- Missing prefix
- Extra prefix
- Wrong next-hop address
- Incorrect Layer 2 rewrite string in the ARP or neighbor discovery (ND) cache.

The Layer 3 consistency checker compares the FIB entries to the latest adjacency information from the Adjacency Manager (AM) and logs any inconsistencies. The consistency checker then compares the unicast RIB prefixes to the module FIB and logs any inconsistencies. See the “[Triggering the Layer 3 Consistency Checker](#)” section on page 14-8.

You can then manually clear any inconsistencies. See the “[Clearing Forwarding Information in the FIB](#)” section on page 14-9.

Virtualization Support

The Unicast RIB and FIB support Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. For more information, see the *Cisco Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for the Unicast RIB and FIB

The following table shows the licensing requirements for this feature:

Send document comments to nexus7k-docfeedback@cisco.com.

Product	License Requirement
NX-OS	The unicast RIB and FIB require no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Guidelines and Limitations

Unicast RIB and FIB have the following guidelines and limitations and restrictions:

- The FIB TCAM is 128,000 physical entries, which is divided into the following sections by default:
 - 56,000 IPv4 unicast routes (56,000 physical entries)
 - 32,000 IPv4 multicast routes or IPv6 unicast routes (64,000 physical entries)
 - 2000 IPv6 multicast routes (8000 physical entries)
- You cannot change the default FIB division.

Managing the Unicast RIB and FIB

This section includes the following topics:

- [Displaying Module FIB Information, page 14-4](#)
- [Configuring Load Sharing in the Unicast FIB, page 14-4](#)
- [Configuring Per-Packet Load Sharing, page 14-6](#)
- [Triggering the Layer 3 Consistency Checker, page 14-8](#)
- [Clearing Forwarding Information in the FIB, page 14-9](#)
- [Clearing Routes in the Unicast RIB, page 14-10](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Send document comments to nexus7k-docfeedback@cisco.com.

Displaying Module FIB Information

You can display the FIB information on a module.

DETAILED STEPS

To display the FIB information on a module, use the following commands in any mode:

Command	Purpose
show ip fib adjacency module slot Example: switch# show ip fib adjacency module 2	Displays the adjacency information for IPv4.
show forwarding {ipv4 ipv6} adjacency module slot Example: switch# show forwarding ipv6 adjacency module 2	Displays the adjacency information for IPv4 or IPv6.
show ip fib interfaces module slot Example: switch# show ip fib interfaces module 2	Displays the FIB interface information for IPv4.
show ip fib route module slot Example: switch# show ip fib route module 2	Displays the route table for IPv4.
show forwarding {ipv4 ipv6} route module slot Example: switch# show forwarding ipv6 route module 2	Displays the route table for IPv4 or IPv6.

This example shows the FIB contents on a module:

```
switch# show ip fib route module 2
```

```
IPv4 routes for table default/base
```

Prefix	Next-hop	Interface
0.0.0.0/32	Drop	Null0
255.255.255.255/32	Receive	sup-eth1

Configuring Load Sharing in the Unicast FIB

Dynamic routing protocols, such as Open Shortest Path First (OSPF), support load balancing with equal-cost multipath (ECMP). The routing protocol determines its best routes based on the metrics configured for the protocol and installs up to the protocol-configured maximum paths in the unicast RIB.

Send document comments to nexus7k-docfeedback@cisco.com.

The unicast RIB compares the administrative distances of all routing protocol paths in the RIB and selects a best path set from all of the path sets installed by the routing protocols. The unicast RIB installs this best path set into the FIB for use by the forwarding plane.

The forwarding plane uses a load-sharing algorithm to select one of the installed paths in the FIB to use for a given data packet.

You can globally configure the following load-sharing settings:

- **load-share mode**—Selects the best path based on the destination address and port, or the source and the destination address and port.
- **Universal ID**—Sets the random seed for the hash algorithm. You do not need to configure the Universal ID. Cisco NX-OS chooses the Universal ID if you do not configure it.



Note

Load sharing uses the same path for all packets in a given flow. A flow is defined by the load-sharing method you configure. For example, if you configure source-destination load sharing, then all packets with the same source IP address and destination IP address pair follow the same path.

To configure the unicast FIB load-sharing algorithm, use the following command in global configuration mode:

Command	Purpose
ip load-sharing <i>address</i> { <i>destination port destination</i> <i>source-destination</i> [<i>port source-destination</i>] } [<i>universal-id seed</i>]	Configures the unicast FIB load-sharing algorithm for data traffic. The <i>universal-id</i> range is from 1 to 4294967295.
Example: switch(config)# ip load-sharing address source-destination	

To display the unicast FIB load-sharing algorithm, use the following command in any mode:

Command	Purpose
show ip load-sharing	Displays the unicast FIB load-sharing algorithm for data traffic.
Example: switch(config)# show ip load-sharing address source-destination	

To display the route that the unicast RIB and FIB use for a particular source address and destination address, use the following command in any mode:

Command	Purpose
show routing hash <i>source-addr dest-addr</i> [<i>source-port dest-port</i>] [<i>vrf vrf-name</i>]	Displays the route that the unicast RIB FIB use for a source and destination address pair. The source address and destination address format is x.x.x.x. The source port and destination port range is from 1 to 65535. The VRF name can be any case-sensitive alphanumeric string up to 64 characters.
Example: switch# show routing hash 192.0.2.1 10.0.0.1	

Send document comments to nexus7k-docfeedback@cisco.com.

This example shows the route selected for a source/destination pair:

```
switch# show routing hash 10.0.0.5 30.0.0.2
Load-share parameters used for software forwarding:
load-share mode: address source-destination port source-destination
Universal-id seed: 0xe05e2e85
Hash for VRF "default"
Hashing to path *20.0.0.2 (hash: 0x0e), for route:
```

Configuring Per-Packet Load Sharing

You can use per-packet load sharing to evenly distribute data traffic in an IP network over multiple equal-cost connections. Per-packet load sharing allows the router to send successive data packets over paths on a packet-by-packet basis rather than on a per-flow basis.



Note

Using per-packet load sharing can result in out-of-order packets. Packets for a given pair of source-destination hosts might take different paths and arrive at the destination out of order. Make sure you understand the implications of out-of-order packets to your network and applications. Per-packet load sharing is not appropriate for all networks. Per-flow load sharing ensures packets always arrive in the order that they were sent.

Per-packet load sharing uses the round-robin method to determine which path each packet takes to the destination. With per-packet load sharing enabled on interfaces, the router sends one packet for destination1 over the first path, the second packet for (the same) destination1 over the second path, and so on. Per-packet load sharing ensures balancing over multiple links.

Use per-packet load sharing to ensure that a path for a single source-destination pair does not get overloaded. If most of the traffic passing through parallel links is for a single pair, per-destination load sharing will overload a single link while other links will have very little traffic. Enabling per-packet load sharing allows you to use alternate paths to the same busy destination.



Note

Per-packet load sharing on an interface overrides the global load-sharing configuration.

You configure per-packet load sharing on the input interface. This configuration determines the output interface that Cisco NX-OS chooses for the packet.

For example, if you have ECMP paths on two output interfaces, Cisco NX-OS uses the following load-sharing methods for input packets on Ethernet 1/1:

- Per-packet load sharing if you configure per-packet load sharing on Ethernet 1/1.
- Per-flow load sharing.

The configuration for the other interfaces have no effect on the load-sharing method used for Ethernet 1/1 in this example.

To configure per-packet load sharing, use the following command in interface configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
ip load-sharing per-packet Example: switch(config-if)# ip load-sharing per-packet	Configures per-packet load sharing on an interface.

Displaying Routing and Adjacency Information

You can display the routing and adjacency information.

To display the routing and adjacency information, use the following commands in any mode:

Command	Purpose
show {ip ipv6} route [route-type interface int-type number next-hop] Example: switch# show ip route	Displays the unicast route table. The <i>route-type</i> argument can be a single route prefix, direct, static, or a dynamic route protocol. Use the ? command to see the supported interfaces.
show {ip ipv6} adjacency [prefix interface-type number [summary] non-best] [detail] [vrf vrf-id] Example: switch# show ip adjacency	Displays the adjacency table. The argument ranges are as follows: <ul style="list-style-type: none"> <i>prefix</i>—Any IPv4 or IPv6 prefix address. <i>interface-type number</i>—Use the ? command to see the supported interfaces. <i>vrf-id</i>—Any case-sensitive alphanumeric string up to 64 characters.
show {ip ipv6} routing [route-type interface int-type number next-hop recursive-next-hop summary updated {since until} time] Example: switch# show routing summary	Displays the unicast route table. The <i>route-type</i> argument can be a single route prefix, direct, static, or a dynamic route protocol. Use the ? command to see the supported interfaces.

This example displays the unicast route table:

```
switch# show ip route
IP Route Table for Context "default"
'*' denotes best ucast next-hop          '*' denotes best mcast next-hop
'[x/y]' denotes [preference/metric]

0.0.0.0/0, 1 ucast next-hops, 0 mcast next-hops
    *via 10.1.1.1, mgmt0, [1/0], 5d21h, static
0.0.0.0/32, 1 ucast next-hops, 0 mcast next-hops
    *via Null0, [220/0], 1w6d, local, discard
10.1.0.0/22, 1 ucast next-hops, 0 mcast next-hops, attached
    *via 10.1.1.55, mgmt0, [0/0], 5d21h, direct
10.1.0.0/32, 1 ucast next-hops, 0 mcast next-hops, attached
    *via 10.1.0.0, Null0, [0/0], 5d21h, local
10.1.1.1/32, 1 ucast next-hops, 0 mcast next-hops, attached
    *via 10.1.1.1, mgmt0, [2/0], 5d16h, am
10.1.1.55/32, 1 ucast next-hops, 0 mcast next-hops, attached
```

Send document comments to nexus7k-docfeedback@cisco.com.

```
*via 10.1.1.55, mgmt0, [0/0], 5d21h, local
10.1.1.253/32, 1 ucast next-hops, 0 mcast next-hops, attached
*via 10.1.1.253, mgmt0, [2/0], 5d20h, am
10.1.3.255/32, 1 ucast next-hops, 0 mcast next-hops, attached
*via 10.1.3.255, mgmt0, [0/0], 5d21h, local
255.255.255.255/32, 1 ucast next-hops, 0 mcast next-hops
*via Eth Inband Port, [0/0], 1w6d, local
```

This example shows the adjacency information:

```
switch# show ip adjacency

IP Adjacency Table for context default
Total number of entries: 2
Address      Age      MAC Address  Pref Source  Interface  Best
10.1.1.1     02:20:54  00e0.b06a.71eb 50  arp      mgmt0      Yes
10.1.1.253   00:06:27  0014.5e0b.81d1 50  arp      mgmt0      Yes
switch
```

Triggering the Layer 3 Consistency Checker

You can manually trigger the Layer 3 consistency checker.

To manually trigger the Layer 3 consistency checker, use the following commands in global configuration mode:

Command	Purpose
test forwarding inconsistency [ip ipv4] [unicast] [vrf <i>vrf-name</i>] [module { <i>slot</i> all }]	Starts a Layer 3 consistency check. The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters. The <i>slot</i> range is from 1 to 10.
Example: switch(config)# test forwarding inconsistency	

To stop the Layer 3 consistency checker, use the following commands in global configuration mode:

Command	Purpose
test forwarding inconsistency [ip ipv4] [unicast] [vrf <i>vrf-name</i>] [module { <i>slot</i> all }] stop	Stops a Layer 3 consistency check. The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters. The <i>slot</i> range is from 1 to 10.
Example: switch(config)# test forwarding inconsistency stop	

To display the Layer 3 inconsistencies, use the following commands in any mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
<pre>show forwarding inconsistency [ip ipv4] [unicast] [vrf vrf-name] [module {slot all}]</pre> <p>Example:</p> <pre>switch(config)# show forwarding inconsistency</pre>	Displays the results of a Layer 3 consistency check. The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters. The <i>slot</i> range is from 1 to 10.

Clearing Forwarding Information in the FIB

You can clear one or more entries in the FIB. Clearing a FIB entry does not affect the unicast RIB.



Caution

The clear forwarding command disrupts forwarding on the device.

To clear an entry in the FIB, including a Layer 3 inconsistency, use the following command in any mode:

Command	Purpose
<pre>clear forwarding {ip ipv4 ipv6} route {* prefix} [vrf vrf-name] [module {slot all}]</pre> <p>Example:</p> <pre>switch(config)# clear forwarding ip route *</pre>	<p>Clears one or more entries from the FIB. The route options are as follows:</p> <ul style="list-style-type: none"> *—All routes. <i>prefix</i>—Any IP or IPv6 prefix. <p>The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters. The <i>slot</i> range is from 1 to 10.</p>

Send document comments to nexus7k-docfeedback@cisco.com.

Clearing Routes in the Unicast RIB

You can clear one or more routes from the unicast RIB.



Caution

The ***** keyword is severely disruptive to routing.

To clear one or more entries in the unicast RIB, use the following commands in any mode:

Command	Purpose
clear { ip ipv4 ipv6 } route { * { route prefix/length } [next-hop interface]} [vrf <i>vrf-name</i>] Example: switch(config)# clear ip route 10.2.2.2	<p>Clears one or more routes from both the unicast RIB and the all the module FIBs. The route options are as follows:</p> <ul style="list-style-type: none"> *—All routes. route—An individual IP or IPv6 route. prefix/length—Any IP or IPv6 prefix. next-hop—The next-hop address interface—The interface to reach the next-hop address. <p>The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters.</p>
clear routing [multicast unicast] [ip ipv4 ipv6] { * { route prefix/length } [next-hop interface]} [vrf <i>vrf-name</i>] Example: switch(config)# clear routing ip 10.2.2.2	<p>Clears one or more routes from the unicast RIB. The route options are as follows:</p> <ul style="list-style-type: none"> *—All routes. route—An individual IP or IPv6 route. prefix/length—Any IP or IPv6 prefix. next-hop—The next-hop address interface—The interface to reach the next-hop address. <p>The <i>vrf-name</i> can be any case-sensitive alphanumeric string up to 64 characters.</p>

Verifying the Unicast RIB and FIB

To verify the unicast RIB and FIB information, use the following commands:

Command	Purpose
show forwarding adjacency	Displays the adjacency table on a module.
show forwarding distribution { clients fib-state }	Displays the FIB distribution information.
show forwarding interfaces module <i>slot</i>	Displays the FIB information for a module.
show forwarding { ip ipv4 ipv6 } route	Displays routes in the FIB.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
<code>show {ip ipv6} adjacency</code>	Displays the adjacency table.
<code>show {ip ipv6} route</code>	Displays IPv4 or IPv6 routes from the unicast RIB.
<code>show routing</code>	Displays routes from the unicast RIB.

Additional References

For additional information related to managing unicast RIB and FIB, see the following sections:

- [Related Documents, page 14-11](#)
- [Feature History for Unicast RIB and FIB, page 14-11](#)

Related Documents

Related Topic	Document Title
unicast RIB and FIB CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>

Feature History for Unicast RIB and FIB

[Table 14-1](#) lists the release history for this feature.

Table 14-1 Feature History for Unicast RIB and FIB

Feature Name	Releases	Feature Information
Per-packet load sharing	4.1(2)	Added support to load balance per packet on an interface.
Unicast RIB and FIB	4.0(3)	Added support to clear individual routes in unicast RIB and FIB.
Unicast RIB and FIB	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 15

Configuring Route Policy Manager

This chapter describes how to configure the Route Policy Manager on the Cisco NX-OS device.

This chapter includes the following sections:

- [Information About Route Policy Manager, page 15-1](#)
- [Licensing Requirements for Route Policy Manager, page 15-4](#)
- [Prerequisites for Route Policy Manager, page 15-5](#)
- [Guidelines and Limitations, page 15-5](#)
- [Configuring Route Policy Manager, page 15-5](#)
- [Verifying Route Policy Manager Configuration, page 15-14](#)
- [Route Policy Manager Example Configuration, page 15-14](#)
- [Related Topics, page 15-15](#)
- [Default Settings, page 15-15](#)
- [Additional References, page 15-15](#)
- [Feature History for Route Policy Manager, page 15-16](#)

Information About Route Policy Manager

Route Policy Manager supports route maps and IP prefix lists. These features are used for route redistribution and policy-based routing. A prefix list contains one or more IPv4 or IPv6 network prefixes and the associated prefix length values. You can use a prefix list by itself in features such as Border Gateway Protocol (BGP) templates, route filtering, or redistribution of routes that are exchanged between routing domains.

Route maps can apply to both routes and IP packets. Route filtering and redistribution pass a route through a route map while policy based routing passes IP packets through a route map.

This section includes the following topics:

- [Prefix Lists, page 15-2](#)
- [Route Maps, page 15-2](#)
- [Route Redistribution and Route Maps, page 15-4](#)
- [Policy-Based Routing, page 15-4](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Prefix Lists

You can use prefix lists to permit or deny an address or range of addresses. Filtering by a prefix list involves matching the prefixes of routes or packets with the prefixes listed in the prefix list. An implicit deny is assumed if a given prefix does not match any entries in a prefix list.

You can configure multiple entries in a prefix list and permit or deny the prefixes that match the entry. Each entry has an associated sequence number that you can configure. If you do not configure a sequence number, Cisco NX-OS assigns a sequence number automatically. Cisco NX-OS evaluates prefix lists starting with the lowest sequence number. Cisco NX-OS processes the first successful match for a given prefix. Once a match occurs, Cisco NX-OS processes the permit or deny statement and does not evaluate the rest of the prefix list.



Note

An empty prefix list permits all routes.

Route Maps

You can use route maps for route redistribution or policy-based routing. Route map entries consist of a list of match and set criteria. The match criteria specify match conditions for incoming routes or packets, and the set criteria specify the action taken if the match criteria are met.

You can configure multiple entries in the same route map. These entries contain the same route map name and are differentiated by a sequence number.

You create a route map with one or more route map entries arranged by the sequence number under a unique route map name. The route map entry has the following parameters:

- Sequence number
- Permission—permit or deny
- Match criteria
- Set changes

By default, a route map processes routes or IP packets in a linear fashion, that is, starting from the lowest sequence number. You can configure the route map to process in a different order using the **continue** statement, which allows you to determine which route map entry to process next.

Match Criteria

You can use a variety of criteria to match a route or IP packet in a route map. Some criteria, such as BGP community lists, are applicable only to a specific routing protocol, while other criteria, such as the IP source or the destination address, can be used for any route or IP packet.

When Cisco NX-OS processes a route or packet through a route map, it compares the route or packet to each of the match statements configured. If the route or packet matches the configured criteria, Cisco NX-OS processes it based on the permit or deny configuration for that match entry in the route map and any set criteria configured.

The match categories and parameters are as follows:

- IP access lists—(For policy-based routing only). Match based on source or destination IP address, protocol, or QoS parameters.
- BGP parameters—Match based on AS numbers, AS-path, or community attributes.

Send document comments to nexus7k-docfeedback@cisco.com.

- Prefix lists—Match based on an address or range of addresses.
- Multicast parameters—Match based on rendezvous point, groups, or sources.
- Other parameters—Match based on IP next-hop address or packet length.

Set Changes

Once a route or packet matches an entry in a route map, the route or packet can be changed based on one or more configured set statements.

The set changes are as follows:

- BGP parameters—Change the AS-path, tag, community, dampening, local preference, origin, or weight attributes.
- Metrics—Change the route-metric, the route-tag, or the route-type.
- Policy-based routing only—Change the interface or the default next-hop address.
- Other parameters—Change the forwarding address or the IP next-hop address.

Access Lists

IP access lists can match the packet to a number of IP packet fields such as the following:

- Source or destination IPv4 or IPv6 address
- Protocol
- Precedence
- ToS

You can use ACLs in a route map for policy-based routing only. See the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1* for more information on ACLs.

AS Numbers for BGP

You can configure a list of AS numbers to match against BGP peers. If a BGP peer matches an AS number in the list and matches the other BGP peer configuration, BGP creates a session. If the BGP peer does not match an AS number in the list, BGP ignores the peer. You can configure the AS numbers as a list, a range of AS numbers, or you can use an AS-path list to compare the AS numbers against a regular expression.

AS-path Lists for BGP

You can configure an AS-path list to filter inbound or outbound BGP route updates. If the route update contains an AS-path attribute that matches an entry in the AS-path list, the router processes the route based on the permit or deny condition configured. You can configure AS-path lists within a route map.

You can configure multiple AS-path entries in an AS-path list by using the same AS-path list name. The router processes the first entry that matches.

Send document comments to nexus7k-docfeedback@cisco.com.

Community Lists for BGP

You can filter BGP route updates based on the BGP community attribute by using community lists in a route map. A community list contains one or more community attributes. If you configure more than one community attribute in the same community list entry, then the BGP route must match all community attributes listed to be considered a match.

You can also configure multiple community attributes as individual entries in the community list by using the same community list name. In this case, the router processes the first community attribute that matches the BGP route, using the permit or deny configuration for that entry.

You can configure community attributes in the community list in one of the following formats:

- A named community attribute, such as **internet** or **no-export**
- A 4-byte value that represents the autonomous system (AS) number and a user-defined network number
- A regular expression

See the *Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1* for more information on regular expressions.

Route Redistribution and Route Maps

You can use route maps to control the redistribution of routes between routing domains. Route maps match on the attributes of the routes to redistribute only those routes that pass the match criteria. The route map can also modify the route attributes during this redistribution using the set changes.

The router matches redistributed routes against each route map entry. If there are multiple match statements, the route must pass all of the match criteria. If a route passes the match criteria defined in a route map entry, the actions defined in the entry are executed. If the route does not match the criteria, the router compares the route against subsequent route map entries. Route processing continues until a match is made or the route is processed by all entries in the route map with no match. If the router processes the route against all entries in a route map with no match, the router accepts the route (inbound route maps) or forwards the route (outbound route maps).

Policy-Based Routing

You can use policy-based routing to forward a packet to a specified next-hop address based on the source of the packet or other fields in the packet header. For more information, see [Chapter 16, “Configuring Policy-Based Routing.”](#)

Licensing Requirements for Route Policy Manager

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	Route Policy Manager requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Prerequisites for Route Policy Manager

Route Policy Manager has the following prerequisites:

- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see the *Cisco NX-OS Virtual Device Context Configuration Guide*).

Guidelines and Limitations

Route Policy Manager has the following guidelines and limitations:

- An empty route map denies all the routes.
- An empty prefix list permits all the routes.
- Without any match statement in a route-map entry, the permission (permit or deny) of the route-map entry decides the result for all the routes or packets.
- If referred policies (for example, prefix lists) within a match statement of a route-map entry return either a no-match or a deny-match, Cisco NX-OS fails the match statement and processes the next route-map entry.
- When you change a route map, Cisco NX-OS hold all the changes until you exit from the route-map configuration submode. Cisco NX-OS then sends all the changes to the protocol clients to take effect.
- Because you can use a route map before you define it, verify that all your route maps exist when you finish a configuration change.
- You can view the route-map usage for redistribution and filtering. Each individual routing protocol provides a way to display these statistics.

Configuring Route Policy Manager

Route Policy Manager configuration includes the following topics:

- [Configuring IP Prefix Lists, page 15-5](#)
- [Configuring AS-path Lists, page 15-7](#)
- [Configuring Community Lists, page 15-8](#)
- [Configuring Route Maps, page 15-9](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring IP Prefix Lists

IP prefix lists match the IP packet or route against a list of prefixes and prefix lengths. You can create an IP prefix list for IPv4 and create an IPv6 prefix list for IPv6.

You can configure the prefix list entry to match the prefix length exactly, or to match any prefix with a length that matches the configured range of prefix lengths.

Send document comments to nexus7k-docfeedback@cisco.com.

Use the **ge** and **lt** keywords to create a range of possible prefix lengths. The incoming packet or route matches the prefix list if the prefix matches and if the prefix length is greater than or equal to the **ge** keyword value (if configured) and less than or equal to the **lt** keyword value (if configured).

SUMMARY STEPS

1. **config t**
2. **{ip | ipv6} prefix-list name description string**
3. **ip prefix-list name [seq number] [{permit | deny} prefix {[eq prefix-length] | [ge prefix-length] [le prefix-length]}]**
or
ipv6 prefix-list name [seq number] [{permit | deny} prefix {[eq prefix-length] | [ge prefix-length] [le prefix-length]}]
4. **show {ip | ipv6} prefix-list name**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	{ip ipv6} prefix-list name description string Example: switch(config)# ip prefix-list AllowPrefix description allows engineering server	(Optional) Adds an information string about the prefix list.
Step 3	ip prefix-list name [seq number] [{permit deny} prefix {[eq prefix-length] [ge prefix-length] [le prefix-length]}] Example: switch(config)# ip prefix-list AllowPrefix seq 10 permit 192.0.2.0 eq 24	Creates an IPv4 prefix list or adds a prefix to an existing prefix list. The prefix length is matched as follows: <ul style="list-style-type: none"> • eq—Matches the exact <i>prefix length</i>. • ge—Matches a prefix length that is equal to or greater than the configured <i>prefix length</i>. • le—Matches a prefix length that is equal to or less than the configured <i>prefix length</i>.
	ipv6 prefix-list name [seq number] [{permit deny} prefix {[eq prefix-length] [ge prefix-length] [le prefix-length]}] Example: switch(config)# ipv6 prefix-list AllowIPv6Prefix seq 10 permit 2001:0DB8:: le 32	Creates an IPv6 prefix list or adds a prefix to an existing prefix list. The prefix length is configured as follows: <ul style="list-style-type: none"> • eq—Matches the exact <i>prefix length</i>. • ge—Matches a prefix length that is equal to or greater than the configured <i>prefix length</i>. • le—Matches a prefix length that is equal to or less than the configured <i>prefix length</i>.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	show {ip ipv6} prefix-list name Example: switch(config)# show ip prefix-list AllowPrefix	(Optional) Displays information about prefix lists.
Step 5	copy running-config startup-config Example: switch# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create an IPv4 prefix list with two entries and apply the prefix list to a BGP neighbor:

```
switch# config t
switch(config)# ip prefix-list allowprefix seq 10 permit 192.0.2.0/24 eq 24
switch(config)# ip prefix-list allowprefix seq 20 permit 209.165.201.0/27 eq 27
switch(config)# router bgp 65536:20
switch(config-router)# neighbor 192.0.2.1/16 remote-as 65535:20
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# prefix-list allowprefix in
```

Configuring AS-path Lists

You can specify an AS-path list filter on both inbound and outbound BGP routes. Each filter is an access list based on regular expressions. If the regular expression matches the representation of the AS-path attribute of the route as an ASCII string, then the permit or deny condition applies.

SUMMARY STEPS

1. **config t**
2. **ip as-path access-list name {deny | permit} expression**
3. **show {ip | ipv6} as-path list name**
4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	ip as-path access-list name {deny permit} expression Example: switch(config)# ip as-path access-list Allow40 permit 40	Creates a BGP AS-path list using a regular expression.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 3	show {ip ipv6} as-path-access-list <i>name</i> Example: switch(config)# show ip as-path-access-list Allow40	(Optional) Displays information about as-path access lists.
Step 4	copy running-config startup-config Example: switch# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create an AS-path list with two entries and apply the AS path list to a BGP neighbor:

```
switch# config t
switch(config)# ip as-path access-list AllowAS permit 64510
switch(config)# ip as-path access-list AllowAS permit 64496
switch(config)# copy running-config startup-config
switch(config)# router bgp 65536:20
switch(config-router)# neighbor 192.0.2.1/16 remote-as 65535:20
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# filter-list AllowAS in
```

Configuring Community Lists

You can use community lists to filter BGP routes based on the community attribute. The community number consists of a 4-byte value in the *aa:nn* format. The first two bytes represent the autonomous system number, and the trailing two bytes represent a user-defined network number.

When you configure multiple values in the same community list statement, all community values must match to satisfy the community list filter. When you configure multiple values in separate community list statements, the first list that matches a condition is processed.

SUMMARY STEPS

1. **config t**
2. **ip community-list standard *list-name* [*community-list*] {deny | permit} [*internet*] [*local-AS*] [*no-advertise*] [*no-export*]**
or
ip community-list expanded *list-name* {deny | permit} *expression*
3. **show ip community-list *name***
4. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	ip community-list standard list-name {deny permit} [community-list] [internet] [local-AS] [no-advertise] [no-export] Example: switch(config)# ip community-list standard BGPCommunity permit no-advertise 65536:20 ip community-list expanded list-name {deny permit} expression Example: switch(config)# ip community-list expanded BGPComplex deny 50000:[0-9][0-9]_	Creates a standard BGP community list. The <i>community-list</i> can be one or more of the following: <ul style="list-style-type: none"> • internet • local-AS • no-advertise • no-export • One or more communities in the <i>aa:nn</i> format. Creates an expanded BGP community list using a regular expression.
Step 3	show ip community-list name Example: switch(config)# show ip community-list BGPCommunity	(Optional) Displays information about prefix lists.
Step 4	copy running-config startup-config Example: switch# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to create a community list with two entries:

```
switch# config t
switch(config)# ip community-list standard BGPCommunity permit no-advertise 65536:20
switch(config)# ip community-list standard BGPCommunity permit local-AS no-export
switch(config)# copy running-config startup-config
```

Configuring Route Maps

You can use route maps for route redistribution or route filtering. Route maps can contain multiple match criteria and multiple set criteria.

Configuring a route map for BGP triggers an automatic soft clear or refresh of BGP neighbor sessions.

SUMMARY STEPS

1. config t

Send document comments to nexus7k-docfeedback@cisco.com.

2. **route-map** *map-name* [**permit** | **deny**] [*seq*]
3. Add optional match or set parameters in route-map configuration mode
4. **exit**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	route-map <i>map-name</i> [permit deny] [<i>seq</i>] Example: switch(config)# route-map Testmap permit 10 switch(config-route-map)#	Creates a route map or enters route-map configuration mode for an existing route map. Use <i>seq</i> to order the entries in a route map.
Step 3	description <i>string</i> Example: switch(config-route-map)# description A test route map	(Optional) Adds a description for the route-map sequence.
Step 4	continue <i>seq</i> Example: switch(config-route-map)# continue 10	(Optional) Determines what sequence statement to process next in the route map. Used only for filtering and redistribution.
Step 5	exit Example: switch(config-route-map)# exit	(Optional) Exits route-map configuration mode.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

You can configure the following optional match parameters for route maps in route-map configuration mode:

Command	Purpose
match as-path <i>name</i> [<i>name...</i>] Example: switch(config-route-map)# match as-path Allow40	Matches against one or more AS-path lists. Create the AS-path list with the ip as-path access-list command.
match as-number { <i>number</i> [, <i>number...</i>] as-path-list <i>name</i> [<i>name...</i>]} Example: switch(config-route-map)# match as-number 33,50-60	Matches against one or more AS numbers or AS-path lists. Create the AS-path list with the ip as-path access-list command. The number range is from 1 to 65535. The AS-path list name can be any case-sensitive alphanumeric string up to 63 characters.
match community <i>name</i> [<i>name...</i>] [exact-match] Example: switch(config-route-map)# match community BGPCommunity	Matches against one or more community lists. Create the AS-path list with the ip community-list command.
match interface <i>interface-type</i> <i>number</i> [<i>interface-type</i> <i>number...</i>] Example: switch(config-route-map)# match interface e 1/2	Matches any routes that have their next hop out one of the configured interfaces. Use ? to find a list of supported interface types.
match ip address prefix-list <i>name</i> [<i>name...</i>] Example: switch(config-route-map)# match ip address prefix-list AllowPrefix	Matches against one or more IPv4 prefix lists. Use the ip prefix-list command to create the prefix list.
match ipv6 address prefix-list <i>name</i> [<i>name...</i>] Example: switch(config-route-map)# match ip address prefix-list AllowIPv6Prefix	Matches against one or more IPv6 prefix lists. Use the ipv6 prefix-list command to create the prefix list.
match ip multicast [source <i>ipsource</i>] [[group <i>ipgroup</i>] [<i>rp</i> <i>iprp</i>]] Example: switch(config-route-map)# match ip multicast rp 192.0.2.1	Matches an IPv4 multicast packet based on the multicast source, group, or rendezvous point.
match ipv6 multicast [source <i>ipsource</i>] [[group <i>ipgroup</i>] [<i>rp</i> <i>iprp</i>]] Example: switch(config-route-map)# match ip multicast source 2001:0DB8::1	Matches an IPv6 multicast packet based on the multicast source, group, or rendezvous point.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
match ip next-hop prefix-list <i>name</i> [<i>name...</i>] Example: switch(config-route-map)# match ip next-hop prefix-list AllowPrefix	Matches the IPv4 next-hop address of a route to one or more IP prefix lists. Use the ip prefix-list command to create the prefix list.
match ipv6 next-hop prefix-list <i>name</i> [<i>name...</i>] Example: switch(config-route-map)# match ipv6 next-hop prefix-list AllowIPv6Prefix	Matches the IPv6 next-hop address of a route to one or more IP prefix lists. Use the ipv6 prefix-list command to create the prefix list.
match ip route-source prefix-list <i>name</i> [<i>name...</i>] Example: switch(config-route-map)# match ip route-source prefix-list AllowPrefix	Matches the IPv4 route source address of a route to one or more IP prefix lists. Use the ip prefix-list command to create the prefix list.
match ipv6 route-source prefix-list <i>name</i> [<i>name...</i>] Example: switch(config-route-map)# match ipv6 route-source prefix-list AllowIPv6Prefix	Matches the IPv6 route-source address of a route to one or more IP prefix lists. Use the ipv6 prefix-list command to create the prefix list.
match route-type <i>route-type</i> Example: switch(config-route-map)# match route-type level 1 level 2	Matches against a type of route. The <i>route-type</i> can be one or more of the following: <ul style="list-style-type: none"> • external • internal • level-1 • level-2 • local • nssa-external • type-1 • type-2
match tag <i>tagid</i> [<i>tagid...</i>] Example: switch(config-route-map)# match tag 2	Matches a route against one or more tags for filtering or redistribution.

You can configure the following optional set parameters for route maps in route-map configuration mode:

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
set as-path {tag prepend {last-as number as-1 [as-2...]} Example: switch(config-route-map)# set as-path prepend 10 100 110	Modifies an AS-path attribute for a BGP route. You can prepend the configured <i>number</i> of last AS numbers or a string of particular AS-path values (<i>as-1 as-2...as-n</i>).
set comm-list name delete Example: switch(config-route-map)# set comm-list BGPCommunity delete	Removes communities from the community attribute of an inbound or outbound BGP route update. Use the ip community-list command to create the community list.
set community {none additive local-AS no-advertise no-export community-1 [community-2...]} Example: switch(config-route-map)# set community local-AS	Sets the community attribute for a BGP route update. Note When you use both the set community and set comm-list delete commands in the same sequence of a route map attribute, the deletion operation is performed before the set operation.
set dampening halflife reuse suppress duration Example: switch(config-route-map)# set dampening 30 1500 10000 120	Sets the following BGP route dampening parameters: <ul style="list-style-type: none"> <i>halflife</i>—The range is from 1 to 45 minutes. The default is 15. <i>reuse</i>—The range is from 1 to 20000 seconds. The default is 750. <i>suppress</i>—The range is from 1 to 20000. The default is 2000. <i>duration</i>—The range is from 1 to 255 minutes. The default is 60.
set forwarding-address Example: switch(config-route-map)# set forwarding-address	Sets the forwarding address for OSPF.
set level {backbone level-1 level-1-2 level-2} Example: switch(config-route-map)# set level backbone	Sets what area to import routes to for IS-IS. The options for IS-IS are level-1, level-1-2, or level-2. The default is level-1.
set local-preference value Example: switch(config-route-map)# set local-preference 4000	Sets the BGP local preference value. The range is from 0 to 4294967295.
set metric [+ -]bandwidth-metric Example: switch(config-route-map)# set metric +100	Adds or subtracts from the existing metric value. The metric is in Kb/s. The range is from 0 to 4294967295.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
set metric <i>bandwidth</i> [<i>delay</i> <i>reliability</i> <i>load</i> <i>mtu</i>] Example: switch(config-route-map)# set metric 33 44 100 200 1500	Sets the route metric values. Metrics are as follows: <ul style="list-style-type: none"> <i>metric0</i>—Bandwidth in Kb/s. The range is from 0 to 4294967295. <i>metric1</i>—Delay in 10-microsecond units. <i>metric2</i>—Reliability. The range is from 0 to 255 (100 percent reliable). <i>metric3</i>—Loading. The range is from 1 to 200 (100 percent loaded). <i>metric4</i>—MTU of the path. The range is from 1 to 4294967295
set metric-type { external internal type-1 type-2 } Example: switch(config-route-map)# set metric-type internal	Sets the metric type for the destination routing protocol. The options are as follows: external—IS-IS external metric internal—IGP metric as the MED for BGP type-1—OSPF external type 1 metric type-2—OSPF external type 2 metric
set origin { egp <i>as-number</i> igp incomplete } Example: switch(config-route-map)# set origin incomplete	Sets the BGP origin attribute. The EGP <i>as-number</i> range is from 0 to 65535.
set tag <i>name</i> Example: switch(config-route-map)# set tag 33	Sets the tag value for the destination routing protocol. The <i>name</i> parameter is an unsigned integer.
set weight <i>count</i> Example: switch(config-route-map)# set weight 33	Sets the weight for the BGP route. The range is from 0 to 65535.

The **set metric-type internal** command affects an outgoing policy and an eBGP neighbor only. If you configure both the **metric** and **metric-type internal** commands in the same BGP peer outgoing policy, then Cisco NX-OS ignores the **metric-type internal** command.

Verifying Route Policy Manager Configuration

Use the **show route-map** command to verify the Route Policy Manager configuration.

Route Policy Manager Example Configuration

This example shows how to use an address family to configure BGP so that any unicast and multicast routes from neighbor 209.0.2.1 are accepted if they match access list 1:

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

```
router bgp 64496
  address-family ipv4 unicast
    network 192.0.2.0/24
    network 209.165.201.0/27 route-map filterBGP
  route-map filterBGP
    match ip next-hop prefix-list AllowPrefix

ip prefix-list AllowPrefix 10 permit 192.0.2.0 eq 24
ip prefix-list AllowPrefix 20 permit 209.165.201.0 eq 27
```

Related Topics

The following topics can give more information on Route Policy Manager:

- [Chapter 9, “Configuring Basic BGP”](#)
- [Chapter 16, “Configuring Policy-Based Routing”](#)

Default Settings

[Table 15-1](#) lists the default settings for Route Policy Manager.

Table 15-1 **Default Route Policy Manager Parameters**

Parameters	Default
Route Policy Manager	Enabled

Additional References

For additional information related to implementing IP, see the following sections:

- [Related Documents, page 15-16](#)
- [Standards, page 15-16](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
Route Policy Manager CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs and VRFs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for Route Policy Manager

Table 15-2 lists the release history for this feature.

Table 15-2 Feature History for BGP

Feature Name	Releases	Feature Information
Match interfaces	4.1(2)	Added support to match a list of interfaces in a route map.
Match AS numbers	4.1(2)	Added support to match a range of AS numbers in a route map.
Route Policy Manager	4.0(1)	This feature was introduced.



CHAPTER 16

Configuring Policy-Based Routing

This chapter describes how to configure policy based routing.

This chapter includes the following sections:

- [Information About Policy Based Routing, page 16-1](#)
- [Licensing Requirements for Policy-Based Routing, page 16-3](#)
- [Prerequisites for Policy-Based Routing, page 16-3](#)
- [Guidelines and Limitations, page 16-3](#)
- [Configuring Policy-Based Routing, page 16-4](#)
- [Verifying Policy-Based Routing Configuration, page 16-7](#)
- [Policy Based-Routing Example Configuration, page 16-7](#)
- [Related Topics, page 16-7](#)
- [Default Settings, page 16-7](#)
- [Additional References, page 16-7](#)
- [Feature History for Policy-Based Routing, page 16-8](#)

Information About Policy Based Routing

Policy-based routing allows you to configure a defined policy for traffic flows, lessening reliance on routes derived from routing protocols. All packets received on an interface with policy-based routing enabled are passed through enhanced packet filters or *route maps*. The route maps dictate the policy, determining where to forward packets.

Route maps are composed of match and set statements that you can mark as permit or deny. You can interpret the statements as follows:

- If the packets match any route map statements, then all the set statements are applied. One of these actions involves choosing the next hop.
- If a statement is marked as deny, the packets that meet the match criteria are sent back through the normal forwarding channels and destination-based routing is performed.
- If the statement is marked as permit and the packets do not match any route map statements, the packets are sent back through the normal forwarding channels and destination-based routing is performed.

See the [“Route Maps” section on page 15-2](#).

Send document comments to nexus7k-docfeedback@cisco.com.

Policy-based routing includes the following features:

- Source-based routing—Routes traffic originating from different sets of users through different connections across the policy routers.
- Quality of Service (QoS)—Differentiates traffic by setting the precedence or type of service (ToS) values in the IP packet headers at the periphery of the network and leveraging queuing mechanisms to prioritize traffic in the core or backbone of the network (see the *Cisco Nexus 7000 Series NX-OS Quality of Service Configuration Guide, Release 4.1*).
- Load sharing—Distributes traffic among multiple paths based on the traffic characteristics.

This section includes the following topics:

- [Policy Route Maps, page 16-2](#)
- [Set Criteria for Policy-Based Routing, page 16-2](#)

Policy Route Maps

Each entry in a route map contains a combination of match and set statements. The match statements define the criteria for whether appropriate packets meet the particular policy (that is, the conditions to be met). The set clauses explain how the packets should be routed once they have met the match criteria.

You can mark the route map statements as permit or deny. If the statement is marked as a deny, the packets that meet the match criteria are sent back through the normal forwarding channels (destination-based routing is performed). If the statement is marked as permit and the packets meet the match criteria, all the set clauses are applied. If the statement is marked as permit and the packets do not meet the match criteria, then those packets are also forwarded through the normal routing channel.



Note

Policy routing is specified on the interface that receives the packets, not on the interface from which the packets are sent.

Set Criteria for Policy-Based Routing

The set criteria in a route map is evaluated in the order listed in the route map. Set criteria specific to route maps used for policy-based routing are as follows:

1. List of interfaces through which the packets can be routed—If more than one interface is specified, then the first interface that is found to be up will be used for forwarding the packets.
2. List of specified IP addresses—The IP address can specify the adjacent next-hop router in the path toward the destination to which the packets should be forwarded. The first IP address associated with a currently up connected interface is used to route the packets.



Note

You can optionally configure the set criteria for next-hop addresses to load balance traffic across up to 16 IP addresses. In this case, Cisco NX-OS sends all traffic for each IP flow to a particular IP next-hop address.

3. List of default interfaces—If there is no explicit route available to the destination address of the packet being considered for policy routing, then the route map routes it to the first up interface in the list of specified default interfaces.

Send document comments to nexus7k-docfeedback@cisco.com.

4. List of default next-hop IP addresses—Route to the interface or the next-hop address specified by this set statement only if there is no explicit route for the destination address of the packet in the routing table.

**Note**

You can optionally configure the set criteria for the default next-hop addresses to load balance traffic across up to 16 IP addresses. In this case, Cisco NX-OS sends all traffic for each IP flow to a particular IP next-hop address.

If the packets do not meet any of the defined match criteria, then those packets are routed through the normal destination-based routing process.

Licensing Requirements for Policy-Based Routing

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	Policy-based routing requires an Enterprise Services license. For a complete explanation of the NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco NX-OS Licensing Guide</i> .

Prerequisites for Policy-Based Routing

Policy-Based Routing has the following prerequisites:

- Install the correct license.
- You must enable the policy-based routing feature (see the [“Enabling the Policy-based Routing Feature”](#) section on page 16-4).
- Assign an IP address on the interface and bring the interface up before you apply a route map on the interface for policy-based routing.
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see to the *Cisco NX-OS Virtual Device Context Configuration Guide*).

Guidelines and Limitations

Policy-based routing has the following guidelines and limitations:

- A policy-based routing route map can have only one route-map entry (with match and sets) in it.
- A policy-based routing route-map cannot have more than one match and one set command in a route-map entry.
- A match command cannot refer to more than one ACL in a route map used for policy-based routing.
- The same route map can be shared among different interfaces for policy-based routing as long as the interfaces belong to the same VRF.

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Policy-Based Routing

This section contains the following topics:

- [Enabling the Policy-based Routing Feature, page 16-4](#)
- [Configuring a Route Policy, page 16-5](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Enabling the Policy-based Routing Feature

You must enable the policy-based routing feature before you can configure a route policy.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **feature pbr**
3. **show feature**
4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	feature pbr Example: switch(config)# feature pbr	Enables the policy-based routing feature.
Step 3	show feature Example: switch(config)# show feature	(Optional) Displays enabled and disabled features.
Step 4	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Saves this configuration change.

Use the **no feature pbr** command to disable the policy-based routing feature and remove all associated configuration.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
no feature pbr Example: switch(config)# no feature pbr	Disables the policy-based routing feature and removes all associated configuration.

Configuring a Route Policy

You can use route maps in policy-based routing to assign routing policies to the inbound interface. See [“Configuring Route Maps” section on page 15-9](#).

SUMMARY STEPS

1. **config t**
2. **interface** *type slot/port*
3. **ip policy route-map** *map-name*
4. **exit**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ip policy route-map <i>map-name</i> Example: switch(config-if)# ip policy route-map Testmap	Assigns a route map for IPv4 policy-based routing to the interface.
Step 4	exit Example: switch(config-route-map)# exit	(Optional) Exits route-map configuration mode.
Step 5	exit Example: switch(config)# exit	(Optional) Exits route-map configuration mode.
Step 6	copy running-config startup-config Example: switch# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to add a route map to an interface:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# ip policy route-map Testmap
switch(config)# exit
switch(config)# copy running-config startup-config
```

You can configure the following optional match parameters for route maps in route-map configuration mode:

Command	Purpose
match ip address access-list-name <i>name</i> <i>[name...]</i> Example: switch(config-route-map)# match ip address access-list-name ACL1	Match an IPv4 address against one or more IP access control lists (ACLs). This command is used for policy-based routing and ignored by route filtering or redistribution.
match length <i>min max</i> Example: switch(config-route-map)# match length 64 1500	Match against the length of the packet. This command is used for policy-based routing.

You can configure the following optional set parameters for route maps in route-map configuration mode:

Command	Purpose
set ip next-hop <i>address1</i> [<i>address2...</i>] { load-share peer-address } Example: switch(config-route-map)# set ip next-hop 192.0.2.1	Sets the IPv4 next-hop address for policy-based routing. This command uses the first valid next-hop address if multiple addresses are configured. Use the optional load-share keyword to load balance traffic across up to 16 next-hop addresses.
set ip default next-hop <i>address1</i> [<i>address2...</i>] { load-share } Example: switch(config-route-map)# set ip default next-hop 192.0.2.2	Sets the IPv4 next-hop address for policy-based routing when there is no explicit route to a destination. This command uses the first valid next-hop address if multiple addresses are configured. Use the optional load-share keyword to load balance traffic across up to 16 next-hop addresses.
set vrf <i>vrf-name</i> Example: switch(config-route-map)# set vrf MainVRF	Sets the VRF for next-hop resolution.

Cisco NX-OS routes the packet as soon as it finds a next hop and an interface.

Send document comments to nexus7k-docfeedback@cisco.com.

Verifying Policy-Based Routing Configuration

Use the **show ip policy** command to verify policy-based routing.

Use the **route-map map-name pbr-statistics** to enable policy statistics. Use the **show route-map map-name pbr-statistics** to view policy statistics. Use the **clear route-map map-name pbr-statistics** to clear these policy statistics

Policy Based-Routing Example Configuration

This example shows how to configure a simple route policy on an interface.

```
feature pbr
ip access-list 1 permit ip 192.0.2.1
!
interface ethernet 1/2
 ip policy route-map equal-access
route-map equal-access permit 10
 match ip address 1
 set ip default next-hop 192.0.2.10
```

Related Topics

The following topics can give more information on Policy Based Routing:

- [Chapter 15, “Configuring Route Policy Manager”](#)

Default Settings

[Table 16-1](#) lists the default settings for Policy-base routing parameters.

Table 16-1 *Default Policy-based Routing Parameters*

Parameters	Default
Policy-based routing	disabled

Additional References

For additional information related to implementing IP, see the following sections:

- [Related Documents, page 16-8](#)
- [Standards, page 16-8](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
Policy-based routing CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
VDCs and VRFs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for Policy-Based Routing

[Table 16-2](#) lists the release history for this feature.

Table 16-2 **Feature History for Policy-Based Routing**

Feature Name	Releases	Feature Information
policy-based routing	4.0(1)	This feature was introduced.



Send document comments to nexus7k-docfeedback@cisco.com.



PART 2

First-Hop Redundancy Protocols

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 17

Configuring GLBP

This chapter describes how to configure the Gateway Load Balancing Protocol (GLBP).

This chapter includes the following sections:

- [Information About GLBP, page 17-1](#)
- [Licensing Requirements for GLBP, page 17-6](#)
- [Prerequisites for GLBP, page 17-6](#)
- [Guidelines and Limitations, page 17-7](#)
- [Configuring GLBP, page 17-7](#)
- [Verifying GLBP Configuration, page 17-15](#)
- [GLBP Example Configuration, page 17-15](#)
- [Default Settings, page 17-16](#)
- [Additional References, page 17-16](#)
- [Feature History for GLBP, page 17-17](#)

Information About GLBP

GLBP provides path redundancy for IP by sharing protocol and Media Access Control (MAC) addresses between redundant gateways. Additionally, GLBP allows a group of Layer 3 routers to share the load of the default gateway on a LAN. A GLBP router can automatically assume the forwarding function of another router in the group if the other router fails.

This section includes the following topics:

- [GLBP Overview, page 17-2](#)
- [GLBP Active Virtual Gateway, page 17-2](#)
- [GLBP Virtual MAC Address Assignment, page 17-2](#)
- [GLBP Virtual Gateway Redundancy, page 17-3](#)
- [GLBP Virtual Forwarder Redundancy, page 17-3](#)
- [GLBP Authentication, page 17-4](#)
- [GLBP Load Balancing and Tracking, page 17-5](#)
- [High Availability, page 17-6](#)
- [Virtualization Support, page 17-6](#)

Send document comments to nexus7k-docfeedback@cisco.com.

GLBP Overview

GLBP provides automatic *gateway* backup for IP hosts configured with a single default gateway on an IEEE 802.3 LAN. Multiple routers on the LAN combine to offer a single virtual first-hop IP gateway while sharing the IP packet forwarding load. Other routers on the LAN may act as redundant GLBP gateways that become active if any of the existing forwarding gateways fail.

GLBP performs a similar function to the Hot Standby Redundancy Protocol (HSRP) and the Virtual Router Redundancy Protocol (VRRP). HSRP and VRRP allow multiple routers to participate in a virtual group configured with a virtual IP address. These protocols elect one member as the active router to forward packets to the virtual IP address for the group. The other routers in the group are redundant until the active router fails.

GLBP performs an additional load balancing function that the other protocols do not provide. GLBP load balances over multiple routers (gateways) using a single virtual IP address and multiple virtual MAC addresses. GLBP shares the forwarding load among all routers in a GLBP group instead of allowing a single router to handle the whole load while the other routers remain idle. You configure each host with the same virtual IP address, and all routers in the virtual group participate in forwarding packets. GLBP members communicate between each other using periodic hello messages.

GLBP Active Virtual Gateway

GLBP prioritizes gateways to elect an active virtual gateway (*AVG*). If multiple gateways have the same priority, the gateway with the highest real IP address becomes the AVG. The AVG assigns a virtual MAC address to each member of the GLBP group. Each member is the active virtual forwarder (*AVF*) for its assigned virtual MAC address, forwarding packets sent to its assigned virtual MAC address.

The AVG also answers Address Resolution Protocol (ARP) requests for the virtual IP address. Load sharing is achieved when the AVG replies to the ARP requests with different virtual MAC addresses.



Note

In Cisco NX-OS Release 4.1(2) and later, packets received on a routed port destined for the GLBP virtual IP address will terminate on the local router, regardless of whether that router is the active GLBP router or a redundant GLBP router. This includes ping and telnet traffic. Packets received on a Layer 2 (VLAN) interface destined for the GLBP virtual IP address will terminate on the active router.

GLBP Virtual MAC Address Assignment

The AVG assigns the virtual MAC addresses to each member of the group. The group members request a virtual MAC address after they discover the AVG through hello messages. The AVG assigns the next MAC address based on the load-balancing algorithm selected (see the “[GLBP Load Balancing and Tracking](#)” section on page 17-5). A gateway that is assigned with a virtual MAC address by the AVG is the primary virtual forwarder. The other members of the GLBP group that learn the virtual MAC addresses from hello messages are secondary virtual forwarders.

Send document comments to nexus7k-docfeedback@cisco.com.

GLBP Virtual Gateway Redundancy

GLBP provides virtual gateway redundancy. A member in a group can be in the active, standby, or listen state. GLBP uses a priority algorithm to elect one gateway as the AVG and elect another gateway as the standby virtual gateway. The remaining gateways go into the listen state. You can configure the GLBP priority on each gateway. If the GLBP priority is identical on multiple gateways, GLBP uses the gateway with the highest IP address as the AVG.

If an AVG fails, the standby virtual gateway assumes responsibility for the virtual IP address. GLBP elects a new standby virtual gateway from the gateways in the listen state.

GLBP Virtual Forwarder Redundancy

GLBP provides virtual forwarder redundancy. Virtual forwarder redundancy is similar to virtual gateway redundancy with an active virtual forwarder (AVF). If the AVF fails, a secondary virtual forwarder in the listen state assumes responsibility for the virtual MAC address. This secondary virtual forwarder is also a primary virtual forwarder for a different virtual MAC address. GLBP migrates hosts away from the old virtual MAC address of the failed AVF, using the following two timers.


- Redirect timer—Specifies the interval during which the AVG continues to redirect hosts to the old virtual MAC address. When the redirect time expires, the AVG stops using the old virtual MAC address in ARP replies, although the secondary virtual forwarder continues to forward packets that were sent to the old virtual MAC address.
- Secondary hold timer—Specifies the interval during which the virtual MAC address is valid. When the secondary hold time expires, GLBP removes the virtual MAC address from all gateways in the GLBP group and load balances the traffic over the remaining AVFs. The expired virtual MAC address becomes eligible for reassignment by the AVG.

GLBP uses hello messages to communicate the current state of the timers.

In [Figure 17-1](#), router A is the AVG for a GLBP group and is responsible for the virtual IP address 192.0.2.1. Router A is also an AVF for the virtual MAC address 0007.b400.0101. Router B is a member of the same GLBP group and is designated as the AVF for the virtual MAC address 0007.b400.0102. Client 1 has a default gateway IP address of 192.0.2.1, the virtual IP address, and a gateway MAC address of 0007.b400.0101 that points to router A. Client 2 shares the same default gateway IP address but receives the gateway MAC address 0007.b400.0102 because router B is sharing the traffic load with router A.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 17-1 GLBP Topology

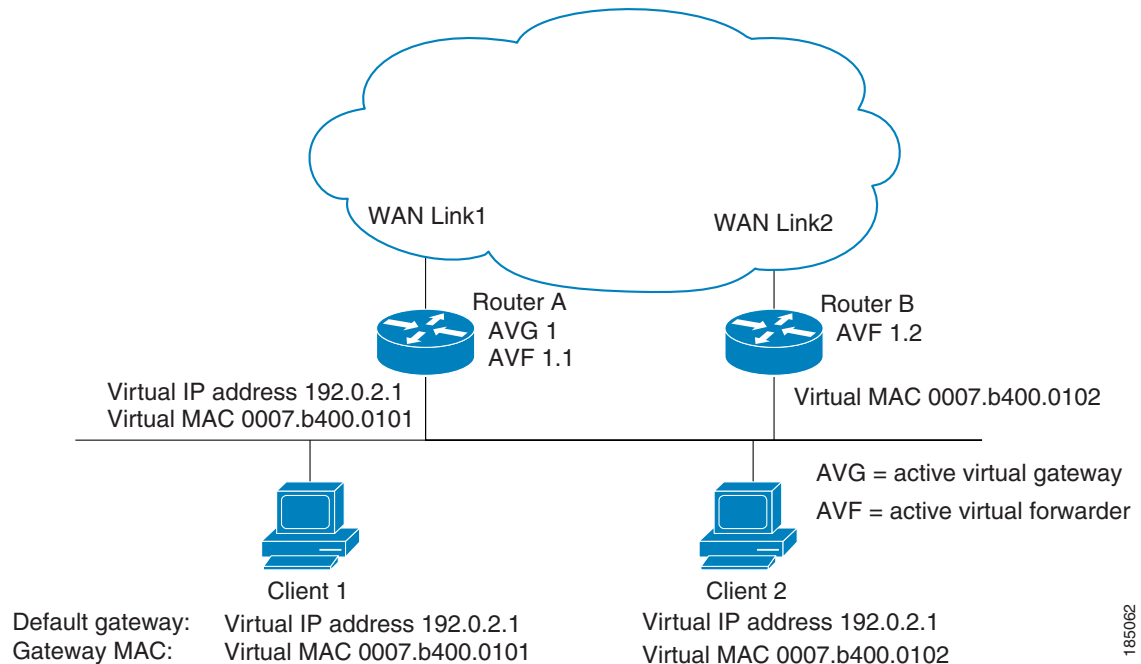

If router A becomes unavailable, client 1 does not lose access to the WAN because router B assumes responsibility for forwarding packets sent to the virtual MAC address of router A and for responding to packets sent to its own virtual MAC address. Router B also assumes the role of the AVG for the entire GLBP group. Communication for the GLBP members continues despite the failure of a router in the GLBP group.

GLBP Authentication

GLBP has three authentication types:

- MD5 authentication
- Plain text authentication
- No authentication

MD5 authentication provides greater security than plain text authentication. MD5 authentication allows each GLBP group member to use a secret key to generate a keyed MD5 hash that is part of the outgoing packet. At the receiving end, a keyed hash of an incoming packet is generated. If the hash within the incoming packet does not match the generated hash, the packet is ignored. The key for the MD5 hash can either be given directly in the configuration using a key string or supplied indirectly through a key chain.

You can also choose to use a simple password in plain text to authenticate GLBP packets, or choose no authentication for GLBP.

GLBP rejects packets in any of the following cases:

- The authentication schemes differ on the router and in the incoming packet.
- MD5 digests differ on the router and in the incoming packet.
- Text authentication strings differ on the router and in the incoming packet.

Send document comments to nexus7k-docfeedback@cisco.com.

GLBP Load Balancing and Tracking

You can configure the following load-balancing methods for GLBP:


- Round-robin—GLBP cycles through the virtual MAC addresses sent in ARP replies, load balancing the traffic across all the AVFs.
- Weighted—AVG uses the advertised weight for an AVF to decide the load directed to the AVF. A higher weight means that the AVG directs more traffic to the AVF.
- Host dependent—GLBP uses the MAC address of the host to determine which virtual MAC address to direct the host to use. This algorithm guarantees that a host gets the same virtual MAC address if the number of virtual forwarders does not change.

The default for IPv4 networks is round-robin. You can disable all load balancing for GLBP on an interface. If you do not configure load balancing, the AVG handles all traffic for the hosts while the other GLBP group members are in standby or listen mode.

You can configure GLBP to track an interface or routes and enable the secondary virtual forwarder to take over if a tracked link goes down. GLBP tracking uses weighted load-balancing to determine whether a GLBP group member acts as an AVF. You must configure the initial weighting values and optional thresholds to enable or disable this group member as an AVF. You can also configure the interface to track and the value that will reduce the interface's weighting if the interface goes down. When the GLBP group weighting drops below the lower threshold, the member is no longer an AVF and a secondary virtual forwarder takes over. When the weighting rises above the upper threshold, the member can resume its role as an AVF.

Figure 17-2 shows an example of GLBP tracking and weighting.

Figure 17-2 GLBP Object Tracking and Weighting

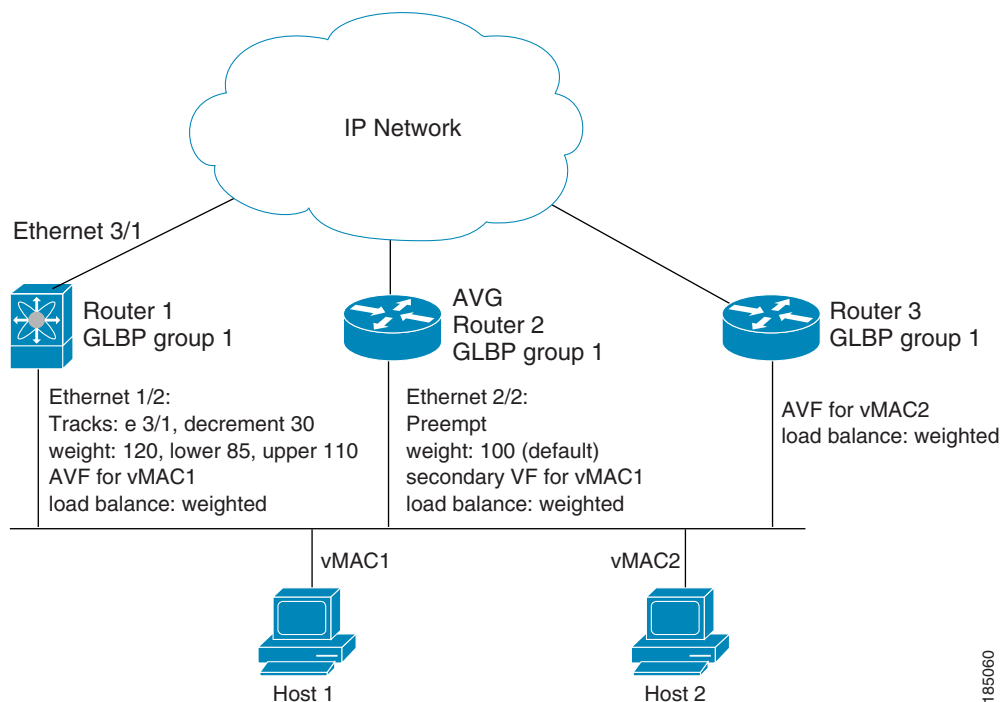

185060

Send document comments to nexus7k-docfeedback@cisco.com.

In [Figure 17-2](#), the Ethernet 1/2 interface on router 1 is the gateway for host 1 (the AVF for virtual MAC address, vMAC1), while Ethernet 2/2 on router 2 acts as a secondary virtual forwarder for Host 1. Ethernet 1/2 tracks Ethernet 3/1, which is the network connection for router 1. If Ethernet 3/1 goes down, the weighting for Ethernet 1/2 drops to 90. Ethernet 2/2 on router 2 preempts Ethernet 1/2 and takes over as AVF because it has the default weighting of 100 and is configured to preempt the AVF.

See the [“Configuring GLBP Weighting and Tracking” section on page 17-10](#) for details about configuring weighting and tracking.

High Availability

GLBP supports stateful restarts and stateful switchover. A stateful restart occurs when the GLBP process fails and is restarted. Stateful switchover occurs when the active supervisor switches to the standby supervisor. Cisco NX-OS applies the run-time configuration after the switchover.

Virtualization Support

GLBP supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF.

If you change the VRF membership of an interface, Cisco NX-OS removes all layer 3 configuration, including GLBP.

For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for GLBP

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	GLBP requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Prerequisites for GLBP

GLBP has the following prerequisites:

- Globally enable the GLBP feature (see the [“Enabling the GLBP Feature” section on page 17-7](#)).
- You can only configure GLBP on Layer 3 interfaces (see the *Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide, Release 4.1* *Cisco DCNM Interfaces Configuration Guide, Release 4.1*).
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* *Cisco DCNM Virtual Device Context Configuration Guide, Release 4.1*).

Send document comments to nexus7k-docfeedback@cisco.com.

Guidelines and Limitations

GLBP has the following guidelines and limitations:

- You should configure all customization options for GLBP on all GLBP member gateways before enabling a GLBP group by configuring a virtual IP address.
- GLBP supports a minimum hello time of 250 ms, and a minimum hold time of 1020 ms.
- You must configure an IP address for the interface that you configure GLBP on and enable that interface before GLBP becomes active.
- The GLBP virtual IP address must be in the same subnet as the interface IP address.
- We recommend that you do not configure more than one first-hop redundancy protocol on the same interface.
- Cisco NX-OS removes all layer 3 configuration on an interface when you change the VDC, interface VRF membership, port channel membership, or when you change the port mode to layer 2.

Configuring GLBP

This section includes the following topics:

- [Enabling the GLBP Feature, page 17-7](#)
- [Configuring GLBP Authentication, page 17-8](#)
- [Configuring GLBP Load Balancing, page 17-10](#)
- [Configuring GLBP Weighting and Tracking, page 17-10](#)
- [Customizing GLBP, page 17-13](#)
- [Enabling a GLBP Group, page 17-14](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Enabling the GLBP Feature

You must enable the GLBP feature before you can configure and enable any GLBP groups.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

To enable the GLBP feature, use the following command in global configuration mode:

Command	Purpose
feature glbp	Enables GLBP.
Example: switch(config)# feature glbp	

To disable the GLBP feature in a VDC and remove all associated configuration, use the following command in global configuration mode:

Command	Purpose
no feature glbp	Disables the GLBP feature in a VDC.
Example: switch(config)# no feature glbp	

Configuring GLBP Authentication

You can configure GLBP to authenticate the protocol using cleartext or an MD5 digest. MD5 authentication uses a key chain (see the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1*).

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Enable the GLBP feature (see the [“Enabling the GLBP Feature” section on page 17-7](#)).



Note

You must configure the same authentication and keys on all members of the GLBP group.

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **ip** *ip-address/length*
4. **glbp** *group-number*
5. **authentication text** *string*
or
authentication md5 {**key-chain** *key-chain* | **key-string** {*text* | **encrypted** *text*}
6. **ip** [*ip-address* [**secondary**]]
7. **show glbp** [**group** *group-number*]
8. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ip <i>ip-address/length</i> Example: switch(config-if)# ip 192.0.2.1/8	Configures the IPv4 address for the interface.
Step 4	glbp <i>group-number</i> Example: switch(config-if)# glbp 1 switch(config-if-glbp)#	Creates a GLBP group and enters GLBP configuration mode. The range is from 0 to 1024.
Step 5	authentication text <i>string</i> Example: switch(config-if-glbp)# authentication text mypassword authentication md5 { key-chain <i>key-chain</i> key-string { <i>text</i> encrypted <i>text</i> }}	Configures cleartext authentication for GLBP on this interface. Configures MD5 authentication for GLBP on this interface.
Step 6	ip [<i>ip-address</i> [secondary]] Example: switch(config-if-glbp)# ip 192.0.2.10	Enables GLBP on an interface and identifies the primary IP address of the virtual gateway. After you identify a primary IP address, you can use the glbp group ip command again with the secondary keyword to indicate additional IP addresses supported by this group. If you only use the ip keyword, GLBP learns the virtual IP address from the neighbors.
Step 7	show glbp [group <i>group-number</i>] Example: switch(config-if-glbp)# show glbp 1	(Optional) Displays GLBP information.
Step 8	copy running-config startup-config Example: switch(config-if-glbp)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure MD5 authentication for GLBP on Ethernet 1/2 after creating the key chain:

```
switch# config t
```

Send document comments to nexus7k-docfeedback@cisco.com.

```
switch(config)# key chain glbp-keys
switch(config-keychain)# key 0
switch(config-keychain-key)# key-string 7 zqdest
switch(config-keychain-key) accept-lifetime 00:00:00 Jun 01 2008 23:59:59 Sep 12 2008
switch(config-keychain-key) send-lifetime 00:00:00 Jun 01 2008 23:59:59 Aug 12 2008
switch(config-keychain-key) key 1
switch(config-keychain-key) key-string 7 uaeqdyito
switch(config-keychain-key) accept-lifetime 00:00:00 Aug 12 2008 23:59:59 Dec 12 2008
switch(config-keychain-key) send-lifetime 00:00:00 Sep 12 2008 23:59:59 Nov 12 2008
switch(config)# interface ethernet 1/2
switch(config-if)# glbp 1
switch(config-if-glbp)# authenticate md5 key-chain glbp-keys
switch(config-if-glbp)# copy running-config startup-config
```

Configuring GLBP Load Balancing

You can configure GLBP to use load balancing based on round-robin, weighted, or host-dependent methods (see the [“GLBP Load Balancing and Tracking”](#) section on page 17-5).

To configure GLBP load balancing, use the following command in GLBP configuration mode:

Command	Purpose
load-balancing [host-dependent round-robin weighted]	Sets the GLBP load-balancing method. The default is round-robin.
Example: switch(config-if-glbp)# load-balancing weighted	

Configuring GLBP Weighting and Tracking

You can configure GLBP weighting values and object tracking to work with the GLBP weighted load-balancing method.

You can optionally configure the interface to preempt an AVF if the interface was originally assigned with the virtual MAC address or if this interface has a higher weight than the AVF.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Enable the GLBP feature (see the [“Enabling the GLBP Feature”](#) section on page 17-7).

SUMMARY STEPS

1. **config t**
2. **track object-id interface interface-type number {ip routing | line-protocol}**
3. **track object-id ip route ip-prefix/length reachability**
4. **interface interface-type slot/port**
5. **ip ip-address/length**
6. **glbp group-number**

Send document comments to nexus7k-docfeedback@cisco.com.

7. **weighting** *maximum* [**lower** *lower*] [**upper** *upper*]
8. **weighting track** *object-number* [**decrement** *value*]
9. **forwarder preempt** [**delay** *minimum seconds*]
10. **ip** [*ip-address* [**secondary**]]
11. **show glbp** *interface-type number*
12. **copy running-config startup-config**

DETAILED STEPS

	Command or Action	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	track object-id interface <i>interface-type number {ip routing line-protocol}</i> Example: switch(config)# track 1 interface ethernet 2/2 line-protocol switch(config-track)#	Configures the interface that this GLBP interface tracks. Changes in the state of the interface affect the priority of this GLBP interface as follows: <ul style="list-style-type: none"> You configure the interface and corresponding object number that you use with the track command in GLBP configuration mode. The line-protocol keyword tracks whether the interface is up. The ip keyword also checks that IP routing is enabled on the interface and an IP address is configured.
	track object-id ip route <i>ip-prefix/length reachability</i> Example: switch(config)# track 2 ip route 192.0.2.0/8 reachability switch(config-track)#	Creates a tracked object for a route and enters tracking configuration mode. The object-id range is from 1 to 500.
Step 3	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 4	ip <i>ip-address/length</i> Example: switch(config-if)# ip 192.0.2.1/8	Configures the IPv4 address for the interface.
Step 5	glbp <i>group-number</i> Example: switch(config-if)# glbp 1 switch(config-if-glbp)#	Creates a GLBP group and enters GLBP configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command or Action	Purpose
Step 6	weighting <i>maximum</i> [lower <i>lower</i>] [upper <i>upper</i>] Example: switch(config-if-glbp)# weighting 110 lower 95 upper 105	Specifies the initial weighting value and the upper and lower thresholds for a GLBP gateway. The maximum range is from 1 to 254. The default weighting value is 100. The lower range is from 1 to 253. The upper range is from 1 to 254.
Step 7	weighting track <i>object-number</i> [decrement <i>value</i>] Example: switch(config-if-glbp)# weighting track 2 decrement 20	Specifies an object to be tracked that affects the weighting of a GLBP gateway. The <i>value</i> argument specifies a reduction in the weighting of a GLBP gateway when a tracked object fails. The range is from 1 to 255.
Step 8	forwarder preempt [delay <i>minimum</i> <i>seconds</i>] Example: switch(config-if-glbp)# forwarder preempt delay minimum 60	(Optional) Configures the router to take over as AVF for a GLBP group if the current AVF for a GLBP group falls below its low weighting threshold. The range is from 0 to 3600 seconds. This command is enabled by default with a delay of 30 seconds.
Step 9	ip [<i>ip-address</i> [secondary]] Example: switch(config-if-glbp)# ip 192.0.2.10	Enables GLBP on an interface and identifies the primary IP address of the virtual gateway. After you identify a primary IP address, you can use the glbp group ip command again with the secondary keyword to indicate additional IP addresses supported by this group. If you only use the ip keyword, GLBP learns the virtual IP address from the neighbors.
Step 10	show glbp <i>interface-type number</i> Example: switch(config-if-glbp)# show glbp ethernet 1/2	(Optional) Displays GLBP information for an interface.
Step 11	copy running-config startup-config Example: switch(config-if-glbp)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure GLBP weighting and tracking on Ethernet 1/2:

```
switch# config t
switch(config)# track 2 interface ethernet 2/2 ip routing
switch(config)# interface ethernet 1/2
switch(config-if)# glbp 1
switch(config-if-glbp)# weighting 110 lower 95 upper 105
switch(config-if-glbp)# weighting track 2 decrement 20
switch(config-if-glbp)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Customizing GLBP

Customizing the behavior of GLBP is optional. Be aware that as soon as you enable a GLBP group by configuring a virtual IP address, that group is operational. If you enable a GLBP group before you customize GLBP, the router could take over control of the group and become the AVG before you finish customizing the feature. If you plan to customize GLBP, you should do so before enabling GLBP.

To customize GLBP, use the following commands in GLBP configuration mode:

Command or Action	Purpose
timers [<i>msec</i>] <i>hellotime</i> [<i>msec</i>] <i>holdtime</i> Example: switch(config-if-glb) # timers 5 18	Configures the following hello and hold times for this GLBP member: <ul style="list-style-type: none"> <i>hellotime</i>—The interval between successive hello packets sent by the AVG in a GLBP group. The range is from 1 to 60 seconds or from 250 to 60000 milliseconds. The default value is 3 seconds. <i>holdtime</i>—The interval before the virtual gateway and virtual forwarder information in the hello packet is considered invalid. The range is from 2 to 180 seconds or from 1020 to 180000 milliseconds. The default is 10 seconds. The optional msec keyword specifies that the argument is expressed in milliseconds, instead of the default seconds.
timers redirect <i>redirect</i> <i>timeout</i> Example: switch(config-if-glb) # timers redirect 600 7200	Configures the following timers: <ul style="list-style-type: none"> <i>redirect</i>—The time interval in seconds during which the AVG continues to redirect clients to an AVF. The range is from 0 to 3600 seconds. The default is 600 seconds. <i>timeout</i>—The interval in seconds before a secondary virtual forwarder becomes invalid. The range is from 610 to 64800 seconds. The default is 14,440 seconds.
priority <i>level</i> Example: switch(config-if-glb) # priority 254	Sets the priority level used to select the AVG in a GLBP group. The range is from 1 to 255. The default is 100.
preempt [<i>delay minimum seconds</i> sync <i>seconds</i>] Example: switch(config-if-glb) # preempt delay minimum 60	Configures the router to take over as AVG for a GLBP group if it has a higher priority than the current AVG. This command is disabled by default. Use the optional delay minimum keywords and the <i>seconds</i> argument to specify a minimum delay interval in seconds before preemption of the AVG takes place. The seconds range is from 0 to 3600 seconds. The minimum delay default is 3600 seconds. The sync default is 30 seconds.

Send document comments to nexus7k-docfeedback@cisco.com.

Enabling a GLBP Group

You can configure the virtual IP address on an interface to enable the GLBP group. You must configure each gateway in the GLBP group with the same group number. The GLBP member can learn all other required parameters from another GLBP member.

BEFORE YOU BEGIN

- Ensure that you are in the correct VDC (or use the **switchto vdc** command).
- Enable the GLBP feature (see the [“Enabling the GLBP Feature”](#) section on page 17-7).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **ip** *ip-address/length*
4. **glbp** *group-number*
5. **ip** [*ip-address* [**secondary**]]
6. **show glbp** [**brief**]
7. **copy running-config startup-config**

DETAILED STEPS

	Command or Action	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ip <i>ip-address/length</i> Example: switch(config-if)# ip 192.0.2.1/8	Configures the IPv4 address for the interface.
Step 4	glbp <i>group-number</i> Example: switch(config-if)# glbp 1 switch(config-if-glbp)#	Creates a GLBP group and enters GLBP configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command or Action	Purpose
Step 5	ip [<i>ip-address</i> [secondary]] Example: switch(config-if-glb) # ip 192.0.2.10	Enables GLBP on an interface and identifies the virtual IP address. The virtual IP should be in the same subnet as the interface IP address. After you identify a virtual IP address, you can use the glbp group ip command again with the secondary keyword to indicate additional IP addresses supported by this group. If you only use the ip keyword, GLBP learns the virtual IP address from the neighbors.
Step 6	show glbp [group <i>group-number</i>] [brief] Example: switch(config-if-glb) # show glbp brief	(Optional) Displays a brief summary of GLBP information.
Step 7	copy running-config startup-config Example: switch(config-if-glb) # copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to enable GLBP on Ethernet 1/2:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# glbp 1
switch(config-if-glb) # ip 192.0.2.10
```

Verifying GLBP Configuration

To display GLBP configuration information, perform one of the following tasks:

Command	Purpose
show glbp [group <i>group-number</i>]	Displays the GLBP status for all or one group.
show glbp [group <i>group-number</i>] capability	Displays the GLBP capability for all or one group.
show glbp [interface <i>interface-type slot/port</i>]	Displays the GLBP status for an interface.
show glbp [group <i>group-number</i>] [interface <i>interface-type slot/port</i>] [active] [disabled] [init] [listen] [standby]	Displays the GLBP status for a group or interface for virtual forwarders in the selected state.
show glbp [group <i>group-number</i>] [interface <i>interface-type slot/port</i>] [active] [disabled] [init] [listen] [standby] brief	Displays a brief summary of the GLBP status for a group or interface for virtual forwarders in the selected state.

GLBP Example Configuration

The following example enables GLBP on an interface, with MD5 authentication, interface tracking, and weighted load balancing:

Send document comments to nexus7k-docfeedback@cisco.com.

```
key chain glbp-keys
key 0
  key-string 7 zqdest
  accept-lifetime 00:00:00 Jun 01 2008 23:59:59 Sep 12 2008
  send-lifetime 00:00:00 Jun 01 2008 23:59:59 Aug 12 2008
key 1
  key-string 7 uaeqdyito
  accept-lifetime 00:00:00 Aug 12 2008 23:59:59 Dec 12 2008
  send-lifetime 00:00:00 Sep 12 2008 23:59:59 Nov 12 2008
feature glbp
track 2 interface ethernet 2/2 ip
interface ethernet 1/2
ip address 192.0.2.2/8
glbp 1
  authentication md5 key-chain glbp-keys
  weighting 110 lower 95 upper 105
  weighting track 2 decrement 20
ip 192.0.2.10
no shutdown
```

Default Settings

Table 17-1 lists the default settings for GLBP parameters.

Table 17-1 *Default GLBP Parameters*

Parameters	Default
Authentication	no authentication
Forwarder preemption delay	30 seconds
Forwarder timeout	14400 seconds
Hello timer	3 seconds
Hold timer	10 seconds
GLBP feature	disable
Load balancing	round robin
Preemption	disabled
Priority	100
Redirect timer	600 seconds
Weighting	100

Additional References

For additional information related to implementing GLBP, see the following sections:

- [Related Documents, page 17-17](#)
- [Standards, page 17-17](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Related Documents

Related Topic	Document Title
Configuring the Hot Standby Redundancy protocol	Chapter 16, “Configuring HSRP”
Configuring the Virtual Router Redundancy protocol	Chapter 18, “Configuring VRRP”
GLBP CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
Configuring high availability	<i>Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for GLBP

[Table 17-2](#) lists the release history for this feature.

Table 17-2 **Feature History for GLBP**

Feature Name	Releases	Feature Information
GLBP	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 18

Configuring HSRP

This chapter describes how to configure the Hot Standby Router Protocol (*HSRP*) on the Cisco NX-OS device.

This chapter includes the following sections:

- [Information About HSRP, page 18-1](#)
- [Licensing Requirements for HSRP, page 18-6](#)
- [Prerequisites for HSRP, page 18-6](#)
- [Guidelines and Limitations, page 18-6](#)
- [Configuring HSRP, page 18-7](#)
- [Verifying HSRP Configuration, page 18-16](#)
- [HSRP Example Configuration, page 18-17](#)
- [Default Settings, page 18-17](#)
- [Additional References, page 18-18](#)
- [Feature History for HSRP, page 18-18](#)

Information About HSRP

HSRP is a first-hop redundancy protocol (*FHRP*) that allows a transparent failover of the first-hop IP router. HSRP provides first-hop routing redundancy for IP hosts on Ethernet networks configured with a default router IP address. You use HSRP in a group of routers for selecting an active router and a standby router. In a group of routers, the active router is the router that routes packets; the standby router is the router that takes over when the active router fails or when preset conditions are met.

Many host implementations do not support any dynamic router discovery mechanisms but can be configured with a default router. Running a dynamic router discovery mechanism on every host is not feasible for a number of reasons, including administrative overhead, processing overhead, and security issues. HSRP provides failover services to these hosts.

This section includes the following topics:

- [HSRP Overview, page 18-2](#)
- [HSRP Versions, page 18-3](#)
- [HSRP Authentication, page 18-4](#)
- [HSRP Addressing, page 18-4](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- [HSRP Messages](#), page 18-4
- [HSRP Load Sharing](#), page 18-4
- [Object Tracking and HSRP](#), page 18-5
- [vPC and HSRP](#), page 18-5

HSRP Overview

When you use HSRP, you configure the HSRP *virtual IP address* as the host's default router (instead of the IP address of the actual router). The virtual IP address is an IP address that is shared among a group of routers that run HSRP.

When you configure HSRP on a network segment, you provide a *virtual MAC address* and a virtual IP address for the HSRP group. You configure the same virtual address on each HSRP-enabled interface in the group. You also configure a unique IP address and MAC address on each interface that acts as the real address. HSRP selects one of these interfaces to be the *active router*. The active router receives and routes packets destined for the virtual MAC address of the group.

HSRP detects when the designated active router fails. At that point, a selected *standby router* assumes control of the virtual MAC and IP addresses of the HSRP group. HSRP also selects a new standby router at that time.

HSRP uses a priority mechanism to determine which HSRP-configured interface becomes the default active router. To configure an interface as the active router, you assign it with a priority that is higher than the priority of all the other HSRP-configured interfaces in the group. The default priority is 100, so if you configure just one interface with a higher priority, that interface becomes the default active router.


Interfaces that run HSRP send and receive multicast User Datagram Protocol (UDP)-based hello messages to detect a failure and to designate active and standby routers. When the active router fails to send a hello message within a configurable period of time, the standby router with the highest priority becomes the active router. The transition of packet forwarding functions between the active and standby router is completely transparent to all hosts on the network.

You can configure multiple HSRP groups on an interface.

[Figure 18-1](#) shows a network configured for HSRP. By sharing a virtual MAC address and a virtual IP address, two or more interfaces can act as a single *virtual router*.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 18-1 HSRP Topology With Two Enabled Routers

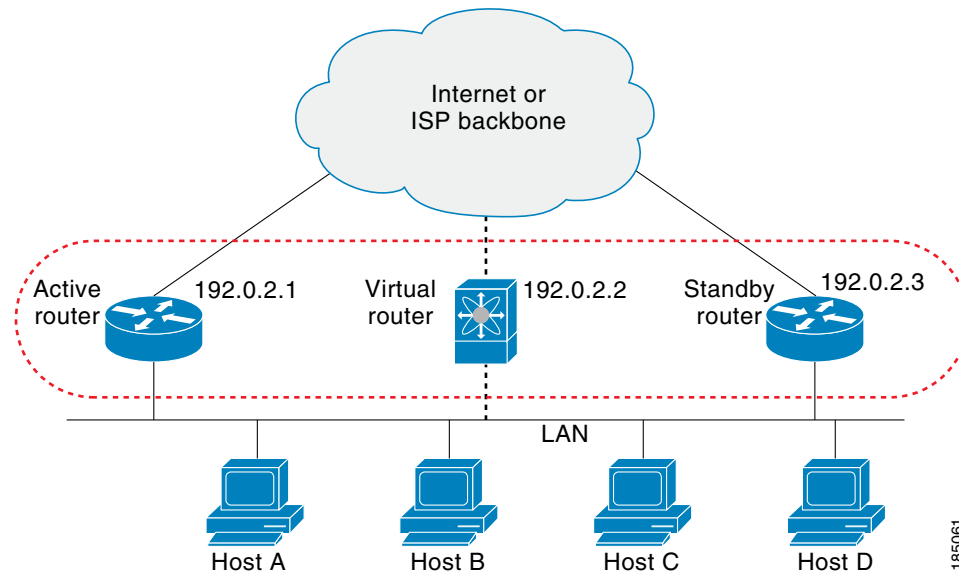

The virtual router does not physically exist but represents the common default router for interfaces that are configured to provide backup to each other. You do not need to configure the hosts on the LAN with the IP address of the active router. Instead, you configure them with the IP address (virtual IP address) of the virtual router as their default router. If the active router fails to send a hello message within the configurable period of time, the standby router takes over, responds to the virtual addresses, and becomes the active router, assuming the active router duties. From the host perspective, the virtual router remains the same.



Note

In Cisco NX-OS Release 4.1(2) and later, packets received on a routed port destined for the HSRP virtual IP address will terminate on the local router, regardless of whether that router is the active HSRP router or the standby HSRP router. This includes ping and telnet traffic. Packets received on a Layer 2 (VLAN) interface destined for the HSRP virtual IP address will terminate on the active router.

HSRP Versions

Cisco NX-OS supports HSRP version 1 by default. You can configure an interface to use HSRP version 2.

HSRP version 2 has the following enhancements to HSRP version 1:

- Expands the group number range. HSRP version 1 supports group numbers from 0 to 255. HSRP version 2 supports group numbers from 0 to 4095.
- Uses the new IP multicast address 224.0.0.102 to send hello packets instead of the multicast address of 224.0.0.2, which is used by HSRP version 1.
- Uses the MAC address range from 0000.0C9F.F000 to 0000.0C9F.FFFF. HSRP version 1 uses the MAC address range 0000.0C07.AC00 to 0000.0C07.ACFF.
- Adds support for MD5 authentication.

When you change the HSRP version, Cisco NX-OS reinitializes the group because it now has a new virtual MAC address.

Send document comments to nexus7k-docfeedback@cisco.com.

HSRP version 2 has a different packet format than HSRP version 1. The packet format uses a type-length-value (TLV) format. HSRP version 2 packets received by an HSRP version 1 router are ignored.

HSRP Authentication

HSRP message digest 5 (MD5) algorithm authentication protects against HSRP-spoofing software and uses the industry-standard MD5 algorithm for improved reliability and security.

HSRP Addressing

HSRP routers communicate with each other by exchanging HSRP hello packets. These packets are sent to the destination IP multicast address 224.0.0.2 (reserved multicast address used to communicate to all routers) on UDP port 1985. The active router sources hello packets from its configured IP address and the HSRP virtual MAC address while the standby router sources hellos from its configured IP address and the interface MAC address, which may or may not be the burned-in address (BIA). The BIA is the last six bytes of the MAC address that is assigned by the manufacturer of the network interface card (NIC).

Because hosts are configured with their default router as the HSRP virtual IP address, hosts must communicate with the MAC address associated with the HSRP virtual IP address. This MAC address is a virtual MAC address, 0000.0C07.ACxy, where xy is the HSRP group number in hexadecimal based on the respective interface. For example, HSRP group 1 will use the HSRP virtual MAC address of 0000.0C07.AC01. Hosts on the adjoining LAN segment use the normal Address Resolution Protocol (ARP) process to resolve the associated MAC addresses.

HSRP version 2 uses the new IP multicast address 224.0.0.102 to send hello packets instead of the multicast address of 224.0.0.2, which is used by version 1. HSRP version 2 permits an expanded group number range of 0 to 4095 and uses a new MAC address range of 0000.0C9F.F000 to 0000.0C9F.FFFF.

HSRP Messages

Routers that are configured with HSRP exchange the following three types of multicast messages:

- Hello—The hello message conveys the HSRP priority and state information of the router to other HSRP routers.
- Coup—When a standby router wants to assume the function of the active router, it sends a coup message.
- Resign—A router that is the active router sends this message when it is about to shut down or when a router that has a higher priority sends a hello or coup message.

HSRP Load Sharing

HSRP allows you to configure multiple groups on an interface in. You can configure two overlapping HSRP groups to load share traffic from the connected hosts while providing the default router redundancy expected from HSRP. [Figure 18-2](#) shows an example of a load-sharing HSRP configuration.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 18-2 HSRP Load Sharing

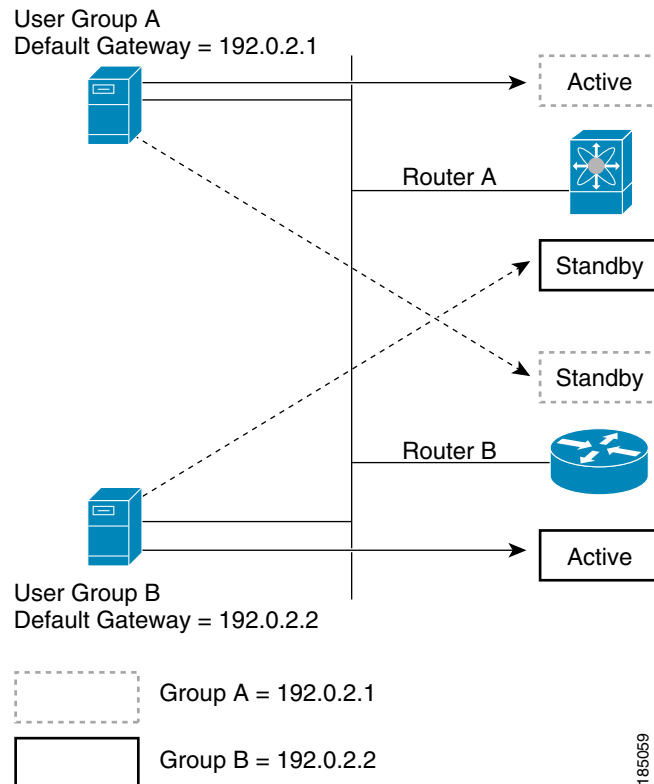


Figure 18-2 shows two routers A and B and two HSRP groups. Router A is the active router for group A, but the standby router for group B. Similarly, router B is the active router for group B and the standby router for group A. If both routers remain active, HSRP load balances the traffic from the hosts across both routers. If either router fails, the remaining router continues to process traffic for both hosts.

Object Tracking and HSRP

You can use object tracking to modify the priority of an HSRP interface based on the operational state of another interface. Object tracking allows you to route to a standby router if the interface to the main network fails.

Two objects that you can track are the line protocol state of an interface or the reachability of an IP route. If the specified object goes down, Cisco NX-OS reduces the HSRP priority by the configured amount. For more information, see the [“Configuring Preemption”](#) section on page 18-17.

vPC and HSRP

HSRP interoperates with virtual port channels (vPCs). vPCs allow links that are physically connected to two different Cisco Nexus 7000 series devices to appear as a single port channel by a third device. See the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 4.1* for more information on vPCs.

vPC forwards traffic through both the active HSRP router as well as the standby HSRP router. You can configure a threshold on the priority of the standby HSRP router to determine when traffic should failover to the vPC trunk. See the [“Configuring the HSRP Priority”](#) section on page 18-14.

Send document comments to nexus7k-docfeedback@cisco.com.


Note

You should configure HSRP on the primary vPC peer device as active and HSRP on the vPC secondary device as standby.

High Availability

HSRP supports stateful restart. A stateful restart restores the configuration and operational state of HSRP after the restart. A stateful restart occurs when a process ends or on a supervisor switchover. Cisco NX-OS applies the runtime configuration after the switchover.

Virtualization Support

HSRP supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF.

If you change the VRF membership of an interface, Cisco NX-OS removes all Layer 3 configuration, including HSRP.

For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for HSRP

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	HSRP requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Prerequisites for HSRP

HSRP has the following prerequisites:

- You must enable the HSRP feature in a device before you can configure and enable any HSRP groups.
- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1*).

Guidelines and Limitations

HSRP has the following guidelines and limitations:

- The minimum Hello timer value is 250 milliseconds.

Send document comments to nexus7k-docfeedback@cisco.com.

- The minimum Hold timer value is 750 milliseconds.
- You must configure an IP address for the interface that you configure HSRP on and enable that interface before HSRP becomes active.
- The virtual IP address must be in the same subnet as the interface IP address.
- We recommend that you do not configure more than one first-hop redundancy protocol on the same interface.
- HSRP version 2 does not interoperate with HSRP version 1. An interface cannot operate both version 1 and version 2 because both versions are mutually exclusive. However, the different versions can be run on different physical interfaces of the same router.
- You cannot change from version 2 to version 1 if you have configured groups above the group number range allowed for version 1 (0 to 255).
- Cisco NX-OS removes all Layer 3 configuration on an interface when you change the interface VRF membership, port channel membership, or when you change the port mode to Layer 2.

Configuring HSRP

This section includes the following topics:

- [Enabling the HSRP Feature, page 18-7](#)
- [Configuring an HSRP Group, page 18-8](#)
- [Configuring the HSRP Version, page 18-10](#)
- [Configuring the HSRP Virtual MAC Address, page 18-10](#)
- [Authenticating HSRP, page 18-11](#)
- [Customizing HSRP, page 18-15](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Enabling the HSRP Feature

You must globally enable the HSRP feature before you can configure and enable any HSRP groups.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

To enable the HSRP feature in a VDC, use the following command in global configuration mode:

Command	Purpose
feature hsrp	Enables HSRP.
Example: switch(config)# feature hsrp	

To disable the HSRP feature in a VDC and remove all associated configuration, use the following command in global configuration mode:

Command	Purpose
no feature hsrp	Disables HSRP for all groups in a VDC.
Example: switch(config)# no feature hsrp	

Configuring an HSRP Group

You can configure an HSRP group on an interface and configure the virtual IP address and virtual MAC address for the HSRP group.

BEFORE YOU BEGIN

Ensure that you have enabled the HSRP feature (see the [“Enabling the HSRP Feature”](#) section on page 18-7).

Cisco NX-OS enables an HSRP group once you configure the virtual IP address on any member interface in the group. You should configure HSRP attributes such as authentication, timers, and priority before you enable the HSRP group.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *type number*
3. **ip** *ip-address/length*
4. **hsrp** *group-number*
5. **ip** [*ip-address* **[secondary]**]
6. **exit**
7. **no shutdown**
8. **show hsrp** [**group** *group-number*]
9. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface type number Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	ip ip-address/length Example: switch(config-if)# ip 192.0.2.2/8	Configures the IPv4 address of the interface.
Step 4	hsrp group-number Example: switch(config-if)# hsrp 2 switch(config-if-hsrp)#	Creates an HSRP group and enters HSRP configuration mode. The range is for HSRP version 1 is from 0 to 255. The range is for HSRP version 2 is from 0 to 4095. The default value is 0.
Step 5	ip [ip-address [secondary]] Example: switch(config-if-hsrp)# ip 192.0.2.1	Configures the virtual IP address for the HSRP group and enables the group. This address should be in the same subnet as the IPv4 address of the interface.
Step 6	exit Example: switch(config-if-hsrp)# exit	Exits HSRP configuration mode.
Step 7	no shutdown Example: switch(config-if)# no shutdown	Enables the interface
Step 8	show hsrp [group group-number] Example: switch(config-if)# show hsrp group 2	(Optional) Displays HSRP information.
Step 9	copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	(Optional) Saves this configuration change.



Note

You should use the **no shutdown** command to enable the interface after you finish the configuration.

Send document comments to nexus7k-docfeedback@cisco.com.

The following example shows how to configure an HSRP group on Ethernet 1/2:

```
switch# config t
switch(config)# interface ethernet 1/2
switch(config-if)# ip 192.0.2.2/8
switch(config-if)# hsrp 2
switch(config-if-hsrp)# ip 192.0.2.1
switch(config-if-hsrp)# exit
switch(config-if)# no shutdown
switch(config-if)# copy running-config startup-config
```

Configuring the HSRP Version

You can configure the HSRP version. If you change the version for existing groups, Cisco NX-OS reinitializes HSRP for those groups because the virtual MAC address changes. The HSRP version applies to all groups on the interface.

To configure the HSRP version, use the following command in interface configuration mode:

Command	Purpose
hsrp version {1 2}	Configures the HSRP version. Version 1 is the default.
Example: switch(config-if)# hsrp version 2	

Configuring the HSRP Virtual MAC Address

You can override the default virtual MAC address that HSRP derives from the configured group number.

To manually configure the virtual MAC address for an HSRP group, use the following command in HSRP configuration mode:

Command	Purpose
mac-address <i>string</i>	Configures the virtual MAC address for an HSRP group. The string uses the standard MAC address format (xxxx.xxxx.xxxx).
Example: switch(config-if-hsrp)# mac-address 5000.1000.1060	

To configure HSRP to use the burned-in MAC address of the interface for the virtual MAC address, use the following command in interface configuration mode:

Command	Purpose
hsrp use-bia [scope interface]	Configures HSRP to use the burned-in MAC address of the interface for the HSRP virtual MAC address. You can optionally configure HSRP to use the burned-in MAC address for all groups on this interface by using the scope interface keywords.
Example: switch(config-if)# hsrp use-bia	

Send document comments to nexus7k-docfeedback@cisco.com.

Authenticating HSRP

You can configure HSRP to authenticate the protocol using cleartext or MD5 digest authentication. MD5 authentication uses a key chain (see the *Cisco Nexus 7000 Series NX-OS Security Configuration Guide, Release 4.1*).

BEFORE YOU BEGIN

Ensure that you have enabled the HSRP feature (see the “[Enabling the HSRP Feature](#)” section on [page 18-7](#)).

You must configure the same authentication and keys on all members of the HSRP group.

Ensure that you have created the key chain if you are using MD5 authentication.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **hsrp** *group-number*
4. **authentication text** *string*
or
authentication md5 {**key-chain** *key-chain* | **key-string** {**0** | **7**} *text* [**timeout** *seconds*]}
5. **show hsrp** [**group** *group-number*]
6. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.
Step 3	hsrp <i>group-number</i> Example: switch(config-if)# hsrp 2 switch(config-if-hsrp)#	Creates an HSRP group and enters HSRP configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	authentication text <i>string</i> Example: switch(config-if-hsrp)# authentication text mypassword	Configures cleartext authentication for HSRP on this interface.
	authentication md5 { key-chain <i>key-chain</i> key-string {0 7} <i>text</i> [timeout <i>seconds</i>]}	Configures MD5 authentication for HSRP on this interface. You can use a key chain or key string. If you use a key string, you can optionally set the timeout for when HSRP will only accept a new key. The range is from 0 to 32767 seconds.
Step 5	show hsrp [group <i>group-number</i>] Example: switch(config-if-hsrp)# show hsrp group 2	(Optional) Displays HSRP information.
Step 6	copy running-config startup-config Example: switch(config-if-hsrp)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure MD5 authentication for HSRP on Ethernet 1/2 after creating the key chain:

```
switch# config t
switch(config)# key chain hsrp-keys
switch(config-keychain)# key 0
switch(config-keychain-key)# key-string 7 zqdest
switch(config-keychain-key) accept-lifetime 00:00:00 Jun 01 2008 23:59:59 Sep 12 2008
switch(config-keychain-key) send-lifetime 00:00:00 Jun 01 2008 23:59:59 Aug 12 2008
switch(config-keychain-key) key 1
switch(config-keychain-key) key-string 7 uaeqdyito
switch(config-keychain-key) accept-lifetime 00:00:00 Aug 12 2008 23:59:59 Dec 12 2008
switch(config-keychain-key) send-lifetime 00:00:00 Sep 12 2008 23:59:59 Nov 12 2008
switch(config-keychain-key)# interface ethernet 1/2
switch(config-if)# hsrp 2
switch(config-if-hsrp)# authenticate md5 key-chain hsrp-keys
switch(config-if-hsrp)# copy running-config startup-config
```

Configuring HSRP Object Tracking

You can configure an HSRP group to adjust its priority based on the availability of other interfaces or routes. The priority of a device can change dynamically if it has been configured for object tracking and the object that is being tracked goes down. The tracking process periodically polls the tracked objects and notes any value change. The value change triggers HSRP to recalculate the priority. The HSRP interface with the higher priority becomes the active router if you configure the HSRP interface for preemption.

BEFORE YOU BEGIN

Ensure that you have enabled the HSRP feature (see the [“Enabling the HSRP Feature”](#) section on page 18-7).

Send document comments to nexus7k-docfeedback@cisco.com.

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **track object-id interface interface-type number {{ip | ipv6} routing | line-protocol}**
or
track object-id {{ip | ipv6} route ip-prefix/length reachability}
3. **interface interface-type slot/port**
4. **hsrp group-number**
5. **priority [value]**
6. **track object-number [decrement value]**
7. **preempt [delay minimum seconds] [reload seconds] [sync seconds]**
8. **show hsrp interface interface-type number**
9. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	track object-id interface interface-type number {{ip ipv6} routing line-protocol} Example: switch(config)# track 1 interface ethernet 2/2 line-protocol switch(config-track# track object-id {{ip ipv6} route ip-prefix/length reachability} Example: switch(config)# track 2 ip route 192.0.2.0/8 reachability switch(config-track#	Configures the interface that this HSRP interface tracks. Changes in the state of the interface affect the priority of this HSRP interface as follows: <ul style="list-style-type: none"> • You configure the interface and corresponding object number that you use with the track command in HSRP configuration mode. • The line-protocol keyword tracks whether the interface is up. The ip keyword also checks that IP routing is enabled on the interface and an IP address is configured. Creates a tracked object for a route and enters tracking configuration mode. The <i>object-id</i> range is from 1 to 500.
Step 3	interface interface-type slot/port Example: switch(config)# interface ethernet 1/2 switch(config-if)#	Enters interface configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 4	hsrp <i>group-number</i> Example: switch(config-if)# hsrp 2 switch(config-if-hsrp)#	Creates an HSRP group and enters HSRP configuration mode.
Step 5	priority [<i>value</i>] Example: switch(config-if-hsrp)# priority 254	Sets the priority level used to select the active router in an HSRP group. The range is from 0 to 255. The default is 100.
Step 6	track <i>object-number</i> [decrement <i>value</i>] Example: switch(config-if-hsrp)# track 1 decrement 20	Specifies an object to be tracked that affects the weighting of an HSRP interface. The <i>value</i> argument specifies a reduction in the priority of an HSRP interface when a tracked object fails. The range is from 1 to 255. The default is 10.
Step 7	preempt [delay [<i>minimum seconds</i>] [reload <i>seconds</i>] [sync <i>seconds</i>]] Example: switch(config-if-hsrp)# preempt delay minimum 60	Configures the router to take over as the active router for an HSRP group if it has a higher priority than the current active router. This command is disabled by default. The range is from 0 to 3600 seconds.
Step 8	show hsrp interface <i>interface-type</i> <i>number</i> Example: switch(config-if-hsrp)# show hsrp interface ethernet 1/2	(Optional) Displays HSRP information for an interface.
Step 9	copy running-config startup-config Example: switch(config-if-hsrp)# copy running-config startup-config	(Optional) Saves this configuration change.

The following example shows how to configure HSRP object tracking on Ethernet 1/2:

```
switch# config t
switch(config)# track 1 interface ethernet 2/2 line-protocol
switch(config)# interface ethernet 1/2
switch(config-if)# hsrp 2
switch(config-if-hsrp)# track 1 decrement 20
switch(config-if-hsrp)# copy running-config startup-config
```

Configuring the HSRP Priority

You can configure the HSRP priority on an interface. HSRP uses the priority to determine which HSRP group member acts as the active router. If you configure HSRP on a vPC-enabled interface, you can optionally configure the upper and lower threshold values to control when to fail over to the vPC trunk. If the standby router priority falls below the lower threshold, HSRP sends all standby router traffic across the vPC trunk to forward through the active HSRP router. HSRP maintains this scenario until the standby HSRP router priority increases above the upper threshold.

Send document comments to nexus7k-docfeedback@cisco.com.

To configure the HSRP priority, use the following command in interface configuration mode:

Command	Purpose
priority <i>level</i> [forwarding-threshold lower <i>lower-value</i> upper <i>upper-value</i>] Example: switch(config-if-hsrp)# priority 60 forwarding-threshold lower 40 upper 50	Sets the priority level used to select the active router in an HSRP group. The <i>level</i> range is from 0 to 255. The default is 100. Optionally, sets the upper and lower threshold values used by vPC to determine when to fail over to the vPC trunk. The <i>lower-value</i> range is from 1 to 255. The default is 1. The <i>upper-value</i> range is from 1 to 255. The default is 255.

Customizing HSRP

You can optionally customize the behavior of HSRP. Be aware that as soon as you enable an HSRP group by configuring a virtual IP address, that group is now operational. If you first enable an HSRP group before customizing HSRP, the router could take control over the group and become the active router before you finish customizing the feature. If you plan to customize HSRP, you should do so before you enable the HSRP group.

To customize HSRP, use the following commands in HSRP configuration mode:

Command	Purpose
name <i>string</i> Example: switch(config-if-hsrp)# name HSRP-1	Specifies the IP redundancy name for an HSRP group. The <i>string</i> is from 1 to 255 characters. The default string has the following format: hsrp-<interface-short-name>-<group-id>. For example, hsrp-Eth2/1-1.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
preempt [delay <i>[minimum seconds]</i> [reload <i>seconds</i>] [sync <i>seconds</i>]] Example: switch(config-if-hsrp)# preempt delay minimum 60	Configures the router to take over as an active router for an HSRP group if it has a higher priority than the current active router. This command is disabled by default. The range is from 0 to 3600 seconds.
timers [msec] <i>hellotime [msec]</i> <i>holdtime</i> Example: switch(config-if-hsrp)# timers 5 18	Configures the hello and hold time for this HSRP member as follows: <ul style="list-style-type: none"> <i>hellotime</i>—The interval between successive hello packets sent. The range is from 1 to 254 seconds. <i>holdtime</i>—The interval before the information in the hello packet is considered invalid. The range is from 3 to 255. <p>The optional msec keyword specifies that the argument is expressed in milliseconds, instead of the default seconds. The timer ranges for milliseconds are as follows:</p> <ul style="list-style-type: none"> <i>hellotime</i>—The interval between successive hello packets sent. The range is from 255 to 999 milliseconds. <i>holdtime</i>—The interval before the information in the hello packet is considered invalid. The range is from 750 to 3000 milliseconds.

To customize HSRP, use the following commands in interface configuration mode:

Command or Action	Purpose
hsrp delay minimum <i>seconds</i> Example: switch(config-if)# hsrp delay minimum 30	Specifies the minimum amount of time that HSRP waits after a group is enabled before participating in the group. The range is from 0 to 10000 seconds. The default is 0.
hsrp delay reload <i>seconds</i> Example: switch(config-if)# hsrp delay reload 30	Specifies the minimum amount of time that HSRP waits after reload before participating in the group. The range is from 0 to 10000 seconds. The default is 0.

Verifying HSRP Configuration

To verify HSRP configuration information, use one of the following commands:

Command	Purpose
show hsrp [group <i>group-number</i>]	Displays the HSRP status for all groups or one group.
show hsrp delay [interface <i>interface-type slot/port</i>]	Displays the HSRP delay value for all interfaces or one interface.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
<code>show hsrp [interface interface-type slot/port]</code>	Displays the HSRP status for an interface.
<code>show hsrp [group group-number] [interface interface-type slot/port] [active] [all] [init] [learn] [listen] [speak] [standby]</code>	Displays the HSRP status for a group or interface for virtual forwarders in the active, init, learn, listen, or standby state. Use the all keyword to see all states, including disabled.
<code>show hsrp [group group-number] [interface interface-type slot/port] active [all] [init] [learn] [listen] [speak] [standby] brief</code>	Displays a brief summary of the HSRP status for a group or interface for virtual forwarders in the active, init, learn, listen, or standby state. Use the all keyword to see all states, including disabled.

HSRP Example Configuration

The following example shows how to enable HSRP on an interface with MD5 authentication and interface tracking:

```
key chain hsrp-keys
key 0
  key-string 7 zqdest
  accept-lifetime 00:00:00 Jun 01 2008 23:59:59 Sep 12 2008
  send-lifetime 00:00:00 Jun 01 2008 23:59:59 Aug 12 2008
key 1
  key-string 7 uaeqdyto
  accept-lifetime 00:00:00 Aug 12 2008 23:59:59 Dec 12 2008
  send-lifetime 00:00:00 Sep 12 2008 23:59:59 Nov 12 2008
feature hsrp
track 2 interface ethernet 2/2 ip
interface ethernet 1/2
ip address 192.0.2.2/8
hsrp 1
  authenticate md5 key-chain hsrp-keys
  priority 90
  track 2 decrement 20
  ip-address 192.0.2.10
no shutdown
```

Default Settings

Table 18-1 lists the default settings for HSRP parameters.

Table 18-1 *Default HSRP Parameters*

Parameters	Default
HSRP	Disabled
Authentication	Enabled as text for version 1, with cisco as the password
HSRP version	Version 1
Preemption	disabled

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Table 18-1 **Default HSRP Parameters (continued)**

Parameters	Default
Priority	100
virtual MAC address	Derived from HSRP group number

Additional References

For additional information related to implementing HSRP, see the following sections:

- [Related Documents, page 18-18](#)
- [Standards, page 18-18](#)

Related Documents

Related Topic	Document Title
Configuring the Gateway Load Balancing protocol	Chapter 17, “Configuring GLBP”
Configuring the Virtual Router Redundancy protocol	Chapter 19, “Configuring VRRP”
HSRP CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
Configuring high availability	<i>Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for HSRP

[Table 18-2](#) lists the release history for this feature.

Table 18-2 **Feature History for HSRP**

Feature Name	Releases	Feature Information
Priority thresholds	4.1(3)	Added support for vPC threshold values on HSRP priority.
HSRP	4.0(1)	This feature was introduced.



CHAPTER 19

Configuring VRRP

This chapter describes how to configure the Virtual Router Redundancy Protocol (VRRP) on a device

This chapter includes the following sections:

- [Information About VRRP, page 19-1](#)
- [Licensing Requirements for VRRP, page 19-6](#)
- [Guidelines and Limitations, page 19-6](#)
- [Configuring VRRP, page 19-6](#)
- [Verifying the VRRP Configuration, page 19-18](#)
- [Displaying VRRP Statistics, page 19-19](#)
- [VRRP Example Configuration, page 19-19](#)
- [Default Settings, page 19-20](#)
- [Additional References, page 19-21](#)
- [Feature History for VRRP, page 19-21](#)

Information About VRRP

VRRP allows for transparent failover at the first-hop IP router, by configuring a group of routers to share a virtual IP address. VRRP selects a master router in that group to handle all packets for the virtual IP address. The remaining routers are in standby and take over in the event that the master router fails.

This section includes the following topics:

- [VRRP Operation, page 19-2](#)
- [VRRP Benefits, page 19-3](#)
- [Multiple VRRP Groups, page 19-3](#)
- [VRRP Router Priority and Preemption, page 19-4](#)
- [VRRP Advertisements, page 19-5](#)
- [VRRP Authentication, page 19-5](#)
- [VRRP Tracking, page 19-5](#)
- [High Availability, page 19-5](#)
- [Virtualization Support, page 19-5](#)

Send document comments to nexus7k-docfeedback@cisco.com.

VRRP Operation

A LAN client can determine which router should be the first hop to a particular remote destination by using a dynamic process or static configuration. Examples of dynamic router discovery are as follows:

- Proxy ARP—The client uses Address Resolution Protocol (ARP) to get the destination it wants to reach, and a router will respond to the ARP request with its own MAC address.
- Routing protocol—The client listens to dynamic routing protocol updates (for example, from Routing Information Protocol [RIP]) and forms its own routing table.
- ICMP Router Discovery Protocol (IRDP) client—The client runs an Internet Control Message Protocol (ICMP) router discovery client.


The disadvantage to dynamic discovery protocols is that they incur some configuration and processing overhead on the LAN client. Also, in the event of a router failure, the process of switching to another router can be slow.

An alternative to dynamic discovery protocols is to statically configure a default router on the client. Although, this approach simplifies client configuration and processing, it creates a single point of failure. If the default gateway fails, the LAN client is limited to communicating only on the local IP network segment and is cut off from the rest of the network.

VRRP can solve the static configuration problem by enabling a group of routers (a VRRP group) to share a single virtual IP address. You can then configure the LAN clients with the virtual IP address as their default gateway.

Figure 19-1 shows a basic VLAN topology. In this example, Routers A, B, and C form a VRRP group. The IP address of the group is the same address that was configured for the Ethernet interface of Router A (10.0.0.1).

Figure 19-1 Basic VRRP Topology

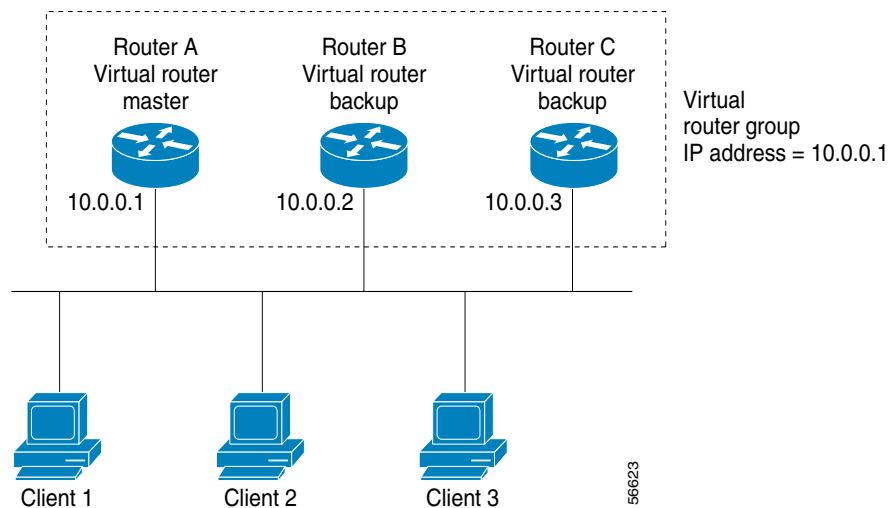

Because the virtual IP address uses the IP address of the physical Ethernet interface of Router A, Router A is the master (also known as the *IP address owner*). As the master, Router A owns the virtual IP address of the VRRP group and forwards packets sent to this IP address. Clients 1 through 3 are configured with the default gateway IP address of 10.0.0.1.

Send document comments to nexus7k-docfeedback@cisco.com.

Routers B and C function as backups. If the master fails, the backup router with the highest priority becomes the master and takes over the virtual IP address to provide uninterrupted service for the LAN hosts. When router A recovers, it becomes the master again. For more information, see the “[VRRP Router Priority and Preemption](#)” section.

**Note**

In Cisco NX-OS Release 4.1(2) and later, packets received on a routed port destined for the VRRP virtual IP address will terminate on the local router, regardless of whether that router is the master VRRP router or a backup VRRP router. This includes ping and telnet traffic. Packets received on a Layer 2 (VLAN) interface destined for the VRRP virtual IP address will terminate on the master router.

VRRP Benefits

The benefits of VRRP are as follows:

- **Redundancy**—Enables you to configure multiple routers as the default gateway router, which reduces the possibility of a single point of failure in a network.
- **Load Sharing**—Allows traffic to and from LAN clients to be shared by multiple routers. The traffic load is shared more equitably among available routers.
- **Multiple VRRP groups**—Supports up to 255 VRRP groups on a router physical interface if the platform supports multiple MAC addresses. Multiple VRRP groups enable you to implement redundancy and load sharing in your LAN topology.
- **Multiple IP Addresses**—Allows you to manage multiple IP addresses, including secondary IP addresses. If you have multiple subnets configured on an Ethernet interface, you can configure VRRP on each subnet.
- **Preemption**—Enables you to preempt a backup router that has taken over for a failing master with a higher priority backup router that has become available.
- **Advertisement Protocol**—Uses a dedicated Internet Assigned Numbers Authority (IANA) standard multicast address (224.0.0.18) for VRRP advertisements. This addressing scheme minimizes the number of routers that must service the multicasts and allows test equipment to accurately identify VRRP packets on a segment. IANA has assigned the IP protocol number 112 to VRRP.
- **VRRP Tracking**—Ensures that the best VRRP router is the master for the group by altering VRRP priorities based on interface states.

Multiple VRRP Groups

You can configure up to 255 VRRP groups on a physical interface. The actual number of VRRP groups that a router interface can support depends on the following factors:


- Router processing capability
- Router memory capability

In a topology where multiple VRRP groups are configured on a router interface, the interface can act as a master for one VRRP group and as a backup for one or more other VRRP groups.

[Figure 19-2](#) shows a LAN topology in which VRRP is configured so that Routers A and B share the traffic to and from clients 1 through 4. Routers A and B act as backups to each other if either router fails.

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 19-2 Load Sharing and Redundancy VRRP Topology

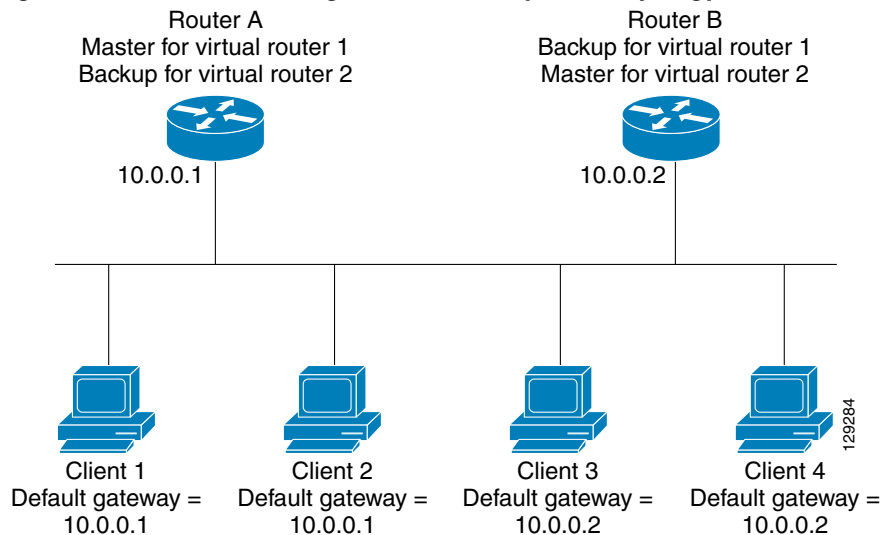

In this topology contains two virtual IP addresses for two VRRP groups that overlap. For VRRP group 1, Router A is the owner of IP address 10.0.0.1 and is the master. Router B is the backup to router A. Clients 1 and 2 are configured with the default gateway IP address of 10.0.0.1.

For VRRP group 2, Router B is the owner of IP address 10.0.0.2 and is the master. Router A is the backup to router B. Clients 3 and 4 are configured with the default gateway IP address of 10.0.0.2.

VRRP Router Priority and Preemption

An important aspect of the VRRP redundancy scheme is the VRRP router priority because the priority determines the role that each VRRP router plays and what happens if the master router fails.

If a VRRP router owns the virtual IP address and the IP address of the physical interface, this router functions as the master. The priority of the master is 255.

Priority also determines if a VRRP router functions as a backup router and the order of ascendancy to becoming a master if the master fails.

For example, if router A, the master in a LAN topology, fails, VRRP must determine if backups B or C should take over. If you configure router B with priority 101 and router C with the default priority of 100, VRRP selects router B to become the master because it has the higher priority. If you configure routers B and C with the default priority of 100, VRRP selects the backup with the higher IP address to become the master.

VRRP uses preemption to determine what happens after a VRRP backup router becomes the master. With preemption enabled by default, VRRP will switch to a backup if that backup comes online with a priority higher than the new master. For example, if Router A is the master and fails, VRRP selects Router B (next in order of priority). If Router C comes online with a higher priority than Router B, VRRP selects Router C as the new master, even though Router B has not failed.

If you disable preemption, VRRP will only switch if the original master recovers or the new master fails.

Send document comments to nexus7k-docfeedback@cisco.com.

VRRP Advertisements

The VRRP master sends VRRP advertisements to other VRRP routers in the same group. The advertisements communicate the priority and state of the master. Cisco NX-OS encapsulates the VRRP advertisements in IP packets and sends them to the IP multicast address assigned to the VRRP group. Cisco NX-OS sends the advertisements once every second by default, but you can configure a different advertisement interval.

VRRP Authentication

VRRP supports the following authentication mechanisms:

- No authentication
- Plain text authentication

VRRP rejects packets in any of the following cases:

- The authentication schemes differ on the router and in the incoming packet.
- Text authentication strings differ on the router and in the incoming packet.

VRRP Tracking

VRRP uses the native tracking method to track interface states. You can track the state of an interface and use that state to determine the priority of the VRRP router in a VRRP group. If the tracked interface goes down or the primary IP address is removed, VRRP updates the priority based on what you configure the new priority to be for the tracked interface state. When the tracked interface comes up and an IP address is configured on that interface, VRRP restores the original priority for the virtual router group.

For example, you may want to lower the priority of a VRRP group member if its uplink to the network goes down so another group member can take over as master for the VRRP group.

**Note**

VRRP does not support Layer 2 interface tracking.

High Availability

VRRP supports stateful restart. A stateful restart occurs on a supervisor switchover. Cisco NX-OS applies the runtime configuration after the switchover.

Virtualization Support

VRRP supports Virtual Routing and Forwarding instances (VRFs). VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF.

If you change the VRF membership of an interface, Cisco NX-OS removes all layer 3 configuration, including VRRP.

For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Licensing Requirements for VRRP

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	VRRP requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Guidelines and Limitations

VRRP has the following guidelines and limitations:

- You cannot configure VRRP on the management interface.
- When VRRP is enabled, you should replicate the VRRP configuration across devices in your network.
- We recommend that you do not configure more than one first-hop redundancy protocol on the same interface.
- You must configure an IP address for the interface that you configure VRRP on and enable that interface before VRRP becomes active.
- Cisco NX-OS removes all layer 3 configuration on an interface when you change the interface VRF membership, port channel membership, or when you change the port mode to layer 2.
- When you configure VRRP to track a Layer 2 interface, you must shut down the Layer 2 interface and reenabling the interface to update the VRRP priority to reflect the state of the Layer 2 interface.

Configuring VRRP

This section includes the following topics:

- [Enabling the VRRP Feature, page 19-7](#)
- [Configuring VRRP Groups, page 19-7](#)
- [Configuring VRRP Priority, page 19-8](#)
- [Configuring VRRP Authentication, page 19-10](#)
- [Configuring Time Intervals for Advertisement Packets, page 19-12](#)
- [Disabling Preemption, page 19-14](#)
- [Configuring VRRP Interface State Tracking, page 19-16](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Send document comments to nexus7k-docfeedback@cisco.com.

Enabling the VRRP Feature

You must globally enable the VRRP feature before you can configure and enable any VRRP groups.

To enable the VRRP feature, use the following command in global configuration mode:

Command	Purpose
feature vrrp	Enables VRRP.
Example: switch(config)# feature vrrp	

To disable the VRRP feature in a VDC and remove all associated configuration, use the following command in global configuration mode:

Command	Purpose
no feature vrrp	Disables the VRRP feature in a VDC.
Example: switch(config)# no feature vrrp	

Configuring VRRP Groups

You can create a VRRP group, assign the virtual IP address, and enable the group.

You can configure one virtual IPv4 address for a VRRP group. By default, the master VRRP router drops the packets addressed directly to the virtual IP address because the VRRP master is only intended as a next-hop router to forward packets. Some applications require that Cisco NX-OS accept packets addressed to the virtual router IP. Use the secondary option to the virtual IP address to accept these packets when the local router is the VRRP master.

Once you have configured the VRRP group, you must explicitly enable the group before it becomes active.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Ensure that you configure an IP address on the interface (see the [“Configuring IPv4 Addressing” section on page 2-7](#)).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **vrrp** *number*
4. **address** *ip-address* [**secondary**]
5. **no shutdown**

Send document comments to nexus7k-docfeedback@cisco.com.

6. `show vrrp`
7. `copy running-config startup-config`

DETAILED STEPS

	Command	Purpose
Step 1	<code>config t</code> Example: switch# <code>config t</code> switch(config)#	Enters configuration mode.
Step 2	<code>interface interface-type slot/port</code> Example: switch(config)# switch(config-if)# <code>interface ethernet 2/1</code>	Enters interface configuration mode.
Step 3	<code>vrrp number</code> Example: switch(config-if)# <code>vrrp 250</code> switch(config-if-vrrp)#	Creates a virtual router group. The range is from 1 to 255.
Step 4	<code>address ip-address [secondary]</code> Example: switch(config-if-vrrp)# <code>address 192.0.2.8</code>	Configures the virtual IPv4 address for the specified VRRP group. This address should be in the same subnet as the IPv4 address of the interface. Use the secondary option only if applications require that VRRP routers accept the packets sent to the virtual router's IP address and deliver to applications.
Step 5	<code>no shutdown</code> Example: switch(config-if-vrrp)# <code>no shutdown</code> switch(config-if-vrrp)#	Enables the VRRP group. Disabled by default.
Step 6	<code>show vrrp</code> Example: switch(config-if-vrrp)# <code>show vrrp</code>	(Optional) Displays VRRP information.
Step 7	<code>copy running-config startup-config</code> Example: switch(config-if-vrrp)# <code>copy running-config startup-config</code>	(Optional) Saves this configuration change.

Configuring VRRP Priority

The valid priority range for a virtual router is from 1 to 254 (1 is the lowest priority and 254 is the highest). The default priority value for backups is 100. For devices whose interface IP address is the same as the primary virtual IP address (the master), the default value is 255.

Send document comments to nexus7k-docfeedback@cisco.com.

**Note**

If you have enabled the VRRP group, you must disable it first, before making configuration changes. Enable the VRRP group after you complete your configuration changes.

BEFORE YOU BEGIN

Ensure that you have enabled the VRRP feature (see the [“Configuring VRRP” section on page 19-6](#)).

Ensure that you have configured an IP address on the interface (see the [“Configuring IPv4 Addressing” section on page 2-7](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **vrrp** *number*
4. **shutdown**
5. **priority** *value*
6. **no shutdown**
7. **show vrrp**
8. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 2/1 switch(config-if)#	Enters interface configuration mode.
Step 3	vrrp <i>number</i> Example: switch(config-if)# vrrp 250 switch(config-if-vrrp)#	Creates a virtual router group.
Step 4	shutdown Example: switch(config-if-vrrp)# shutdown switch(config-if-vrrp)#	Disables the VRRP group. Disabled by default.
Step 5	priority <i>value</i> Example: switch(config-if-vrrp)# priority 2	Configures the priority for the selected VRRP. The range is from 1 to 254. The default is 100 for backups and 255 for a master that has an interface IP address equal to the virtual IP address.
Step 6	no shutdown Example: switch(config-if-vrrp)# no shutdown switch(config-if-vrrp)#	Enables the VRRP group. Disabled by default.
Step 7	show vrrp Example: switch(config-if-vrrp)# show vrrp	(Optional) Displays a summary of VRRP information.
Step 8	copy running-config startup-config Example: switch(config-if-vrrp)# copy running-config startup-config	(Optional) Saves this configuration change.

Configuring VRRP Authentication

You can configure simple text authentication for a VRRP group.



Note

If you have enabled the VRRP group, you must disable it first, before making configuration changes. Enable the VRRP group after you complete your configuration changes.

BEFORE YOU BEGIN

Ensure that the authentication configuration is identical for all VRRP devices in the network.

Send document comments to nexus7k-docfeedback@cisco.com.

Ensure that you have enabled the VRRP feature (see the “Configuring VRRP” section on page 19-6).

Ensure that you have configured an IP address on the interface (see the “Configuring IPv4 Addressing” section on page 2-7).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **vrrp** *number*
4. **shutdown**
5. **authentication text** *password*
6. **no shutdown**
7. **show vrrp**
8. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 2/1 switch(config-if)#	Enters interface configuration mode.
Step 3	vrrp <i>number</i> Example: switch(config-if)# vrrp 250 switch(config-if-vrrp)#	Creates a virtual router group.
Step 4	shutdown Example: switch(config-if-vrrp)# shutdown switch(config-if-vrrp)#	Disables the VRRP group. Disabled by default.
Step 5	authentication text <i>password</i> Example: switch(config-if-vrrp)# authentication md5 prd555oln47espn0 spi 0x0	Assigns the simple text authentication option and specifies the keyname password. The keyname range is from 1 to 255 characters. We recommend that you use at least 16 characters. The text password is up to eight alphanumeric characters.
Step 6	no shutdown Example: switch(config-if-vrrp)# no shutdown switch(config-if-vrrp)#	Enables the VRRP group. Disabled by default.
Step 7	show vrrp Example: switch(config-if-vrrp)# show vrrp	(Optional) Displays a summary of VRRP information.
Step 8	copy running-config startup-config Example: switch(config-if-vrrp)# copy running-config startup-config	(Optional) Saves this configuration change.

Configuring Time Intervals for Advertisement Packets

You can configure the time intervals for advertisement packets.



Note

If you have enabled the VRRP group, you must disable it first, before making configuration changes. Enable the VRRP group after you complete your configuration changes.

BEFORE YOU BEGIN

Ensure that you have enabled the VRRP feature (see the “[Configuring VRRP](#)” section on page 19-6).

Send document comments to nexus7k-docfeedback@cisco.com.

Ensure that you have configured an IP address on the interface (see the “Configuring IPv4 Addressing” section on page 2-7).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **vrrp** *number*
4. **shutdown**
5. **advertisement-interval** *seconds*
6. **no shutdown**
7. **show vrrp**
8. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 2/1 switch(config-if)#	Enters interface configuration mode.
Step 3	vrrp number Example: switch(config-if)# vrrp 250 switch(config-if-vrrp)#	Creates a virtual router group.
Step 4	shutdown Example: switch(config-if-vrrp)# shutdown switch(config-if-vrrp)#	Disables the VRRP group. Disabled by default.
Step 5	advertisement-interval <i>seconds</i> Example: switch(config-if-vrrp)# advertisement-interval 15	Sets the interval time in seconds between sending advertisement frames. The range is from 1 to 255. The default is 1 second.
Step 6	no shutdown Example: switch(config-if-vrrp)# no shutdown switch(config-if-vrrp)#	Enables the VRRP group. Disabled by default.
Step 7	show vrrp Example: switch(config-if-vrrp)# show vrrp	(Optional) Displays a summary of VRRP information.
Step 8	copy running-config startup-config Example: switch(config-if-vrrp)# copy running-config startup-config	(Optional) Saves this configuration change.

Disabling Preemption

You can disable preemption for a VRRP group member. If you disable preemption, a higher-priority back up router will not take over for a lower-priority master router. Preemption is enabled by default.



Note

If you have enabled the VRRP group, you must disable it first, before making configuration changes. Enable the VRRP group after you complete your configuration changes.

BEFORE YOU BEGIN

Ensure that you have enabled the VRRP feature (see the “[Configuring VRRP](#)” section on page 19-6).

Send document comments to nexus7k-docfeedback@cisco.com.

Ensure that you have configured an IP address on the interface (see the “Configuring IPv4 Addressing” section on page 2-7).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **vrrp** *number*
4. **shutdown**
5. **no preempt**
6. **no shutdown**
7. **show vrrp**
8. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface interface-type slot/port Example: switch(config)# interface ethernet 2/1 switch(config-if)#	Enters interface configuration mode.
Step 3	vrrp number Example: switch(config-if)# vrrp 250 switch(config-if-vrrp)#	Creates a virtual router group.
Step 4	no shutdown Example: switch(config-if-vrrp)# no shutdown	Enables the VRRP group. Disabled by default.
Step 5	no preempt Example: switch(config-if-vrrp)# no preempt	Disables the preempt option and allows the master to remain when a higher-priority backup appears.
Step 6	no shutdown Example: switch(config-if-vrrp)# no shutdown	Enables the VRRP group. Disabled by default.
Step 7	show vrrp Example: switch(config-if-vrrp)# show vrrp	(Optional) Displays a summary of VRRP information.
Step 8	copy running-config startup-config Example: switch(config-if-vrrp)# copy running-config startup-config	(Optional) Saves this configuration change.

Configuring VRRP Interface State Tracking

Interface state tracking changes the priority of the virtual router based on the state of another interface in the device. When the tracked interface goes down or the IP address is removed, Cisco NX-OS assigns the tracking priority value to the virtual router. When the tracked interface comes up and an IP address is configured on this interface, Cisco NX-OS restores the configured priority to the virtual router (see the “[Configuring VRRP Priority](#)” section on page 19-8).



Note

For interface state tracking to function, you must enable preemption on the interface.

Send document comments to nexus7k-docfeedback@cisco.com.

**Note**

If you have enabled the VRRP group, you must disable it first, before making configuration changes. Enable the VRRP group after you complete your configuration changes.

**Note**

VRRP does not support Layer 2 interface tracking.

BEFORE YOU BEGIN

Ensure that you have enabled the VRRP feature (see the [“Configuring VRRP” section on page 19-6](#)).

Ensure that you have configured an IP address on the interface (see the [“Configuring IPv4 Addressing” section on page 2-7](#)).

Ensure that you have enabled the virtual router (see the [“Configuring VRRP Groups” section on page 19-7](#)).

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **interface** *interface-type slot/port*
3. **vrrp** *number*
4. **shutdown**
5. **track interface** *type number* **priority** *value*
6. **no shutdown**
7. **show vrrp**
8. **copy running-config startup-config**

Send document comments to nexus7k-docfeedback@cisco.com.

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	interface <i>interface-type slot/port</i> Example: switch(config)# interface ethernet 2/1 switch(config-if)#	Enters interface configuration mode.
Step 3	vrrp <i>number</i> Example: switch(config-if)# vrrp 250 switch(config-if-vrrp)#	Creates a virtual router group.
Step 4	shutdown Example: switch(config-if-vrrp)# shutdown switch(config-if-vrrp)#	Disables the VRRP group. Disabled by default.
Step 5	track interface <i>type number</i> priority <i>value</i> Example: switch(config-if-vrrp)# track interface ethernet 2/10 priority 254	Enables interface priority tracking for a VRRP group. The priority range is from 1 to 254.
Step 6	no shutdown Example: switch(config-if-vrrp)# no shutdown switch(config-if-vrrp)#	Enables the VRRP group. Disabled by default.
Step 7	show vrrp Example: switch(config-if-vrrp)# show vrrp	(Optional) Displays a summary of VRRP information.
Step 8	copy running-config startup-config Example: switch(config-if-vrrp)# copy running-config startup-config	(Optional) Saves this configuration change.

Verifying the VRRP Configuration

To verify VRRP configuration information, use the following commands:

Command	Purpose
show vrrp	Displays the VRRP status for all groups.
show vrrp vr <i>group-number</i>	Displays the VRRP status for a VRRP group.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
show vrrp vr <i>number</i> interface <i>interface-type</i> port configuration	Displays the virtual router configuration for an interface.
show vrrp vr <i>number</i> interface <i>interface-type</i> port status	Displays the virtual router status for an interface.

Displaying VRRP Statistics

To display VRRP statistics, use the following commands:

Command	Purpose
show vrrp vr <i>number</i> interface <i>interface-type</i> port statistics	Displays the virtual router information.
show vrrp statistics	Displays the VRRP statistics.

Use the **clear vrrp statistics** command to clear all the VRRP statistics for all interfaces in the device.

Use the **clear vrrp vr** command to clear the IPv4 VRRP statistics for a specified interface.

Use the **clear vrrp ipv4** command to clear all the statistics for the specified IPv4 virtual router.

VRRP Example Configuration

In this example, Router A and Router B each belong to three VRRP groups. In the configuration, each group has the following properties:

- Group 1:
 - Virtual IP address is 10.1.0.10.
 - Router A will become the master for this group with priority 120.
 - Advertising interval is 3 seconds.
 - Preemption is enabled.
- Group 5:
 - Router B will become the master for this group with priority 200.
 - Advertising interval is 30 seconds.
 - Preemption is enabled.
- Group 100:
 - Router A will become the master for this group first because it has a higher IP address (10.1.0.2).
 - Advertising interval is the default 1 second.
 - Preemption is disabled.

Router A

```
interface ethernet 1/0
 ip address 10.1.0.2/16
```

Send document comments to nexus7k-docfeedback@cisco.com.

```
no shutdown
vrrp 1
  priority 120
  authentication text cisco
  advertisement-interval 3
  address 10.1.0.10
  no shutdown
vrrp 5
  priority 100
  advertisement-interval 30
  address 10.1.0.50
  no shutdown
vrrp 100
  no preempt
  address 10.1.0.100
  no shutdown
```

Router B

```
interface ethernet 1/0
ip address 10.2.0.1/2
no shutdown
vrrp 1
  priority 100
  authentication text cisco
  advertisement-interval 3
  address 10.2.0.10
  no shutdown

vrrp 5
  priority 200
  advertisement-interval 30
  address 10.2.0.50
  no shutdown
vrrp 100
  no preempt
  address 10.2.0.100
  no shutdown
```

Default Settings

Table 19-1 lists the default settings for VRRP parameters.

Table 19-1 **Default VRRP Parameters**

Parameters	Default
advertisement interval	1 seconds
authentication	no authentication
preemption	enabled
priority	100
VRRP feature	disabled

Send document comments to nexus7k-docfeedback@cisco.com.

Additional References

For additional information related to implementing VRRP, see the following sections:

- [Related Documents, page 19-21](#)

Related Documents

Related Topic	Document Title
Configuring the gateway load balancing protocol	Chapter 17, “Configuring GLBP”
Configuring the hot standby routing protocol	Chapter 18, “Configuring HSRP”
VRRP CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
Configuring high availability	<i>Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 4.1</i>

Feature History for VRRP

[Table 19-2](#) lists the release history for this feature.

Table 19-2 **Feature History for VRRP**

Feature Name	Releases	Feature Information
VRRP	4.0(1)	This feature was introduced.

Send document comments to nexus7k-docfeedback@cisco.com.



CHAPTER 20

Configuring Object Tracking

This chapter describes how to configure object tracking on Cisco NX-OS devices.

This chapter includes the following sections:

- [Information About Object Tracking, page 20-1](#)
- [Licensing Requirements for Object Tracking, page 20-3](#)
- [Prerequisites for Object Tracking, page 20-3](#)
- [Guidelines and Limitations, page 20-3](#)
- [Configuring Object Tracking, page 20-3](#)
- [Verifying Object Tracking Configuration, page 20-7](#)
- [Object Tracking Example Configuration, page 20-7](#)
- [Related Topics, page 20-7](#)
- [Default Settings, page 20-8](#)
- [Additional References, page 20-8](#)
- [Feature History for Object Tracking, page 20-8](#)

Information About Object Tracking

Object tracking allows you to track specific objects on the network, such as the interface line protocol state, IP routing, and route reachability, and to take action when the tracked object's state changes. This feature allows you to increase the availability of the network and shorten recovery time if an object state goes down.

This section includes the following topics:

- [Object Tracking Overview, page 20-1](#)
- [High Availability, page 20-2](#)
- [Virtualization Support, page 20-2](#)

Object Tracking Overview

The object tracking feature allows you to create a tracked object that multiple clients can use to modify the client behavior when a tracked object changes. Several clients register their interest with the tracking process, track the same object, and take different actions when the object state changes.

Send document comments to nexus7k-docfeedback@cisco.com.

Clients include the following features:

- Hot Standby Redundancy Protocol (HSRP)
- Gateway Load Balancing Protocol (GLBP)
- Embedded Event Manager (EEM)

The object tracking monitors the status of the tracked objects and communicates any changes made to interested clients. Each tracked object is identified by a unique number that clients can use to configure the action to take when a tracked object changes state.

Cisco NX-OS tracks the following object types:

- Interface line protocol state—Tracks whether the line protocol state is up or down.
- Interface IP routing state—Tracks whether the interface has an IPv4 or IPv6 address and if IPv4 or IPv6 routing is enabled and active.
- IP route reachability—Tracks whether an IPv4 or IPv6 route exists and is reachable from the local device.

For example, you can configure HSRP to track the line protocol of the interface that connects one of the redundant routers to the rest of the network. If that link protocol goes down, you can modify the priority of the affected HSRP router and cause a switchover to a backup router that has better network connectivity.

High Availability

Object tracking supports high availability through stateful restarts. A stateful restart occurs when the object tracking process crashes. Object tracking also supports stateful switchover on a dual supervisor system. Cisco NX-OS applies the runtime configuration after the switchover.

You can also use object tracking to modify the behavior of a client to improve overall network availability.

Virtualization Support

Object tracking supports Virtual Routing and Forwarding (VRF) instances. VRFs exist within virtual device contexts (VDCs). By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. By default, Cisco NX-OS tracks the route reachability state of objects in the default VRF. If you want to track objects in another VRF, you must configure the object to be a member of that VRF (see the [“Configuring Object Tracking for a Nondefault VRF”](#) section on page 20-6).

For more information, see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1* and see [Chapter 13, “Configuring Layer 3 Virtualization.”](#)

Send document comments to nexus7k-docfeedback@cisco.com.

Licensing Requirements for Object Tracking

The following table shows the licensing requirements for this feature:

Product	License Requirement
NX-OS	Object tracking requires no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the NX-OS licensing scheme, see the <i>Cisco Nexus 7000 Series NX-OS Licensing Guide, Release 4.1</i> .

Prerequisites for Object Tracking

Object tracking has the following prerequisite:

- If you configure VDCs, install the Advanced Services license and enter the desired VDC (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 4.1*).

Guidelines and Limitations

Object tracking has the following guidelines and limitations:

- Supports up to 500 tracked objects per VDC.
- Supports Ethernet, subinterfaces, tunnels, port channels, loopback interfaces, and VLAN interfaces.
- Supports one tracked object per HSRP group or GLBP group.

Configuring Object Tracking

This section includes the following topics:

- [Configuring Object Tracking for an Interface, page 20-3](#)
- [Configuring Object Tracking for Route Reachability, page 20-5](#)
- [Configuring Object Tracking for a Nondefault VRF, page 20-6](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Configuring Object Tracking for an Interface

You can configure Cisco NX-OS to track the line protocol or IPv4 or IPv6 routing state of an interface.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

Send document comments to nexus7k-docfeedback@cisco.com.

SUMMARY STEPS

1. **config t**
2. **track object-id interface interface-type number {{ip | ipv6} routing | line-protocol}**
3. **show track [object-id]**
4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	track object-id interface interface-type number {{ip ipv6} routing line-protocol} Example: switch(config)# track 1 interface ethernet 1/2 line-protocol switch(config-track)#	Creates a tracked object for an interface and enters tracking configuration mode. The <i>object-id</i> range is from 1 to 500.
Step 3	show track [object-id] Example: switch(config-track)# show track 1	(Optional) Displays object tracking information.
Step 4	copy running-config startup-config Example: switch(config-track)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to configure object tracking for the line protocol state on Ethernet 1/2:

```
switch# config t
switch(config)# track 1 interface ethernet 1/2 line-protocol
switch(config-track)# copy running-config startup-config
```

This example shows how to configure object tracking for the IPv4 routing state on Ethernet 1/2:

```
switch# config t
switch(config)# track 2 interface ethernet 1/2 ip routing
switch(config-track)# copy running-config startup-config
```

This example shows how to configure object tracking for the IPv6 routing state on Ethernet 1/2:

```
switch# config t
switch(config)# track 3 interface ethernet 1/2 ipv6 routing
switch(config-track)# copy running-config startup-config
```


Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Object Tracking for Route Reachability

You can configure Cisco NX-OS to track the existence and reachability of an IP route.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **track object-id {ip | ipv6} route prefix/length reachability**
3. **show track [object-id]**
4. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	track object-id {ip ipv6} route prefix/length reachability Example: switch(config)# track 2 ip route 192.0.2.0/8 reachability switch(config-track)#	Creates a tracked object for a route and enters tracking configuration mode. The <i>object-id</i> range is from 1 to 500. The prefix format for IP is A.B.C.D/length, where the length range is from 1 to 32. The prefix format for IPv6 is A:B::C:D/length, where the length range is from 1 to 128.
Step 3	show track [object-id] Example: switch(config-track)# show track 1	(Optional) Displays object tracking information.
Step 4	copy running-config startup-config Example: switch(config-track)# copy running-config startup-config	(Optional) Saves this configuration change.

This example shows how to configure object tracking for an IPv4 route in the default VRF.

```
switch# config t
switch(config)# track 4 ip route 192.0.2.0/8 reachability
switch(config-track)# copy running-config startup-config
```

This example shows how to configure object tracking for an IPv6 route in the default VRF.

```
switch# config t
switch(config)# track 5 ipv6 route 10::10/128 reachability
switch(config-track)# copy running-config startup-config
```

Send document comments to nexus7k-docfeedback@cisco.com.

Configuring Object Tracking for a Nondefault VRF

You can configure Cisco NX-OS to track an object in a specific VRF.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **config t**
2. **track object-id {ip | ipv6} route prefix/length reachability**
3. **vrf member vrf-name**
4. **show track [object-id]**
5. **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	config t Example: switch# config t switch(config)#	Enters configuration mode.
Step 2	track object-id {ip ipv6} route prefix/length reachability Example: switch(config)# track 2 ip route 192.0.2.0/8 reachability switch(config-track)#	Creates a tracked object for a route and enters tracking configuration mode. The <i>object-id</i> range is from 1 to 500. The prefix format for IP is A.B.C.D/length, where the length range is from 1 to 32. The prefix format for IPv6 is A:B::C:D/length, where the length range is from 1 to 128.
Step 3	vrf member vrf-name Example: switch(config-track)# vrf member Red	Configures the VRF to use for tracking the configured object.
Step 4	show track [object-id] Example: switch(config-track)# show track 3	(Optional) Displays object tracking information.
Step 5	copy running-config startup-config Example: switch(config-track)# copy running-config startup-config	(Optional) Saves this configuration change.

Send document comments to nexus7k-docfeedback@cisco.com.

This example shows how to configure object tracking for a route and use VRF Red to look up reachability information for this object:

```
switch# config t
switch(config)# track 2 ip route 209.165.201.0/8 reachability
switch(config-track)# vrf member Red
switch(config-track)# copy running-config startup-config
```

This example shows how to modify tracked object 2 to use VRF Blue instead of VRF RED to look up reachability information for this object:

```
switch# config t
switch(config)# track 2
switch(config-track)# vrf member Blue
switch(config-track)# copy running-config startup-config
```

Verifying Object Tracking Configuration

To verify object tracking configuration information, use the following commands:

Command	Purpose
<code>show track [object-id] [brief]</code>	Displays the object tracking information for one or more objects.
<code>show track [object-id] interface [brief]</code>	Displays the interface-based object tracking information.
<code>show track [object-id] {ip ipv6} route [brief]</code>	Displays the IPv4 or IPv6 route-based object tracking information.

Object Tracking Example Configuration

This example shows how to configure object tracking for route reachability and use VRF Red to look up reachability information for this route:

```
switch# config t
switch(config)# track 2 ip route 209.165.201.0/8 reachability
switch(config-track)# vrf member Red
switch(config-track)# copy running-config startup-config
```

Related Topics

See the following topics for information related to object tracking:

- [Chapter 13, “Configuring Layer 3 Virtualization”](#)
- [Chapter 17, “Configuring GLBP”](#)
- [Chapter 18, “Configuring HSRP”](#)

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

Default Settings

Table 20-1 lists the default settings for object tracking parameters.

Table 20-1 **Default Object Tracking Parameters**

Parameters	Default
Tracked Object VRF	Member of default VRF

Additional References

For additional information related to implementing object tracking, see the following sections:

- [Related Documents, page 20-8](#)
- [Standards, page 20-8](#)

Related Documents

Related Topic	Document Title
Object Tracking CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 4.1</i>
Configuring the Embedded Event Manager	<i>Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 4.1</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for Object Tracking

Table 20-2 lists the release history for this feature.

Table 20-2 **Feature History for Object Tracking**

Feature Name	Releases	Feature Information
IPv6 support	4.1(2)	Added support for IPv6.
Object tracking	4.0(1)	This feature was introduced.



APPENDIX **A**

IETF RFCs supported by Cisco NX-OS Unicast Features, Release 4.x

This appendix lists the IETF RFCs supported in Cisco NX-OS Release 4.x.

BGP RFCs

RFCs	Title
RFC 1997	<i>BGP Communities Attribute</i>
RFC 2385	<i>Protection of BGP Sessions via the TCP MD5 Signature Option</i>
RFC 2439	<i>BGP Route Flap Damping</i>
RFC 2519	<i>A Framework for Inter-Domain Route Aggregation</i>
RFC 3065	<i>Autonomous System Confederations for BGP</i>
RFC 3392	<i>Capabilities Advertisement with BGP-4</i>
RFC 4271	<i>A Border Gateway Protocol 4 (BGP-4)</i>
RFC 4273	<i>Definitions of Managed Objects for BGP-4</i>
RFC 4456	<i>BGP Route Reflection: An Alternative to Full Mesh Internal BGP (IBGP)</i>
RFC 4486	<i>Subcodes for BGP Cease Notification Message</i>
RFC 4724	<i>Graceful Restart Mechanism for BGP</i>
RFC 4893	<i>BGP Support for Four-octet AS Number Space</i>
RFC 5004	<i>Avoid BGP Best Path Transitions from One External to Another</i>
draft-ietf-idr-bgp4-mib-15.txt	<i>BGP4-MIB</i>

First-Hop Redundancy Protocols RFCs

RFCs	Title
RFC 2281	<i>Hot Standby Redundancy Protocol</i>
RFC 3768	<i>Virtual Router Redundancy Protocol</i>

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

IP Services RFCs

RFCs	Title
RFC 786	<i>UDP</i>
RFC 791	<i>IP</i>
RFC 792	<i>ICMP</i>
RFC 793	<i>TCP</i>
RFC 826	<i>ARP</i>
RFC 1027	<i>Proxy ARP</i>
RFC 1591	<i>DNS Client</i>
RFC 1812	<i>IPv4 routers</i>

IPv6 RFCs

RFCs	Title
RFC 1981	<i>Path MTU Discovery for IP version 6</i>
RFC 2373	<i>IP Version 6 Addressing Architecture</i>
RFC 2374	<i>An Aggregatable Global Unicast Address Format</i>
RFC 2460	<i>Internet Protocol, Version 6 (IPv6) Specification</i>
RFC 2461	<i>Neighbor Discovery for IP Version 6 (IPv6)</i>
RFC 2462	<i>IPv6 Stateless Address Autoconfiguration</i>
RFC 2463	<i>Internet Control Message Protocol (ICMPv6) for the Internet Protocol Version 6 (IPv6) Specification</i>
RFC 3152	<i>Delegation of IP6.ARPA</i>
RFC 3162	<i>RADIUS and IPv6</i>
RFC 3513	<i>Internet Protocol Version 6 (IPv6) Addressing Architecture</i>
RFC 3596	<i>DNS Extensions to Support IP version 6</i>
RFC 4193	<i>Unique Local IPv6 Unicast Addresses</i>

IS-IS RFCs

RFCs	Title
RFC 1142	<i>OSI 10589 Intermediate system to intermediate system intra-domain routing exchange protocol</i>
RFC 1195	<i>Use of OSI IS-IS for routing in TCP/IP and dual environment</i>
RFC 2763	<i>Dynamic Hostname Exchange Mechanism for IS-IS</i>
RFC 2966	<i>Domain-wide Prefix Distribution with Two-Level IS-IS</i>
RFC 2972	<i>IS-IS Mesh Groups</i>
RFC 3273	<i>Three-Way Handshake for IS-IS Point-to-Point Adjacencies</i>

Send document comments to nexus7k-docfeedback@cisco.com.

RFCs	Title
RFC 3277	<i>IS-IS Transient Blackhole Avoidance</i>
RFC 3567	<i>IS-IS Cryptographic Authentication</i>
RFC 3847	<i>Restart Signaling for IS-IS</i>
draft-ietf-isis-igp-p2p-over-lan-06.txt	<i>Internet Draft Point-to-point operation over LAN in link-state routing protocols</i>

OSPF RFCs

RFCs	Title
RFC 2328	<i>OSPF Version 2</i>
RFC 2740	<i>OSPF for IPv6</i>
RFC 3623	<i>Graceful OSPF Restart</i>
RFC 3101	<i>The OSPF Not-So-Stubby Area (NSSA) Option</i>
RFC 2370	<i>The OSPF Opaque LSA Option</i>
RFC 3137	<i>OSPF Stub Router Advertisement</i>
draft-ietf-ospf-ospfv3-graceful-restart-04.txt	<i>OSPFv3 Graceful Restart</i>

RIP RFCs

RFCs	Title
RFC 2453	<i>RIP Version 2</i>
RFC 2082	<i>RIP-2 MD5 Authentication</i>

Send document comments to nexus7k-docfeedback@cisco.com.



GLOSSARY

A

ABR	See area border router .
address family	A specific type of network addressing supported by a routing protocol. Examples include IPv4 unicast and IPv4 multicast.
adjacency	Two OSPF routers that have compatible configurations and have synchronized their link-state databases.
administrative distance	A rating of the trustworthiness of a routing information source. In general, the higher the value, the lower the trust rating.
area	A logical division of routers and links within an OSPF domain that creates separate subdomains. LSA flooding is contained within an area.
area border router	A router that connects one OSPF area to another OSPF area.
ARP	Address resolution protocol. ARP discovers the MAC address for a known IPv4 address.
AS	See autonomous system .
ASBR	See autonomous system border router .
attributes	Properties of a route that are sent in BGP UPDATE messages. These attributes include the path to the advertised destination as well as configurable options that modify the best path selection process.
autonomous system	A network controlled by a single technical administration entity.
autonomous system border router	A router that connect a an OSPF autonomous system to an external autonomous system.
AVF	Active virtual forwarder. A gateway within a GLBP group elected to forward traffic for a specified virtual MAC address.
AVG	Active virtual gateway. One virtual gateway within a GLBP group is elected as the active virtual gateway and is responsible for the operation of the protocol.

v

B

backup designated router	See BDR .
---------------------------------	---------------------------

Send document comments to nexus7k-docfeedback@cisco.com.

bandwidth	The available traffic capacity of a link.
BDR	Backup designated router. An elected router in a multi-access OSPF network that acts as the backup if the designated router fails. All neighbors form adjacencies with the backup designated router (BDR) as well as the designated router.
BGP	Border Gateway Protocol. BGP is an interdomain or exterior gateway protocol.
BGP peer	A remote BGP speaker that is an established neighbor of the local BGP speaker.
BGP speaker	BGP-enabled router.

C

communication cost	Measure of the operating cost to route over a link.
converged	The point at which all routers in a network have identical routing information.
convergence	See converged .

D

dead interval	The time within which an OSPF router must receive a Hello packet from an OSPF neighbor. The dead interval is usually a multiple of the hello interval. If no Hello packet is received, the neighbor adjacency is removed.
default gateway	A router to which all unroutable packets are sent. Also called the router of last resort.
delay	The length of time required to move a packet from the source to the destination through the internetwork.
designated router	See DR .
DHCP	Dynamic Host Control Protocol.
Diffusing Update Algorithm	See DUAL .
distance vector	Defines routes by distance (for example, the number of hops to the destination) and direction (for example, the next-hop router) and then broadcasts to the directly connected neighbor routers.
DNS client	Domain Name System client. Communicates with DNS server to translate a host name to an IP address.
DR	Designated router. An elected router in a multi-access OSPF network that sends LSAs on behalf of all its adjacent neighbors. All neighbors establish adjacency with only the designated router and the backup designated router.
DUAL	Diffusing Update Algorithm. EIGRP algorithm used to select optimal routes to a destination.

Send document comments to nexus7k-docfeedback@cisco.com.

E

eBGP	External Border Gateway Protocol (BGP). Operates between external systems.
EIGRP	Enhanced Interior Gateway Protocol. A Cisco routing protocol that uses the Diffusing Update Algorithm to provide fast convergence and minimized bandwidth utilization.

F

feasible distance	The lowest calculated distance to a network destination in EIGRP. The feasibility distance is the sum of the advertised distance from a neighbor plus the cost of the link to that neighbor.
feasible successor	Neighbors in EIGRP that advertise a shorter distance to the destination than the current feasibility distance.
FIB	Forwarding Information Base. The forwarding table on each module that is used to make the Layer 3 forwarding decisions per packet.

G

gateway	A switch or router that forwards layer 3 traffic from a LAN to the rest of the network.
GLBP	Gateway Load Balancing Protocol. A Cisco proprietary protocol that provides high availability features to end hosts.
graceful restart	A feature that allows a router to remain in the data forwarding path while a routing protocol reboots.

h

H

hello interval	The configurable time between each Hello packet sent by an OSPF or EIGRP router.
hello packet	A special message used by OSPF or IS-IS to discover neighbors. Also acts as a keep alive messages between established neighbors.
high availability	The ability of a system or component to limit or avoid network disruption when a component fails.
hold time	In BGP - Maximum time limit allowed in BGP between UPDATE or KEEPALIVE messages. If this time is exceeded, the TCP connection between the BGP peers is closed. In EIGRP, the maximum time allowed between EIGRP Hello messages. If this time is exceeded, the neighbor is declared unreachable.
hop count	The number of routers that can be traversed in a route. Used by RIP.
HSRP	

Send document comments to nexus7k-docfeedback@cisco.com.

I

iBGP	Internal Border Gateway Protocol (BGP). Operates within an autonomous system.
ICMP	
IETF RFCs	Internet Engineering Task Force Request for Comments.
IGP	Interior gateway protocol. Used between routers within the same autonomous system.
instance	An independent, configurable entity, typically a protocol.
IP tunnels	
IPv4	Internet Protocol version 4.
IPv6	Internet Protocol version 6.
IS-IS	Intermediate System to Intermediate System. An ISO interior gateway protocol.

K

keepalive	A special message sent between routing peers to verify and maintain communications between the pair.
key-chain management	A method of controlling authentication keys. See the <i>Cisco NX-OS Security Configuration Guide</i> .

L

link cost	An arbitrary number configured on an OSPF interface which is in shortest path first calculations.
link-state	Shares information about a link, link cost to neighboring routers.
link-state advertisement	See LSA .
LSA	Link-state advertisement. An OSPF message to share information on the operational state of a link, link cost, and other OSPF neighbor information.
link-state database	OSPF database of all LSAs received. OSPF uses this database to calculate the best path to each destination in the network.
link-state refresh	The time that OSPF floods the network with LSAs to ensure all OSPF routers have the same information.
load	The degree to which a network resource, such as a router, is busy.
load balancing	The distribution of network traffic across multiple paths to a given destination.

Send document comments to nexus7k-docfeedback@cisco.com.

M

message digest	A one-way hash applied to a message using a shared password and appended to the message to authenticate the message and ensure the message has not been altered in transit.
metric	A standard of measurement, such as the path bandwidth, that is used by routing algorithms to determine the optimal path to a destination.
MD5 authentication digest	A cryptographic construction that is calculated based on an authentication key and the original message and sent along with the message to the destination. Allows the destination to determine the authenticity of the sender and guarantees that the message has not been tampered with during transmission.
MTU	Maximum transmission unit. The largest packet size that a network link will transmit without fragmentation.

N

NDP	Neighbor Discovery Protocol. The protocol used by IPv6 to find the MAC address associated with an IPv6 address.
network layer reachability information	BGP network layer reachability information (NRLI). Contains the a list of network IP addresses and network masks for networks that are reachable from the advertising BGP peer.
next hop	The next router that a packet is sent to on its way to the destination address.
NSSA	Not-So-Stubby-Area. Limits AS external LSAs in an OSPF area.

O

OSPF	Open Shortest Path First. An IETF link-state protocol. OSPFv2 supports IPv4 and OSPFv3 supports IPv6.
-------------	---

P

path length	Sum of all link costs or the hop count that a packet experiences when routed from the source to the destination.
policy-based routing	The method of using route maps to alter the route selected for a packet.

Send document comments to nexus7k-docfeedback@cisco.com.

R

redistribution	One routing protocol accepts route information from another routing protocol and advertises it in the local autonomous system.
Reliable Transport Protocol	Responsible for guaranteed, ordered delivery of EIGRP packets to all neighbors.
reliability	The dependability (usually described in terms of the bit-error rate) of each network link.
RIB	Routing Information Base. Maintains the routing table with directly connected routes, static routes, and routes learned from dynamic unicast routing protocols.
Route Policy Manager	The process that controls route maps and policy-based routing.
routing information base	See RIB .
route map	A construct used to map a route or packet based on match criteria and optionally alter the route or packet based on set criteria. Used in route redistribution and policy-based routing.
route summarization	A process that replaces a series of related, specific routes in a route table with a more generic route.
router ID	A unique identifier used by routing protocols. If not manually configured, the routing protocol selects the highest IP address configured on the system.

S

SPF algorithm	Shortest Path First algorithm. Dijkstra's algorithm used by OSPF to determine the shortest route through a network to a particular destination.
split horizon	Routes learned from an interface are not advertised back along the interface they were learned on, preventing the router from seeing its own route updates.
split horizon with poison reverse	Routes learned from an interface are set as unreachable and advertised back along the interface they were learned on, preventing the router from seeing its own route updates.
static route	A manually configured route.
stub area	An OSPF area that does not allow AS External (type 5) LSAs.
stub router	A router that has no direct connection to the main network and which routes to that network using a known remote router.
SVI	Switched Virtual Interface.

Send document comments to nexus7k-docfeedback@cisco.com.

U

U6FIB	Unicast IPv6 forwarding information base.
UFIB	Unicast IPv4 forwarding information base.
U6RIB	Unicast IPv6 routing information base. The unicast routing table that gathers information from all routing protocols and updates the forwarding information base for each module.
URIB	Unicast IPv4 routing information base. The unicast routing table that gathers information from all routing protocols and updates the forwarding information base for each module.

V

VDC	Virtual Device Context. Used to split a physical system into secure, independent, logical systems.
virtualization	A method of making a physical entity act as multiple, independent logical entities.
VRF	Virtual Routing and Forwarding. A method used to create separate, independent Layer 3 entities within a system.
VRRP	Virtual Router Redundancy Protocol.

Send document comments to nexus7k-docfeedback@cisco.com.



APPENDIX 2

Configuration Limits for Cisco NX-OS Layer 3 Unicast Features, Release 4.x

The features supported by Cisco NX-OS have maximum configuration limits. For some of the features, we have verified configurations that support limits less than the maximum. [Table 2-1](#) lists the Cisco verified limits and maximum limits for switches running Cisco NX-OS Release 4.x.

Table 2-1 Cisco NX-OS Release 4.x Configuration Limits

Feature	Verified Limit	Maximum Limit
Layer 3 subinterfaces	1000	
BGP		300 peers
		150,000 prefixes per peer
		20 million paths total
GLBP	1000 GLBP groups per system, with default timers.	1024 GLBP groups.
	200 GLBP groups per interface.	
HSRP	2000 HSRP groups per system, with default timers.	2048 HSRP groups.
	500 HSRP groups per physical interface or VLAN interface. 100 HSRP groups per port-channel interface.	
Object tracking	500 objects.	
OSPF		200 interfaces
		1000 routers
		300 adjacencies
		200,000 LSAs
VRFs	200 per VDC	
VRRP	255 groups	

Send document comments to nexus7k-docfeedback@cisco.com.



INDEX

A

ABR [5-4](#)

address formats

IPv4 [2-2](#)

IPv6 [3-2](#)

IPv6 (table) [3-2](#)

address resolution protocol. See ARP

administrative distance

description [1-6](#)

static routing [12-2](#)

aggregatable global addresses. See IPv6

unicast addresses

areas [6-5](#)

ARP

caching [2-3](#)

configuring gratuitous ARP [2-11](#)

configuring Local Proxy ARP [2-11](#)

configuring Proxy ARP [2-10](#)

configuring static ARP entries [2-9](#)

description [2-2](#)

gratuitous ARP [2-5](#)

Local Proxy ARP [2-5](#)

process (figure) [2-3](#)

Proxy ARP [2-5](#)

Reverse ARP [2-4](#)

AS. See autonomous system

ASBR [5-5](#)

AS confederations

configuring [10-23](#)

description [10-4](#)

AS numbers [1-5](#)

AS-path lists

configuring [15-7](#)

description [15-3](#)

autonomous system

description [1-5](#)

numbers (table) [1-5](#)

B

bandwidth [1-4](#)

BDR [5-3](#)

BGP [9-7](#)

administrative distances (table) [9-2](#)

clearing neighbors [9-17](#)

configuration modes [9-8](#)

configuring dynamic capability [10-27](#)

configuring maximum prefixes [10-26](#)

configuring prefix peering [10-19](#)

configuring route dampening [10-26](#)

configuring with VRFs [10-35](#)

default settings [9-22, 10-38](#)

description [9-1 to 9-7, 10-1 to 10-10](#)

disable the feature [9-11](#)

displaying statistics [9-21, 10-38](#)

eBGP [10-3](#)

enable the feature [9-10](#)

example configuration [9-22](#)

feature history (table) [9-23, 15-16](#)

guidelines [9-8, 10-10](#)

high availability [10-9](#)

iBGP [10-3](#)

ISSU [10-9](#)

licensing requirements [9-7, 10-10](#)

limitations [9-8, 10-10](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- MIBs [7-29, 9-23](#)
- modifying next-hop address [10-21](#)
- MP-BGP [10-8](#)
- path selection [9-4](#)
- prerequisites [9-7, 10-10](#)
- router ID [9-4](#)
- speakers [9-1](#)
- tuning [10-31](#)
- unicast RIB [9-7](#)
- verifying configuration [9-20, 10-37](#)
- virtualization support [9-7, 10-10](#)
- BGP aggregate addresses
 - configuring [10-28](#)
- BGP AS-path lists
 - configuring [15-7](#)
 - description [15-3](#)
- BGP authentication
 - configuring [10-20](#)
 - description [10-2](#)
- BGP autonomous systems
 - description [9-2](#)
- BGP capabilities negotiation
 - description [10-6](#)
 - disabling [10-21](#)
- BGP community lists
 - configuring [15-8](#)
 - description [15-4](#)
- BGP graceful restart
 - configuring [10-34](#)
 - description [10-9](#)
- BGP instance
 - creating [9-11](#)
 - deleting [9-12](#)
 - restarting [9-13](#)
- BGP load balancing
 - configuring [10-26](#)
- BGP loadsharing
 - description [10-7](#)
- BGP multipath. See BGP loadsharing

- BGP peers
 - authentication (note) [10-2](#)
 - configuring [9-13, 9-15](#)
 - description [9-3](#)
- BGP route aggregation
 - description [10-7](#)
- BGP route dampening [10-6](#)
- BGP route redistribution
 - configuring [10-28](#)
 - description [10-8](#)
- BGP sessions
 - reset options [10-3](#)
 - resetting [10-20](#)
 - route policies [10-3](#)
- BGP templates
 - configuring peer-policy templates [10-14](#)
 - configuring peer templates [10-16](#)
 - configuring session templates [10-12](#)
 - description [10-2](#)
 - peer-policy templates [10-2](#)
 - peer-session templates [10-2](#)
 - peer template [10-2](#)
- Border Gateway Protocol. See BGP

C

- CDP [3-12](#)
- communication cost [1-4](#)
- community lists
 - configuring [15-8](#)
 - description [15-4](#)
- comparing
 - link-state and distance vector routing algorithms [1-9](#)
- configuration limits
 - description (table) [2-1](#)

Send document comments to nexus7k-docfeedback@cisco.com.

D

default gateway
 description [1-8](#)

default settings
 BGP [9-22, 10-38](#)
 DNS [4-7](#)
 EIGRP [7-28](#)
 GLBP [17-16](#)
 HSRP [18-17](#)
 IP [2-14](#)
 IPv6 [3-24](#)
 IS-IS [8-28](#)
 object tracking [20-8](#)
 OSPF [5-42](#)
 OSPFv3 [6-38](#)
 policy-based routing [16-7](#)
 RIP [11-18](#)
 Route Policy Manager [15-15](#)
 static routing [12-7](#)
 VRF [13-13](#)
 VRRP [19-20](#)

delay [1-4](#)

distance vector routing algorithms [1-9](#)

distribution
 RIP [11-3](#)

DNS [3-12](#)
 configuring clients [4-3](#)
 configuring with VRFs [4-5](#)
 default settings [4-7](#)
 description [4-1](#)
 example configuration [4-7](#)
 feature history (table) [4-8](#)
 guidelines [4-3](#)
 high availability [4-2](#)
 licensing requirements [4-2](#)
 limitations [4-3](#)
 name servers [4-2](#)
 operation [4-2](#)

prerequisites [4-3](#)
 verifying configuration [4-7](#)
 virtualization [4-2](#)

documentation
 additional publications [i-v](#)
 updates [i-vi](#)

domain name server. See DNS

DR [5-3](#)

E

eBGP
 configuring [10-21](#)
 configuring AS confederations [10-23](#)
 configuring multihop [10-22](#)
 description [10-3](#)
 disabling fast external failover [10-22](#)
 disabling single-hop checking [10-22](#)
 limiting the AS-path attribute [10-23](#)

eBGP AS confederations. See AS confederations

ECMP. See equal cost multipath

EIGRP
 authentication [7-5](#)
 configuring a summary address [7-17](#)
 configuring authentication [7-14](#)
 configuring graceful restart [7-20](#)
 configuring hello interval [7-22](#)
 configuring load balancing [7-19](#)
 configuring route redistribution [7-17](#)
 configuring stub routing [7-16](#)
 configuring with VRFs [7-25](#)
 creating an instance [7-10](#)
 default settings [7-28](#)
 deleting an instance [7-12](#)
 description [7-1 to 7-8](#)
 disabling an instance [7-13](#)
 disabling split horizon [7-23](#)
 disabling the feature [7-10](#)
 displaying statistics [7-27](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- DUAL algorithm [7-2](#)
- ECMP [7-6](#)
- enabling the feature [7-9](#)
- example configuration [7-27](#)
- external route metrics [7-4](#)
- feature history (table) [7-29](#)
- graceful restart [7-7](#)
- guidelines [7-8](#)
- high availability [7-7](#)
- hold time [7-2](#)
- internal route metrics [7-3](#)
- licensing requirements [7-8](#)
- limitations [7-8](#)
- load balancing [7-6](#)
- neighbor discovery [7-2](#)
- prerequisites [7-8](#)
- restarting an instance [7-12](#)
- route redistribution [7-6](#)
- route summarization [7-6](#)
- route updates [7-3](#)
- shutting down on an interface [7-13](#)
- split horizon [7-6](#)
- stub routers [7-5](#)
- tuning [7-23](#)
- unicast RIB [7-4](#)
- verifying configuration [7-27](#)
- virtualization support [7-7](#)

eigrp

- passive interface [7-13](#)

equal cost multipath [1-6](#)

external BGP. See eBGP

F

FIB

- clearing routes [14-9](#)
- description [1-12, 14-1](#)
- displaying [14-4](#)
- feature history (table) [14-11](#)

- guidelines [14-3](#)

- licensing requirements [14-2](#)

- limitations [14-3](#)

- verifying [14-10](#)

- virtualization support [14-2](#)

- VRFs [1-12](#)

forwarding

- adjacency manager [1-11](#)

- architecture [1-10, 14-1](#)

- FIB [1-11](#)

- unicast forwarding distribution module [1-11](#)

forwarding information base. See FIB

G

Gateway Load Balancing Protocol. See GLBP

GLBP

- configuring authentication [17-8](#)

- configuring load balancing [17-10](#)

- configuring weighting and tracking [17-10](#)

- customizing [17-13](#)

- default settings [17-16](#)

- description [17-1](#)

- enabling a group [17-14](#)

- enabling the feature [17-7](#)

- example configuration [17-15](#)

- feature history (table) [17-17](#)

- verifying configuration [17-15](#)

graceful restart

- BGP [10-9](#)

- configuring in BGP [10-34](#)

- configuring in EIGRP [7-20](#)

- configuring in IS-IS [8-20](#)

- configuring in OSPF [5-37](#)

- configuring in OSPFv3 [6-32](#)

- EIGRP [7-7](#)

- OSPF [5-11](#)

gratuitous ARP

- configuring [2-11](#)

Send document comments to nexus7k-docfeedback@cisco.com.

description [2-5](#)

H

high availability

BGP [10-9](#)

DNS [4-2](#)

EIGRP [7-7](#)

HSRP [18-6](#)

object tracking [20-2](#)

OSPF [5-11](#)

RIP [11-4](#)

VRRP [19-5](#)

Hot Standby Router Protocol. See HSRP

HSRP

addressing [18-4](#)

configuring a group [18-8](#)

configuring priority [18-14](#)

customizing [18-15](#)

default settings [18-17](#)

description [18-2 to 18-6](#)

disabling the feature [18-8](#)

enabling the feature [18-7](#)

example configuration [18-17](#)

feature history (table) [18-18](#)

guidelines [18-6](#)

high availability [18-6](#)

licensing requirements [18-6](#)

limitations [18-6](#)

load sharing [18-4](#)

messages [18-4](#)

prerequisites [18-6](#)

standby router [18-2](#)

verifying configuration [18-16](#)

virtualization support [18-6](#)

vPC support [18-5](#)

HSRP authentication

configuring [18-11](#)

description [18-4](#)

HSRP object tracking

configuring [18-12](#)

description [18-5](#)

HSRP versions

configuring [18-10](#)

description [18-3](#)

HSRP virtual MAC address

configuring [18-10](#)

description [18-2](#)

I

iBGP

configuring router reflector [10-24](#)

description [10-3](#)

iBGP router reflector. See router reflector

ICMP

description [2-5](#)

with local proxy ARP (note) [2-6](#)

ICMPv6 [3-12](#)

packet header format (figure) [3-13](#)

IDS, enabling [2-12, 3-23](#)

Intermediate System-to-Intermediate System. See IS-IS

internal BGP. See iBGP

Internet Control Message Protocol. See ICMP

IP

addresses [2-2](#)

ARP. See ARP

configuring addresses [2-7](#)

configuring secondary addresses [2-8](#)

default settings [2-14](#)

description [2-1 to 2-6, ?? to 14-2](#)

enabling IDS checks [2-12](#)

enabling packet verification [2-12](#)

example configuration [2-14](#)

feature history (table) [2-15](#)

guidelines [2-6](#)

ICMP. See ICMP

licensing requirements [2-6](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- limitations [2-6](#)
- packet header [3-9](#)
- prerequisites [2-6](#)
- secondary addresses (note) [2-2](#)
- subnet masks [2-1](#)
- verifying configuration [2-14](#)
- virtualization support [2-6](#)

IPv4. See IP

IPv6

- addresses compatible with IPv4 [3-5](#)
- address formats [3-2](#)
- address formats (table) [3-2](#)
- anycast addresses [3-7](#)
- CDP [3-12](#)
- configuring addresses [3-19](#)
- configuring neighbor discovery [3-20](#)
- default settings [3-24](#)
- description [3-1 to 3-17](#)
- DNS [3-12](#)
- enabling IDS checks [3-23](#)
- enabling packet verification [3-23](#)
- EUI-64 format [3-4](#)
- example configuration [3-24](#)
- feature history (table) [3-25](#)
- guidelines [3-18](#)
- ICMP [3-12](#)
- interface ID [3-4](#)
- licensing requirements [3-18](#)
- limitations [3-18](#)
- link-local addresses [3-5](#)
- loopback address (note) [3-3](#)
- multicast addresses [3-7](#)
- neighbor discovery [3-13](#)
- neighbor redirect message [3-16](#)
- neighbor solicitation message [3-13](#)
- packet header [3-9](#)
- path MTU discovery [3-12](#)
- prerequisites [3-18](#)
- RFC [3-3, 3-4](#)

- router advertisement message [3-15](#)
- site-local address [3-7](#)
- subnet ID [3-4](#)
- unicast addresses [3-3](#)
- unique local addresses [3-6](#)
- unspecified address (note) [3-3](#)
- verifying configuration [3-24](#)
- virtualization support [3-17](#)

IS-IS

- address families [8-7](#)
- clearing statistics [8-28](#)
- configuration modes [8-7](#)
- configuring dynamic host exchange [8-16](#)
- configuring on an interface [8-11](#)
- configuring with VRFs [8-22](#)
- default settings [8-28](#)
- description [8-1 to 8-5](#)
- disabling the feature [8-8](#)
- displaying statistics [8-27](#)
- enabling the feature [8-7](#)
- example configuration [8-28](#)
- feature history (table) [8-30](#)
- guidelines [8-6](#)
- licensing requirements [8-6](#)
- limitations [8-6](#)
- LSPs [8-2](#)
- NET [8-3](#)
- prerequisites [8-6](#)
- system ID [8-3](#)
- tuning [8-24](#)
- verifying configuration [8-26](#)
- virtualization support [8-5](#)

IS-IS areas

- description [8-2](#)

IS-IS authentication

- configuring in an area [8-13](#)
- configuring on an interface [8-14](#)
- description [8-3](#)

IS-IS designated intermediate system [8-3](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- configuring [8-16](#)
- IS-IS graceful restart
 - configuring [8-20](#)
- IS-IS instances
 - configuring optional parameters [8-10](#)
 - creating [8-8](#)
 - deleting [8-9](#)
 - multiple instance support [8-5](#)
 - restarting [8-10](#)
- IS-IS load balancing
 - configuring [8-10](#)
 - description [8-5](#)
- IS-IS mesh group
 - configuring [8-15](#)
- IS-IS mess group
 - description [8-4](#)
- IS-IS overload bit
 - configuring [8-16](#)
 - description [8-4](#)
- IS-IS route redistribution
 - configuring [8-19](#)
 - description [8-5](#)
- IS-IS route summarization
 - configuring [8-17](#)
 - description [8-4](#)
- ISSU
 - BGP [10-9](#)

L

- Layer 3 consistency checker
 - description [14-2](#)
 - triggering [14-8](#)
- licensing requirements [9-7](#)
 - BGP [10-10](#)
 - DNS [4-2](#)
 - EIGRP [7-8](#)
 - FIB [14-2](#)
 - HSRP [18-6](#)

- IP [2-6](#)
- IPv6 [3-18](#)
- IS-IS [8-6](#)
- object tracking [20-3](#)
- OSPF [5-12](#)
- OSPFv3 [6-12](#)
- policy-based routing [16-3](#)
- RIP [11-4](#)
- Route Policy Manager [15-4](#)
- static routing [12-3](#)
- uRIB [14-2](#)
- VRF [13-5](#)
- VRRP [19-6](#)
- limits
 - description (table) [2-1](#)
- link-state advertisements [5-1](#)
- link-state routing algorithms [1-9](#)
- load [1-4](#)
- load balancing [1-6](#)
- Local Proxy ARP
 - configuring [2-11](#)
 - description [2-5](#)
- LSAs [6-5](#)
 - for OSPFv3 (table) [6-6](#)

M

- MIBs
 - BGP [7-29, 9-23](#)
 - OSPF [5-44](#)
 - OSPFv3 [6-39](#)
- MP-BGP [10-8](#)
 - configuring [10-30](#)
- Multiprotocol BGP
 - see MP-BGP

Send document comments to nexus7k-docfeedback@cisco.com.

N

ND

configuring [3-20](#)

description [3-13](#)

neighbor discovery. See ND

neighbor redirect message [3-16](#)

new and changed features (table) [i-i](#)

next hop [1-2](#)

NSSA [5-9](#)

configuring [5-26](#)

description for OSPFv3 [6-9](#)

O

object tracking

configuring for a nonDefault VRF [20-6](#)

configuring for GLBP [17-10](#)

configuring for route reachability [20-5](#)

configuring on an interface [20-3](#)

default settings [20-8](#)

description [20-1](#)

example configuration [20-7](#)

feature history (table) [20-8](#)

guidelines [20-3](#)

high availability [20-2](#)

licensing requirements [20-3](#)

limitations [20-3](#)

prerequisites [20-3](#)

verifying configuration [20-7](#)

virtualization support [20-2](#)

Open Shortest Path First. See OSPF

Open Shortest Path First version 3. See OSPFv3

OSPF

adjacency [5-1, 5-3](#)

area border router [5-4](#)

areas [5-1, 5-4](#)

AS border router [5-5](#)

authentication [5-7](#)

backup designated router [5-3](#)

configuring area authentication [5-20](#)

configuring a totally stubby area [5-26](#)

configuring authentication [5-19](#)

configuring authentication on an interface [5-20](#)

configuring DR priority [5-18](#)

configuring ECMP [5-16](#)

configuring filter lists [5-23](#)

configuring graceful restart [5-37](#)

configuring load balancing [5-16](#)

configuring MD5 authentication [5-20](#)

configuring networks [5-17](#)

configuring NSSA [5-26](#)

configuring on an interface [5-17](#)

configuring optional parameters on an interface [5-18](#)

configuring redistribution [5-30](#)

configuring route summarization [5-32](#)

configuring simple password authentication [5-20](#)

configuring stub areas [5-24](#)

configuring stub route advertisements [5-33](#)

configuring the hello interval [5-18](#)

configuring virtual links [5-28](#)

configuring with VRFs [5-39](#)

creating an instance [5-14](#)

dead interval [5-2](#)

default settings [5-42](#)

delete an instance [5-15](#)

description [5-1 to 5-12](#)

designated router [5-3](#)

disable the feature [5-14](#)

displaying statistics [5-42](#)

enable the feature [5-13](#)

example configuration [5-42](#)

feature history (table) [5-44](#)

graceful restart [5-11](#)

guidelines [5-13](#)

hello interval [5-2](#)

hello packet [5-2](#)

high availability [5-11](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- licensing requirements [5-12](#)
- limitations [5-13](#)
- link cost [5-6](#)
- link-state database [5-7](#)
- LSA [5-1](#)
- LSA flooding [5-6](#)
- LSA pacing [5-6](#)
- LSAs [5-5 to 5-7](#)
- LSA types (table) [5-6](#)
- MIBs [5-44](#)
- modifying default timers [5-34](#)
- multiple instances [5-12](#)
- neighbors [5-2](#)
- not-so-stubby area [5-9](#)
- NSSA [5-9](#)
- opaque LSAs [5-7](#)
- prerequisites [5-13](#)
- restarting an instance [5-38](#)
- route redistribution
 - description [5-10](#)
- route summarization
 - description [5-10](#)
- shutting down an instance [5-18](#)
- SPF optimization [5-12](#)
- stub area [5-8](#)
- stub area (figure) [5-9](#)
- stub router advertisements
 - description [5-12](#)
- unicast RIB [5-7](#)
- verifying configuration [5-41](#)
- virtualization support [5-12](#)
- virtual link [5-9](#)
- virtual link (figure) [5-10](#)
- OSPFv2 (Open Shortest Path First Version 2)
 - description [6-1](#)
- OSPFv2. See OSPF
- OSPFv3
 - address families [6-8](#)
 - adjacency [6-3](#)
 - areas [6-5](#)
 - comparison to OSPFv2 [6-2](#)
 - configuring ECMP [6-16](#)
 - configuring filter lists [6-19](#)
 - configuring graceful restart [6-32](#)
 - configuring load balancing [6-16](#)
 - configuring networks [6-16](#)
 - configuring NSSA [6-23](#)
 - configuring redistribution [6-27](#)
 - configuring route summarization [6-29](#)
 - configuring stub areas [6-21](#)
 - configuring totally stubby areas [6-22](#)
 - configuring virtual links [6-25](#)
 - configuring with VRFs [6-34](#)
 - creating an instance [6-14](#)
 - default settings [6-38](#)
 - description [6-1 to 6-12](#)
 - disabling the feature [6-14](#)
 - displaying statistics [6-37](#)
 - enabling the feature [6-13](#)
 - example configuration [6-37](#)
 - feature history (table) [6-39](#)
 - guidelines [6-13](#)
 - licensing requirements [6-12](#)
 - limitations [6-13](#)
 - link cost [6-6](#)
 - link-state database [6-7](#)
 - LSA flooding [6-6](#)
 - LSA pacing [6-6](#)
 - LSAs [6-5](#)
 - LSA types (table) [6-6](#)
 - MIBs [6-39](#)
 - modifying default timers [6-30](#)
 - multiple instances [6-11](#)
 - neighbors [6-3](#)
 - NSSA [6-9](#)
 - prerequisites [6-12](#)
 - restarting an instance [6-34](#)
 - RFC [6-2](#)

Send document comments to nexus7k-docfeedback@cisco.com.

route redistribution [6-10](#)
 route summarization [6-10](#)
 SPF optimization [6-12](#)
 unicast RIB [6-7](#)
 verifying configuration [6-36](#)
 virtualization support [6-12](#)
 virtual links [6-9](#)

P

path length [1-4](#)
 path MTU discovery [3-12](#)
 policy-based routing
 configuring a route policy [16-5](#)
 configuring set parameters [16-6](#)
 default settings [16-7](#)
 description [16-1](#)
 disabling [16-4](#)
 enabling [16-4](#)
 example configuration [16-7](#)
 feature history (table) [16-8](#)
 guidelines [16-3](#)
 licensing requirements [16-3](#)
 limitations [16-3](#)
 prerequisites [16-3](#)
 route maps [16-2](#)
 set criteria [16-2](#)
 verifying configuration [16-7](#)
 policy route maps
 description [16-2](#)
 prefix lists
 configuring [15-5](#)
 description [15-2](#)
 Proxy ARP
 configuring [2-10](#)
 description [2-5](#)

R

Really Simple Syndication. See RSS
 redistribution
 description [1-6](#)
 redistribution [1-5](#)
 BGP [10-8](#)
 configuring [5-30](#)
 configuring for OSPFv3 [6-27](#)
 configuring in BGP [10-28](#)
 configuring in IS-IS [8-19](#)
 configuring in RIP [11-11](#)
 configuring on EIGRP [7-17](#)
 EIGRP [7-6](#)
 IS-IS [8-5](#)
 with route maps [15-4](#)
 related documents [i-v](#)
 reliability [1-4](#)
 Reverse ARP
 description [2-4](#)
 limitations [2-4](#)
 RFC [2-4](#)
 RIB
 description [1-11, 14-2](#)
 see uRIB
 RIP
 clearing statistics [11-17](#)
 configuring a passive interface [11-10](#)
 configuring on an interface [11-8](#)
 configuring with VRFs [11-13](#)
 default settings [11-18](#)
 description [11-2](#)
 disable the feature [11-6](#)
 displaying statistics [11-17](#)
 enabling the feature [11-5](#)
 example configuration [11-18](#)
 feature history (table) [11-19](#)
 guidelines [11-4](#)
 high availability [11-4](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- licensing requirements [11-4](#)
- limitations [11-4](#)
- prerequisites [11-4](#)
- route filtering [11-3](#)
- tuning [11-15](#)
- verifying configuration [11-17](#)
- virtualization support [11-4](#)
- RIP authentication
 - configuring [11-9](#)
 - description [11-2](#)
- RIP instance
 - creating [11-6](#)
 - deleting [11-7](#)
 - optional parameters [11-7](#)
 - restarting [11-8](#)
- RIP load balancing
 - configuring [11-7](#)
 - description [11-3](#)
- RIP route distribution
 - description [11-3](#)
- RIP route redistribution
 - configuring [11-11](#)
- RIP route summarization
 - configuring [11-11](#)
 - description [11-3](#)
- RIP split horizon
 - configuring with poison reverse [11-11](#)
 - description [11-2](#)
- route maps
 - configuring [15-9](#)
 - configuring match parameters [15-11](#)
 - configuring set parameters [15-12](#)
 - description [15-2](#)
 - example configuration [15-14](#)
 - for policy -based routing [16-2](#)
 - match criteria [15-2](#)
 - redistribution [15-4](#)
 - set changes [15-3](#)
 - verifying [15-14](#)
- route metric
 - bandwidth [1-4](#)
 - communication cost [1-4](#)
 - delay [1-4](#)
 - load [1-4](#)
 - path length [1-4](#)
 - reliability [1-4](#)
- route policy
 - configuring [16-5](#)
 - configuring match parameters
 - policy-based routing
 - configuring match parameters [16-6](#)
 - configuring set parameters [16-6](#)
 - description [16-1](#)
 - example configuration [16-7](#)
- Route Policy Manager
 - default settings [15-15](#)
 - example configuration [15-14](#)
 - guidelines [15-5](#)
 - licensing requirements [15-4](#)
 - limitations [15-5](#)
 - prerequisite [15-5](#)
 - verifying configuration [15-14](#)
- route policy manager
 - description [15-1 to 15-4](#)
- router advertisement message [3-15](#)
- route redistribution
 - OSPFv3 [6-10](#)
- router ID
 - description [1-5](#)
- router reflector
 - configuring [10-24](#)
 - description [10-5](#)
- route summarization
 - configuring [5-32](#)
 - configuring in IS-IS [8-17](#)
 - configuring on EIGRP [7-17](#)
 - EIGRP [7-6](#)
 - ISIS [8-4](#)

Send document comments to nexus7k-docfeedback@cisco.com.

OSPFv3 [6-10, 6-29](#)

RIP [11-3](#)

route table

description [1-2](#)

routing algorithms

distance vector [1-8, 1-9](#)

link-state [1-9](#)

Routing Information Protocol. See RIP

routing metrics

description [1-2](#)

routing protocols

administrative distance [1-6](#)

comparing link-state algorithms to distance vector algorithms [1-9](#)

convergence. convergence [1-6](#)

description [1-1 to 1-7](#)

distance vector [1-9](#)

link-state [1-9](#)

next hop [1-2](#)

redistribution [1-5, 1-6](#)

virtualization [1-9](#)

RSS

documentation feed [i-vi](#)

feature history (table) [12-7](#)

guidelines [12-3](#)

licensing requirements [12-3](#)

limitations [12-3](#)

prerequisites [12-3](#)

verifying configuration [12-6](#)

stub routing

description [1-7](#)

U

uRIB

clearing routes [14-10](#)

description [14-1](#)

displaying [14-7](#)

displaying (example) [14-7](#)

feature history (table) [14-11](#)

guidelines [14-3](#)

Layer 3 consistency checker [14-2](#)

licensing requirements [14-2](#)

limitations [14-3](#)

verifying [14-10](#)

virtualization support [14-2](#)

S

service

requests [i-vi](#)

static routes

description [1-8](#)

virtualization support [12-3](#)

with ARP [2-3](#)

static routing

administrative distance [12-2](#)

configuring [12-4](#)

configuring with VRFs [12-5](#)

default settings [12-7](#)

description [12-1](#)

example configuration [12-6](#)

V

virtualization

description [1-9, 13-1](#)

layer 3 (figure) [1-10](#)

Virtual Router Redundancy Protocol. See VRRP

VRF

assigning an interface to a VRF [13-8](#)

configuring routing parameters [13-9](#)

creating [13-6](#)

default settings [13-13](#)

deleting [13-7](#)

description [13-2](#)

example configuration [13-12](#)

Send document comments to nexus7k-docfeedback@cisco.com.

- guidelines [13-6](#)
- licensing requirements [13-5](#)
- limitations [13-6](#)
- prerequisites [13-6](#)
- setting the routing context [13-12](#)
- setting the scope [13-12](#)
- verifying configuration [13-12](#)
- vrf
 - feature history (table) [13-14](#)
- VRF-aware services
 - configuring [13-10](#)
 - description [13-3](#)
- VRF filtering
 - description [13-4](#)
 - example configuration [13-11](#)
- VRF reachability
 - description [13-4](#)
 - example configuration [13-11](#)
- VRRP
 - benefits [19-3](#)
 - clearing statistics [19-19](#)
 - configuring time intervals for advertisement packets [19-12](#)
 - default settings [19-20](#)
 - description [19-1 to 19-5](#)
 - disabling the feature [19-7](#)
 - displaying statistics [19-19](#)
 - enabling the feature [19-7](#)
 - example configuration [19-19](#)
 - feature history (table) [19-21](#)
 - guidelines [19-6](#)
 - high availability [19-5](#)
 - licensing requirements [19-6](#)
 - limitations [19-6](#)
 - verifying configuration [19-18](#)
 - virtualization support [19-5](#)
- VRRP advertisements
 - description [19-5](#)
- VRRP authentication
 - configuring [19-10](#)
 - description [19-5](#)
- VRRP groups
 - configuring [19-7](#)
 - description [19-3](#)
- VRRP priority
 - configuring [19-8](#)
 - description [19-4](#)
 - disabling preemption [19-14](#)
 - preemption [19-4](#)
- VRRP tracking
 - configuring [19-16](#)
 - description [19-5](#)

Send document comments to nexus7k-docfeedback@cisco.com.